

Function list

| | Indoor unit | Outdoor unit | Controller | | Other | |
|--------|--------------------------------------------------|----------------------------|---------------------------|----------------------------|-------------|----------------------------|
| | | | Central Remote Controller | Touch Panel Controller | RB Unit | |
| Input | Operation / Stop | ●UTY-XWZXZD ○UTY-XWZXZB | — | — | — | |
| | All On / All Off | — | — | ●*3 ○*3 | — | |
| | Batch Stop | — | ●UTY-XWZXZ6 | — | — | |
| | Forced Stop | ●UTY-XWZXZD ○UTY-XWZXZB | — | — | — | |
| | Emergency Stop | ●UTY-XWZXZD ○UTY-XWZXZB | ●UTY-XWZXZ6 | ●UTY-XWZXZ7 ○UTY-XWZXZ8 | ●*3 ○*3 | — |
| | Forced Thermostat off | ●UTY-XWZXZE ○UTY-XWZXZ7 | — | — | — | — |
| | Low Noise Mode Operation | — | ●UTY-XWZXZ6 | — | — | — |
| | Cooling / Heating Priority | — | ●UTY-XWZXZ6*1 | — | — | ●UTY-XWZXZ6 ○UTY-XWZXZB |
| | "Outdoor Unit Operation Peak Control" | — | ●UTY-XWZXZ6 | — | — | — |
| | "Power Usage Information from Electricity Meter" | — | ●UTY-XWZXZF | — | ●*3 ○*3 | — |
| Output | Operation Status | ●UTY-XWZXZC | ○UTY-XWZXZ6 | ○UTY-XWZXZA | ○UTY-XWZXZA | — |
| | Error Status | ●UTY-XWZXZC | ○UTY-XWZXZ6 | ○UTY-XWZXZA | ○UTY-XWZXZA | — |
| | Indoor Unit Fun Operation Status | ●UTY-XWZXZC | — | — | — | — |
| | Auxiliary Heater Output | ●UTY-XWZXZC*2 | — | — | — | — |
| | Base Heater | — | ●UTY-XWZXZ9 | — | — | — |

*1. Heat Pump type only

*2. Duct type only

*3. Touch Panel Controller has these functions for Dry contact and Apply voltage, however, above External Connect Kit is not necessary because Touch Panel Controller has an external input terminal block.

●: Dry Contact ○: Apply Voltage