

Wiring settings

Design Simulator

Select “Wiring”

Wiring system diagram creation


**Wire information display:
Current value for each
device Connection port
for each device**

The screenshot displays two windows of the Design Simulator software. The top window shows a 'Wiring' interface with tabs for Indoor unit, Outdoor unit, Piping, and Wiring (which is highlighted with a red circle). A yellow box labeled 'Select “Wiring”' points to the tab. The main area shows a wiring system diagram for an indoor unit (Otdr1 AOYG45LBTS) connected to six indoor devices (Indr1 to Indr6) via UTP-PY03A cables. A legend indicates pipe types: aa x bb (aa: liquid, bb: gas, bb: as:Liquid). A blue arrow points down to another window showing a detailed wiring system diagram with a red border. This second window also has tabs for Indoor unit, Outdoor unit, Piping, Wiring (highlighted with a black circle), and Report. It shows a more detailed view of the wiring connections, including primary and secondary branch boxes, and specific connection details like cable sizes (e.g., 1.5mm², 2.5mm²) and connection ports (e.g., 1, 2, 3).

Wiring settings

Design Simulator

Refrigerant system determination

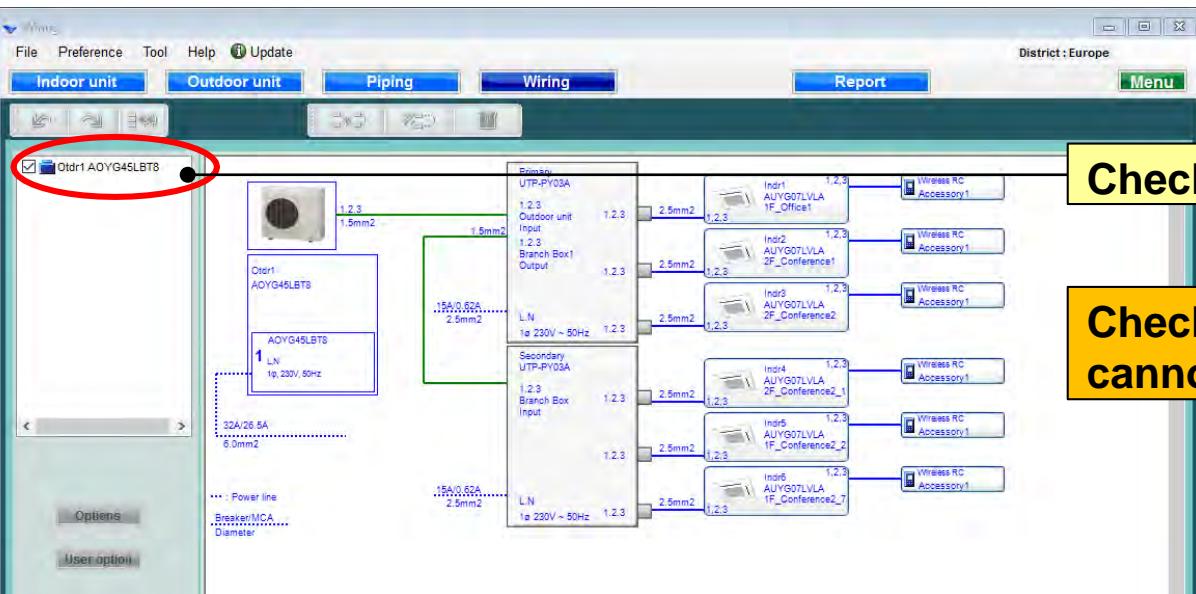

Check the refrigerant system

Checked refrigerant system
cannot be edited at each screen


The image contains three separate windows of the Design Simulator:

- Indoor unit:** Shows a list of indoor units (Indr1 to Indr6) and their details. For Indr1, it lists:
 - Name: Indr1
 - Comments: RH18A
 - Refrigerant: R134a
 - Type: 8 Room Multi System
 - Model: AOYG45LB7B
 - Type: 1φ, 230V, 50Hz
 - Actual capacity: Cooling 14.00 kW, Heating 18.00 kW
 - Actual capacity: Cooling 12.30 kW, Heating 14.22 kW
 - Indoor connect count: 6
 - Total indoor capa: Cooling 12.30 kW, Heating 14.22 kW
 - Outdoor temp.: Cooling 35.00, Heating 7.00
- Outdoor unit:** Shows details for the outdoor unit Odr1:
 - Name: Odr1
 - Comments: RH18A
 - Refrigerant: R134a
 - Type: 8 Room Multi System
 - Model: AOYG45LB7B
 - Type: 1φ, 230V, 50Hz
 - Actual capacity: Cooling 14.00 kW, Heating 18.00 kW
 - Actual capacity: Cooling 12.30 kW, Heating 14.22 kW
 - Indoor connect count: 6
 - Total indoor capa: Cooling 12.30 kW, Heating 14.22 kW
 - Outdoor temp.: Cooling 35.00, Heating 7.00
- Piping:** Shows the piping network for the system. It features a central 'UTP-PY03A' unit connected to multiple branches. Each branch is labeled with dimensions: 9.32x15.89, 9.35x9.52, 8.36x9.52, 8.36x9.52, 8.36x9.52, and 8.36x9.52. These branches connect to various indoor units (Indr1 to Indr6) and an outdoor unit (Odr1).

Wiring settings

Design Simulator

Options

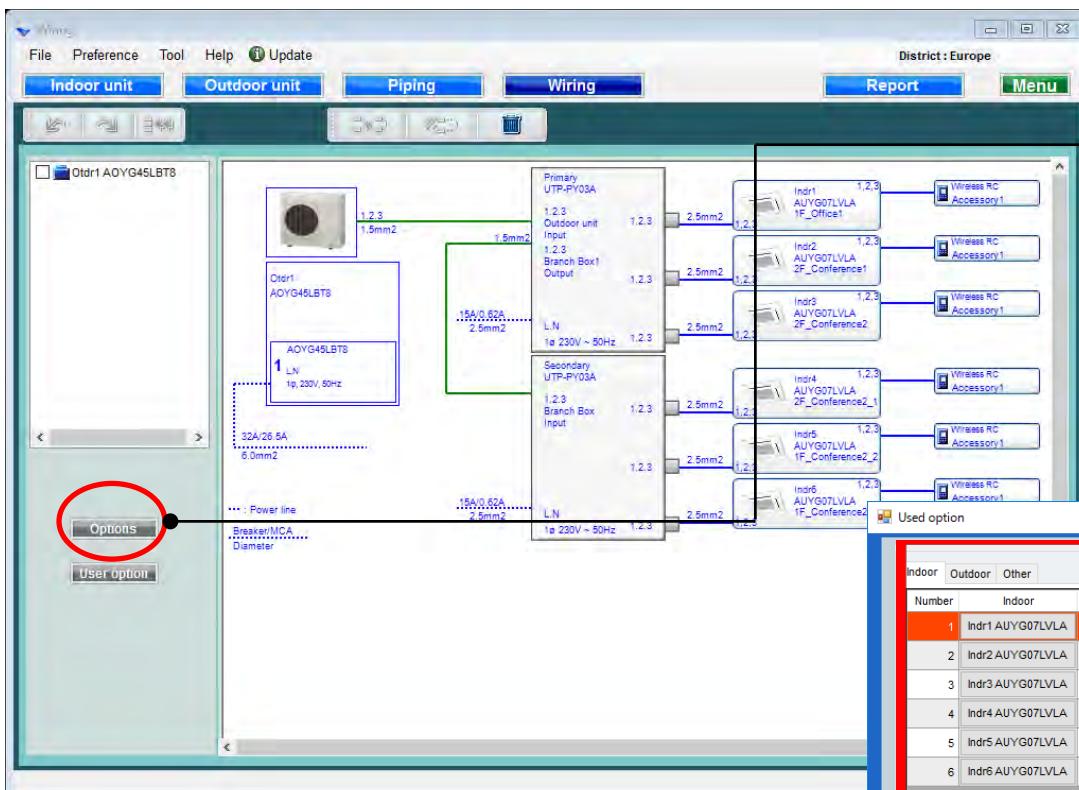

Select “Options ”

Open used option screen.

Used option

Number	Indoor	Gr	RC Line
1	Indr1 AUYG07LVLA	-	0
2	Indr2 AUYG07LVLA	-	3
3	Indr3 AUYG07LVLA	-	3
4	Indr4 AUYG07LVLA	-	3
5	Indr5 AUYG07LVLA	-	3
6	Indr6 AUYG07LVLA	-	0

Indr1 AUYG07LVLA

Remote controller1: Wireless RC

Remote controller2:

Allowed options:

- Air outlet shutter plate
- Insulation kit for high humidity
- Fresh air intake kit
- External connect kit
- KNX Interface
- MODBUS Interface
- Wireless Lan Interface(FJ-RC-WIFI-1)
- Wireless LAN Adapter

Selected options


Name	Model number	Quantity

Reset OK Cancel

Wiring settings

Design Simulator


Used option(1/2)

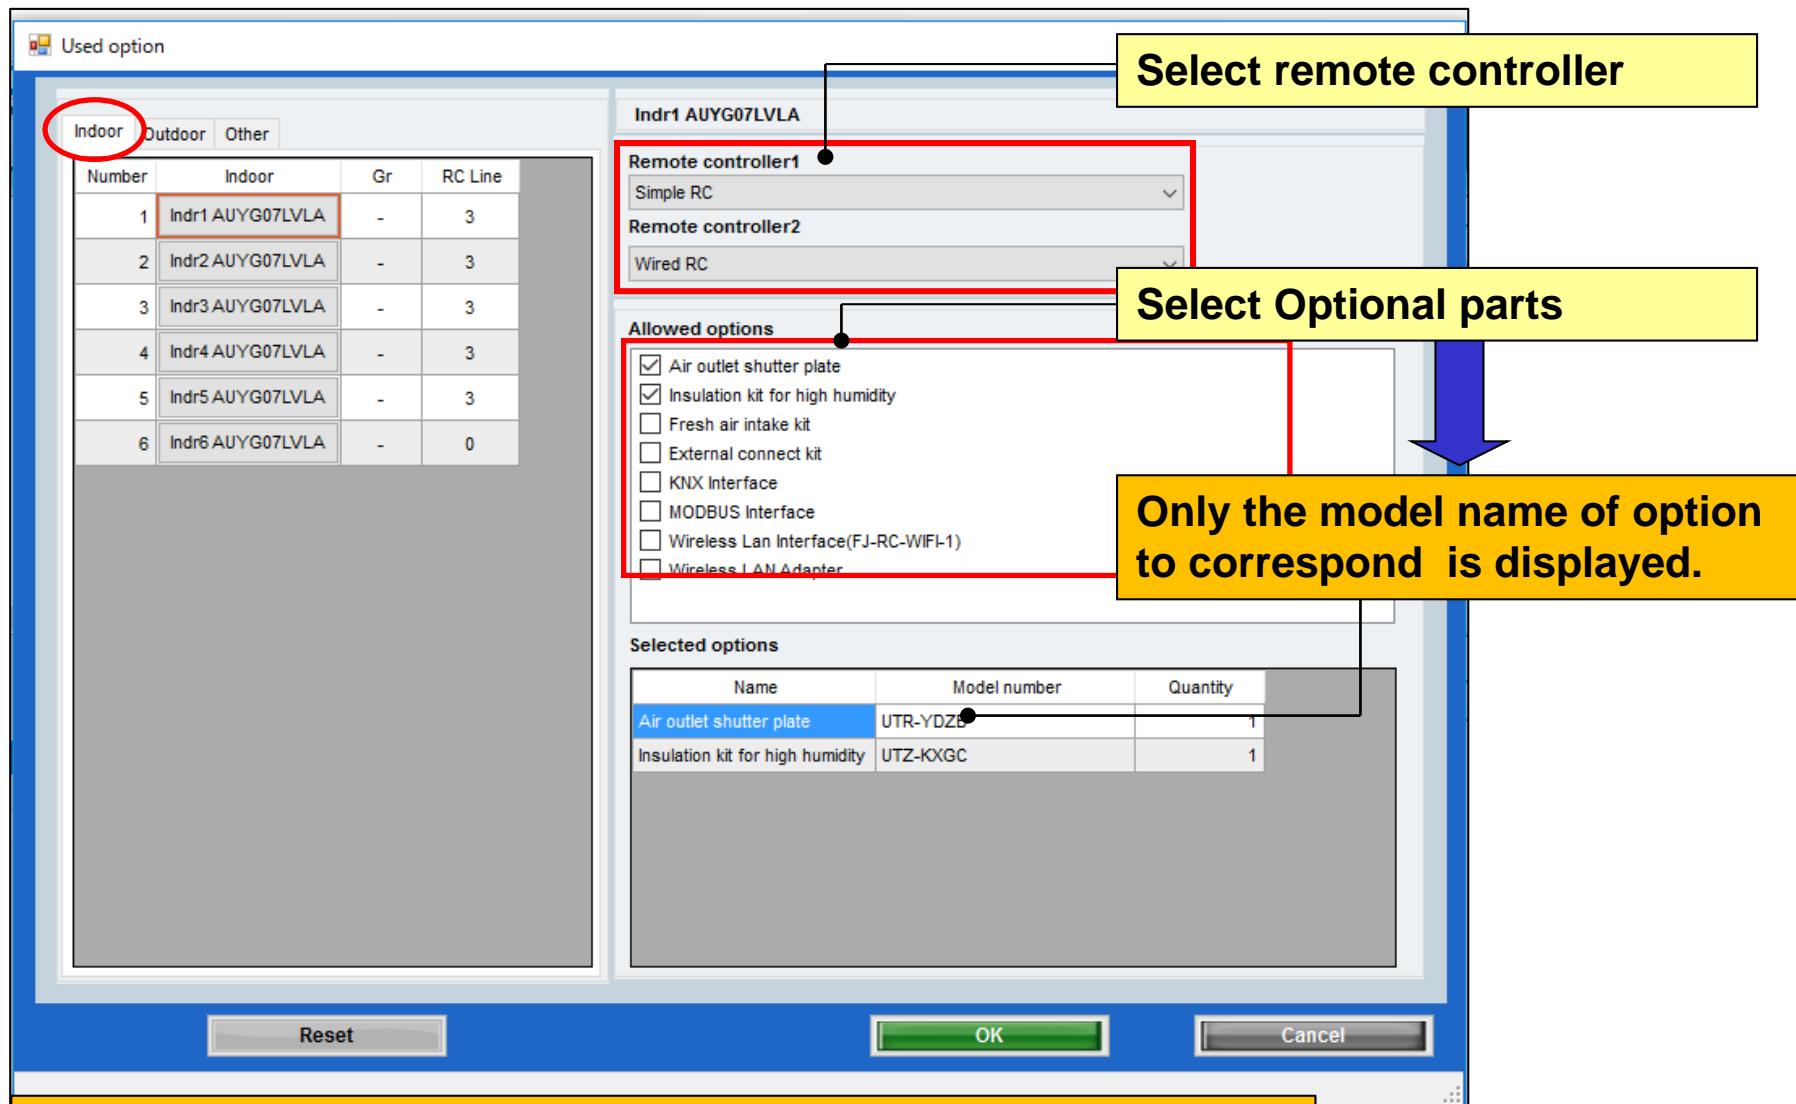

Wiring settings


Design Simulator

Used option(2/2)

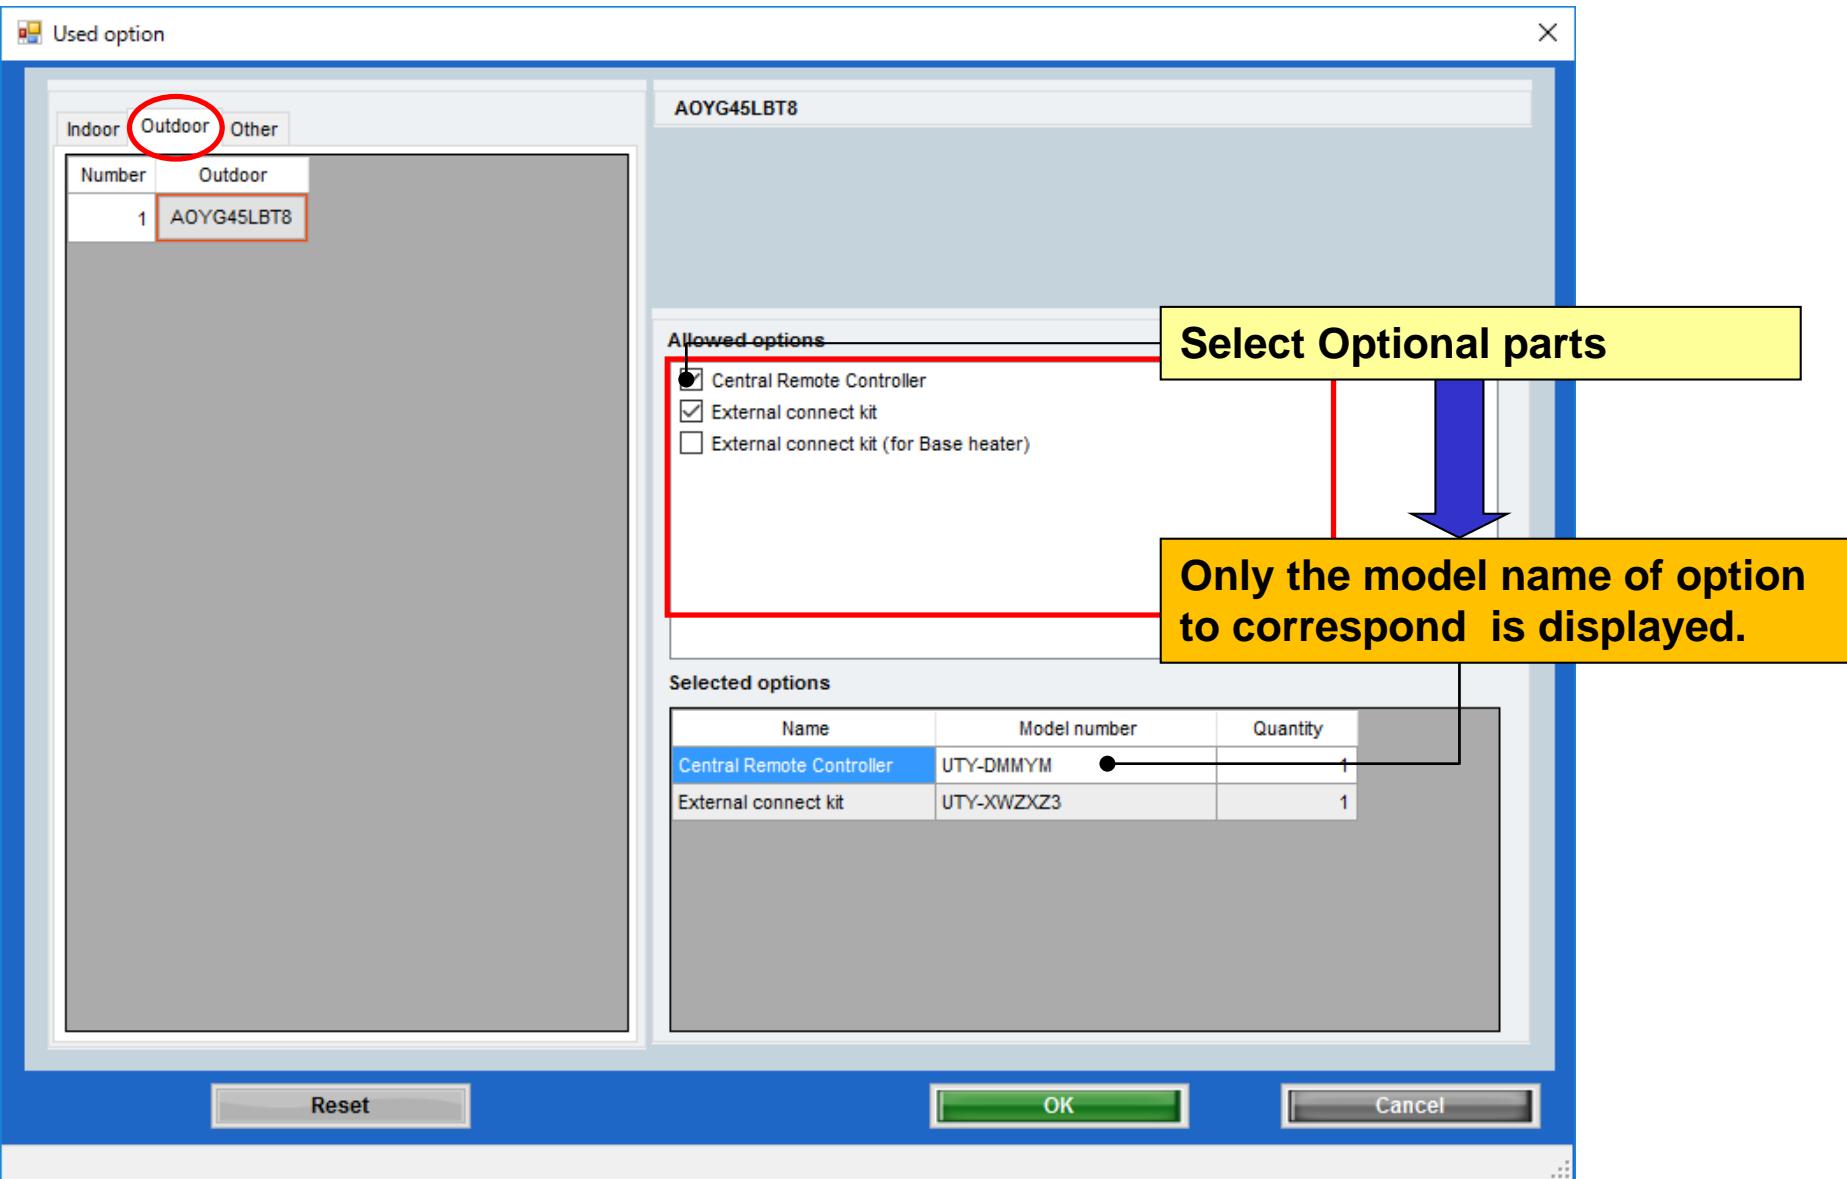

Wiring settings


Design Simulator

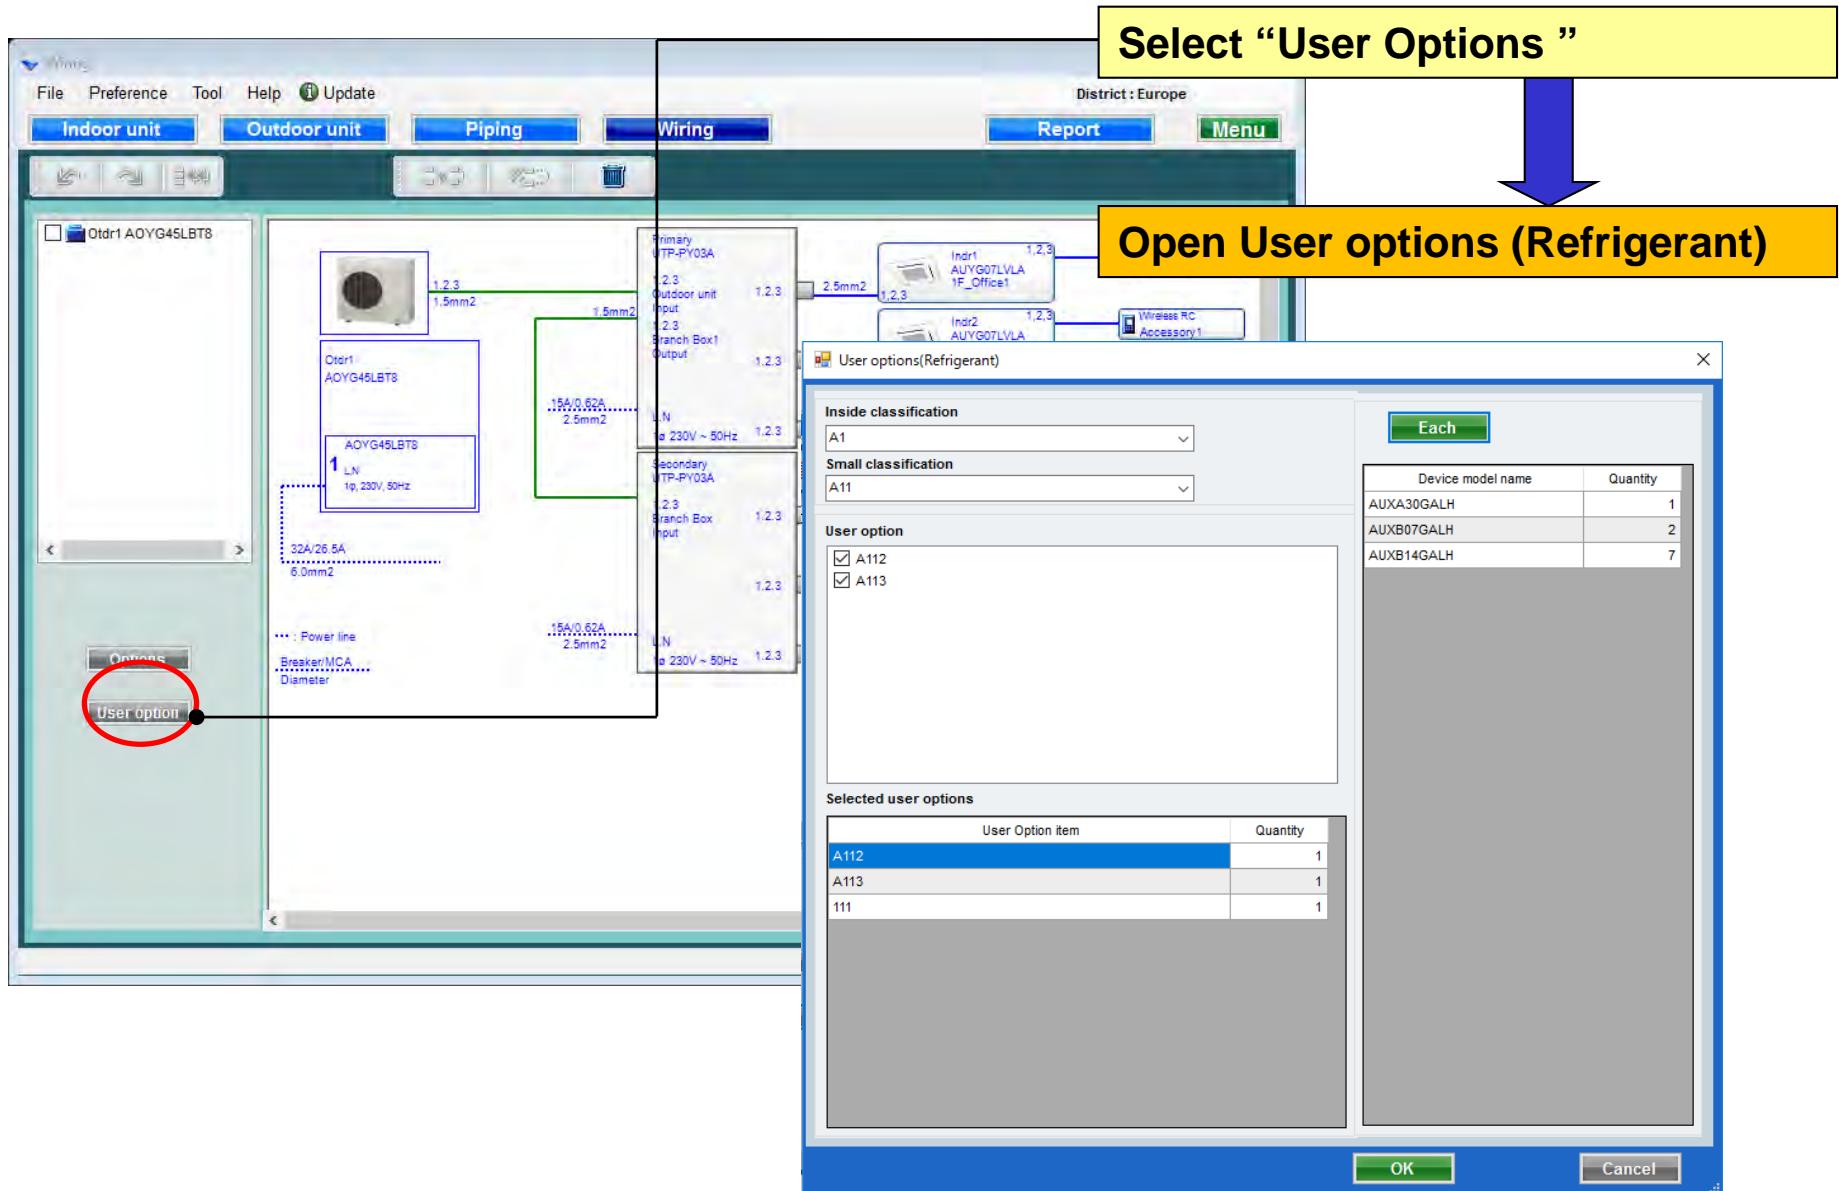

Wiring settings

Design Simulator

User option(Refrigerant)

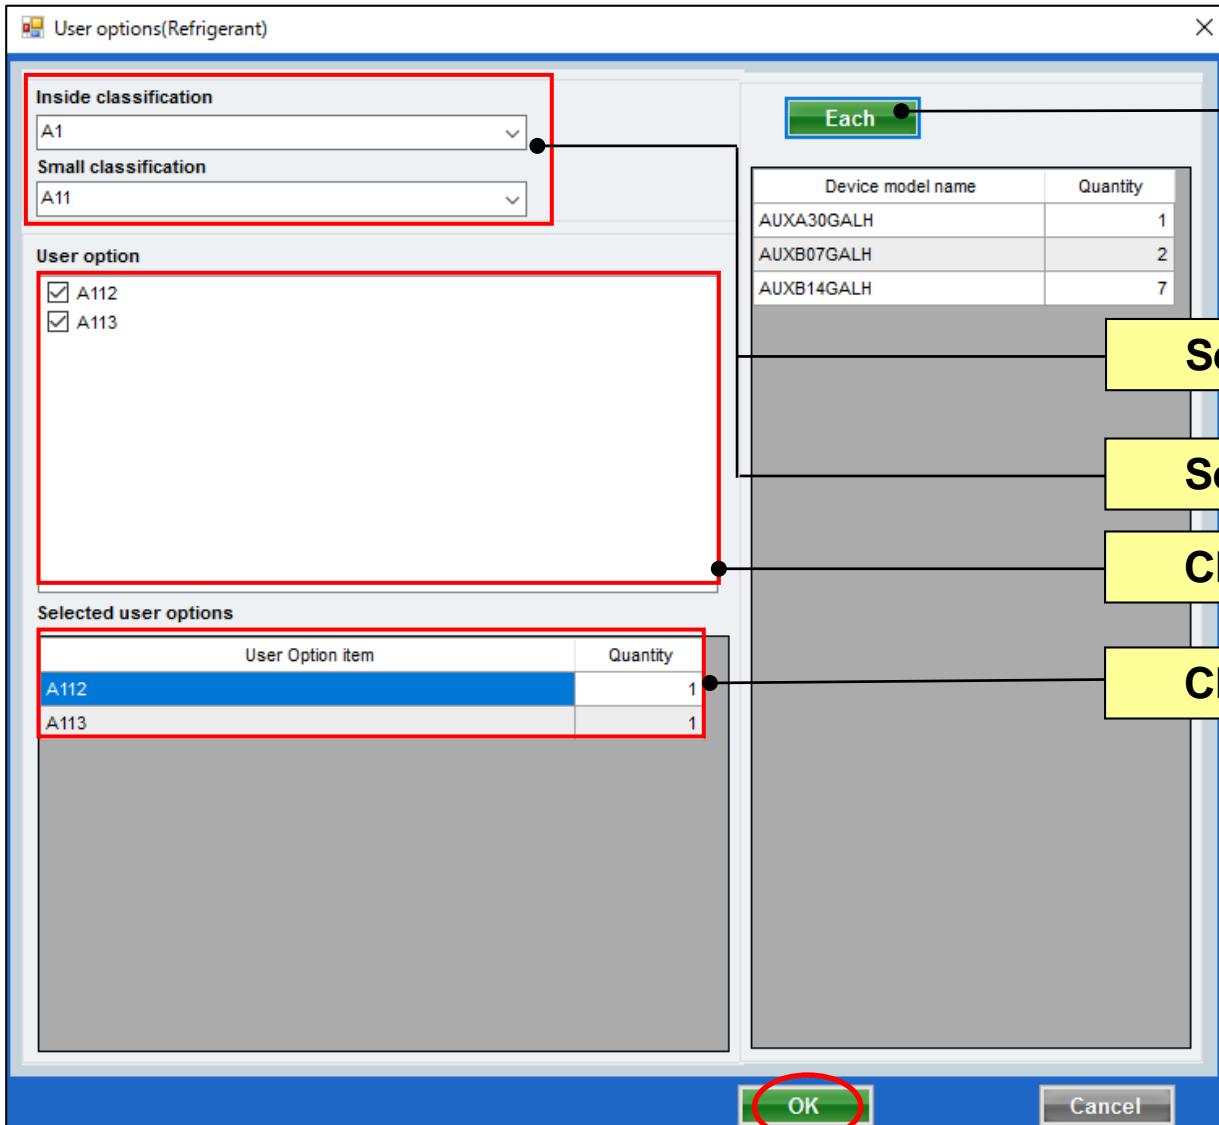

The selected options are displayed in “Report”

Konfiguracja okablowania


Design Simulator

The screenshot shows the Design Simulator software interface. At the top, there is a menu bar with File, Preference, Tool, Help, and Update. Below the menu is a toolbar with buttons for Indoor unit, Outdoor unit, Piping, Wiring (which is highlighted with a red circle), and Report. The main workspace displays a piping and wiring diagram for an indoor unit labeled 'Otdr1 AOYG45LBTS'. The diagram shows various pipes and wires connecting the unit to multiple locations on the same floor. A callout box with a blue arrow points to the 'Wiring' tab, containing the text: 'Naciśnij „Okablowanie”' (Press 'Wiring'). Another callout box with a blue arrow points to the wiring diagram, containing the text: 'Pojawi się ekran tworzenia schematu instalacji elektrycznej' (An electrical installation schematic creation screen will appear). In the bottom right corner, there is a detailed wiring configuration for the 'Otdr1 AOYG45LBTS' unit, showing primary and secondary UTP-PY03A connections to branch boxes and various indoor devices like 'Indr1' through 'Indr6', each connected to a 'Wireless RC Accessory1'. A callout box with a black arrow points to this configuration, containing the text: 'Podgląd informacji o okablowaniu: aktualna wartość przyłączy dla każdego urządzenia' (Preview of wiring information: current connection values for each device).

Konfiguracja okablowania

Design Simulator


Wybór układu chłodniczego

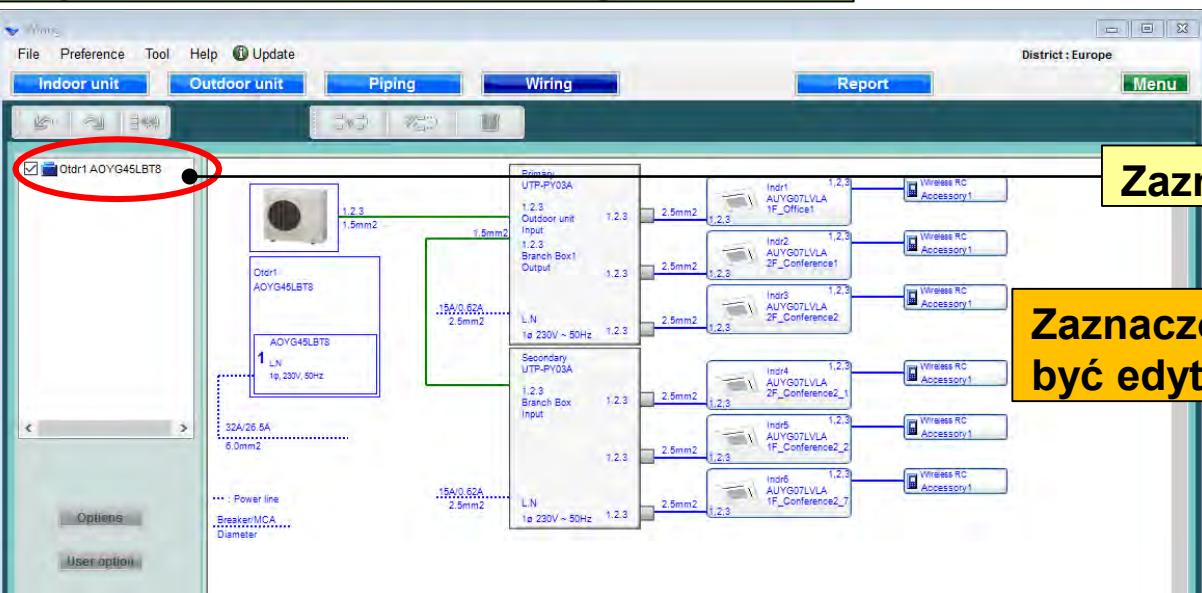

Zaznaczukład chłodniczy

Zaznaczony układ chłodniczy nie może być edytowany na każdym ekranie


This screenshot shows the 'indoor unit' tab. It displays the 'Details of indoor unit' and 'Outdoor unit data'. The 'Details of indoor unit' section shows the unit's name (Indr1) and type (3 Rooms Multi System). The 'Outdoor unit data' section provides details about the outdoor unit, including its name (Otdr1), model (AOYG45LB78), and various performance metrics like cooling and heating capacities. The 'Indoor unit value' section lists parameters such as model, capacity, and piping length.

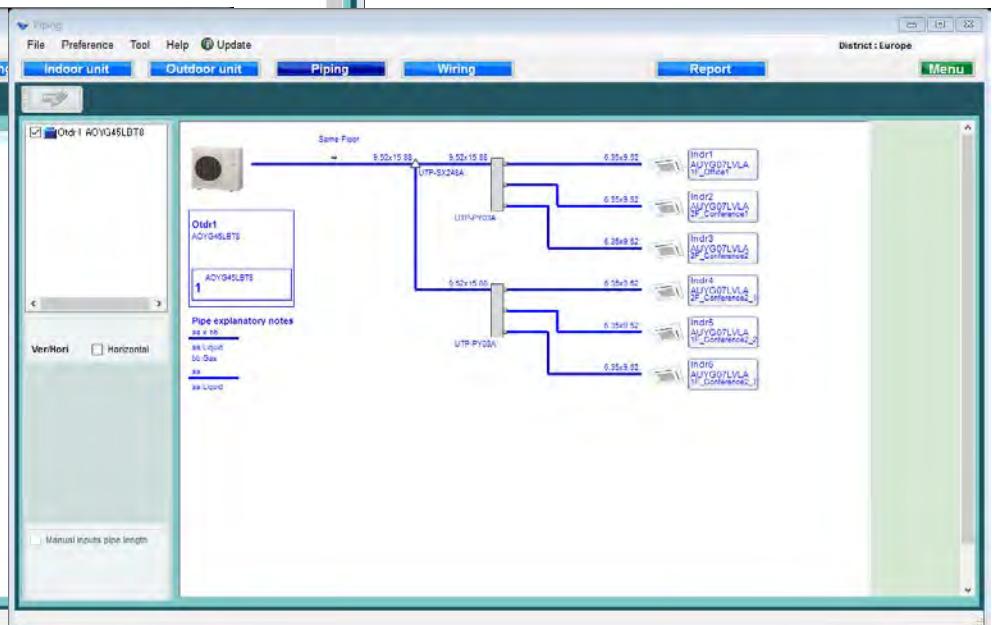

Konfiguracja okablowania


Design Simulator

Opcje

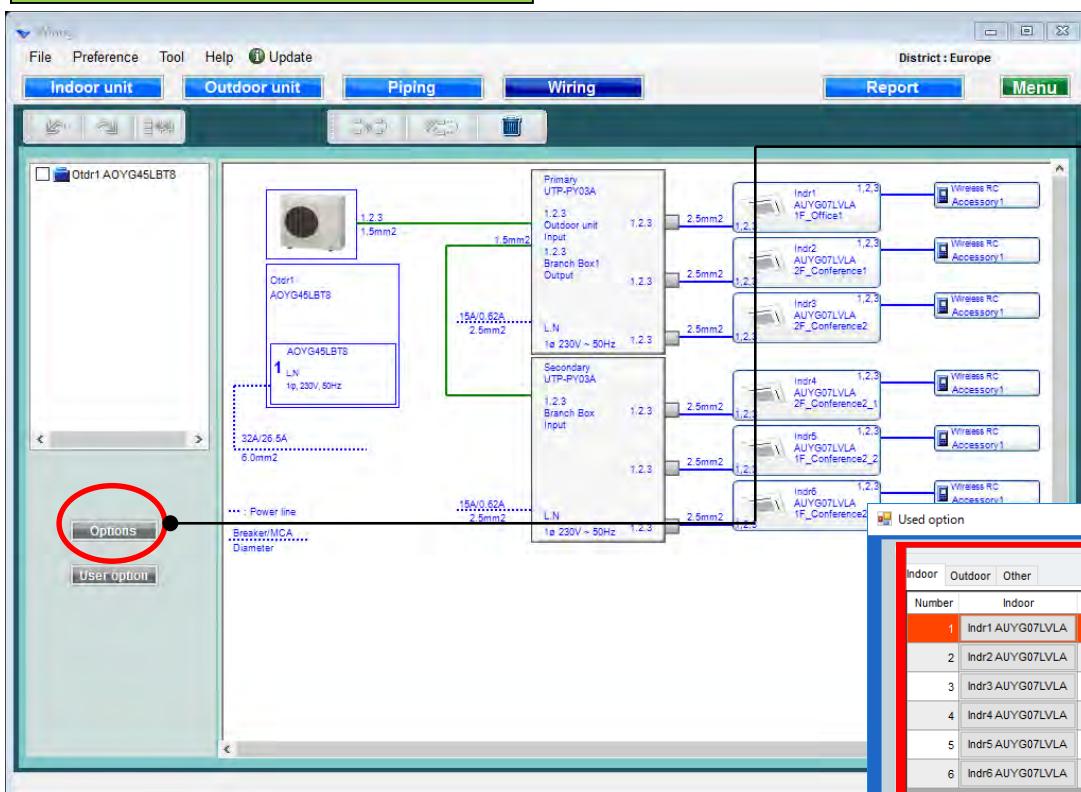


Naciśnij „Opcje”

Pojawi się ekran zastosowanych akcesoriów opcjonalnych

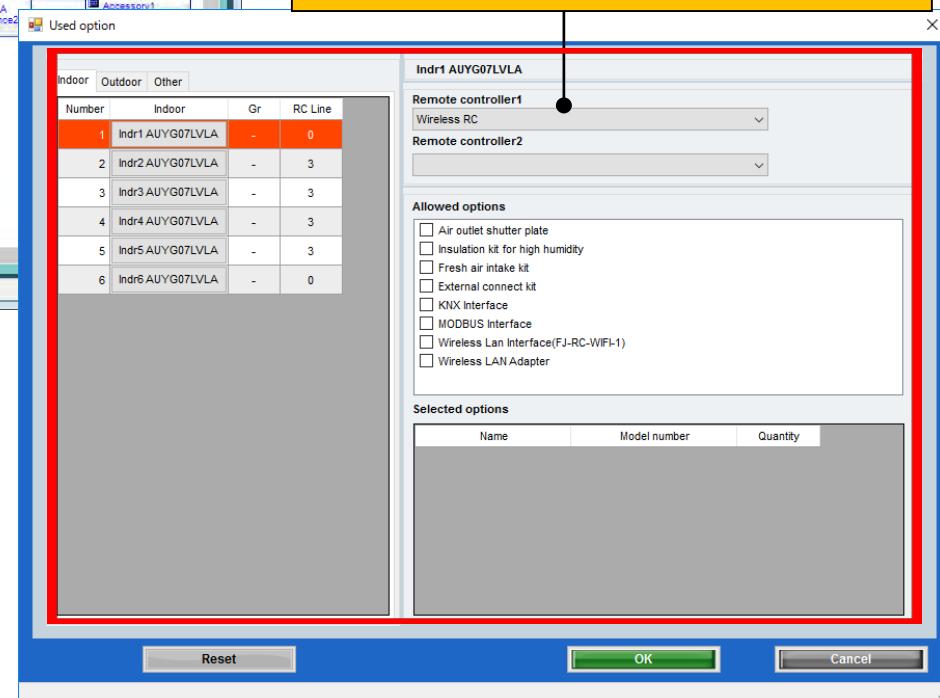

Zastosowane opcje (1/2)

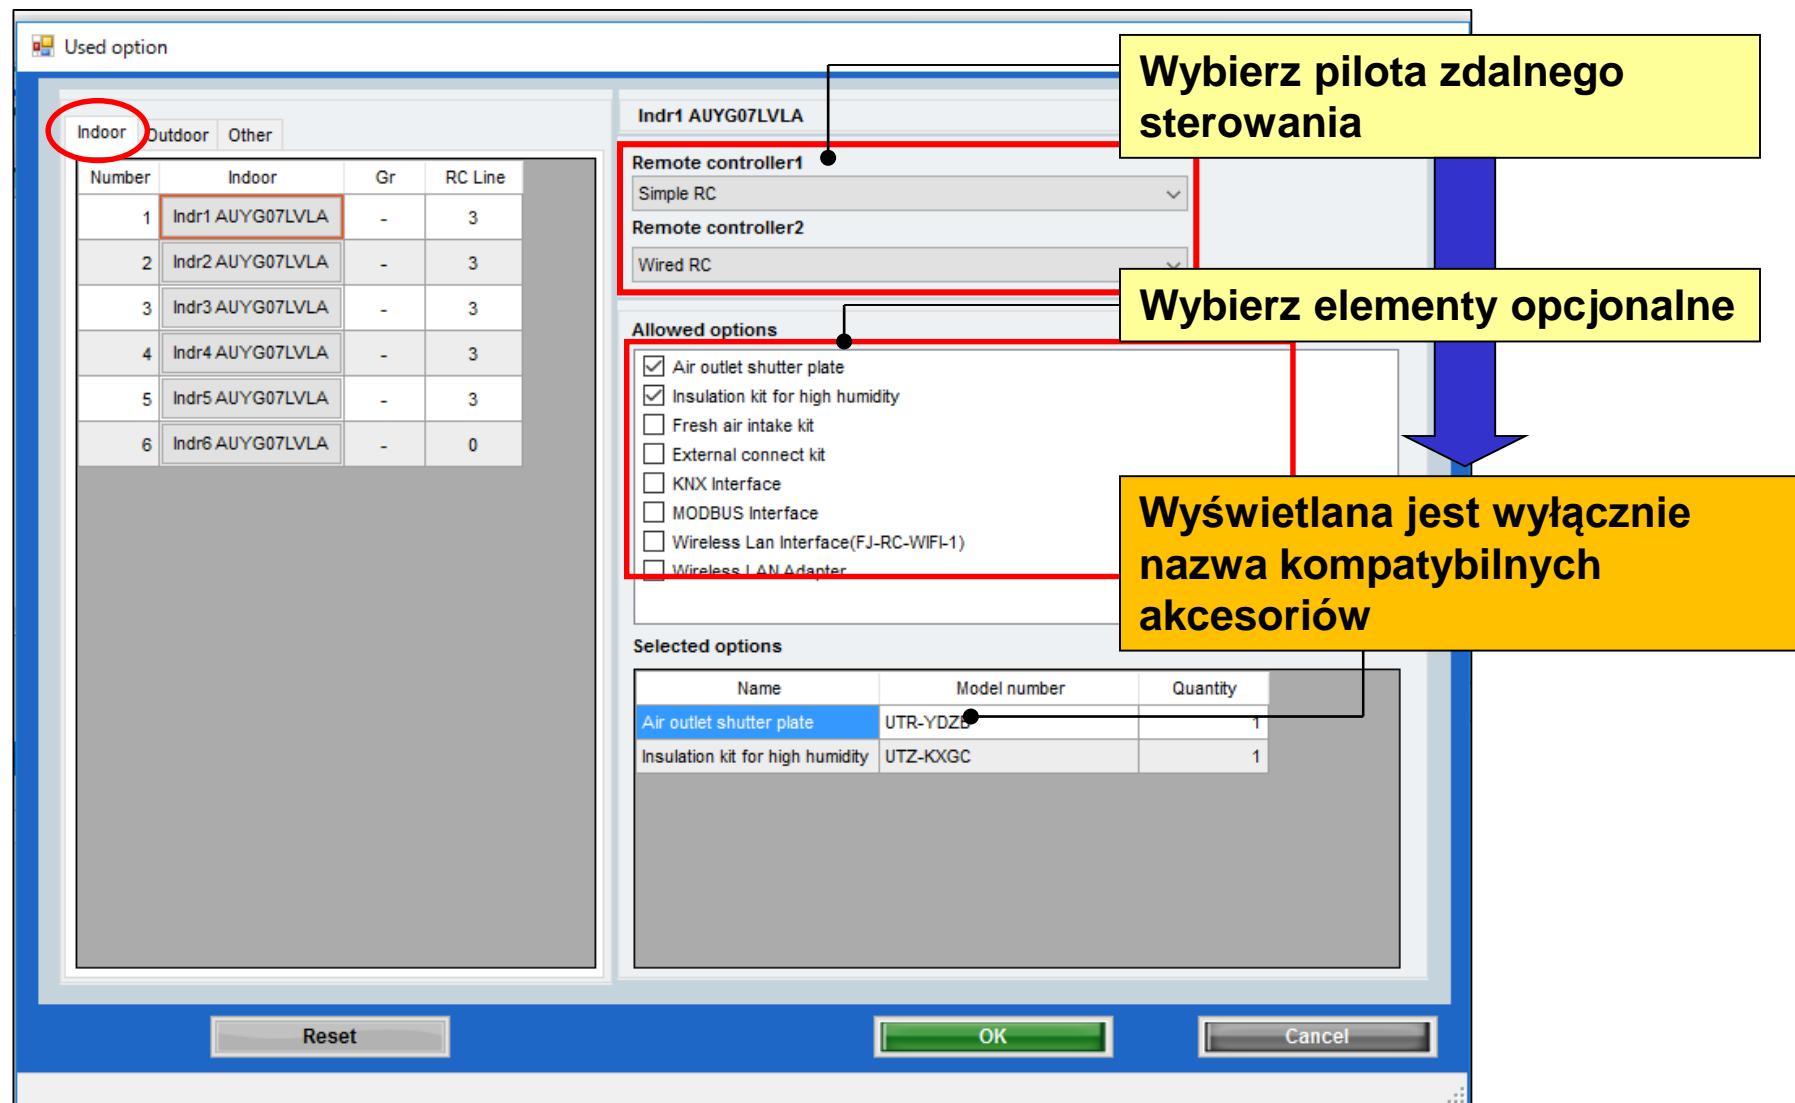

Wybrane opcje zostaną uwzględnione w „Raporcie”

Zastosowane opcje (2/2)

Used option

Indoor **Outdoor** Other

Number	Outdoor
1	AOYG45LBT8

AOYG45LBT8

Allowed options

- Central Remote Controller
- External connect kit
- External connect kit (for Base heater)

Selected options

Name	Model number	Quantity
Central Remote Controller	UTY-DMMYM	1
External connect kit	UTY-XWZXZ3	1


Wybierz akcesoria opcjonalne

Wyświetlana jest wyłącznie nazwa kompatybilnych akcesoriów

Reset OK Cancel

Konfiguracja okablowania


Design Simulator

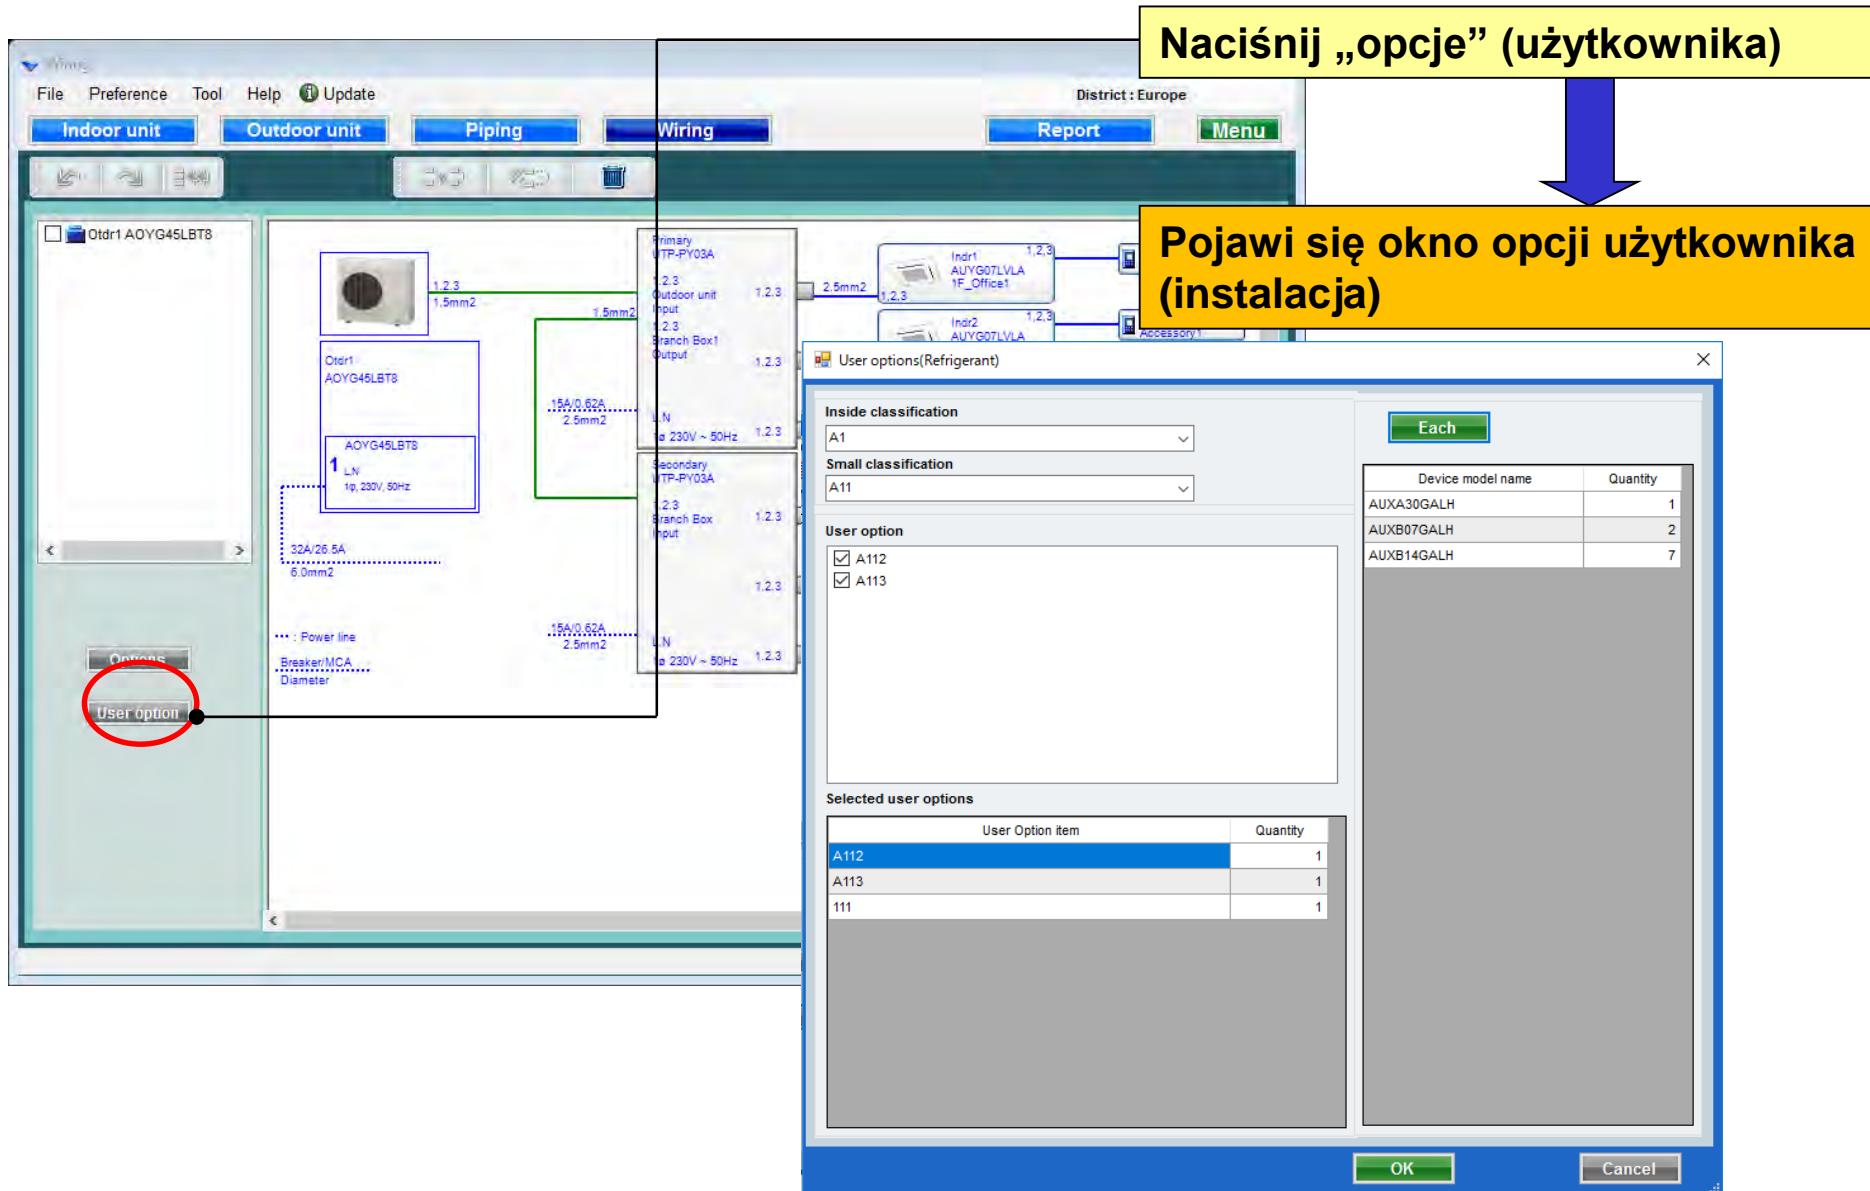

Konfiguracja okablowania

Design Simulator

Opcje użytkownika (instalacja)

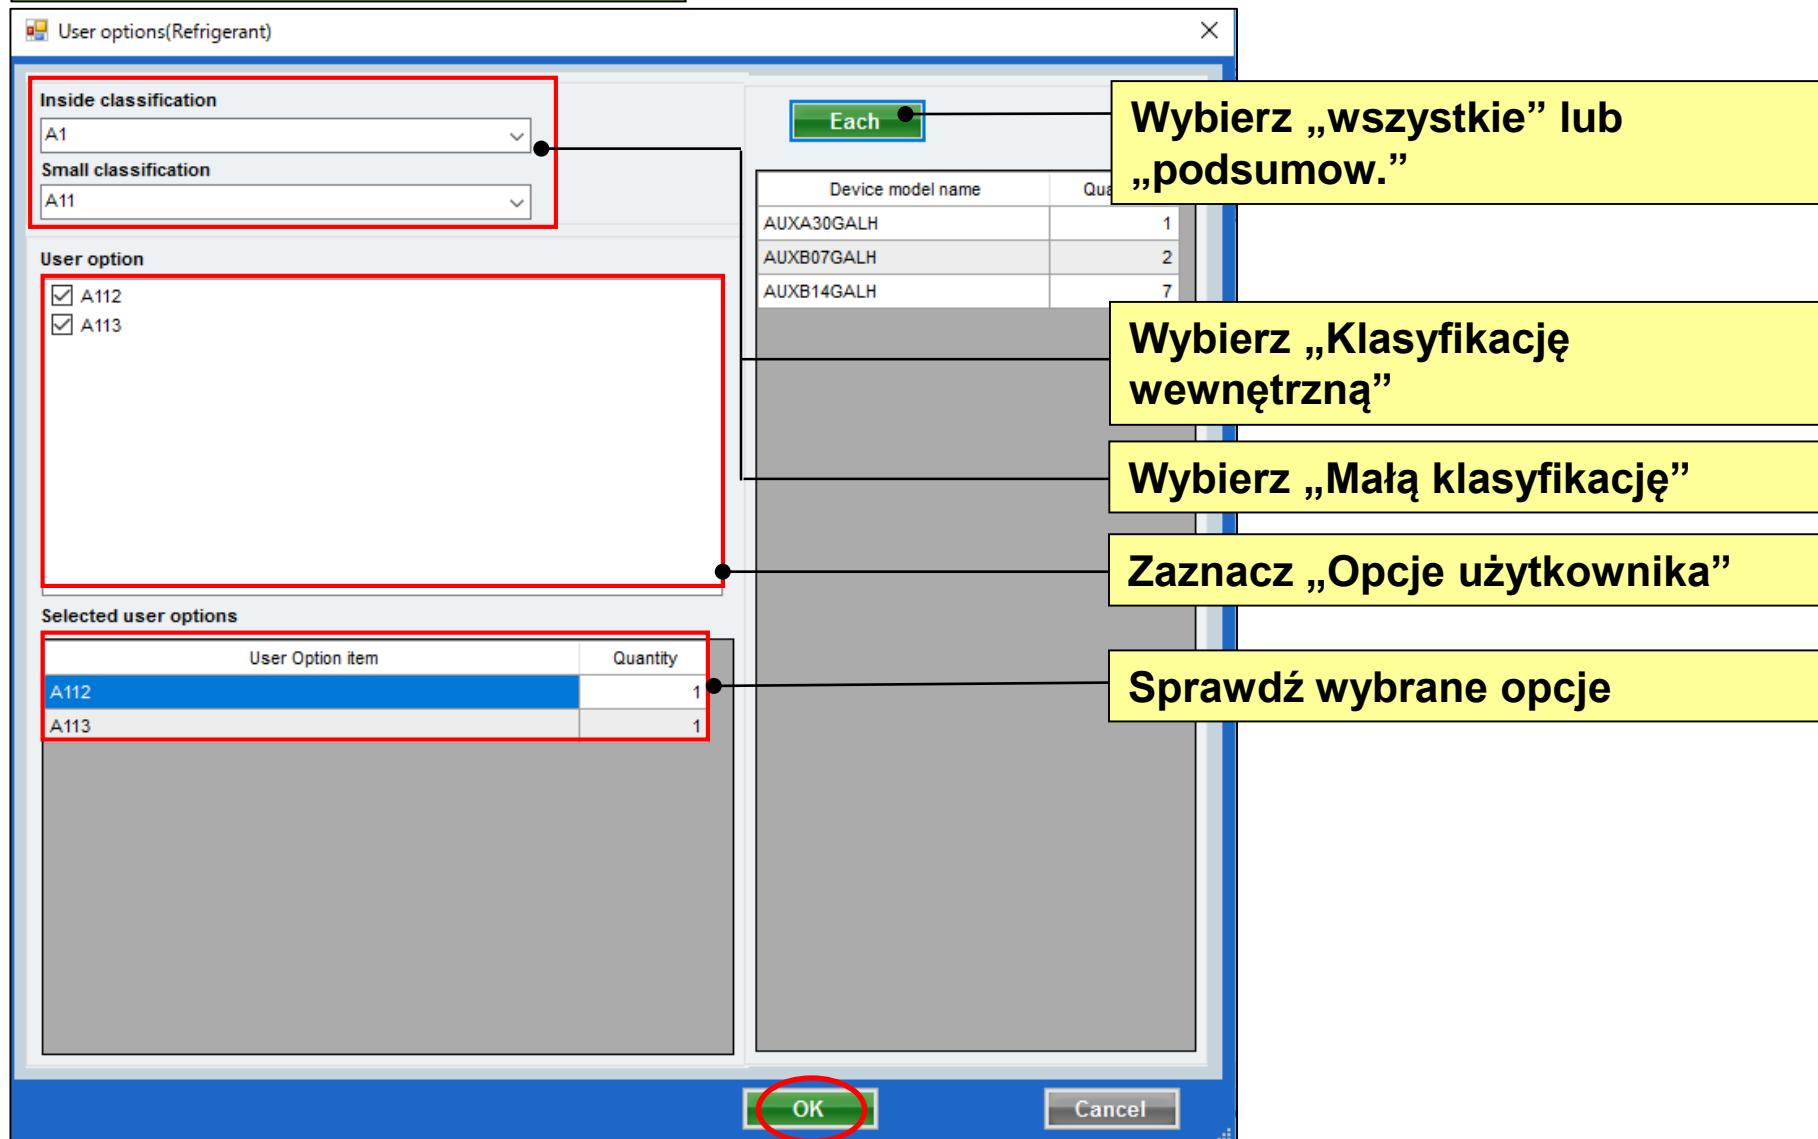

Wybrane opcje zostaną uwzględnione w „Raportie”

Kablolama ayarları

Tasarım Simülatörü


The screenshot illustrates the 'Wiring' configuration process in the Design Simulator software:

- Top Left:** A window titled "Wiring" shows a piping and wiring diagram for an indoor unit (Otdr1 AOYG45LBTS) connected to an outdoor unit (AOYG45LBTS). The "Wiring" tab is highlighted with a red circle. A yellow box labeled "Kablolama" sec (Wiring) is positioned above the window.
- Top Right:** A large blue arrow points downwards from the top window towards a second window.
- Bottom Window:** This window also has a "Wiring" tab highlighted. It displays a detailed wiring configuration for the same indoor unit. The wiring is color-coded by type: Primary UTP-PY03A (green), Secondary UTP-PY03A (blue), and Power line (red). Various connection ports are labeled with port numbers (1, 2, 3) and cross-sectional areas (e.g., 1.5mm², 2.5mm²). A red box highlights the wiring section of this window. A yellow box labeled "kablolama sistem diyagramı oluşturma" (Create wiring system diagram) is positioned to the right of the arrow.
- Bottom Left:** A yellow box contains the text: "Kablo bilgi ekranı: Her cihaz için her bir cihaz bağlantı portu için geçerli değer" (Cable information screen: Valid value for each device's each device connection port).

Kablolama ayarları

Tasarım Simülatörü

Soğutma maddesi sistemi tayini

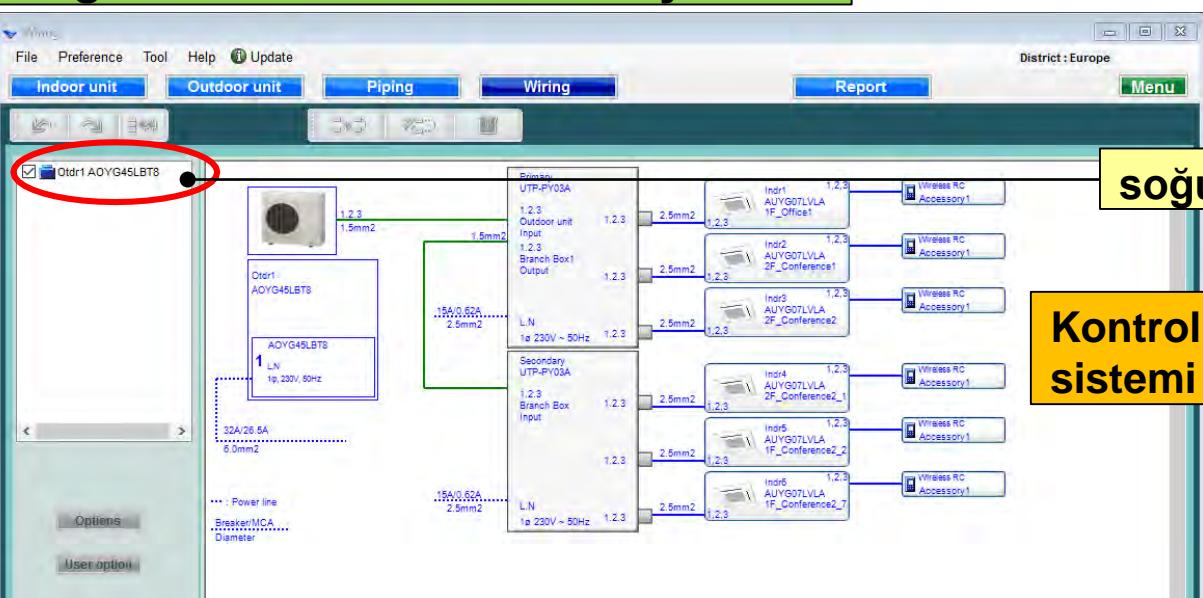


soğutucu sistem kontrolü

Kontrol edilen soğutucu akışkan sistemi her bir ekranla düzenlenemez

This screenshot shows the 'indoor unit' configuration screen. It displays detailed information for the selected indoor unit 'Otdr1'. Key data includes:

- Name: Otdr1
- Comments: Rm10A
- Refrigerant: R410A
- Model: AOYG45LB78
- Type: 3 Rooms Multi System
- Model: AOYG45LB78
- P.S.: 1e: 230V, 50Hz
- Combination: Actual 87.9%, Max. 100%
- Capacity: Cooling 14.00 kW, Heating 18.00 kW
- Actual capacity: Cooling 12.30 kW, Heating 14.22 kW
- Indoor connect count: 8
- Total indoor capa: Cooling 12.30 kW, Heating 14.22 kW
- Outdoor temp.: Cooling 26.0C, Heating 7.0C


Below this, there's a section for piping with 'Actual piping length' listed as 7.5m. Other sections include 'Indoor unit value' and 'Piping'.

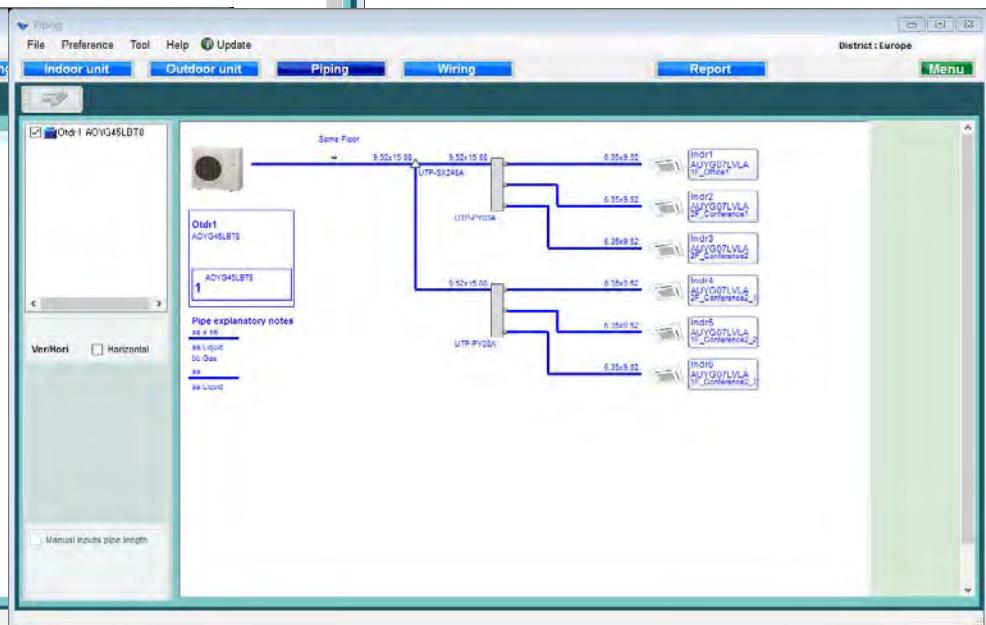

Kablolama ayarları

Tasarım Simülatörü

Seçenekler

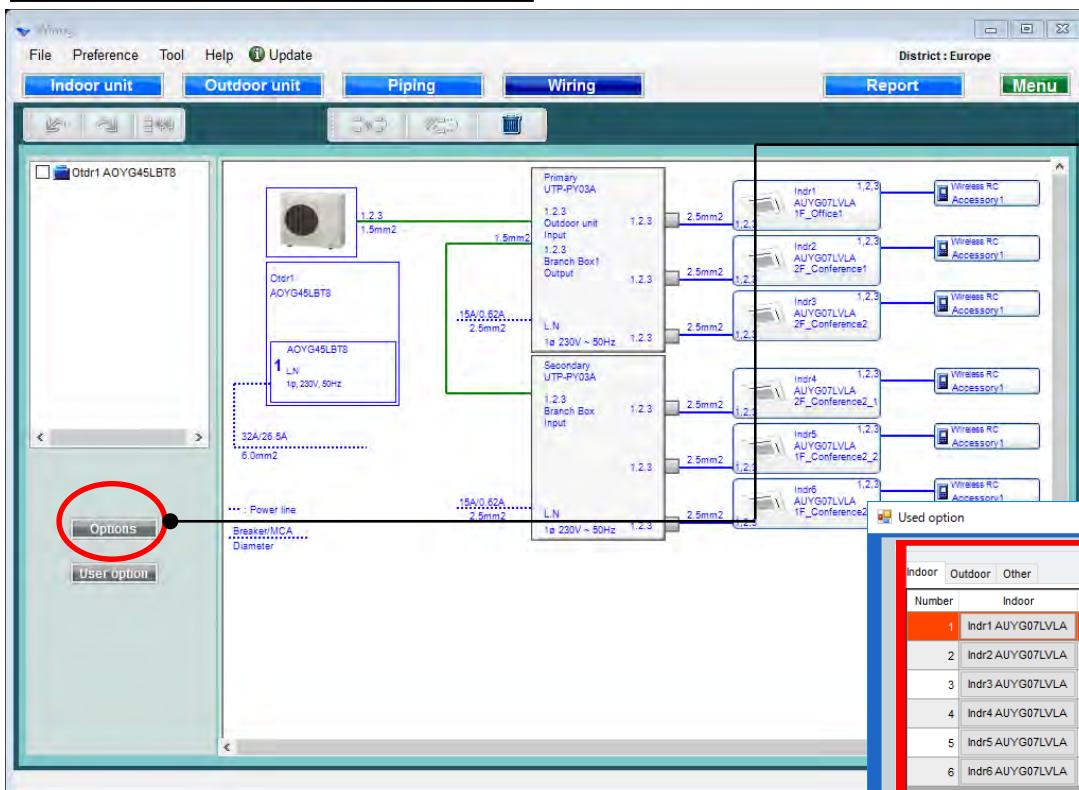


“Seçenekler” seçin

The screenshot shows the 'Used option' dialog box. It lists six indoor options (Indr1 to Indr6) and their corresponding components. The 'Remote controller1' dropdown is set to 'Wireless RC'. The 'Allowed options' section contains several checkboxes for various accessories, none of which are checked. The 'Selected options' section is currently empty.

Number	Indoor	Gr	RC Line
1	Indr1 AUYG07LVLA	-	0
2	Indr2 AUYG07LVLA	-	3
3	Indr3 AUYG07LVLA	-	3
4	Indr4 AUYG07LVLA	-	3
5	Indr5 AUYG07LVLA	-	3
6	Indr6 AUYG07LVLA	-	0


Kullanılan seçenek ekranını aç.

İkinci seçenek (1/2)

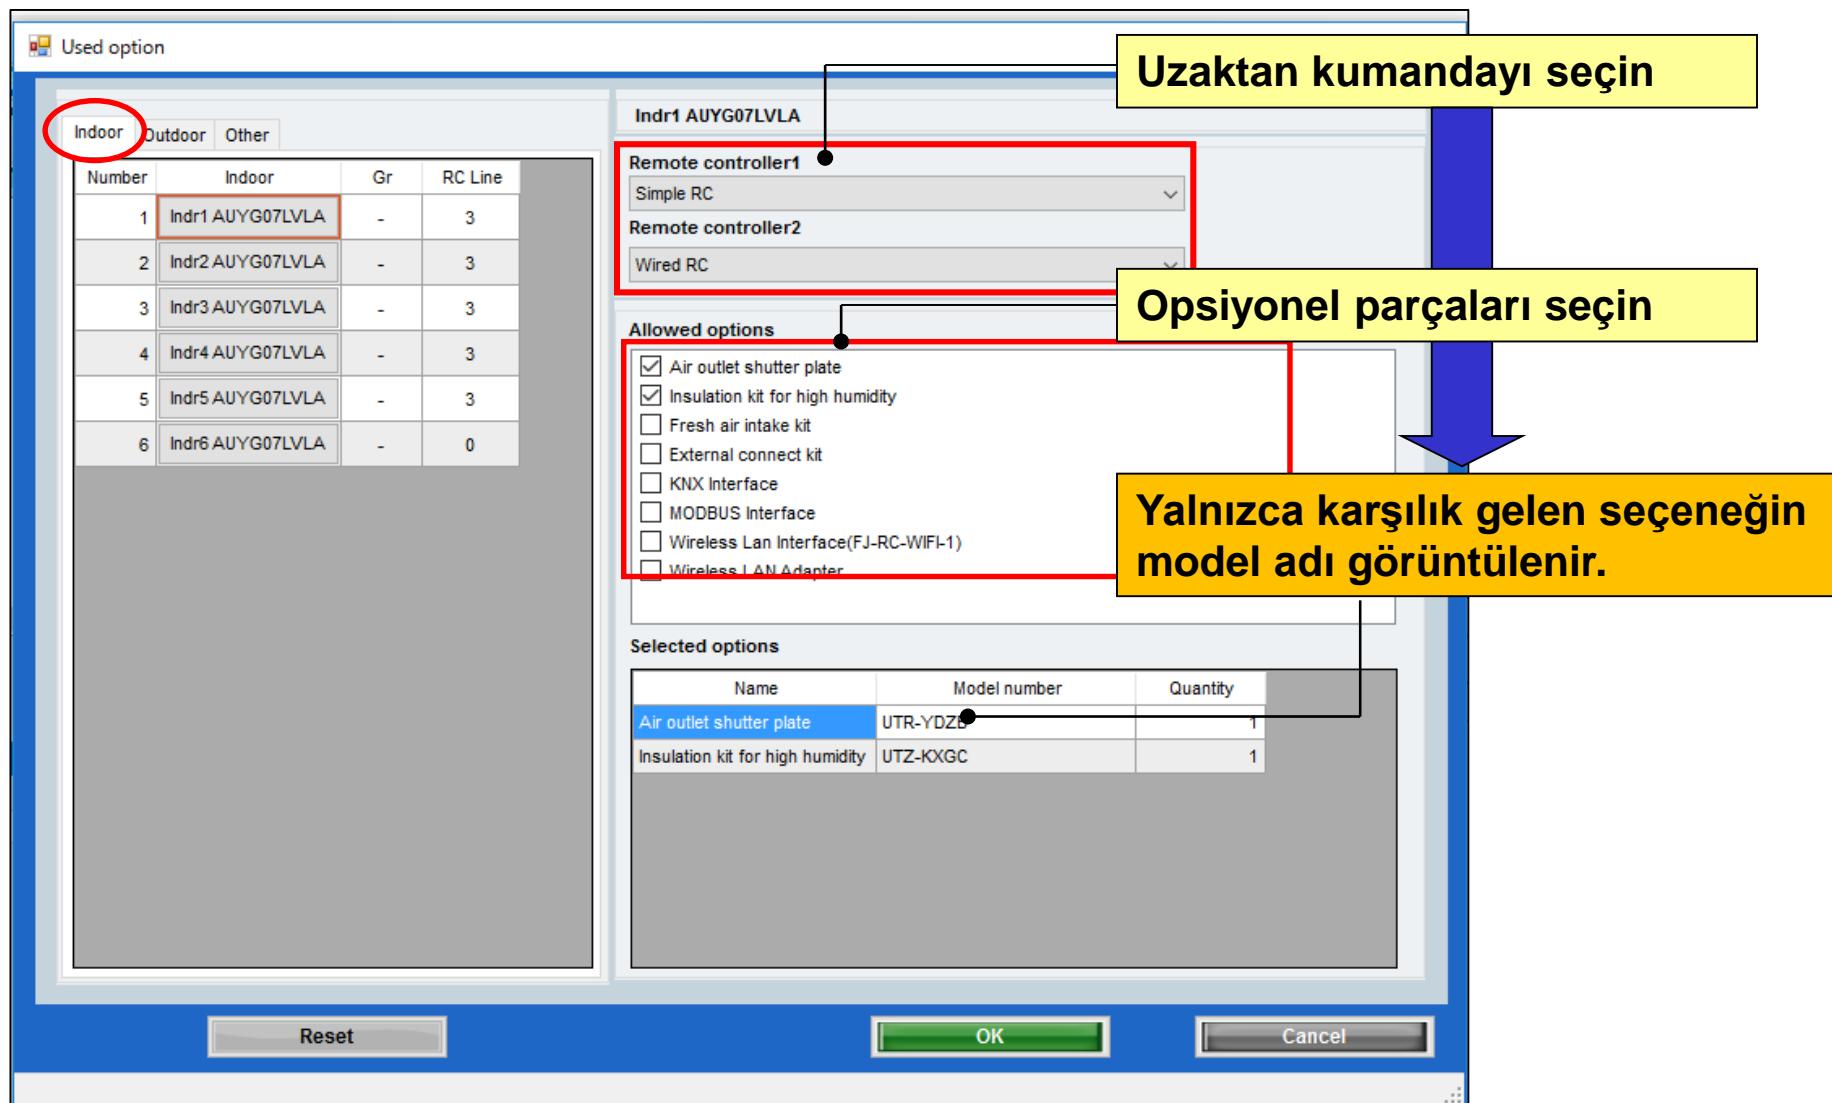


Seçilen seçenekler “Raporda” görüntülenir

İkinci seçenek (2/2)

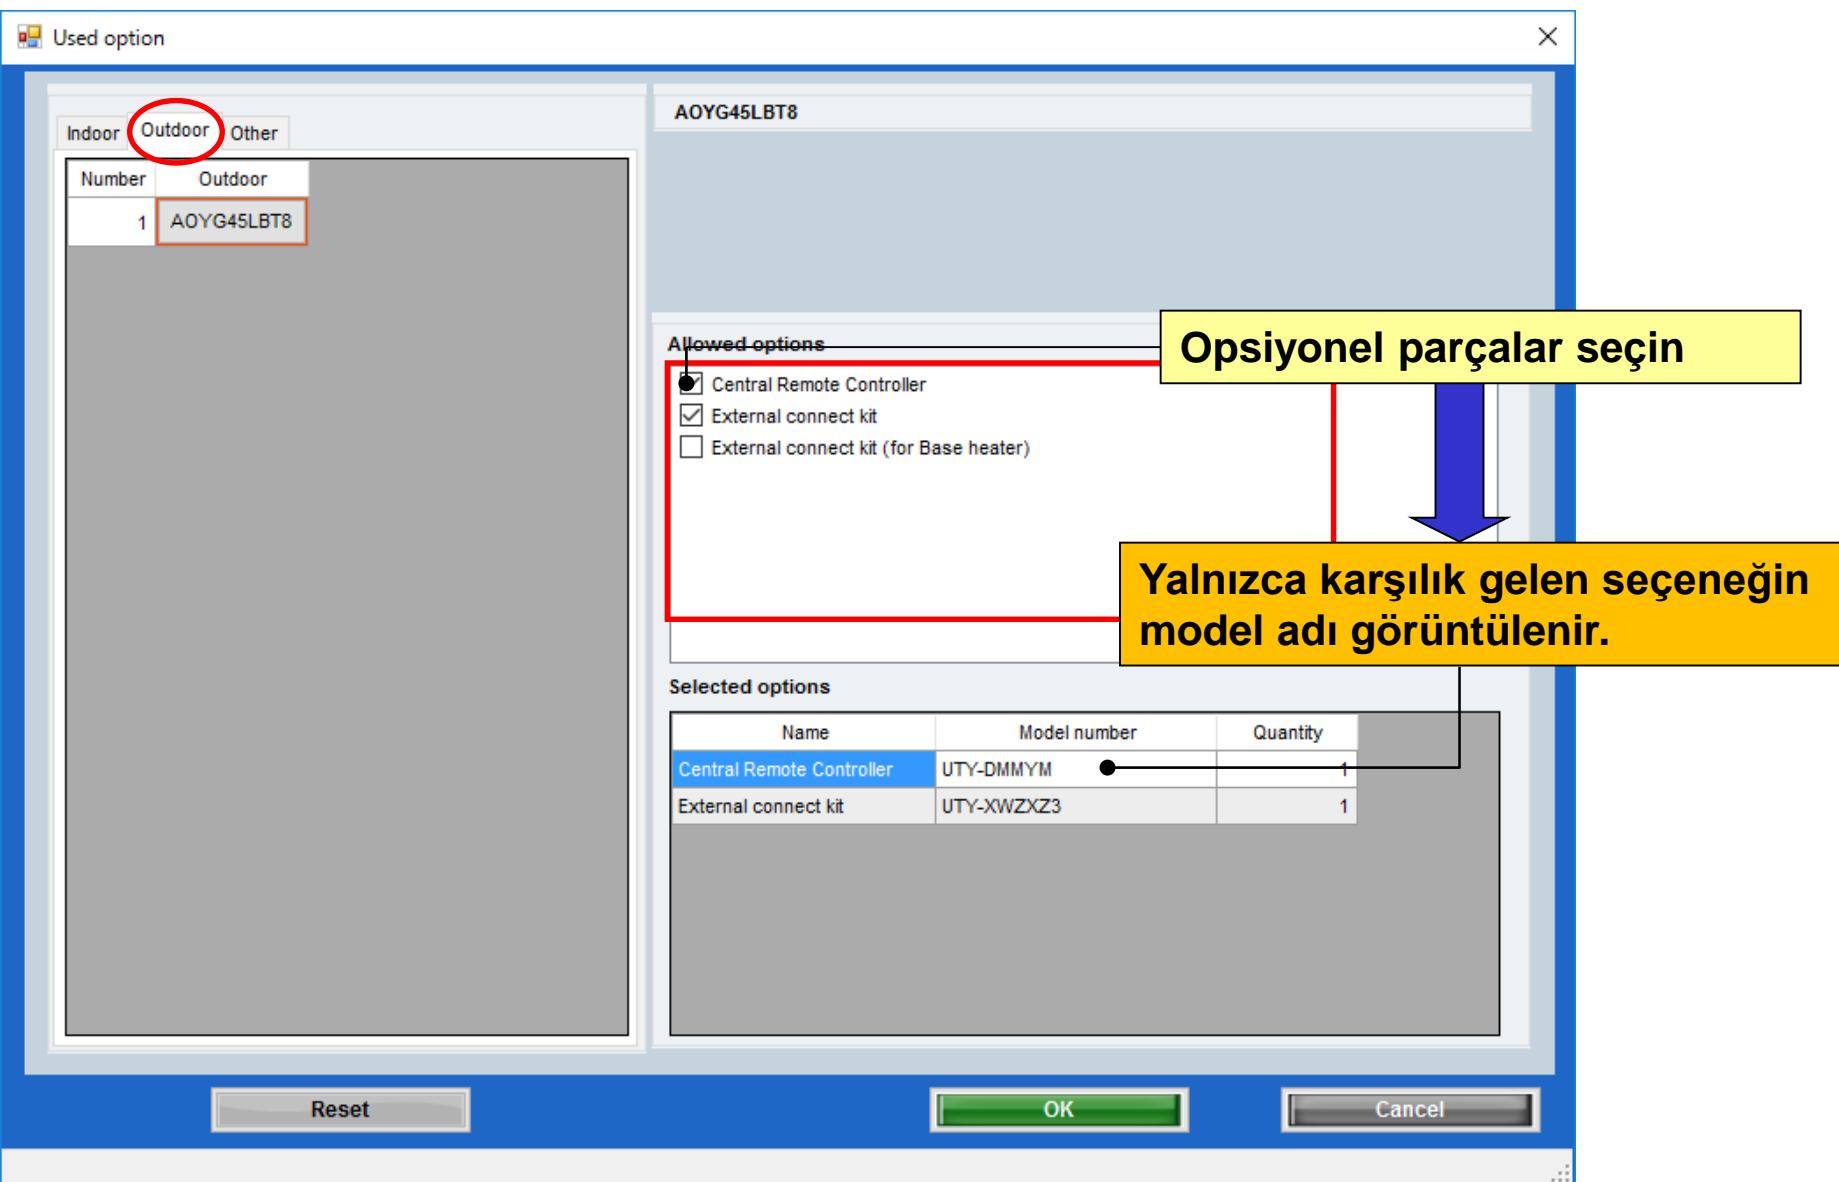

Kablolama ayarları


Tasarım Simülatörü

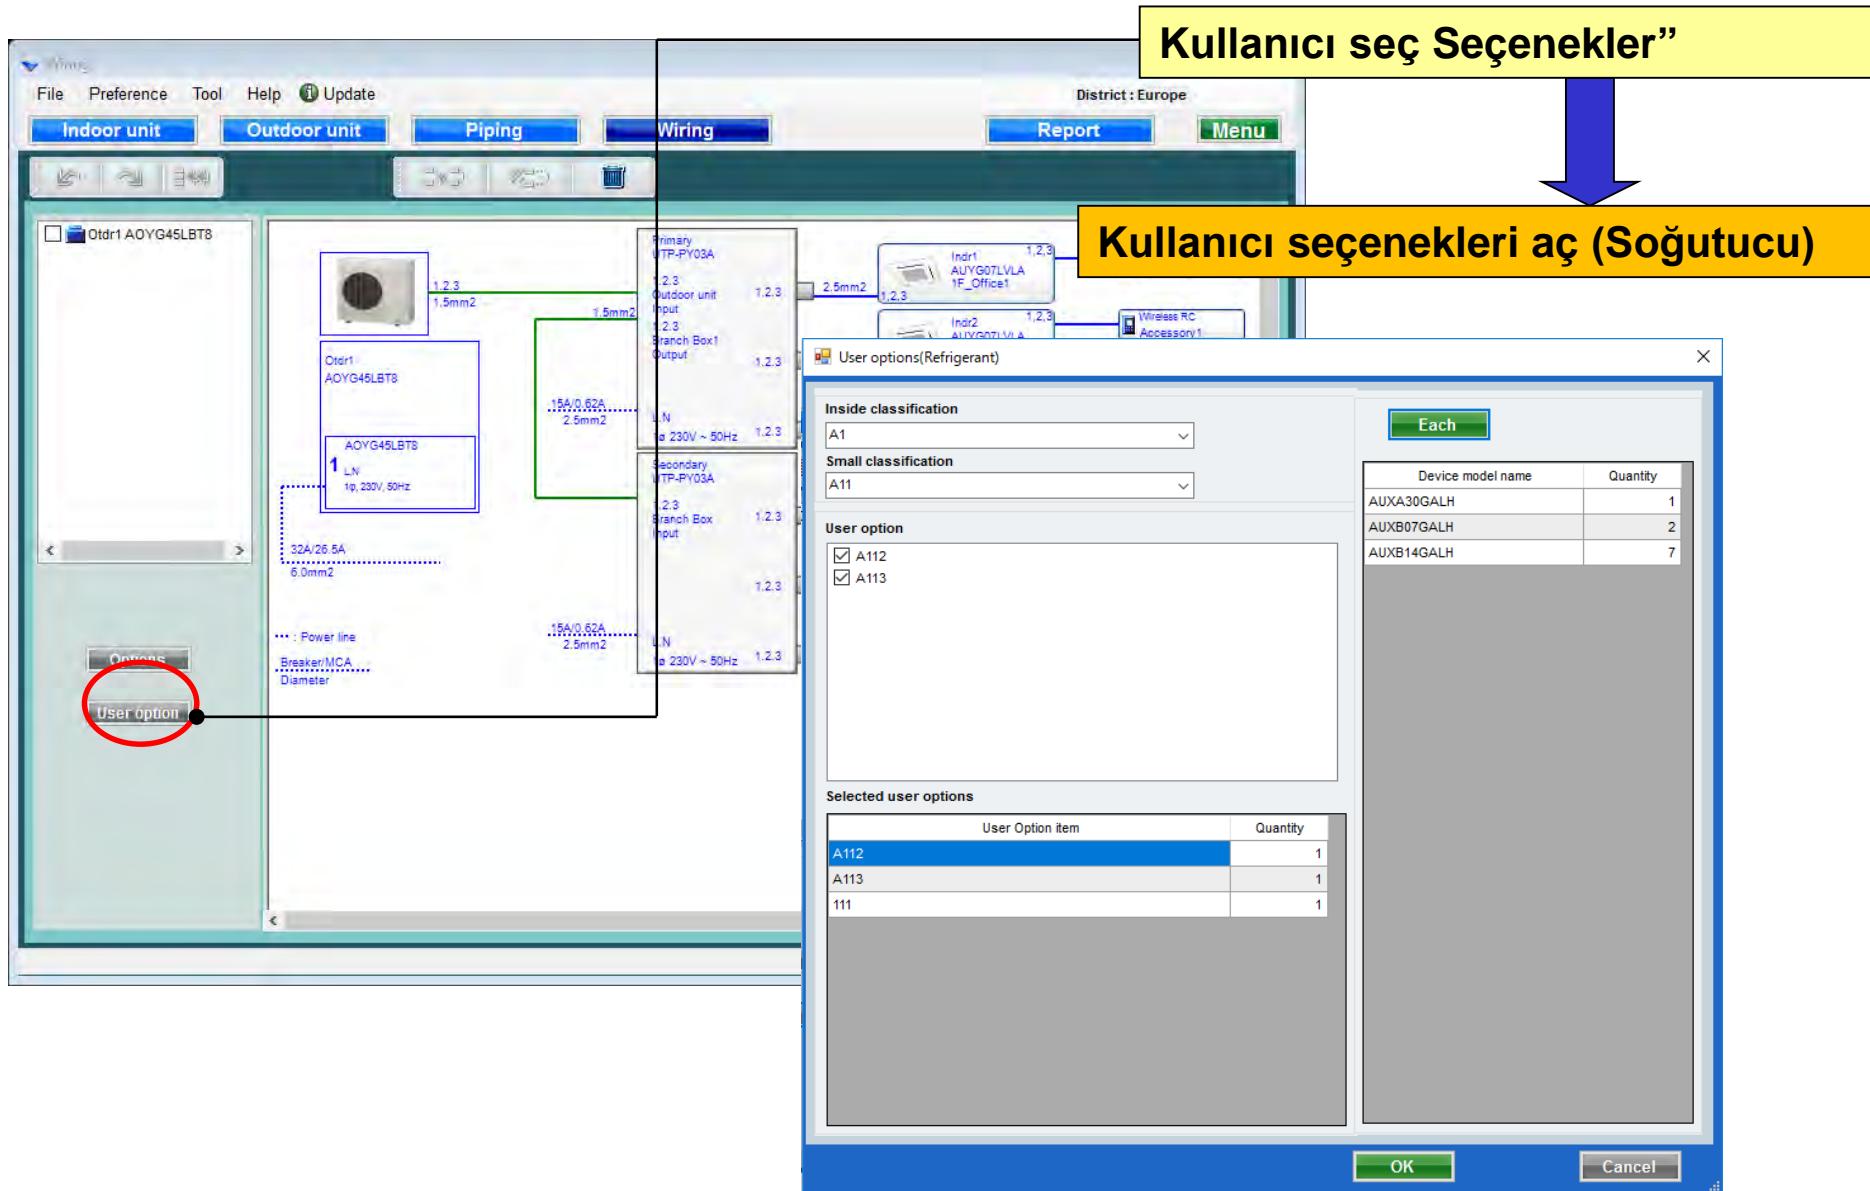

Kablolama ayarları

Tasarım Simülatörü

kullanıcı seçenek (Soğutucu)

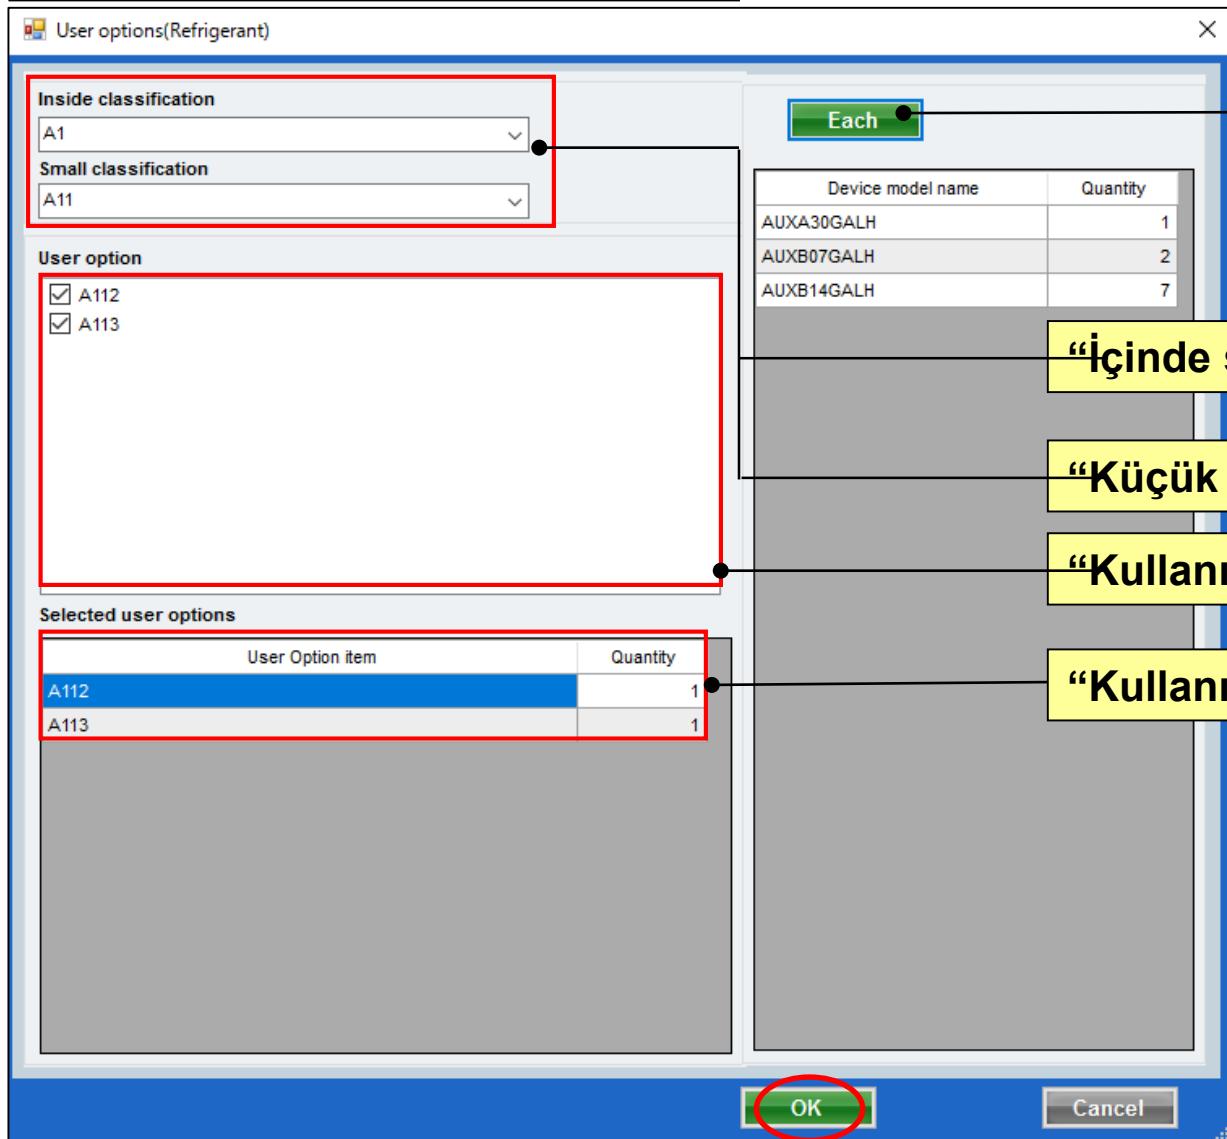

“Her biri veya Özeti” i seçin

“İçinde sınıflandırma” seç

“Küçük sınıflandırma” Seç

“Kullanıcı” seçeneğini kontrol edin

“Kullanıcı” seçeneğini kontrol edin

Seçilen seçenekler “Raporu” görüntülenir

Podešavanje kabliranja

Design Simulator


The screenshot illustrates the workflow for布线 (Wiring) in the Design Simulator software:

- Step 1: Select "Wiring".** A red circle highlights the "Wiring" tab in the top menu bar. To the right, a yellow box contains the text "Izaberite ‘Kabliranje’" (Select 'Wiring').
- Step 2: Create the wiring diagram.** A large blue arrow points down from the first step to a second screenshot showing the wiring diagram. The diagram shows an indoor unit (Otdr1 AOYG45LBTS) connected via UTP-SX248A and UTP-PY03A to six branch boxes (Indr1 to Indr6), each connected to a conference room. Pipe explanatory notes indicate dimensions: 9.52x15.88, 6.35x9.52, and 6.35x9.52.
- Step 3: View detailed cable information.** A red box highlights the "User option" button in the bottom left of the wiring diagram window. To the left, a yellow box contains the text "Prikaz informacija o kablu: Trenutna vrednost za svaki uređaj" (Display cable information: Current value for each device) and "Priključak za svaki uređaj" (Connection for each device).
- Step 4: Detailed wiring configuration.** The bottom screenshot shows a detailed wiring configuration for the primary and secondary branch boxes. It includes connections for L, N, and PE wires, with specific dimensions like 1.5mm², 2.5mm², and 15A/0.52A. The connection to the outdoor unit is labeled 32A/26.5A, 6.0mm². The power line connection is labeled 1.5mm².

Podešavanje kabliranja

Design Simulator


Određivanje sistema rashladnog fluida

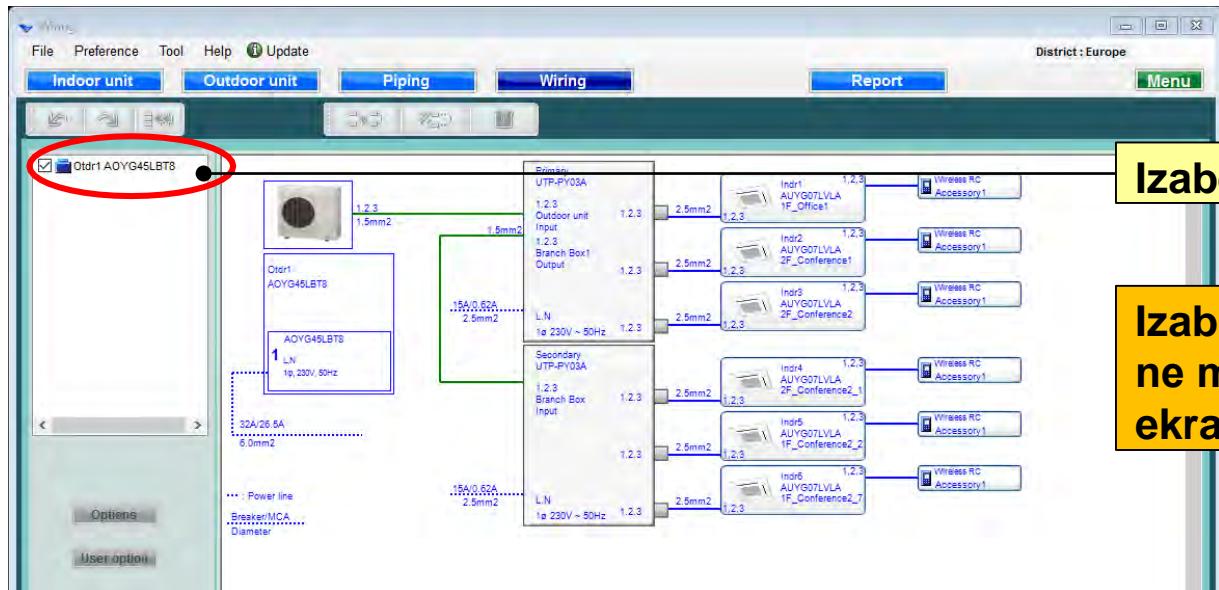


Izaberite sistem rashladnog fluida

Izabrani sistem rashladnog fluida
ne može se uređivati na svakom
ekranu

This screenshot shows the 'indoor unit' tab. It displays the 'Details of indoor unit' and 'Outdoor unit data' sections. The 'Details of indoor unit' section shows the unit's name (Indr1) and its connection to other indoor units (Indr2, Indr3, Indr4, Indr5, Indr6). The 'Outdoor unit data' section provides detailed information about the outdoor unit, including its model (AOYG45LB78), refrigerant (R410A), and various performance parameters like cooling capacity and heating capacity. The bottom section, 'indoor unit value', lists specific parameters such as model, capacity, fan air flow rate, sound pressure level, and input power.

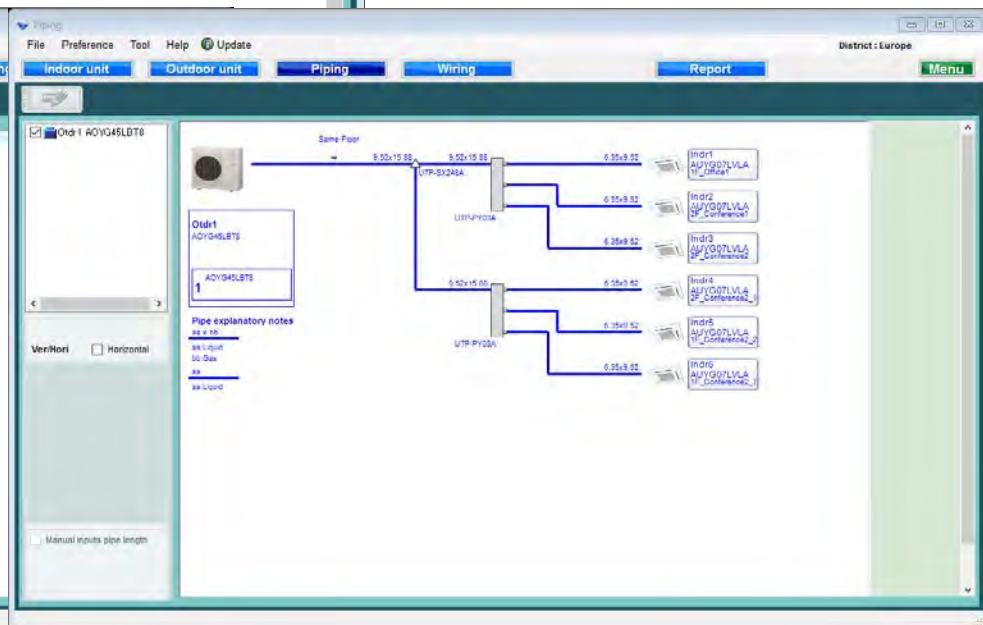

Opcije

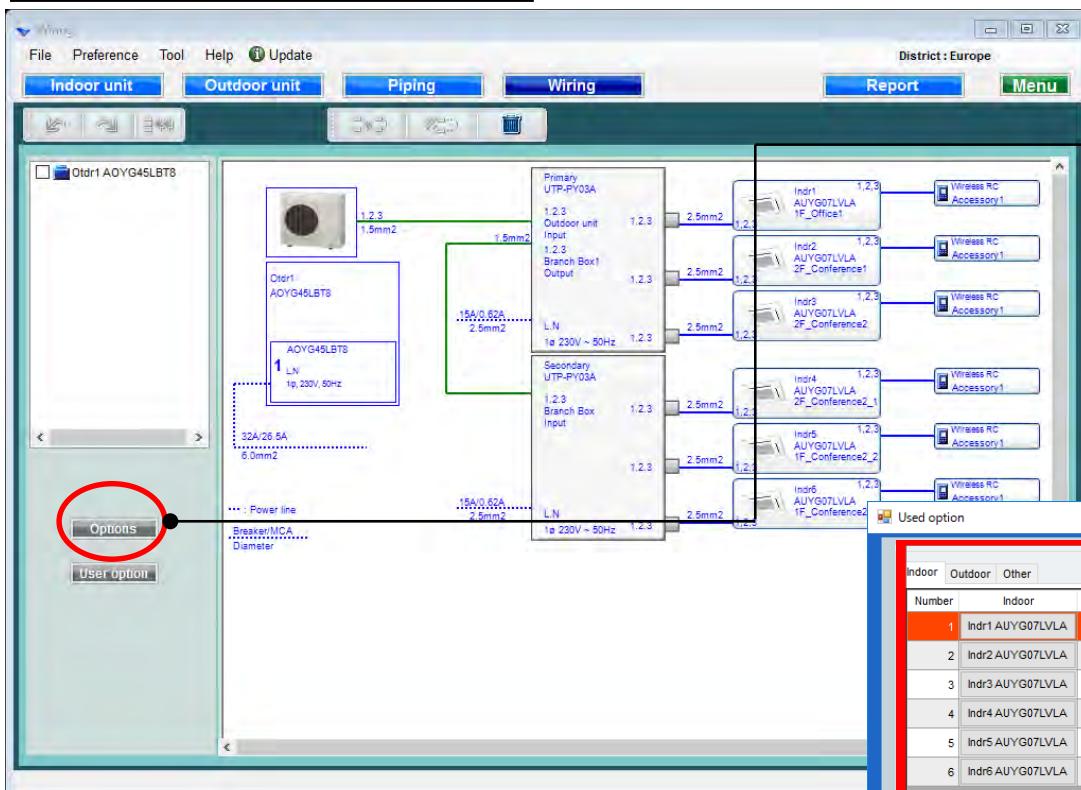

Izaberite "Opcije"

Otvorite ekran sa korišćenim opcijama.

This dialog box is used to manage options for a selected indoor unit. It has tabs for Indoor, Outdoor, and Other. The Indoor tab is active, showing a list of six units with their respective options. The 'Indr1 AUYG07LVLA' row is highlighted. The 'Allowed options' section contains several checkboxes for various add-ons, none of which are checked. The 'Selected options' section is currently empty. At the bottom are 'Reset', 'OK', and 'Cancel' buttons.

Number	Indoor	Gr	RC Line
1	Indr1 AUYG07LVLA	-	0
2	Indr2 AUYG07LVLA	-	3
3	Indr3 AUYG07LVLA	-	3
4	Indr4 AUYG07LVLA	-	3
5	Indr5 AUYG07LVLA	-	3
6	Indr6 AUYG07LVLA	-	0

Indr1 AUYG07LVLA

Remote controller1
Wireless RC

Remote controller2

Allowed options


- Air outlet shutter plate
- Insulation kit for high humidity
- Fresh air intake kit
- External connect kit
- KNX Interface
- MODBUS Interface
- Wireless Lan Interface(FJ-RC-WIFI-1)
- Wireless LAN Adapter

Selected options


Name	Model number	Quantity


Reset OK Cancel

Korišćene opcije(1/2)

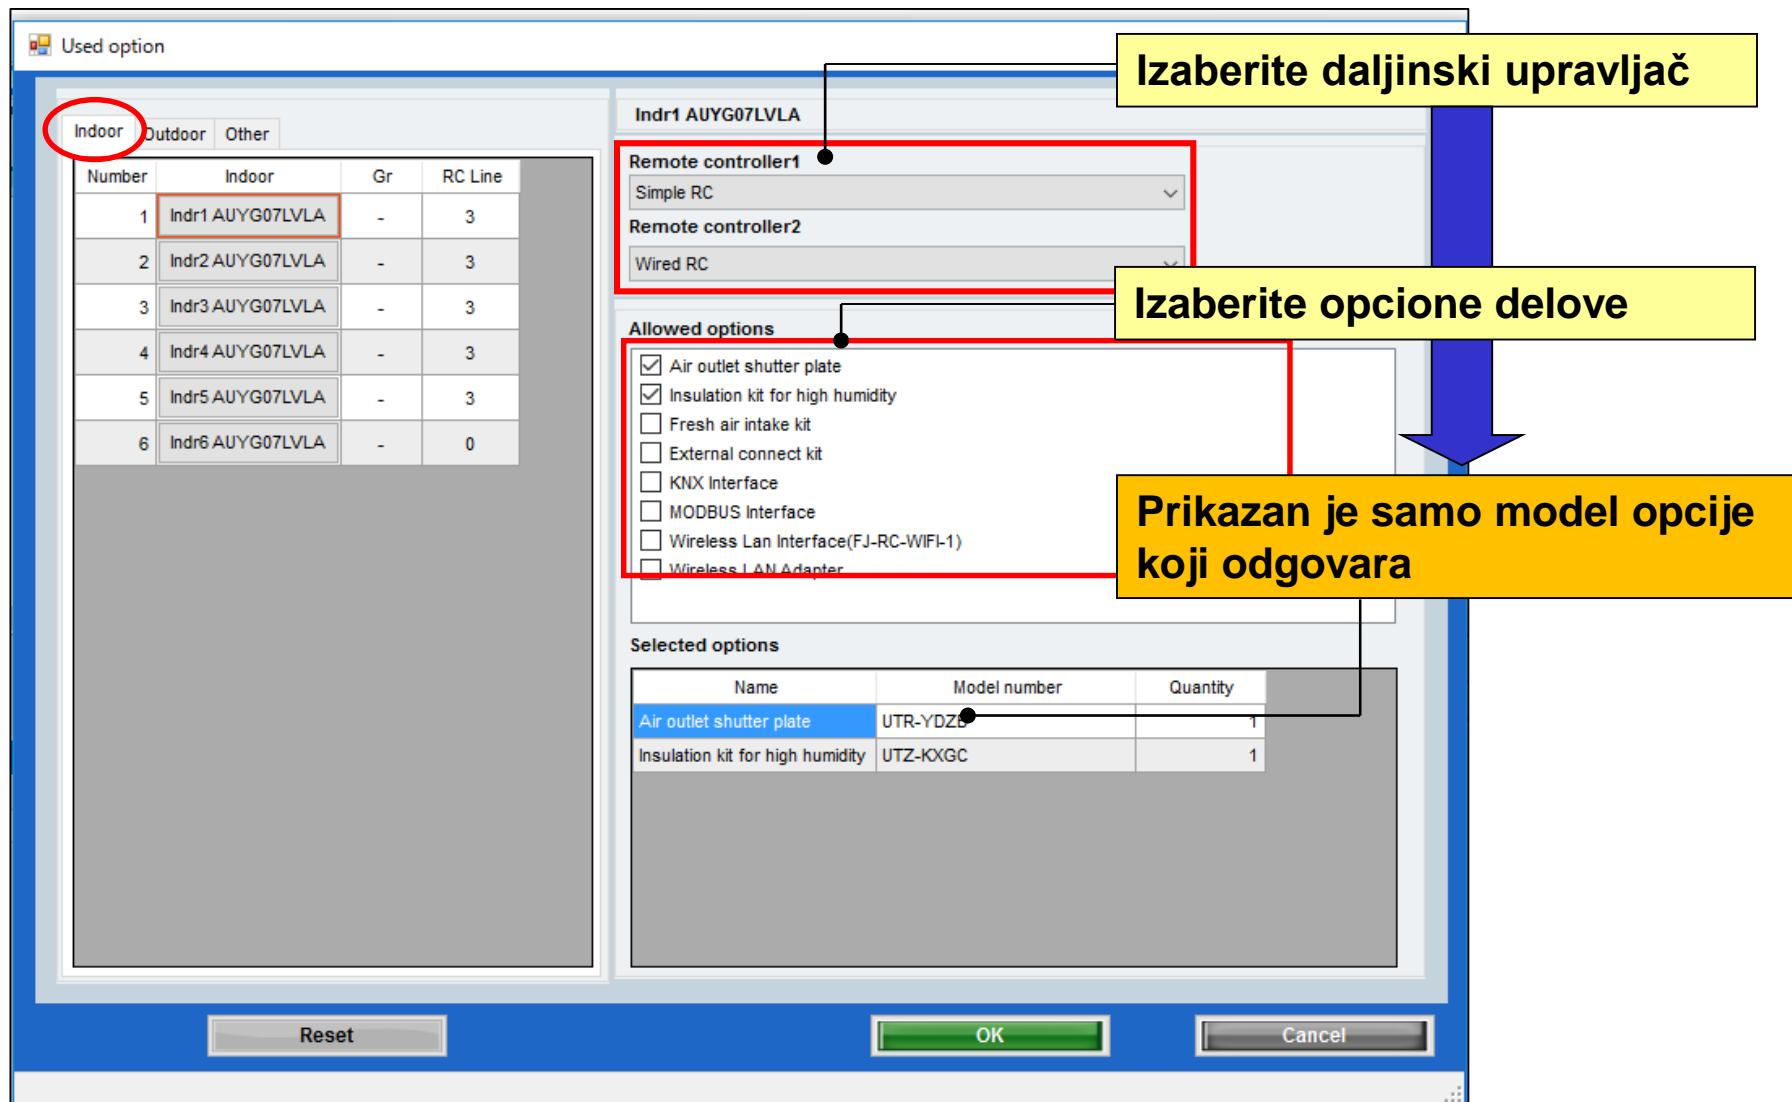


Korišćene opcije(2/2)

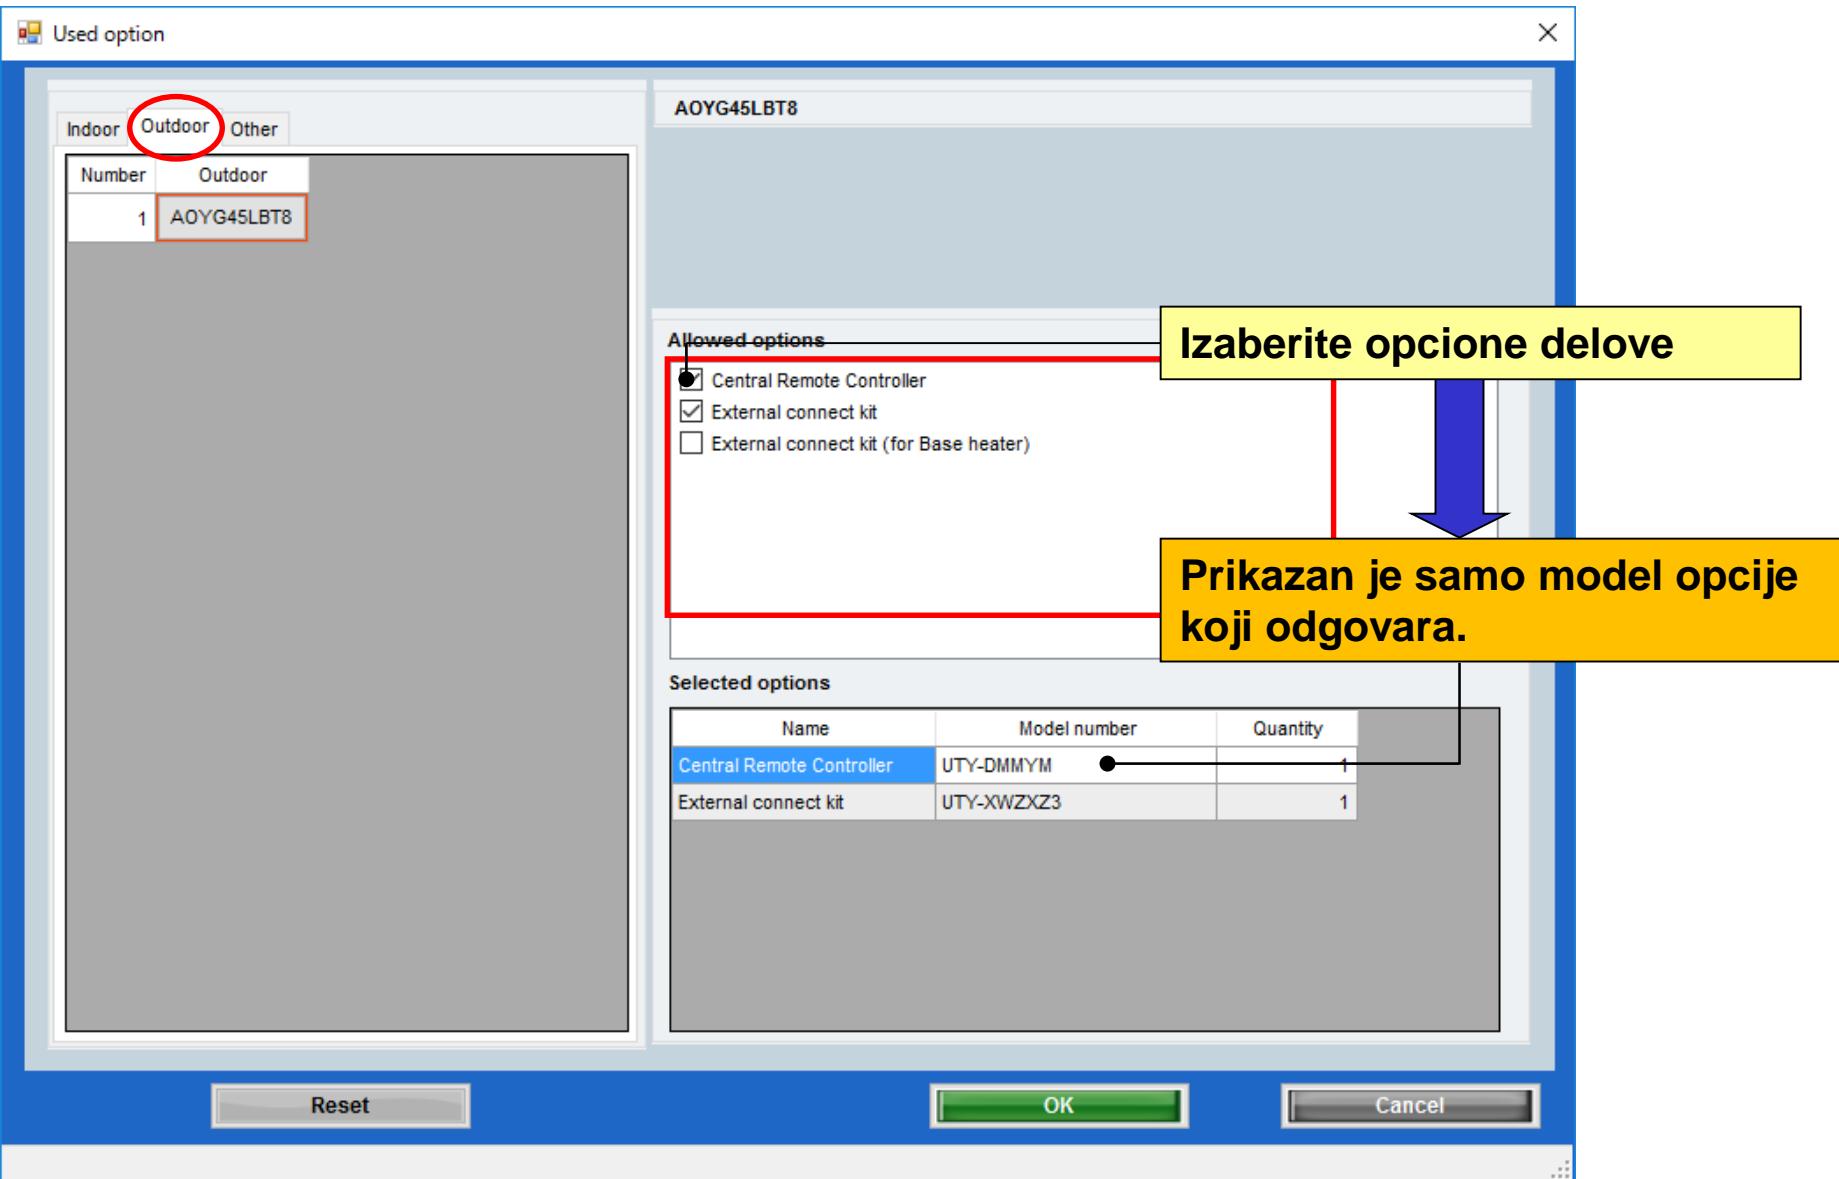

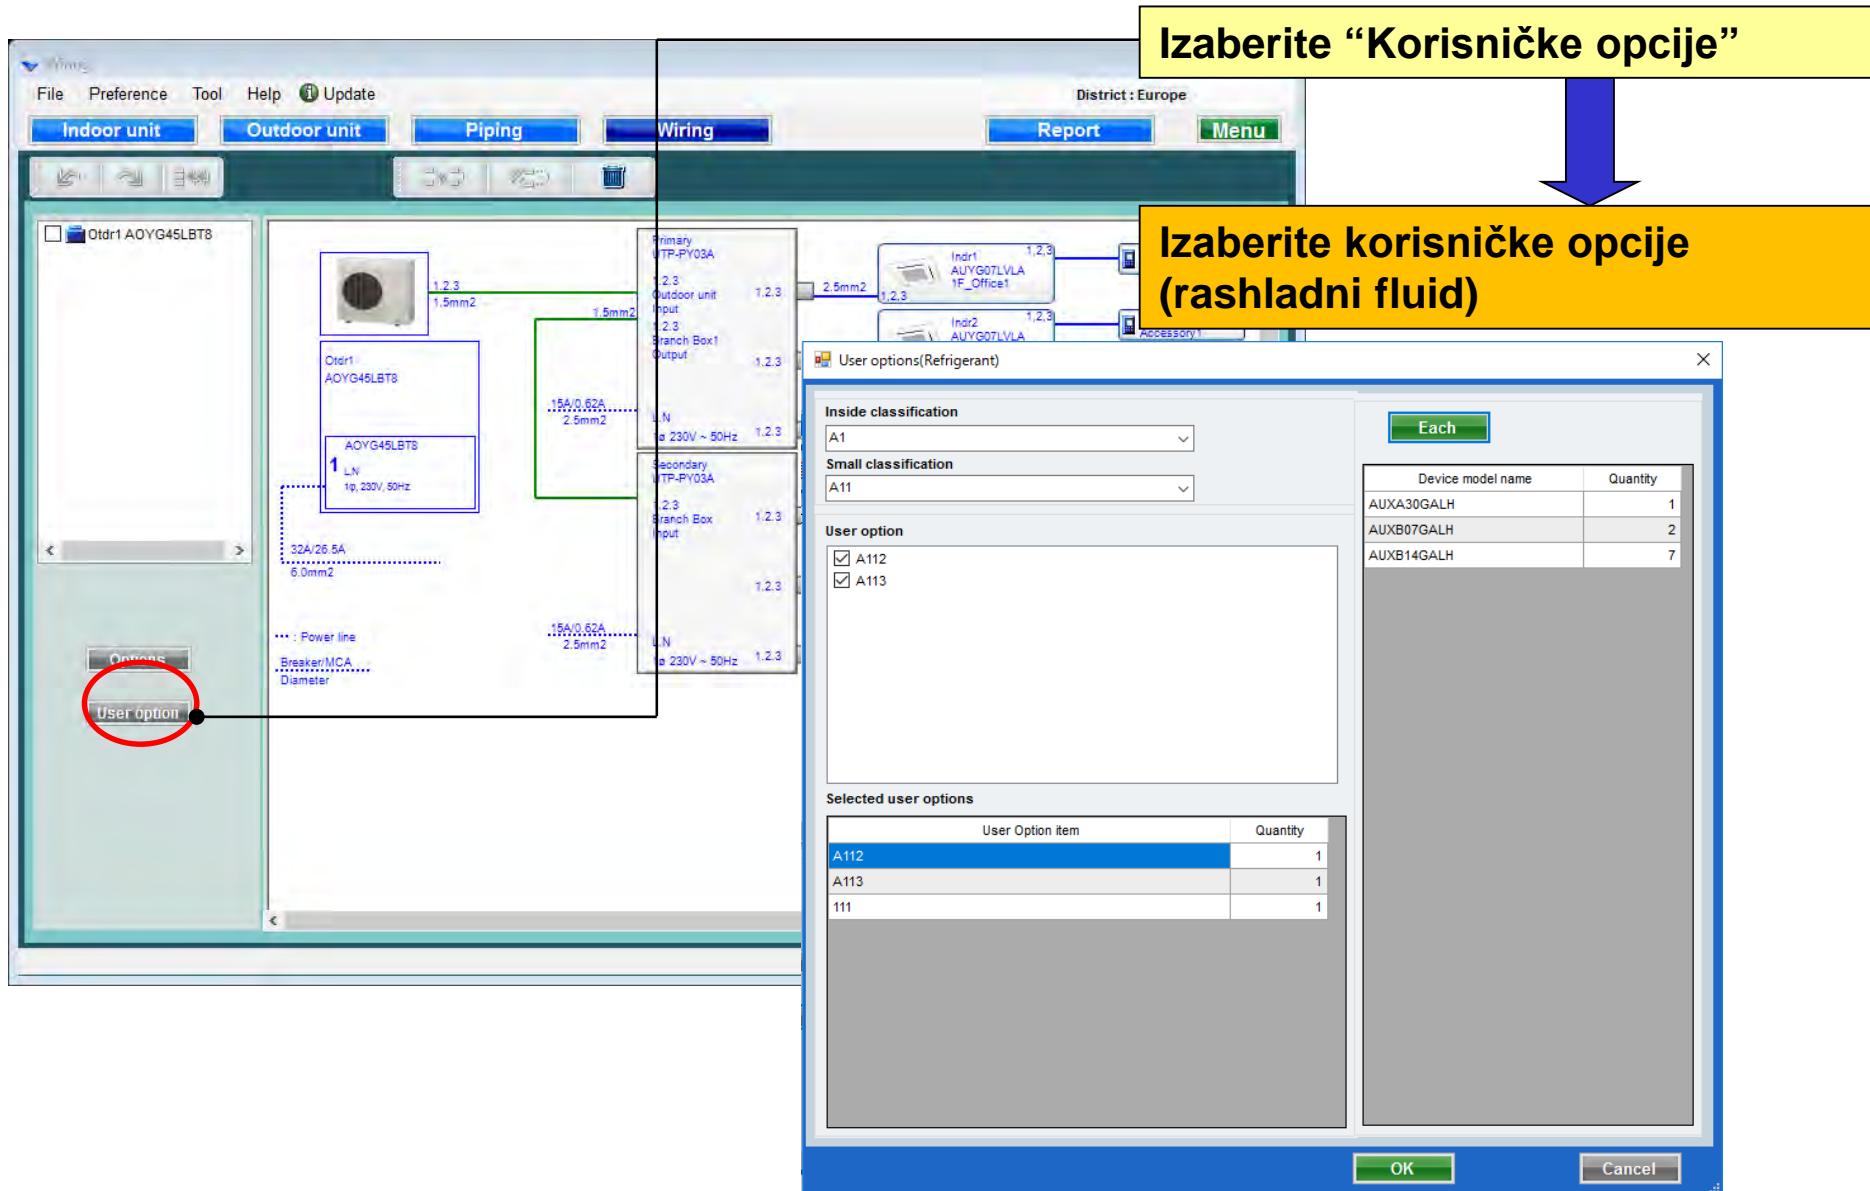

Korisničke opcije(rashladni fluid)

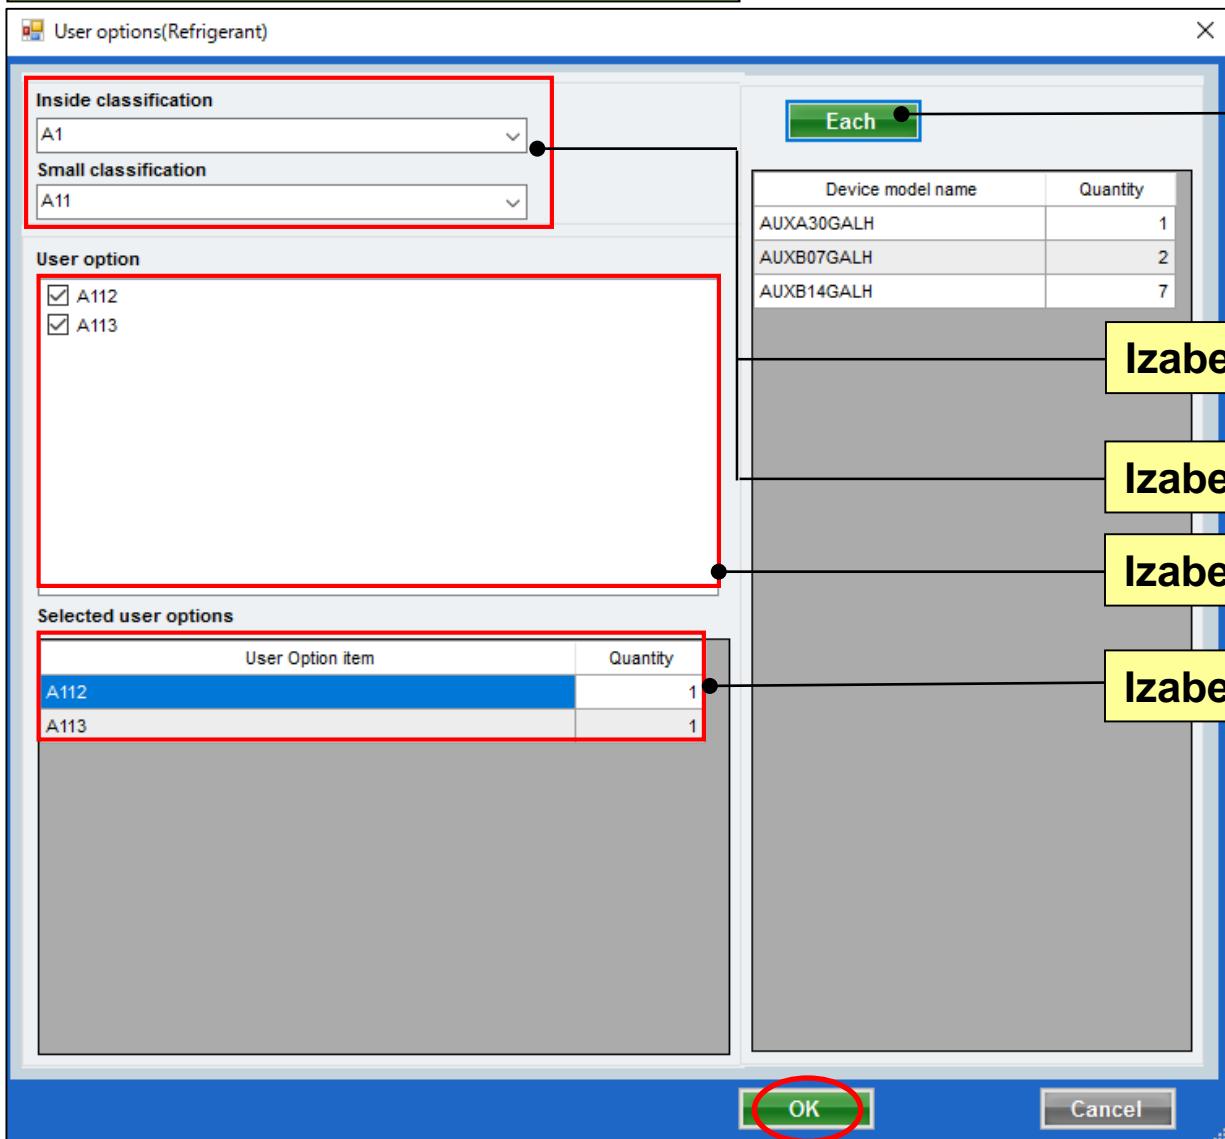

Izaberite “Zasebno ili Grupisano”

Inside classification

A1

Small classification

A11

Each

Device model name

AUXA30GALH

Quantity

1

AUXB07GALH

2

AUXB14GALH

7

User option

- A112
- A113

Selected user options

Izaberite “Unutrašnja klasifikacija”

User Option item

Quantity

A112

1

A113

1

Izaberite “detaljniju klasifikaciju”

Izaberite “Korisničke opcije”

Izaberite “Korisničke opcije”


OK

Cancel

Izabrane opcije su prikazane u “Izveštaju”

Окабеляване


Design Simulator

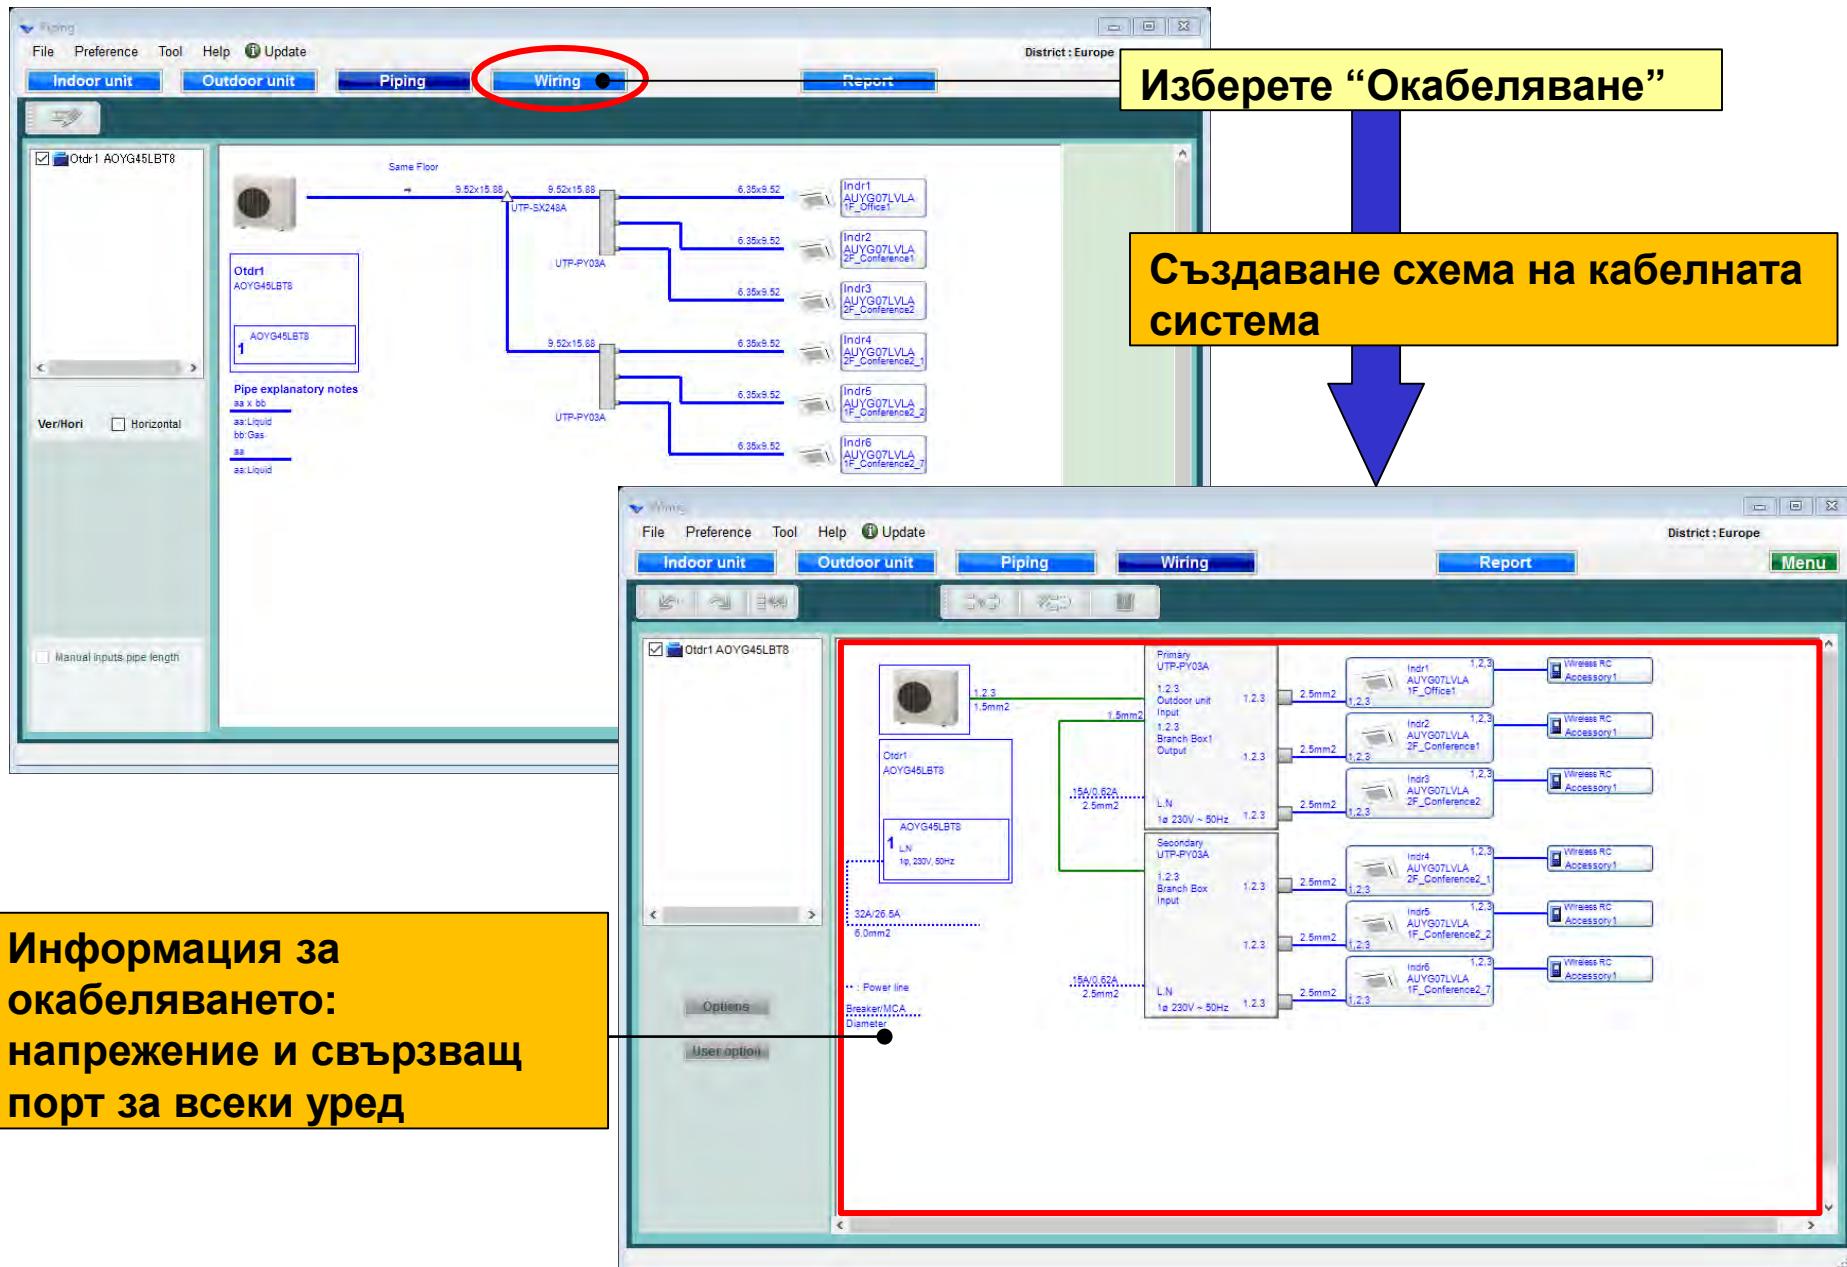

Окабеляване


Design Simulator

Изчисляване на хладилната система

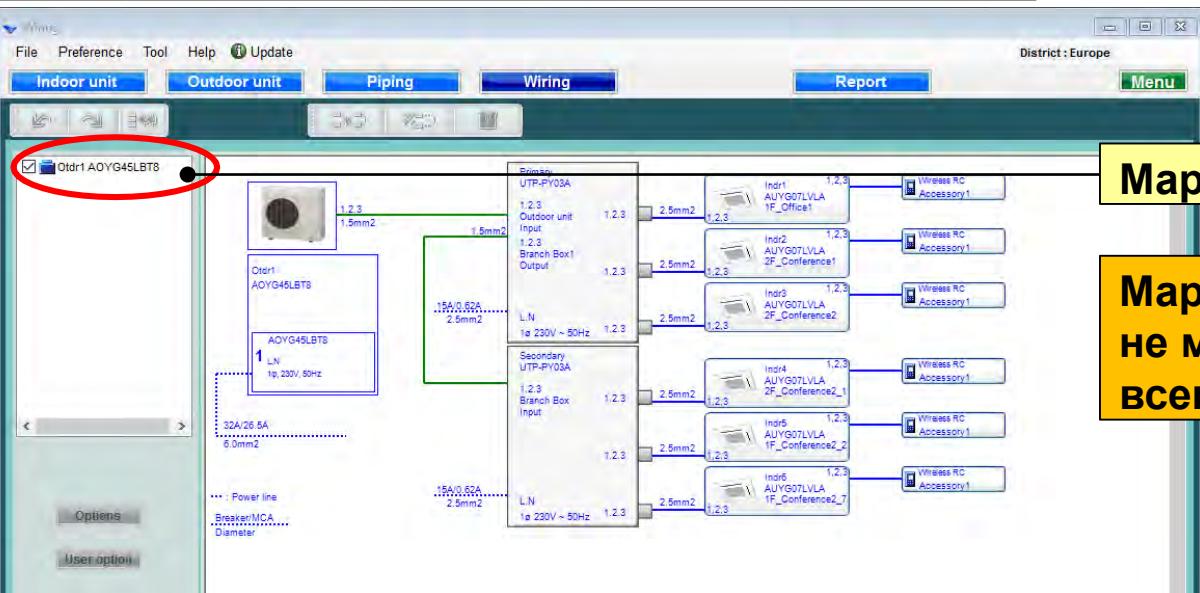

Маркирайте хладилната система


Маркирана хладилната система
не може да се редактира на
всеки еcran

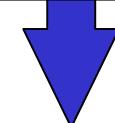

This window provides detailed information about the selected indoor unit. It includes a preview image, a list of indoor units, and a table with various parameters:

Name	Comments	Refrigerant	Type	Model	PS
Otdr1		R410A	3 Rooms Multi System	AOYG45LB78	1e: 230V, 50Hz
Indr2					
Indr3					
Indr4					
Indr5					
Indr6					


Indoor unit value:
Model: AOYG07LVLA
Capacity: 2.05 kW
Fan air flow rate: 540 m³/h
Sound pressure level: 27 dB(A)
Input power: 18 W

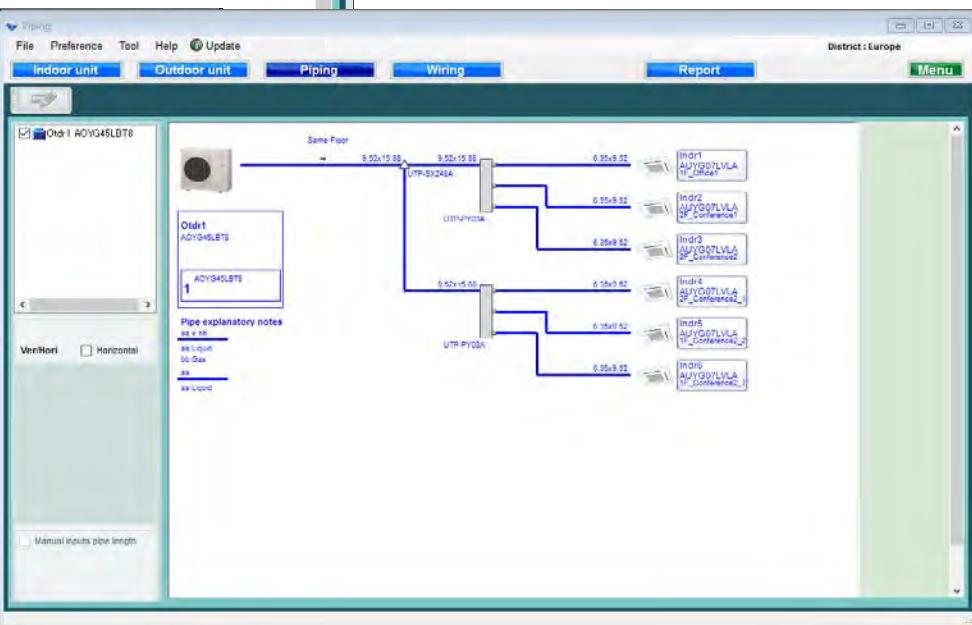

Окабеляване


Design Simulator

Опции

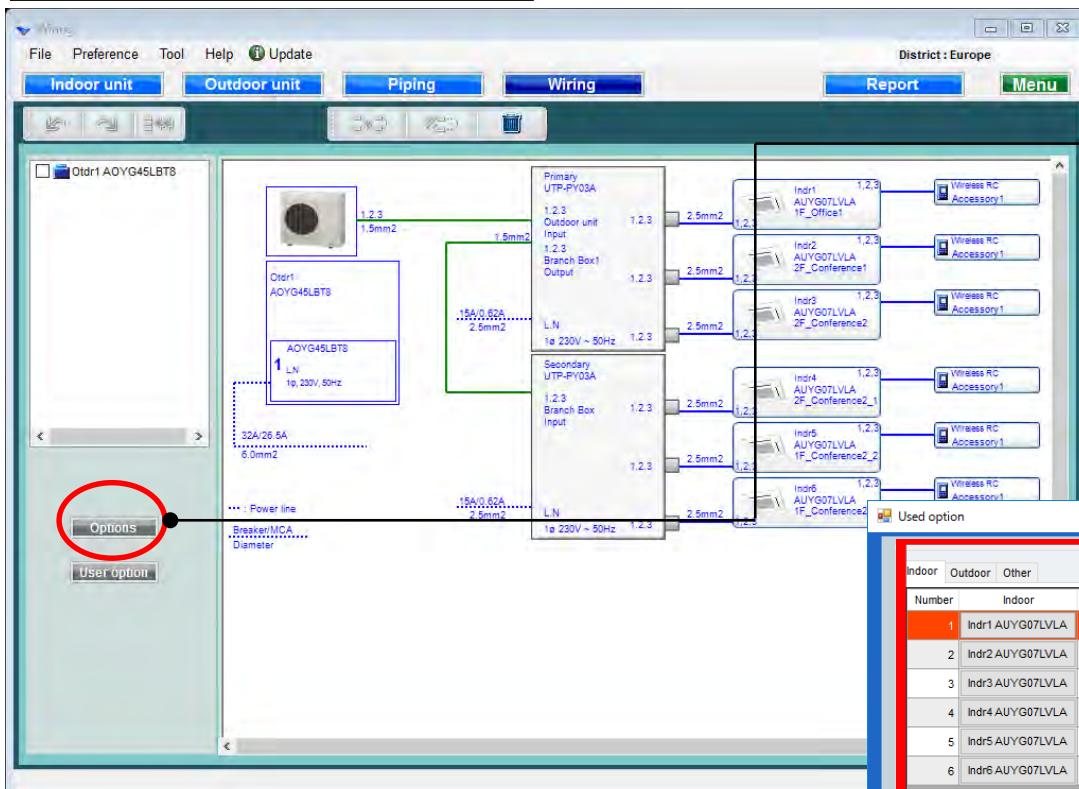


Изберете “Опции”

Отваря еcran с
използваните опции

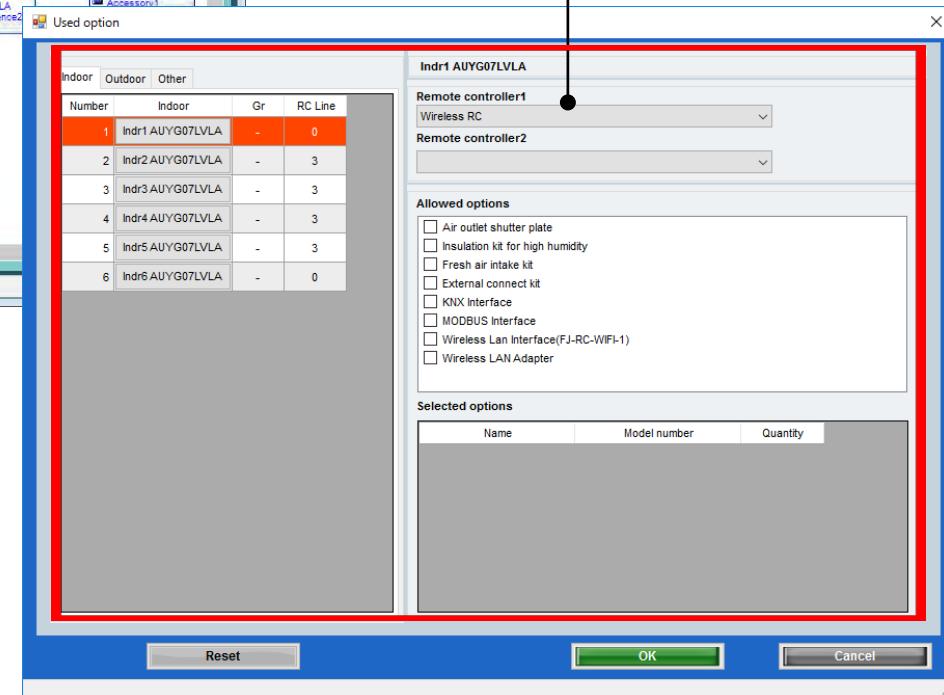


Използвани опции (1/2)

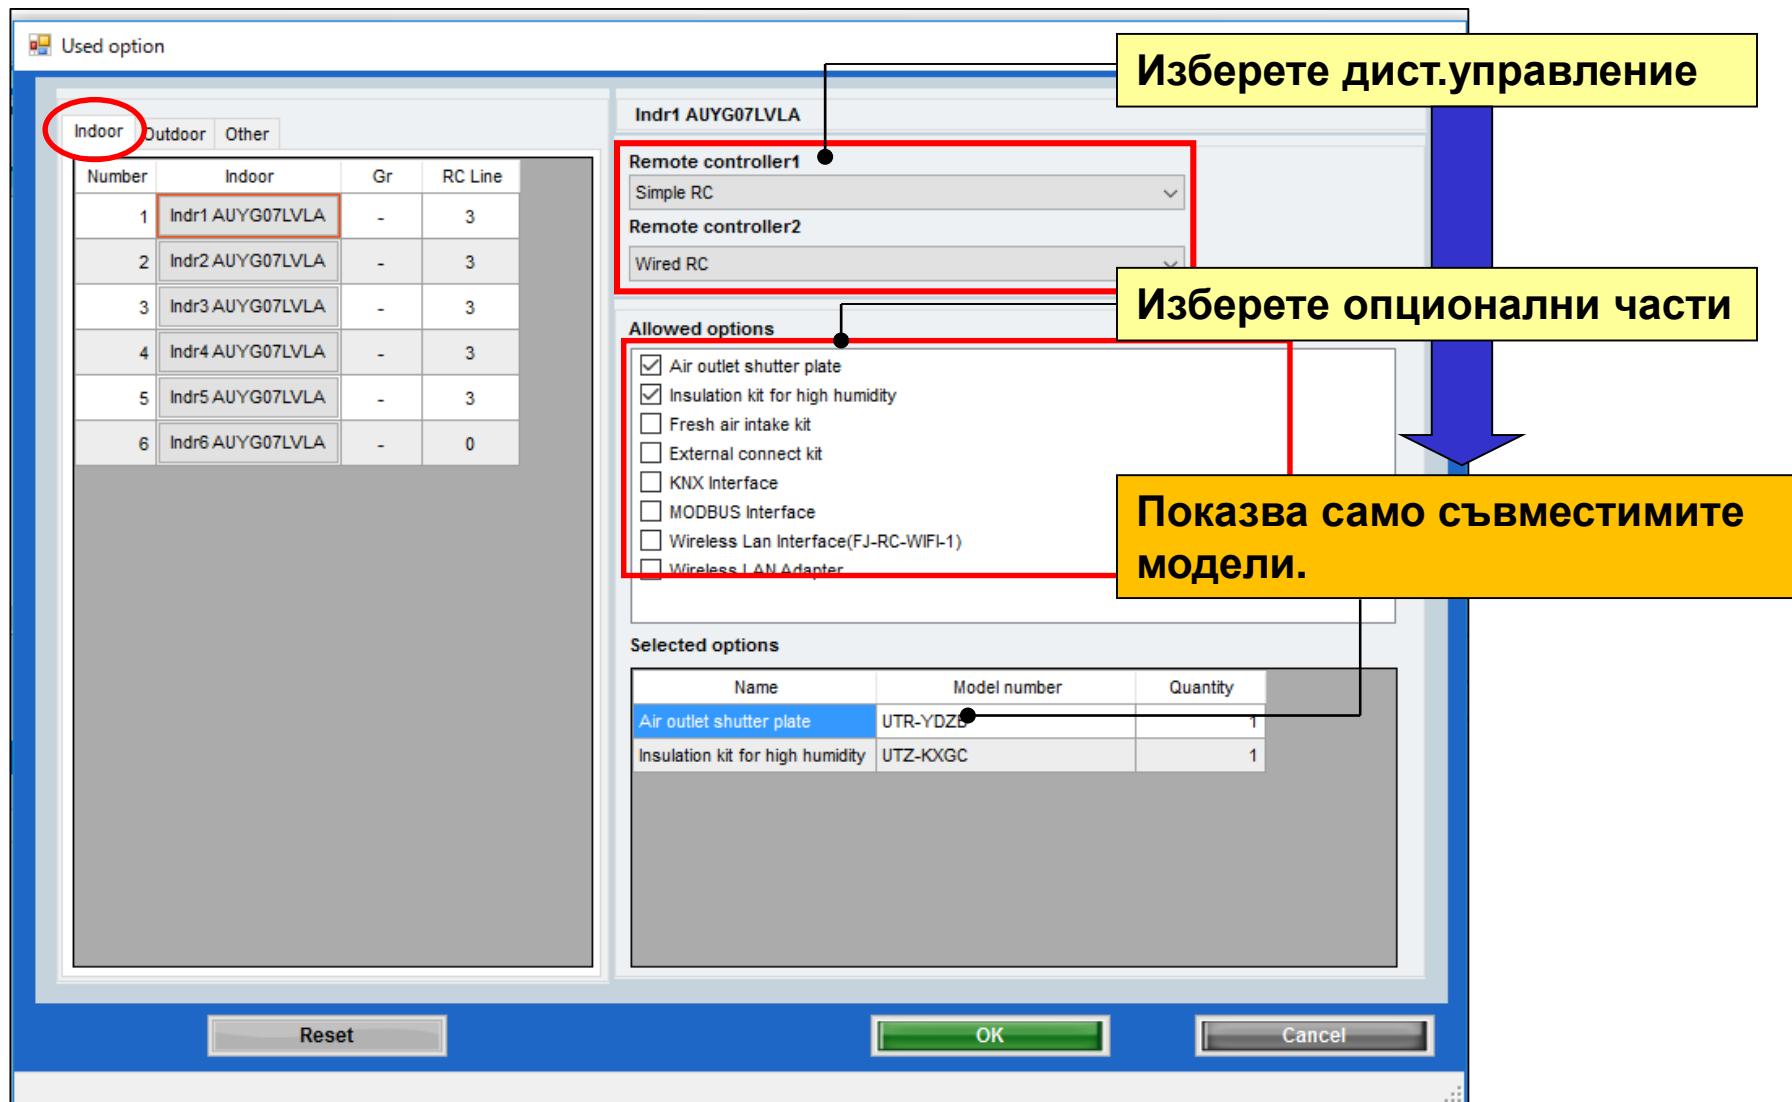


Избраните опции се извеждат в “Отчета”

Използвани опции (2/2)

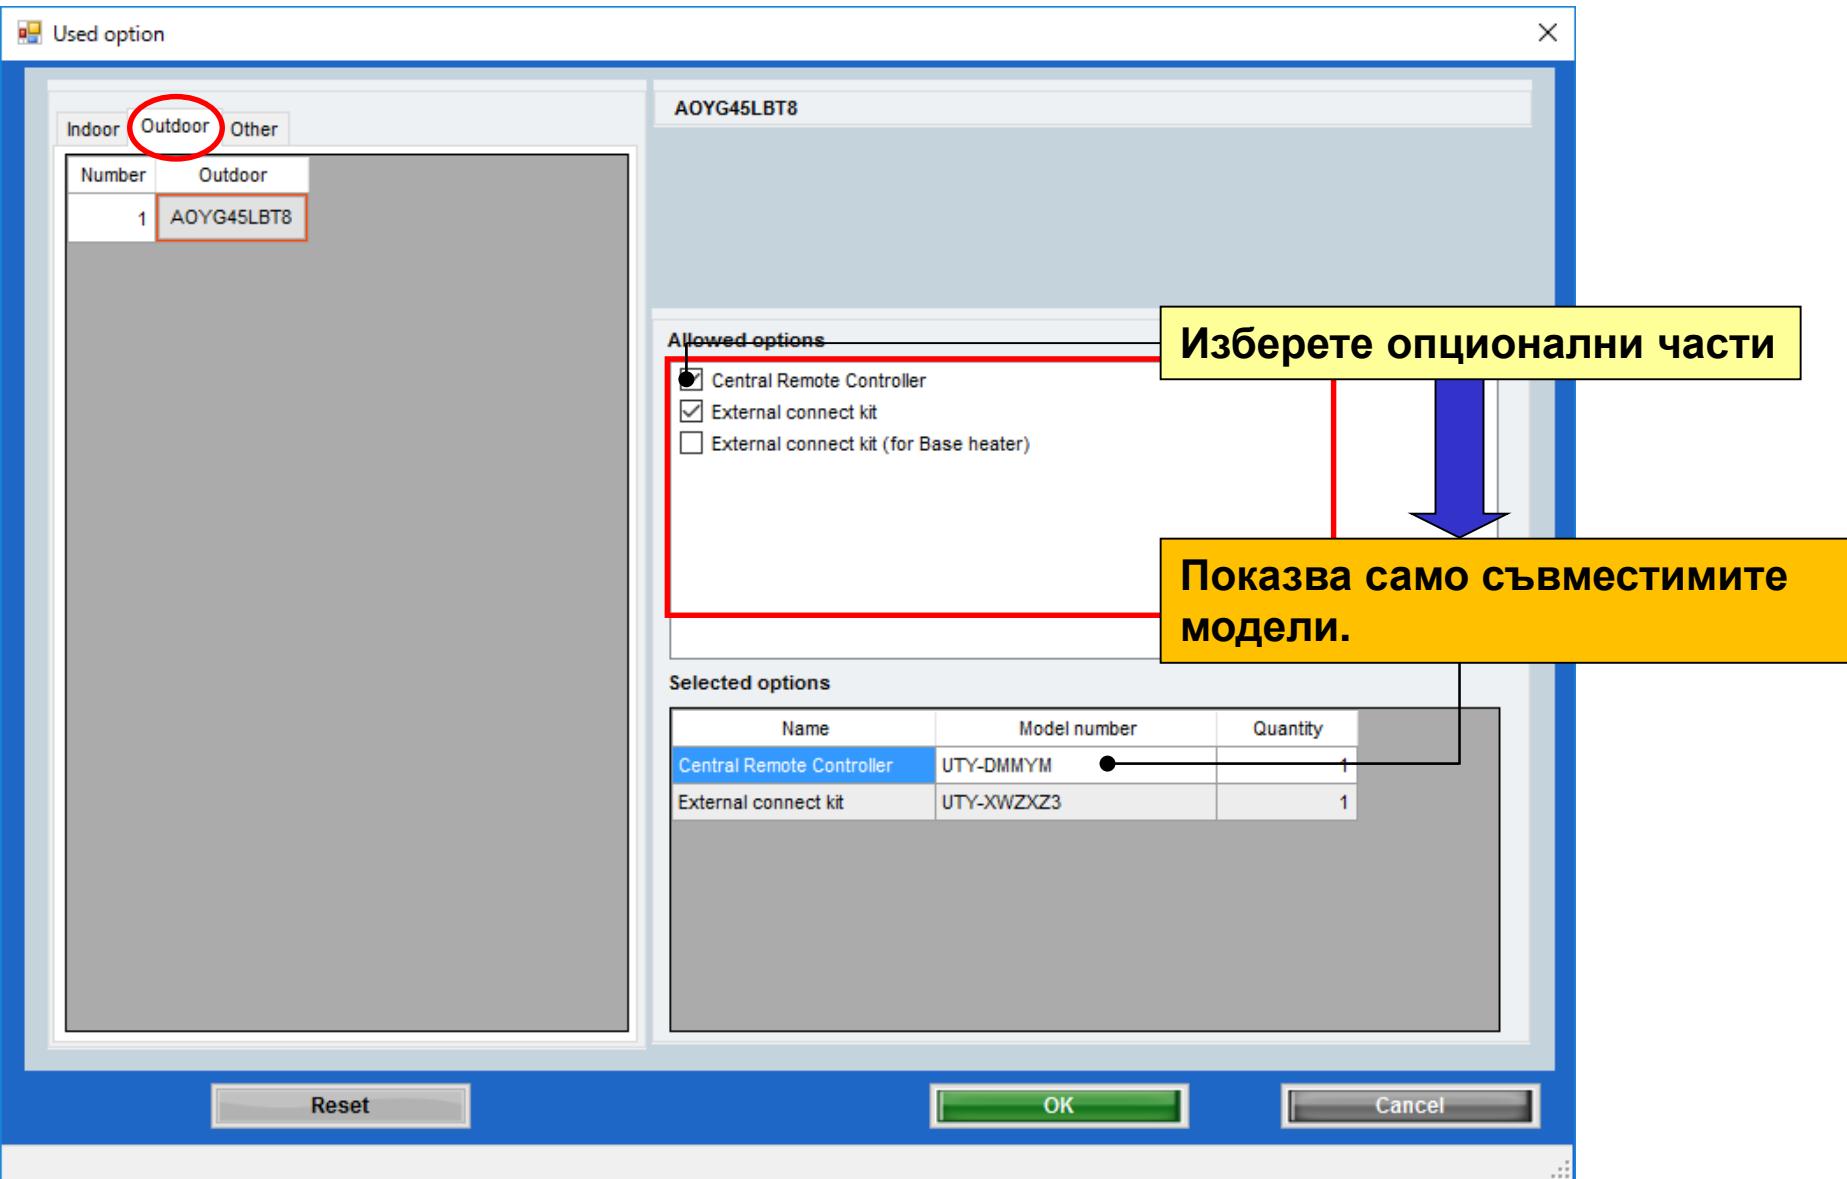


Изберете “Потребителски опции”

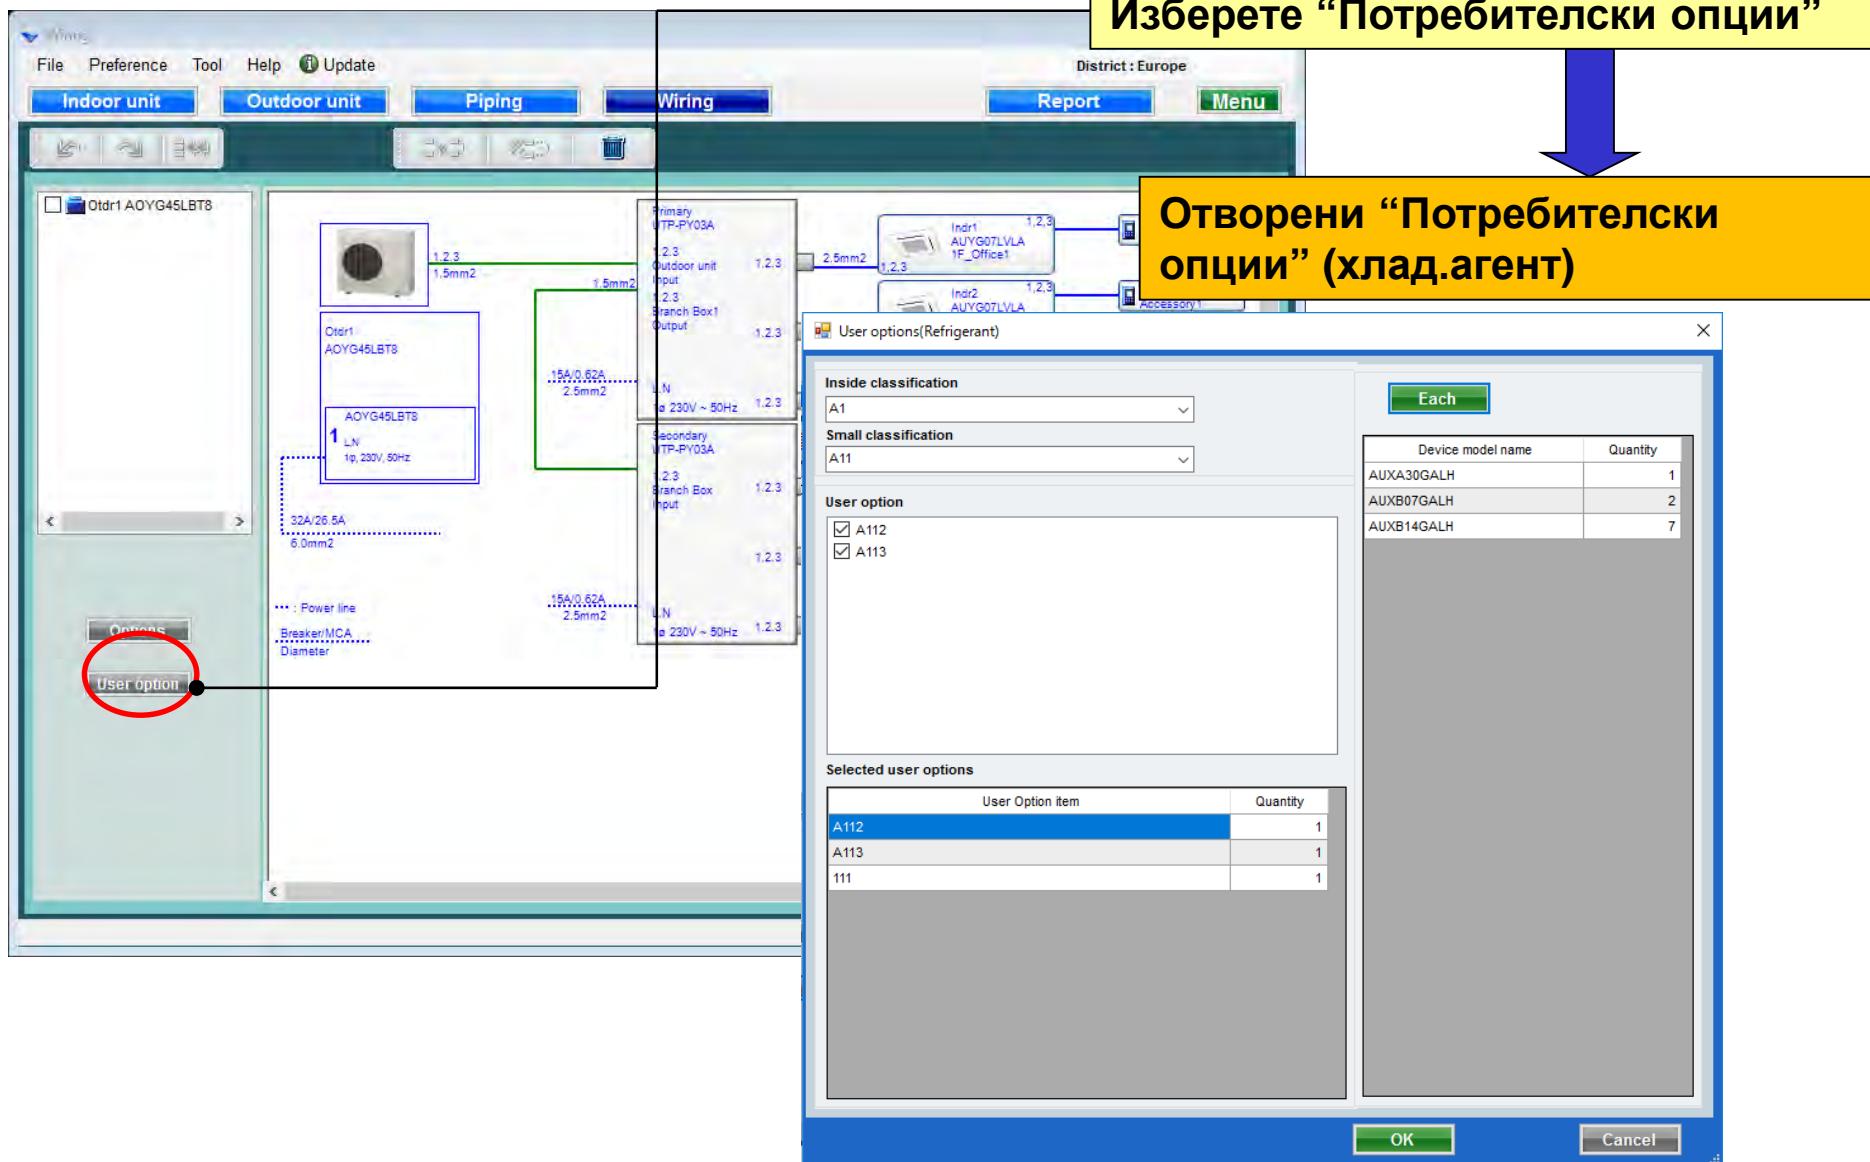

Окабеляване

Design Simulator

“Потребителски опции” (хлад.агент)

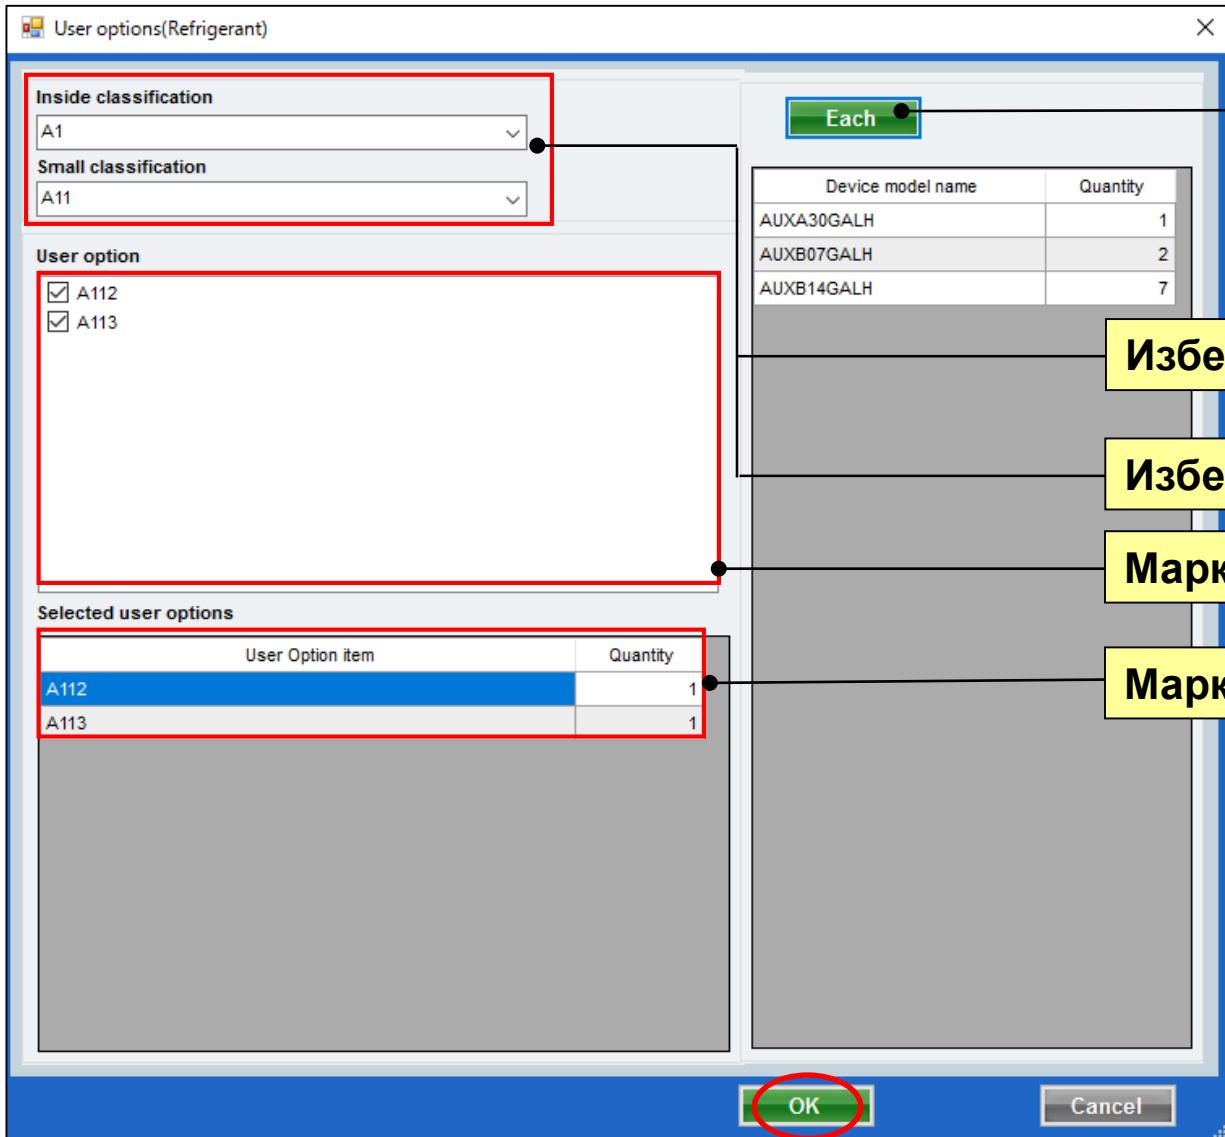

Изберете “Единично или общо”

Изберете “Категория”

Изберете “Под-категория”


Маркирайте “Потреб.опции”

Маркирани “Потреб.опции”

Избраните опции се извеждат в “Отчета”

接線設定


選機軟體

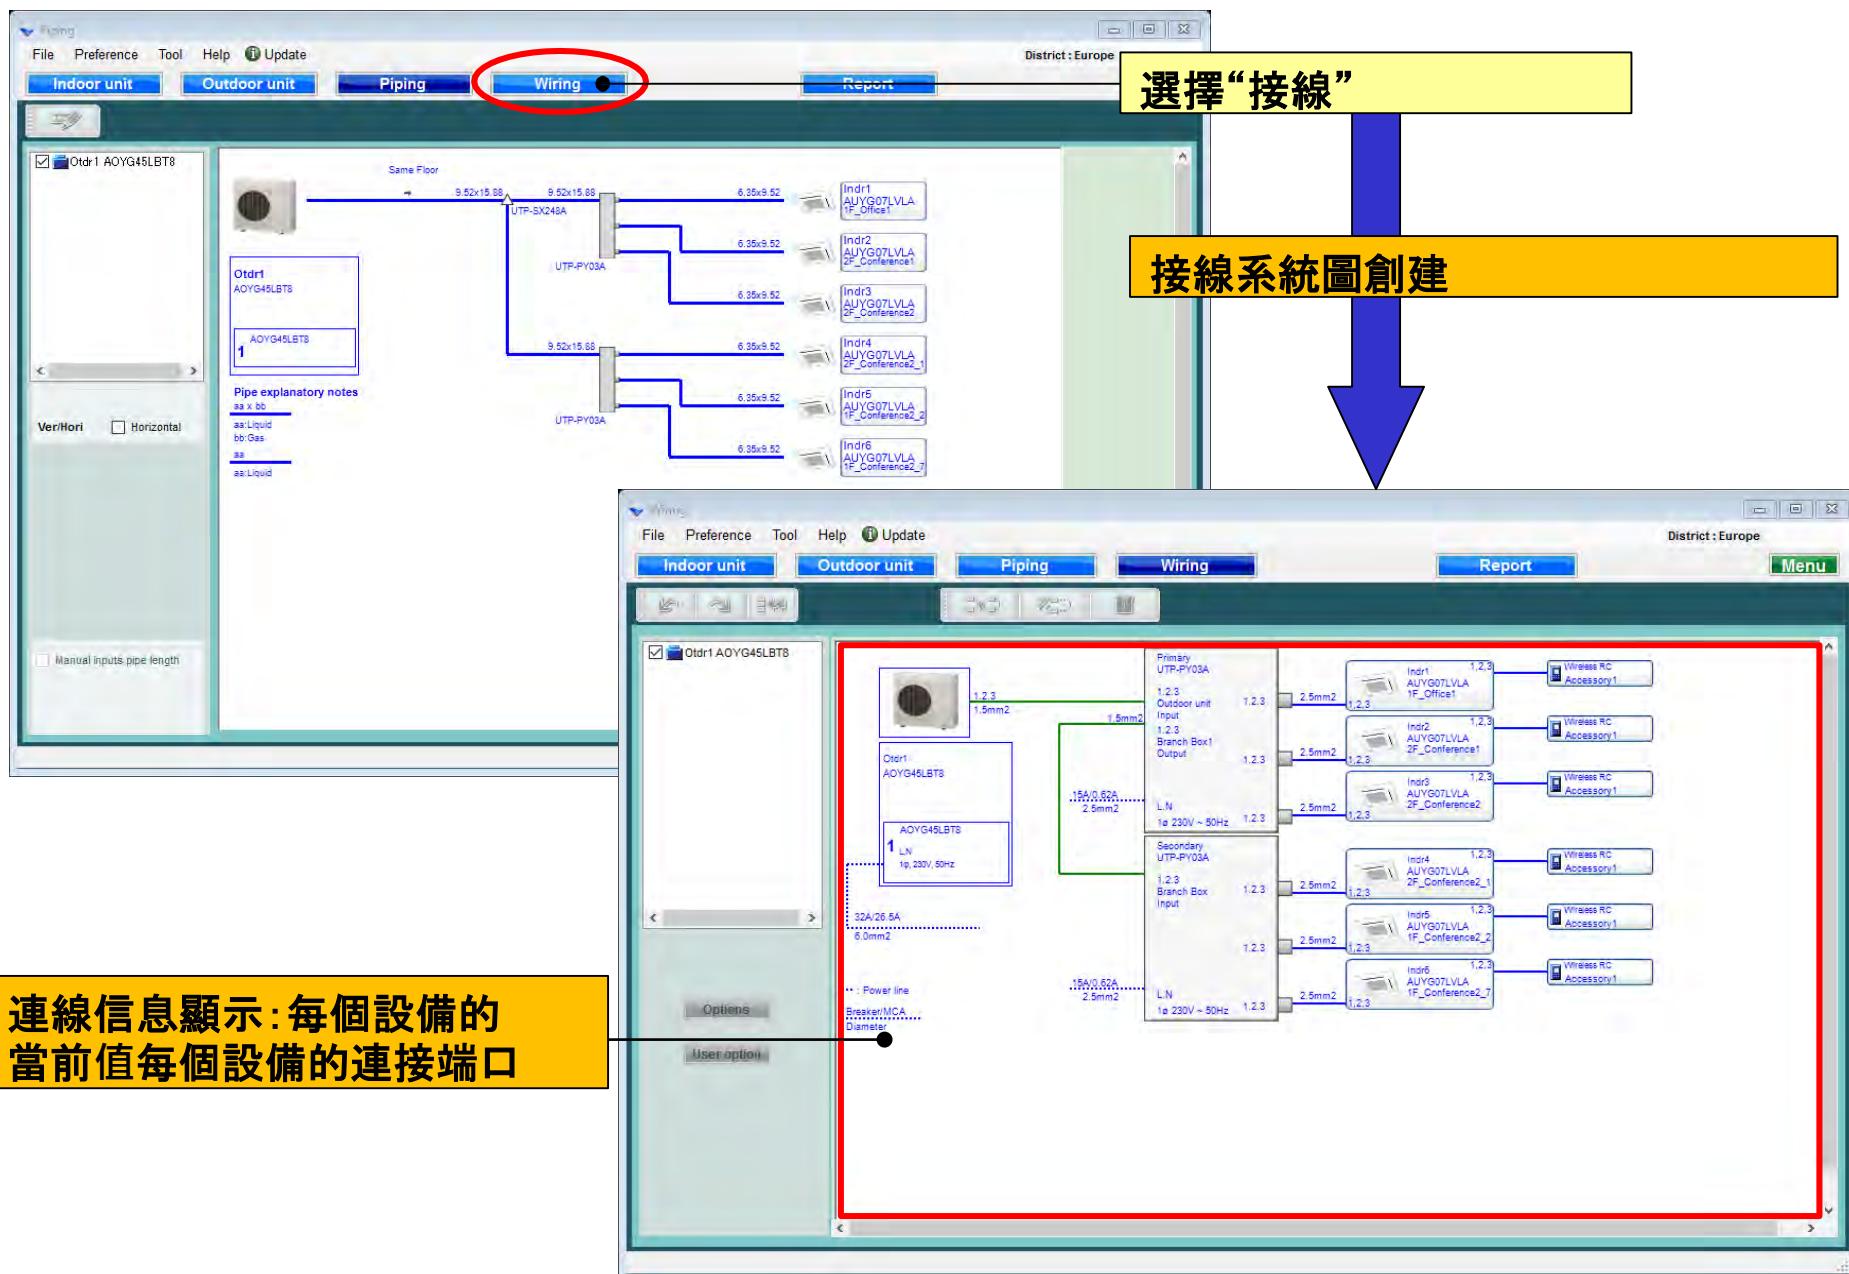

接線設定

選機軟體

冷媒系統判斷

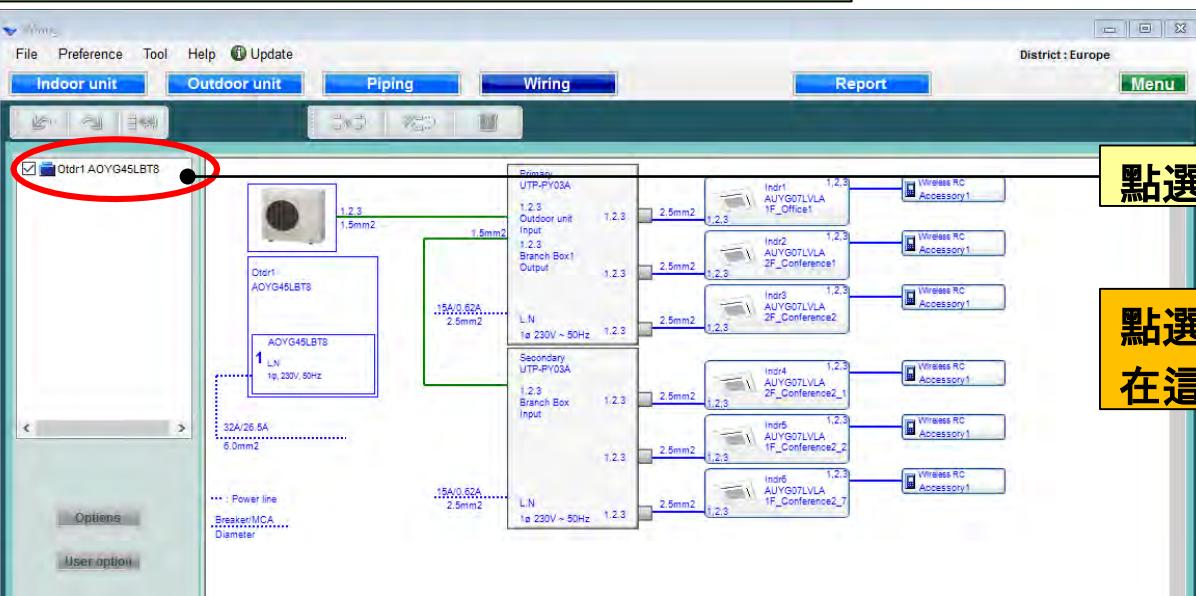


點選冷媒系統

點選冷媒系統
在這個視窗不能被編輯

This screenshot shows the 'indoor unit' tab with the 'Details of indoor unit' section selected. It displays the following information:

Name	Indr1
Comments	R410A
Refrigerant	R410A
Type	3 Rooms Multi System
Model	AOYG45LB8
P/S	1φ 230V, 50Hz
Actual capacity	Cooling: 14.00 kW, Heating: 18.00 kW
Max. capacity	Cooling: 12.30 kW, Heating: 14.22 kW
Indoor connect count	6
Total indoor capa	Cooling: 12.30 kW, Heating: 14.22 kW
Outdoor temp.	Cooling: 26.0°C, Heating: 7.0°C


Below this, the 'Indoor unit value' section provides specific values for the model (AOYG07LVLA), capacity (2.05 kW), fan air flow rate (540 m³/h), sound pressure level (27 dB(A)), input power (18 W), and height difference between outdoor and indoor units (0.0m).

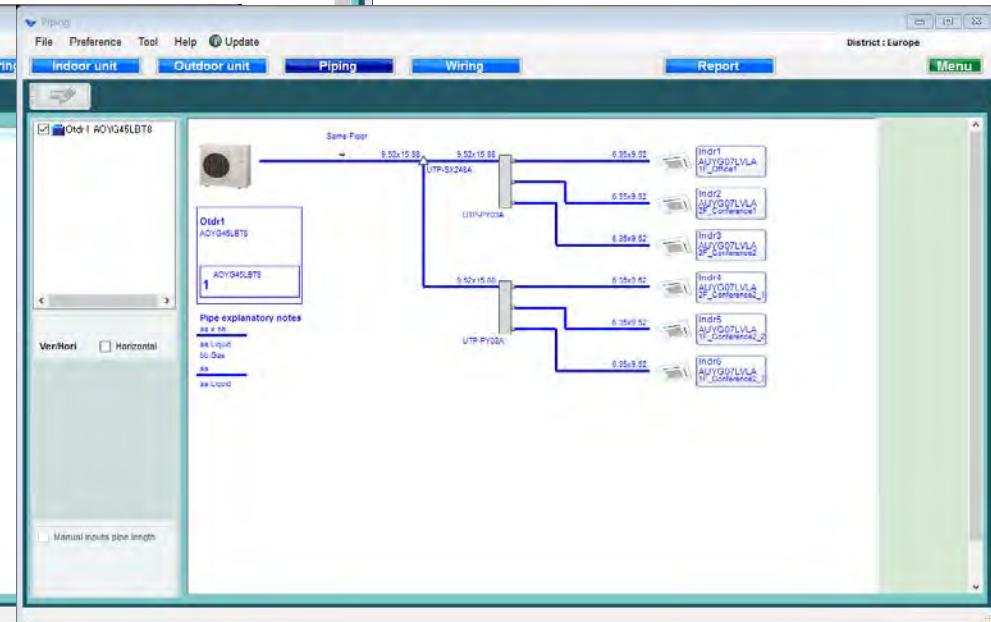

接線設定


選機軟體

設定

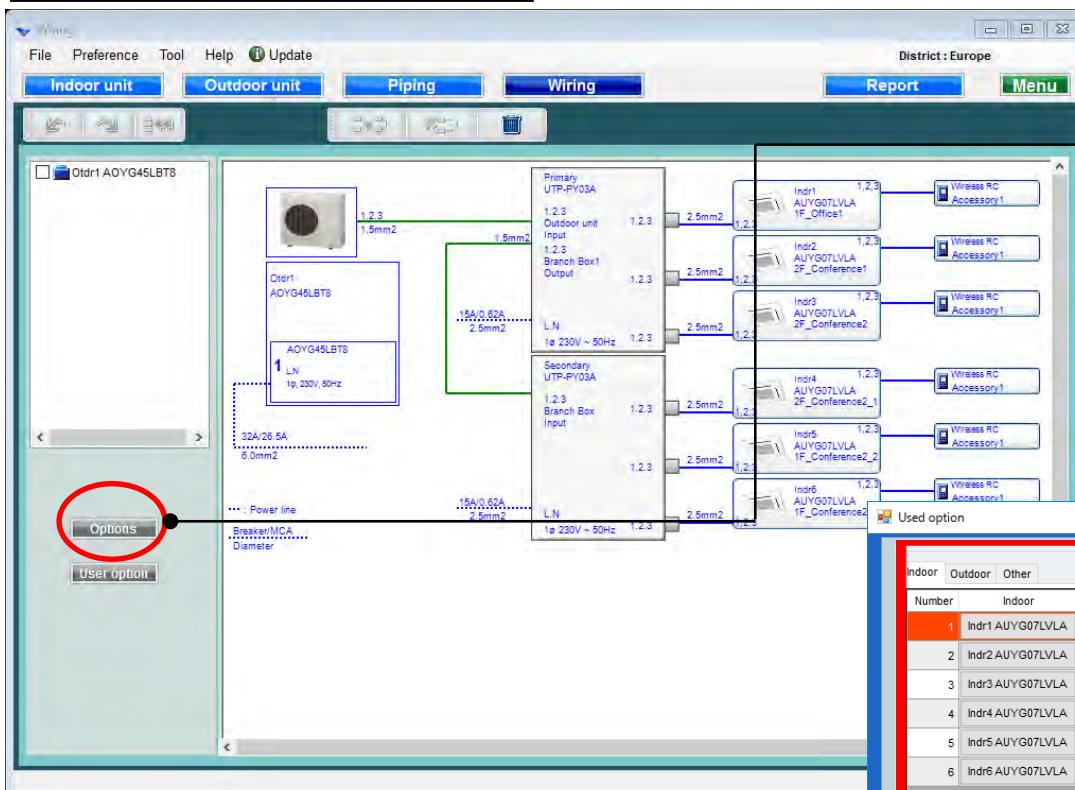


選擇“設定”

打開使用者設定視窗

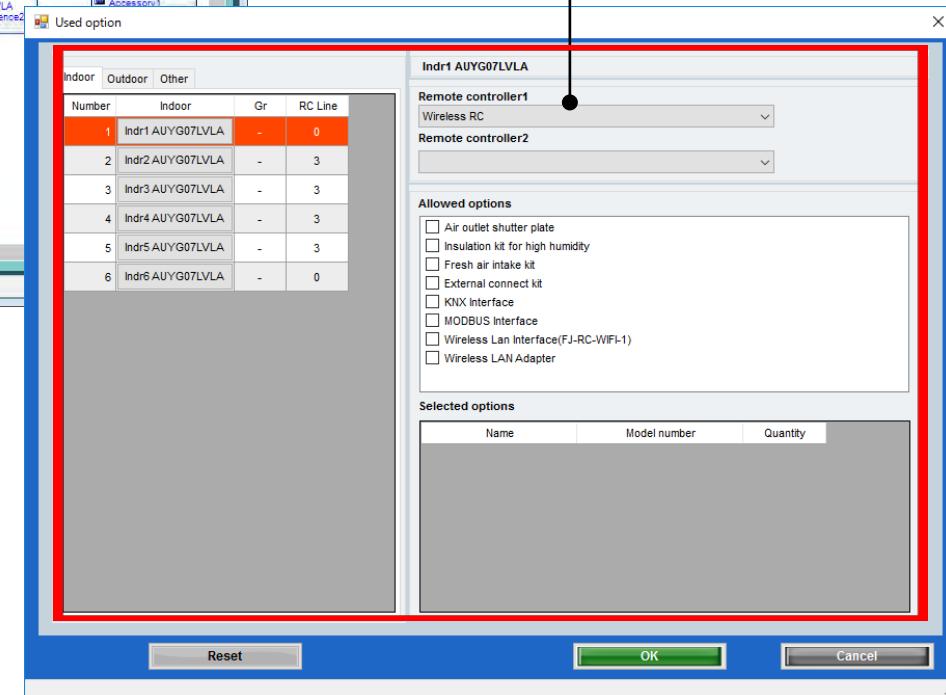


使用者設定(1/2)

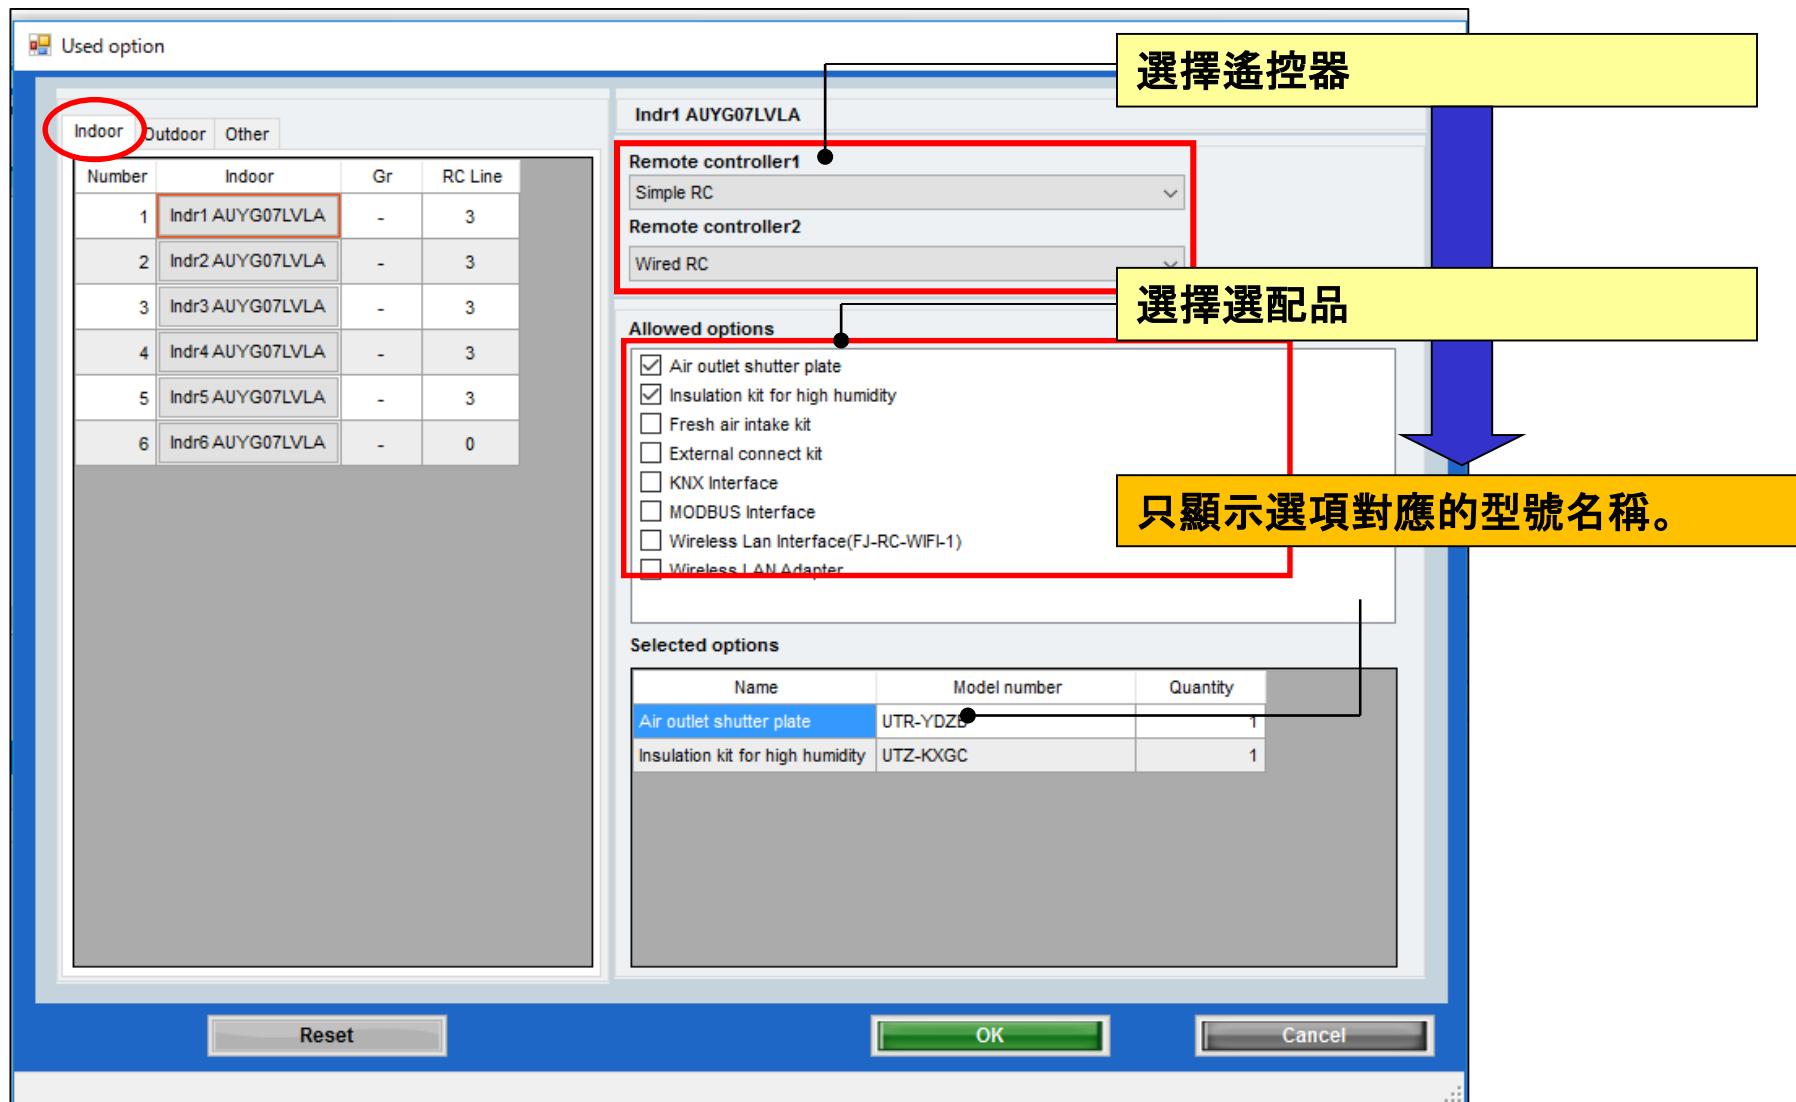


所選選項顯示在“報告”

使用者設定 (2/2)

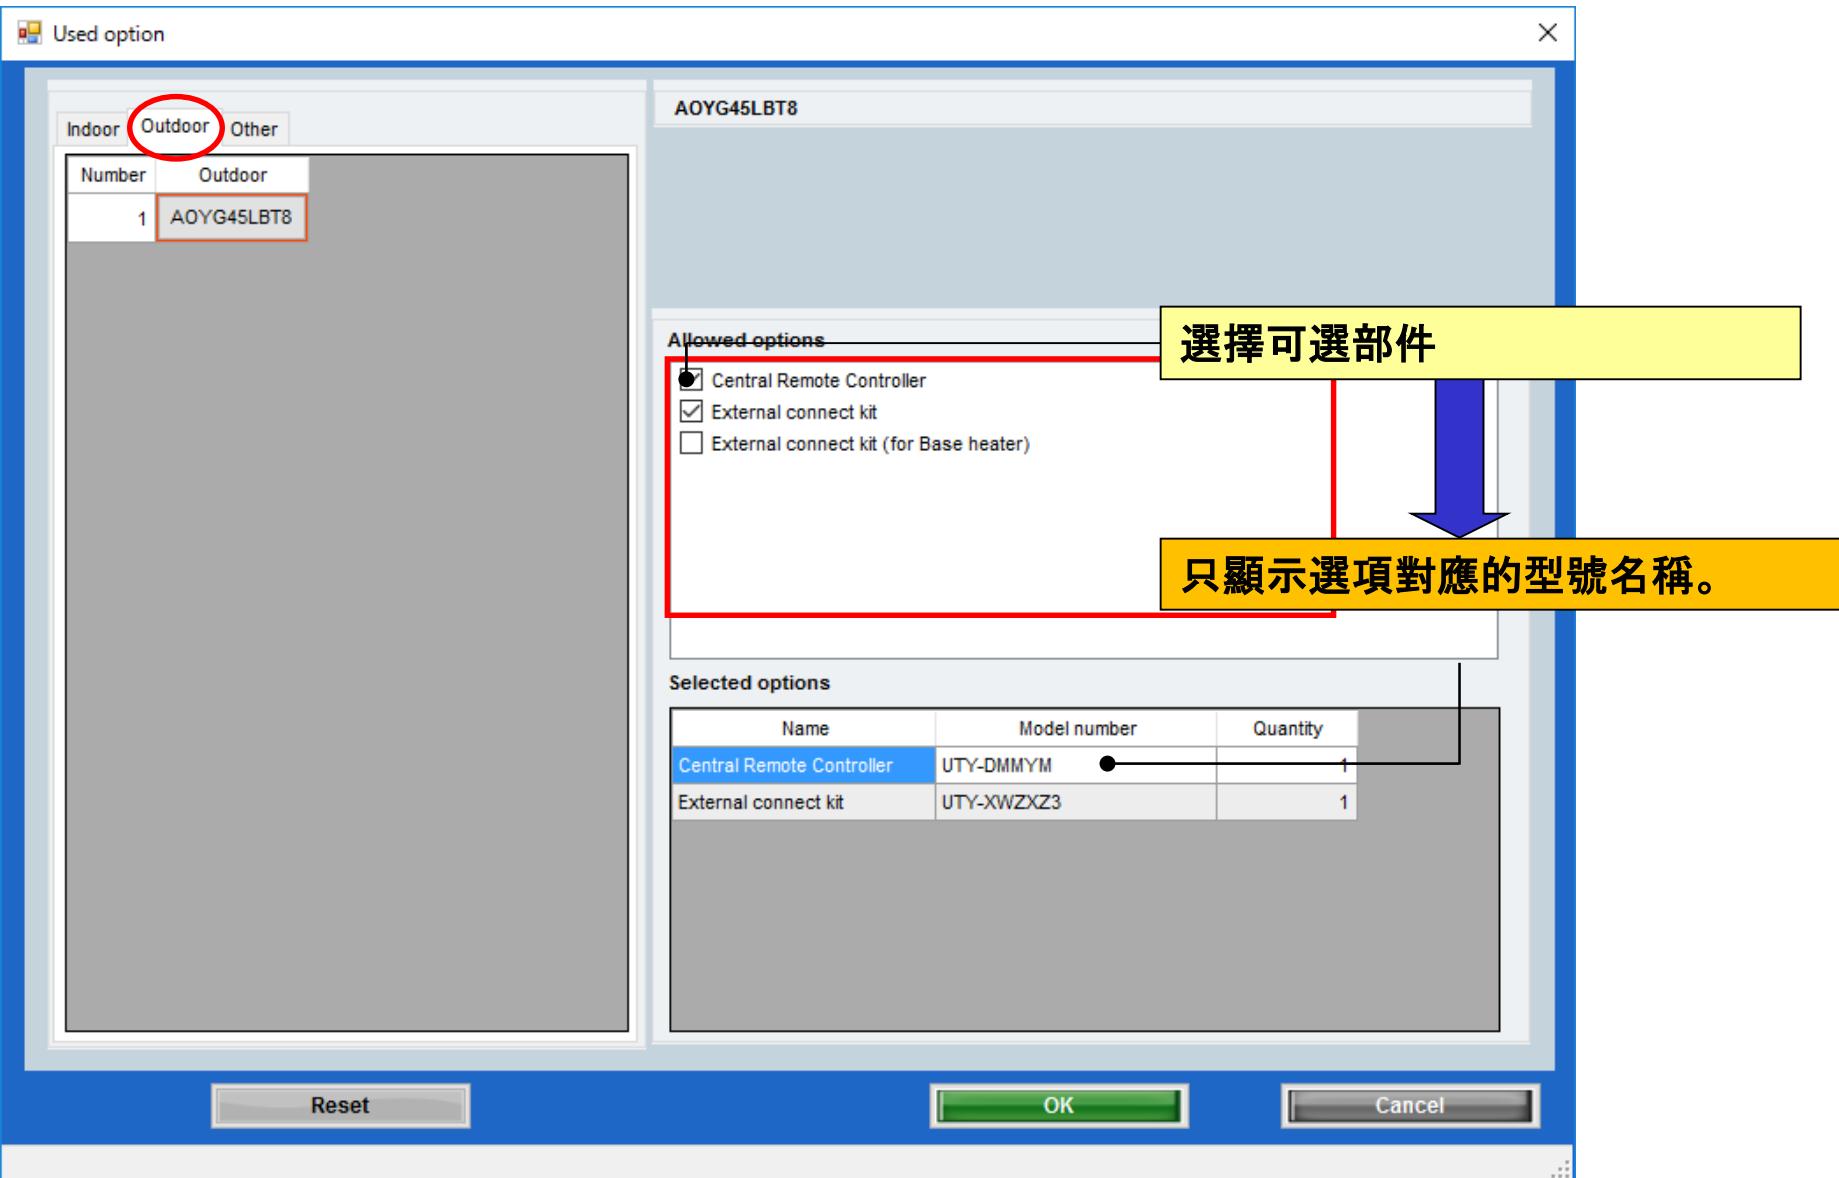


接線設定

選機軟體

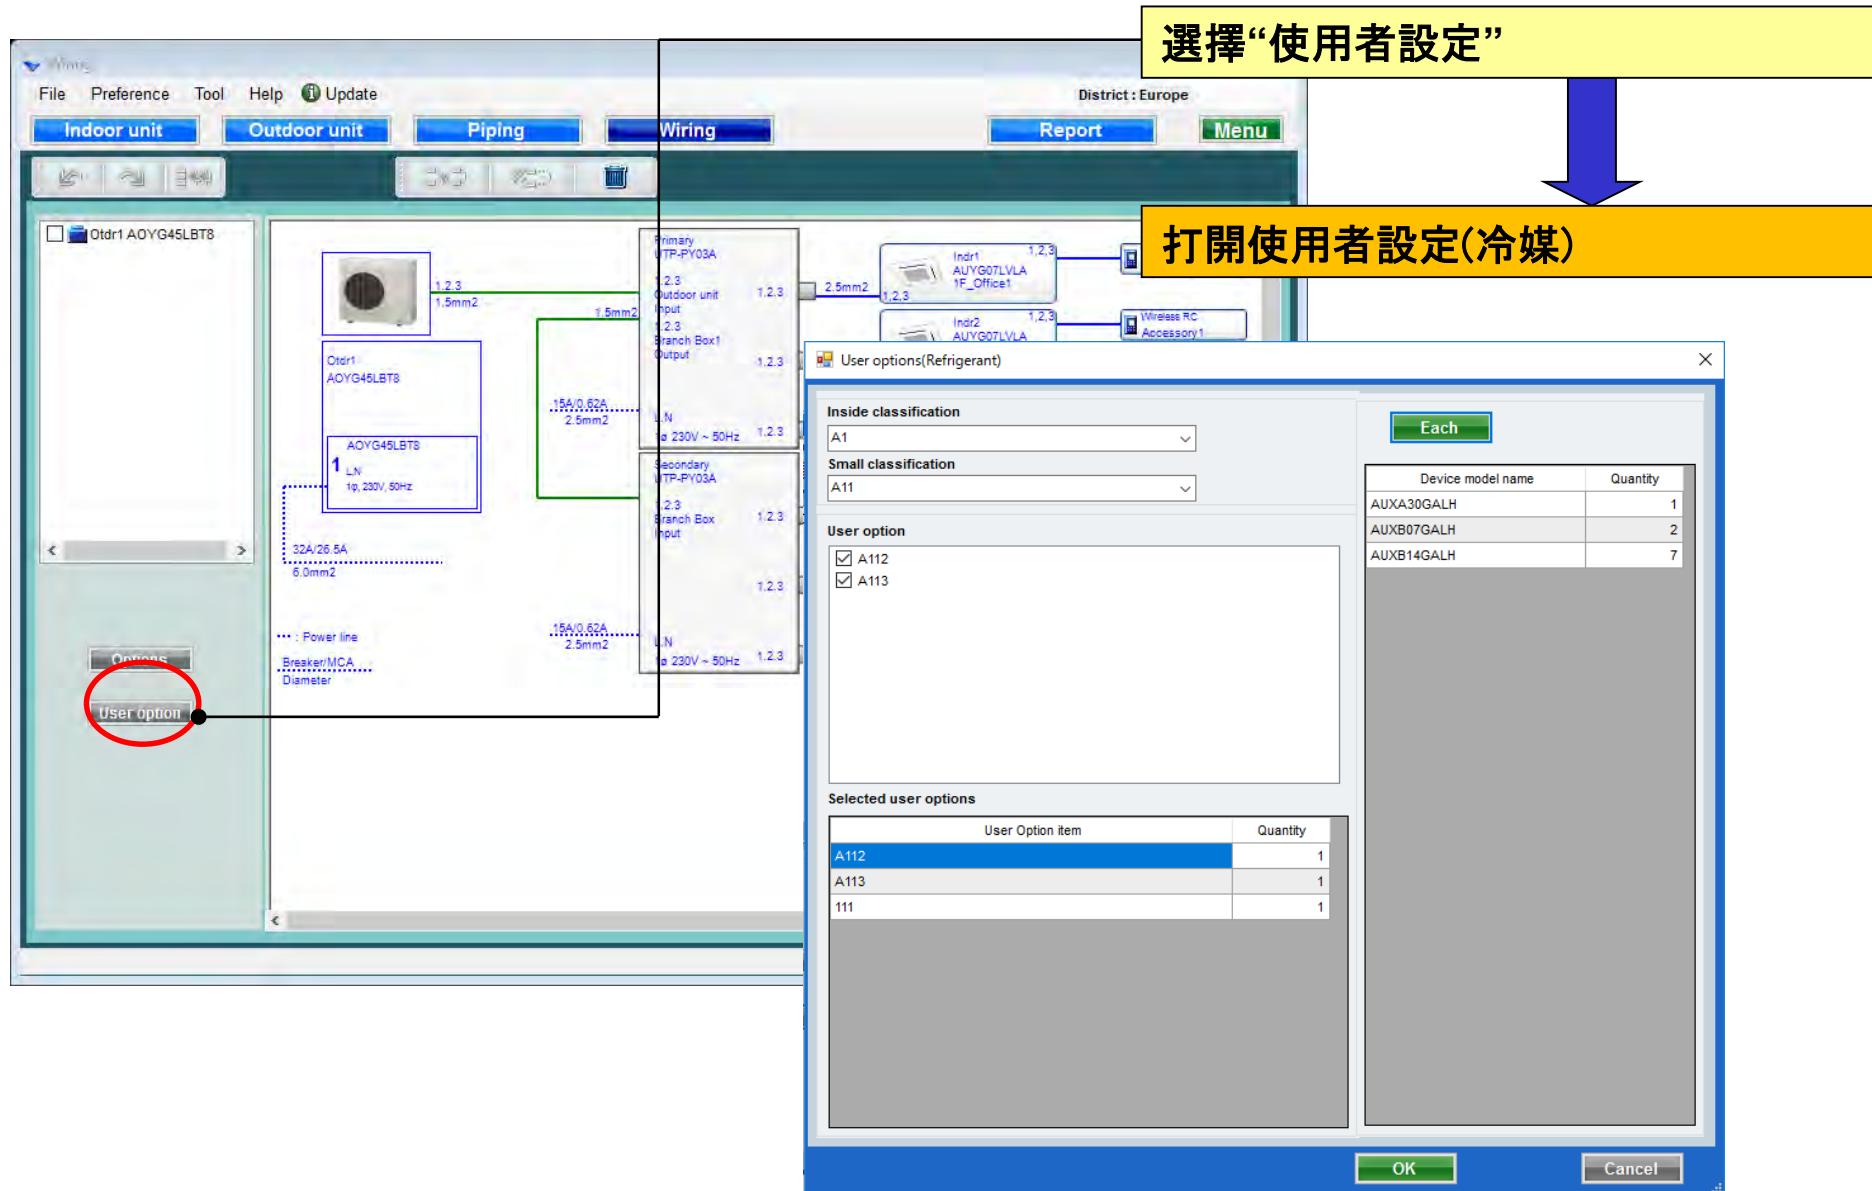

使用者設定(冷媒)

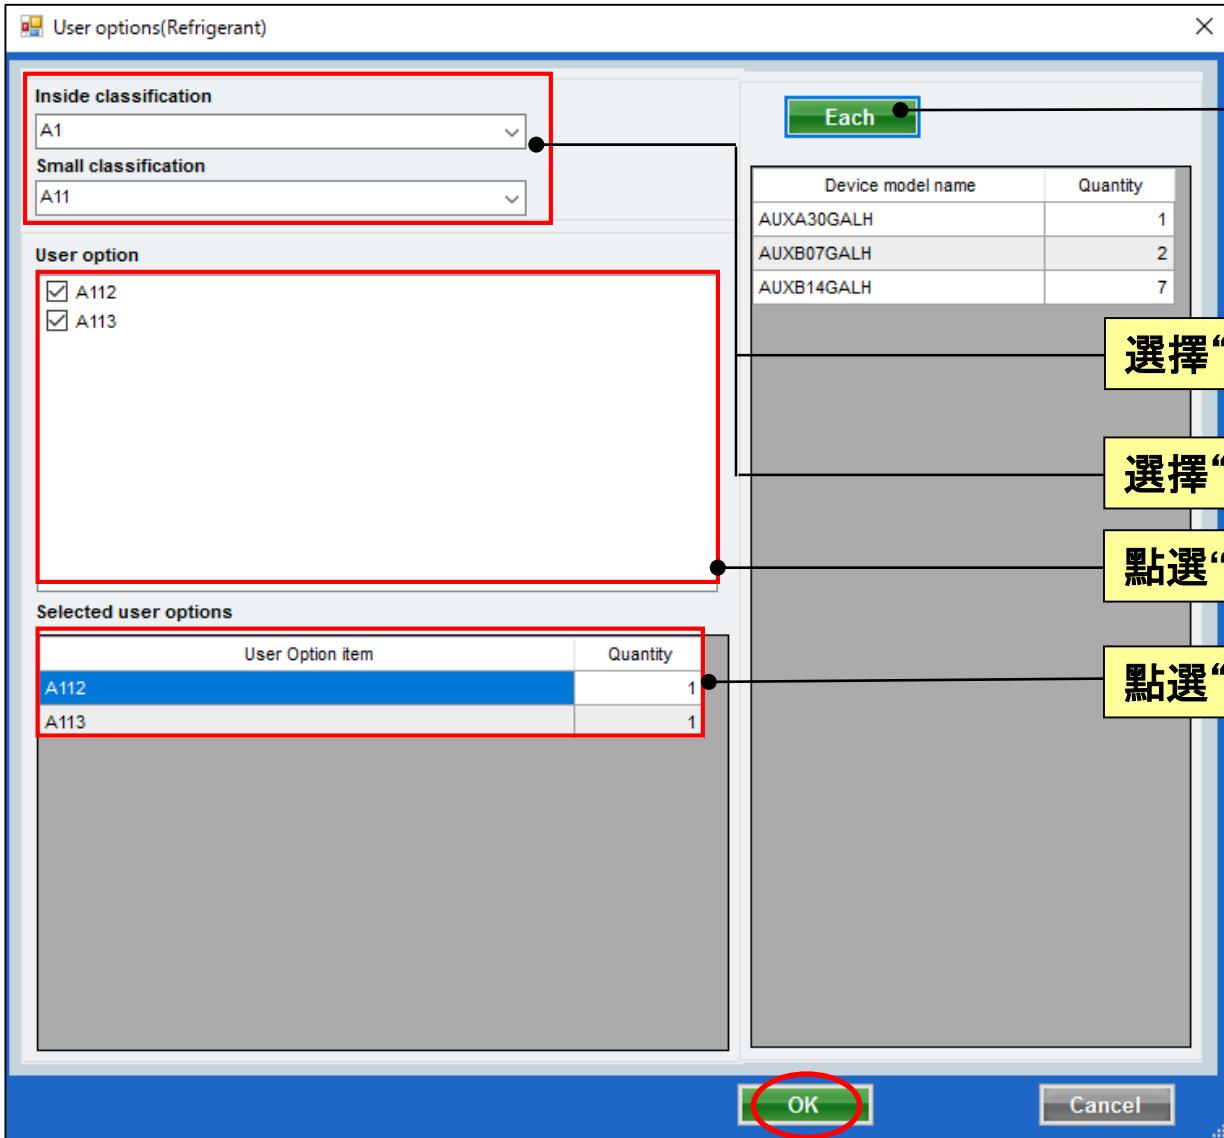

選擇“每個或摘要”

選擇“內部分類”

選擇“小分類”

點選“使用者設定”

點選“用戶選項”

所選選項顯示在“報告”

Wiring settings

Design Simulator

Wiring (Multi system)

Select “Wiring”

Screen Wiring system diagram creation

When remote controller is not connected, check this checkbox

Outdoor unit data

Name: Odr1
Comments:
Refrigerant: R410A
Model:
Type: 2 Rooms Multi System
Model: AOYG14LAC2
PS: 1φ, 230V, 50Hz

Capacity

	Cooling	Heating
4.00 kW	4.40 kW	

Indoor connect count: 2

Outdoor temp. Cooling: 35.0C Heating: 7.0C
Indoor temperature: Cooling: 27.0C Heating: 20.0C

Piping

Total pipe length: 10.0m

Wiring

Odr1 AOYG14LAC2

Actual capacity

Cooling / Heating
Odr1 AOYG14LAC2

SC — kW
HC — kW

Wireless RC Accessory 1

Wireless RC Accessory 2

I accept no remote controller for indoor unit.

LN 1φ, 230V, 50Hz

Unit B: 1.2.3, 0.16A, 2.8mm², 1.2.3
Unit A: 1.2.3, 0.16A, 2.8mm², 1.2.3

Power line


Outdoor
Brasserie MCA
Diameter

Indoor
MCA
Diameter

Wiring settings

Design Simulator


Refrigerant system decision (Multi system)

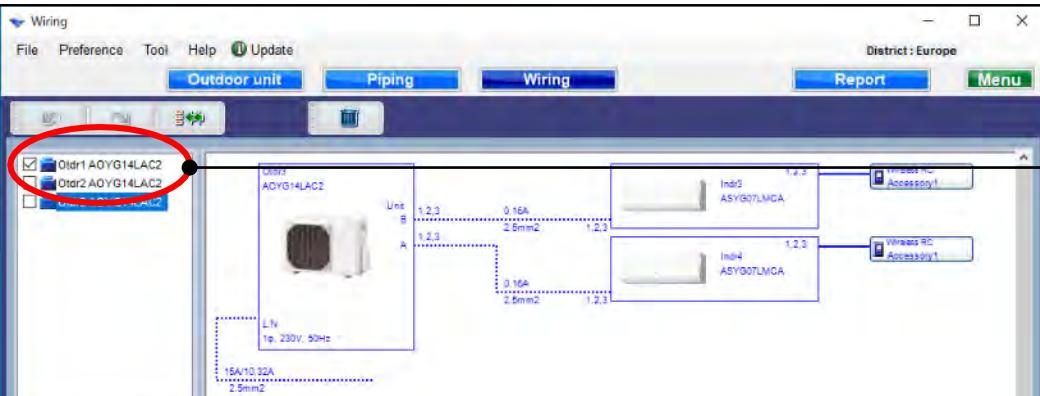

Check the refrigerant system

Checked refrigerant system
cannot be edited on each screen

This screenshot shows the 'Outdoor unit' tab of the software. It displays configuration details for 'Otdr1'. The 'Name' is set to 'Otdr1'. The 'Comments' field is empty. The 'Refrigerant' is listed as 'R410A'. The 'Model' is 'AOYG14LAC2'. The 'Type' is '2 Rooms Multi System'. The 'PS' is '1φ, 230V, 50Hz'. The 'Capacity' section shows 'Cooling' at 4.00 kW and 'Heating' at 4.40 kW. The 'Indoor connect count' is 2. The 'Outdoor temp.' and 'Indoor temperati' sections show values for Cooling: 35.0°C, 27.0°C; Heating: 7.0°C, 20.0°C. The 'Piping' section shows a 'Total pipe length' of 10.0m.

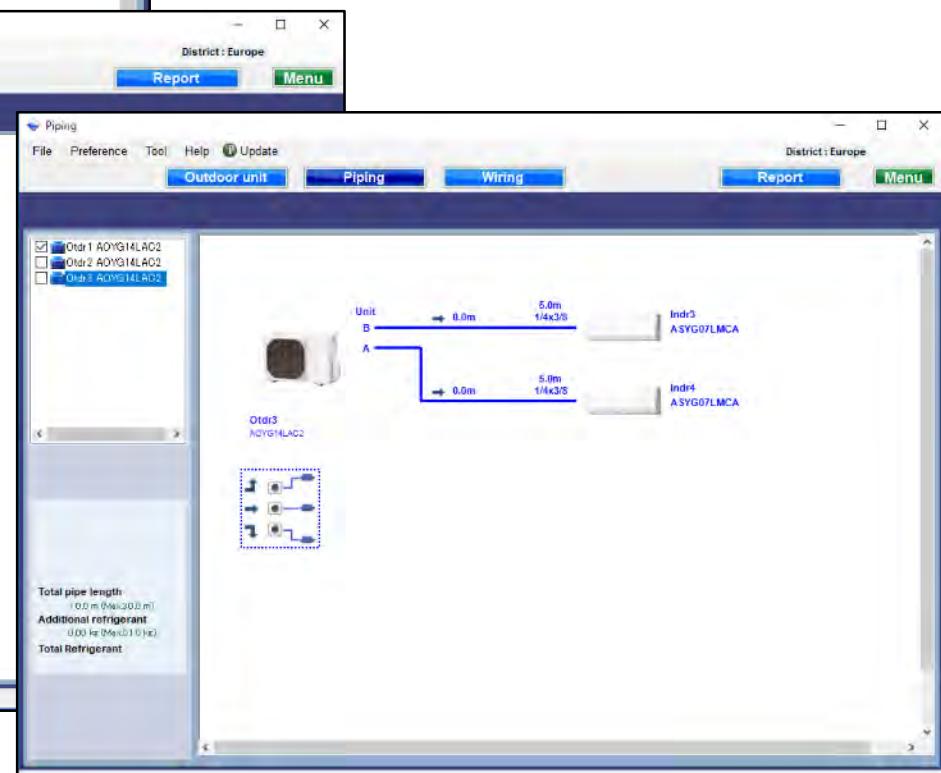

Wiring settings

Design Simulator

Wiring (Simultaneous multi system)

Outdoor unit Piping **Wiring**

Select “Wiring”

Screen Wiring system diagram creation

Outdoor unit data

Name	Odr1
Comments	
Refrigerant	R410A
Model	
Type	Simultaneous multi 3 phase Triple type.
Model	ADYG54LATT
PS	3N, 400V, 50Hz
Capacity	Cooling 14.00 kW Heating 16.00 kW
Indoor connect count	3
Outdoor temp. Cooling	35.0°C
Indoor temperati Cooling	27.0°C
Outdoor temp. Heating	7.0°C
Indoor temperati Heating	20.0°C
Piping	Total pipe length 75.0m

Wiring

Odr1 ADYG54LATT

Actual capacity
Cooling / Heating
Odr1 ADYG54LATT
Ind 1
TC
SC 2.73 kW

Wiring

Odr1 ADYG54LATT

Indr1 AUYG1BLVLE
Indr2 AUYG1BLVLE
Indr3 AUYG1BLVLE


Junction box (Local purchase)
Connection example

Legend:
--- : Power line
Outdoor
Breaker/MCA
Diameter
Indoor
MCA
Diameter

Wiring settings


Design Simulator

Options

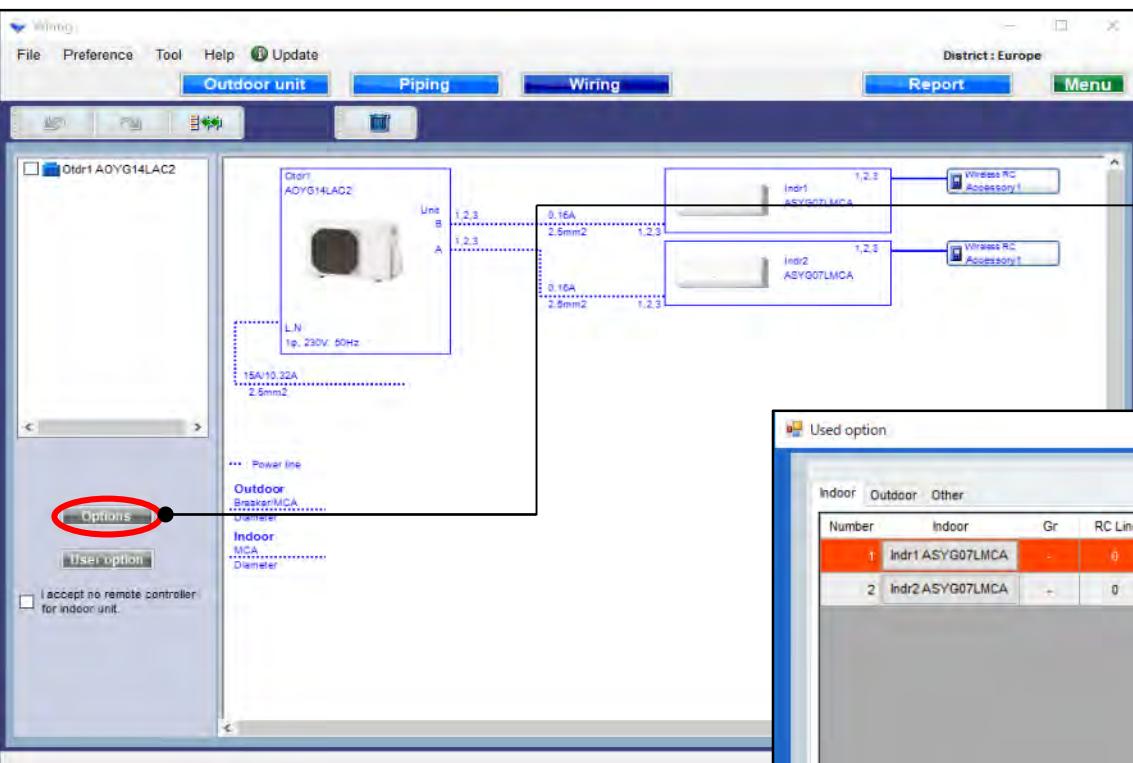

Select “Options ”

Open used option screen.

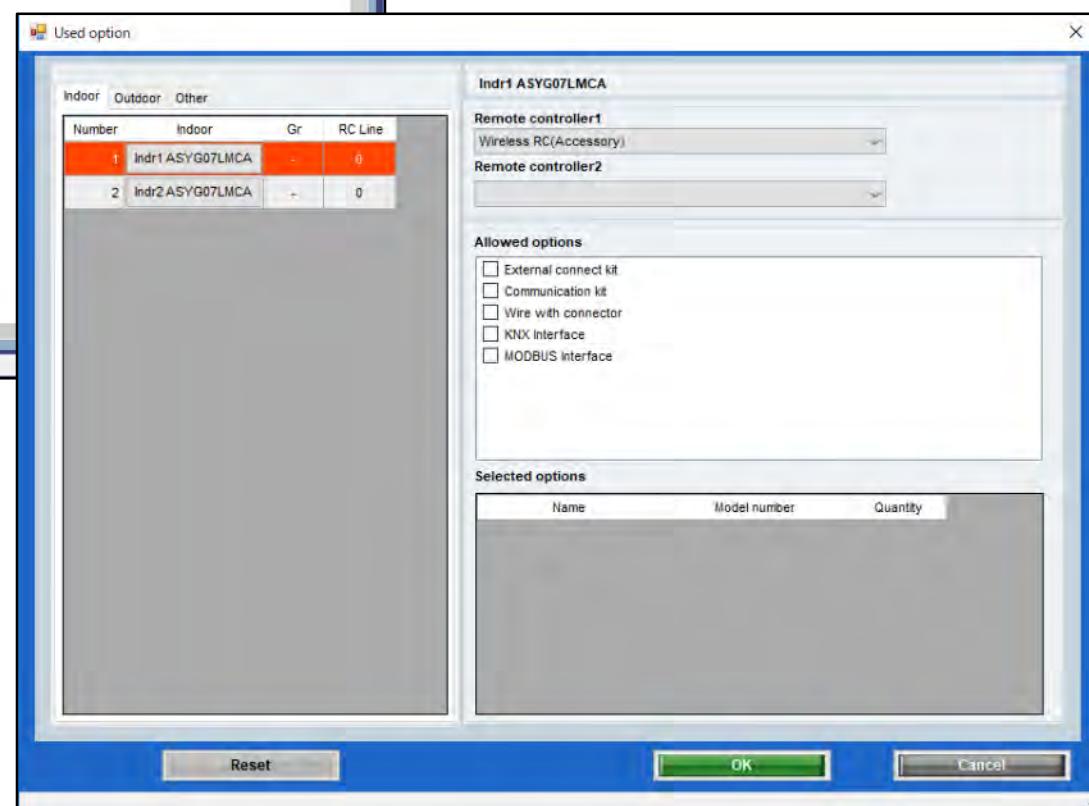

Wiring settings

Design Simulator

Used option (1/2)

Used option

Indoor Outdoor Other

Number	Indoor	Gr	RC Line
1	Indr1 ASYG07LMCA	-	0
2	Indr2 ASYG07LMCA	-	0

Indr1 ASYG07LMCA

Remote controller1
Wireless RC(Accessory)

Remote controller2

Allowed options

- External connect kit
- Communication kit
- Wire with connector
- KNX Interface
- MODBUS Interface

Select remote controller

Select Optional parts

Only the model name of option to correspond is displayed.

Selected options

Name	Model number	Quantity
MODBUS Interface	FJ-RC-MBS-1	1


Reset OK Cancel

Selected options are displayed on Report

Wiring settings


Design Simulator

Used option (2/2)

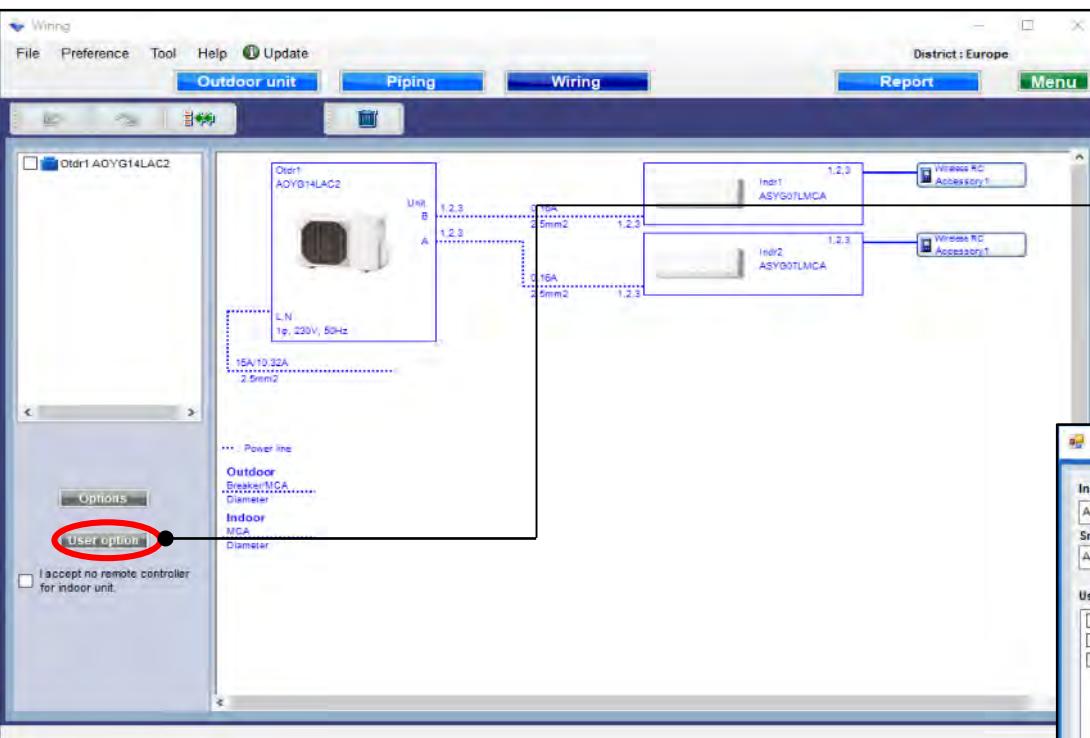


Select “User Options ”

Open User options (Refrigerant)

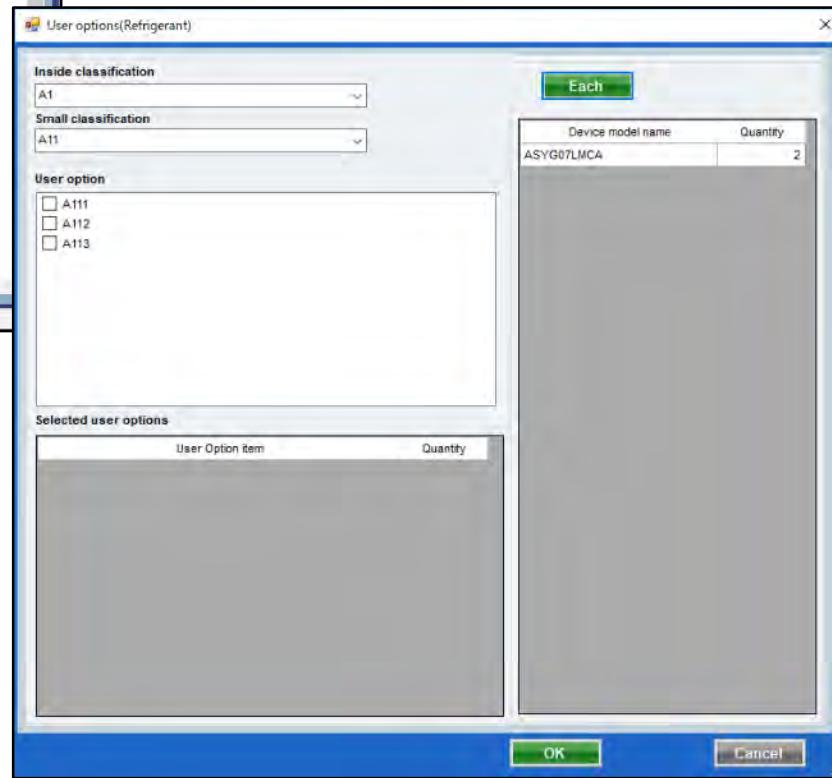

Wiring settings

Design Simulator

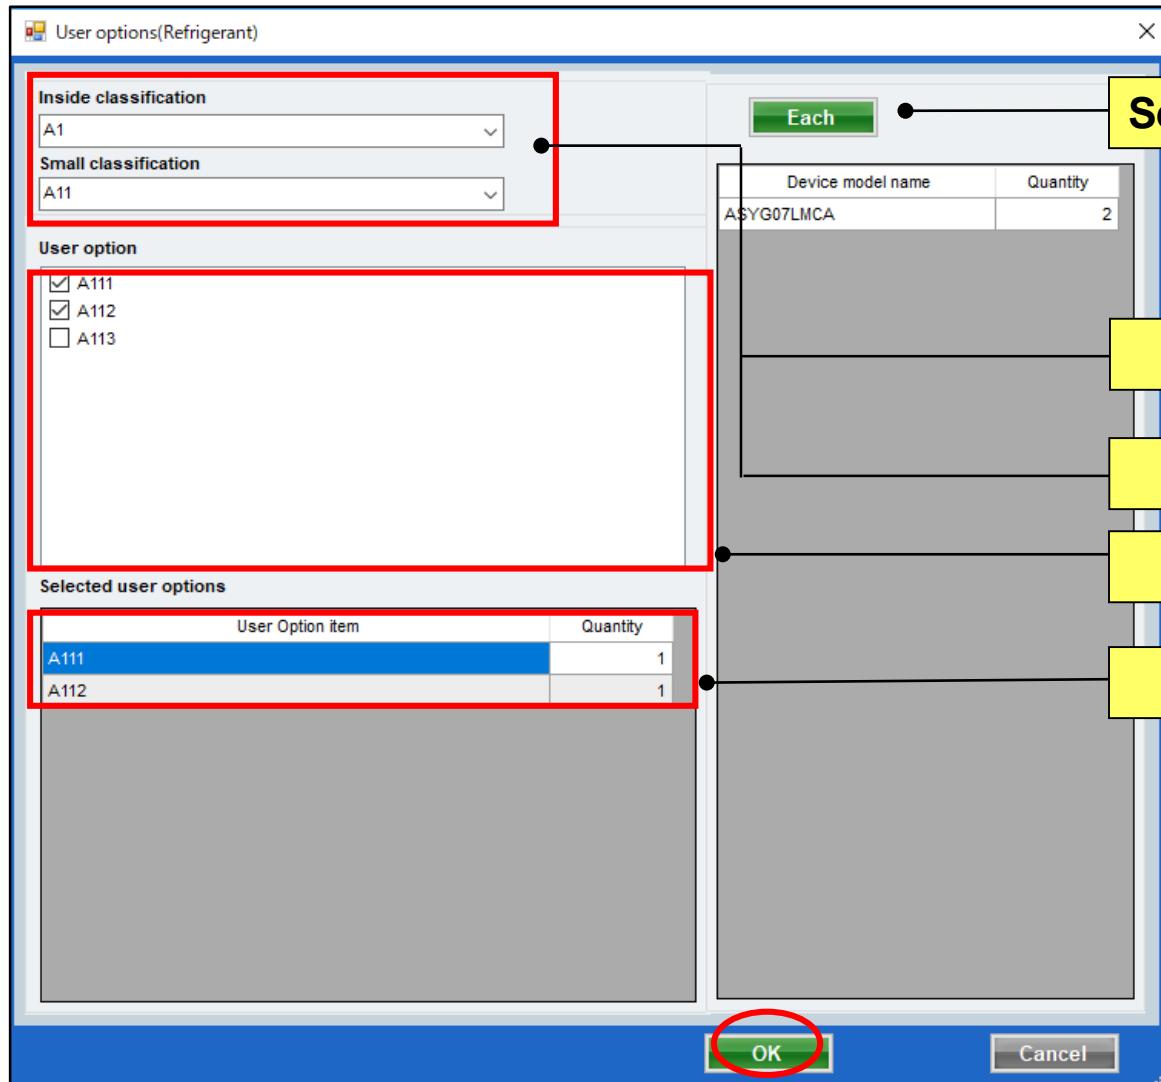

Select “Each or Summary”

Select “Inside classification”

Select “Small classification”

Check “User option”


Check “User option”

Selected options are displayed on Report

Konfiguracja okablowania

Design Simulator


Okablowanie (system Multi)

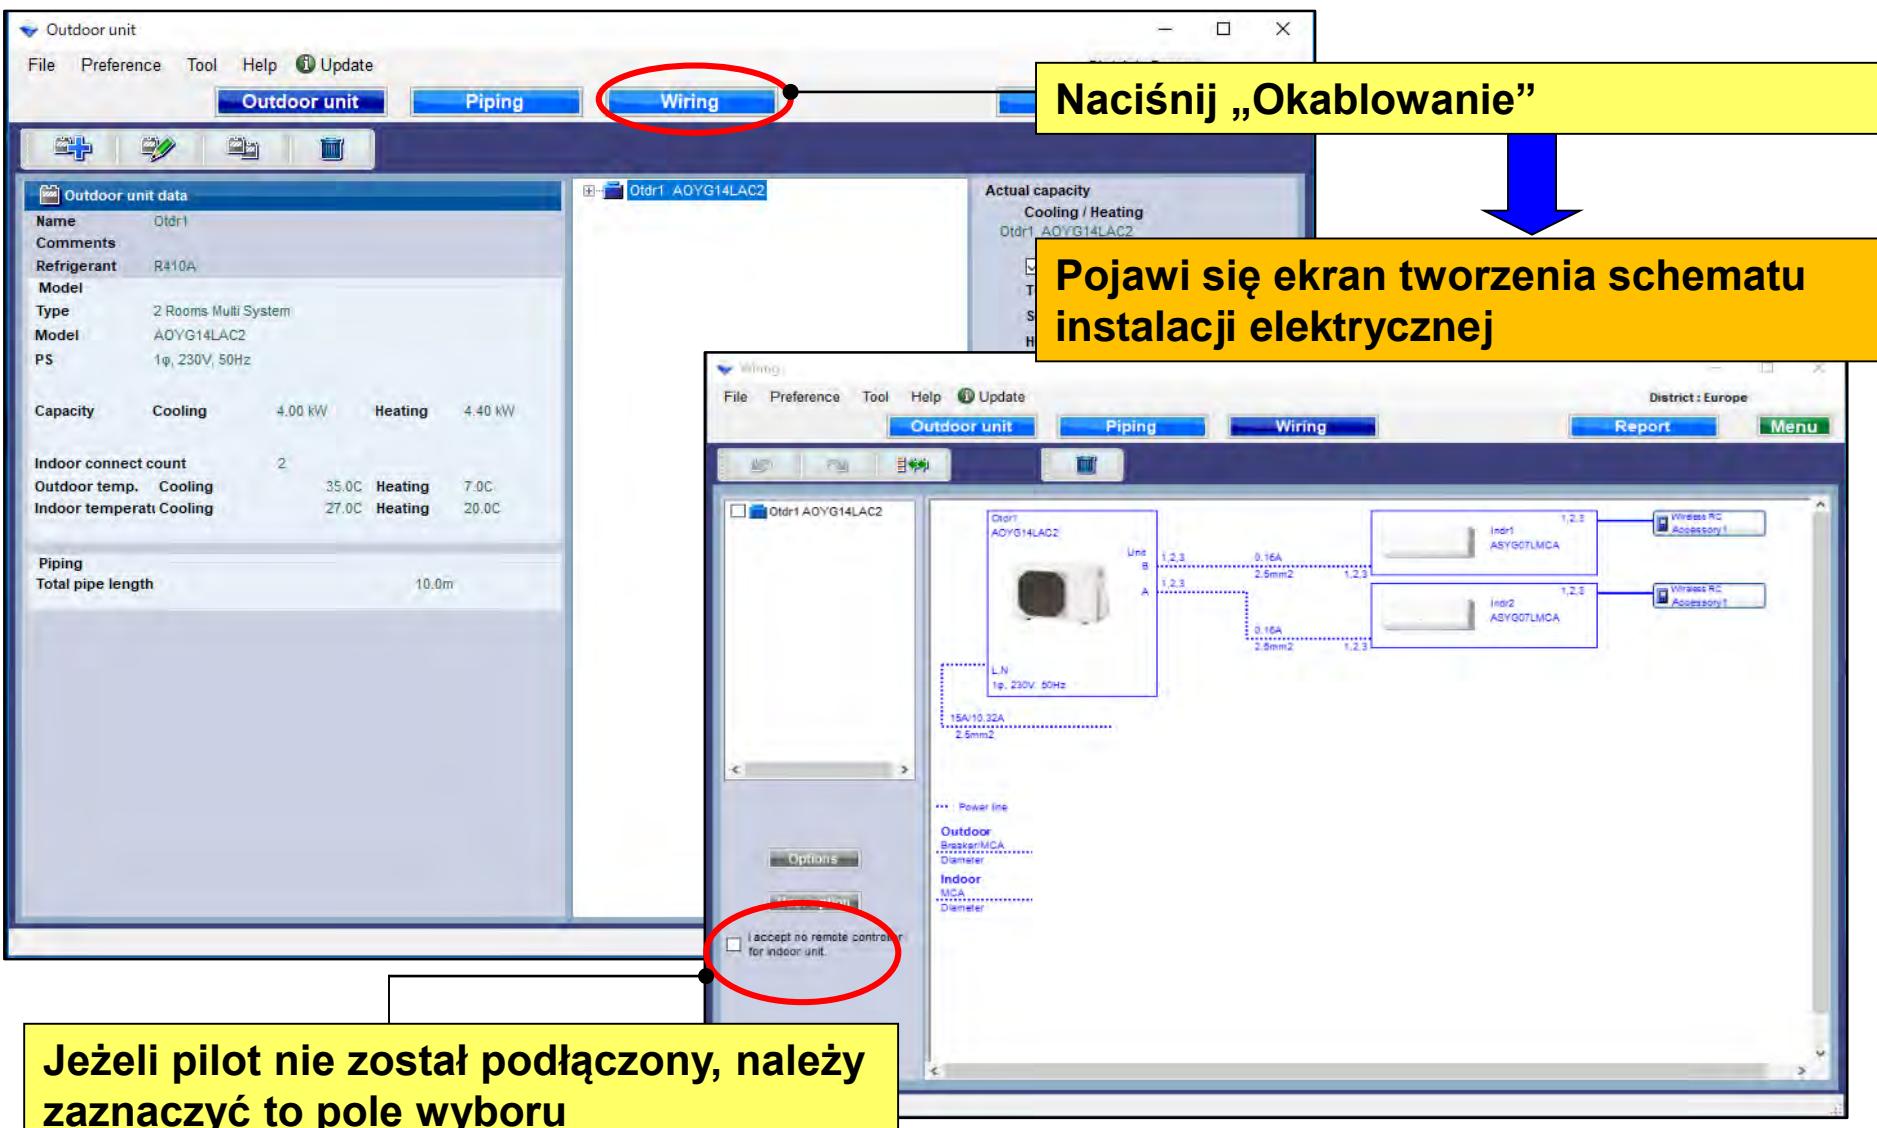


Konfiguracja okablowania

Design Simulator


Wybór układu chłodniczego (system Multi)

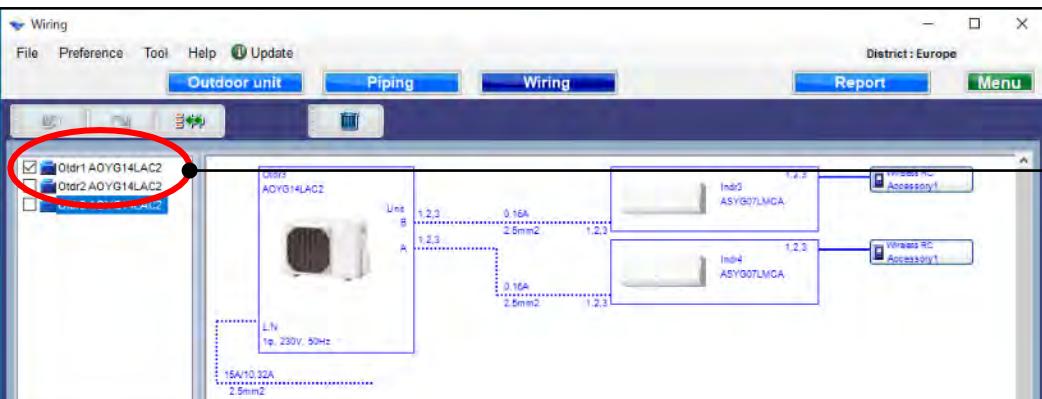

Zaznacz układ chłodniczy

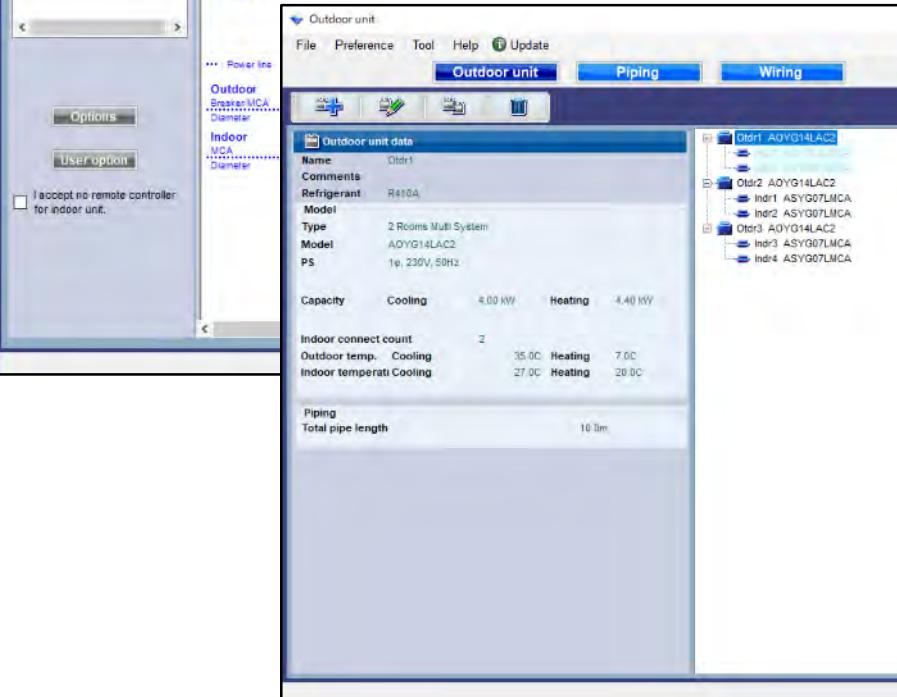


Zaznaczony układ chłodniczy nie może być edytowany na każdym ekranie

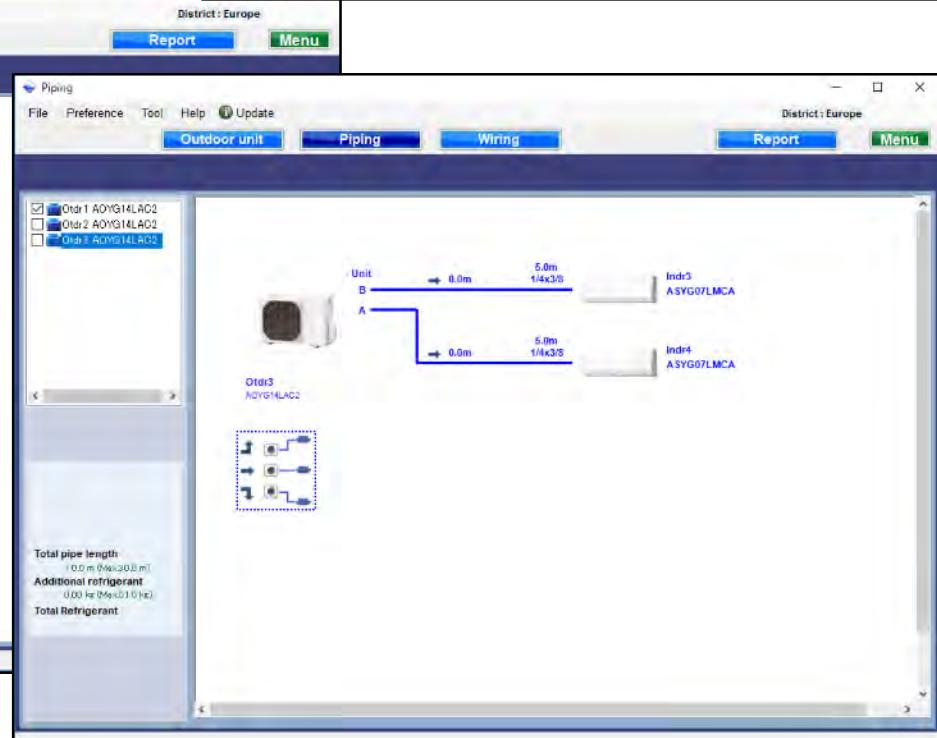

Konfiguracja okablowania

Design Simulator


Okablowanie (system Multi symultaniczny)

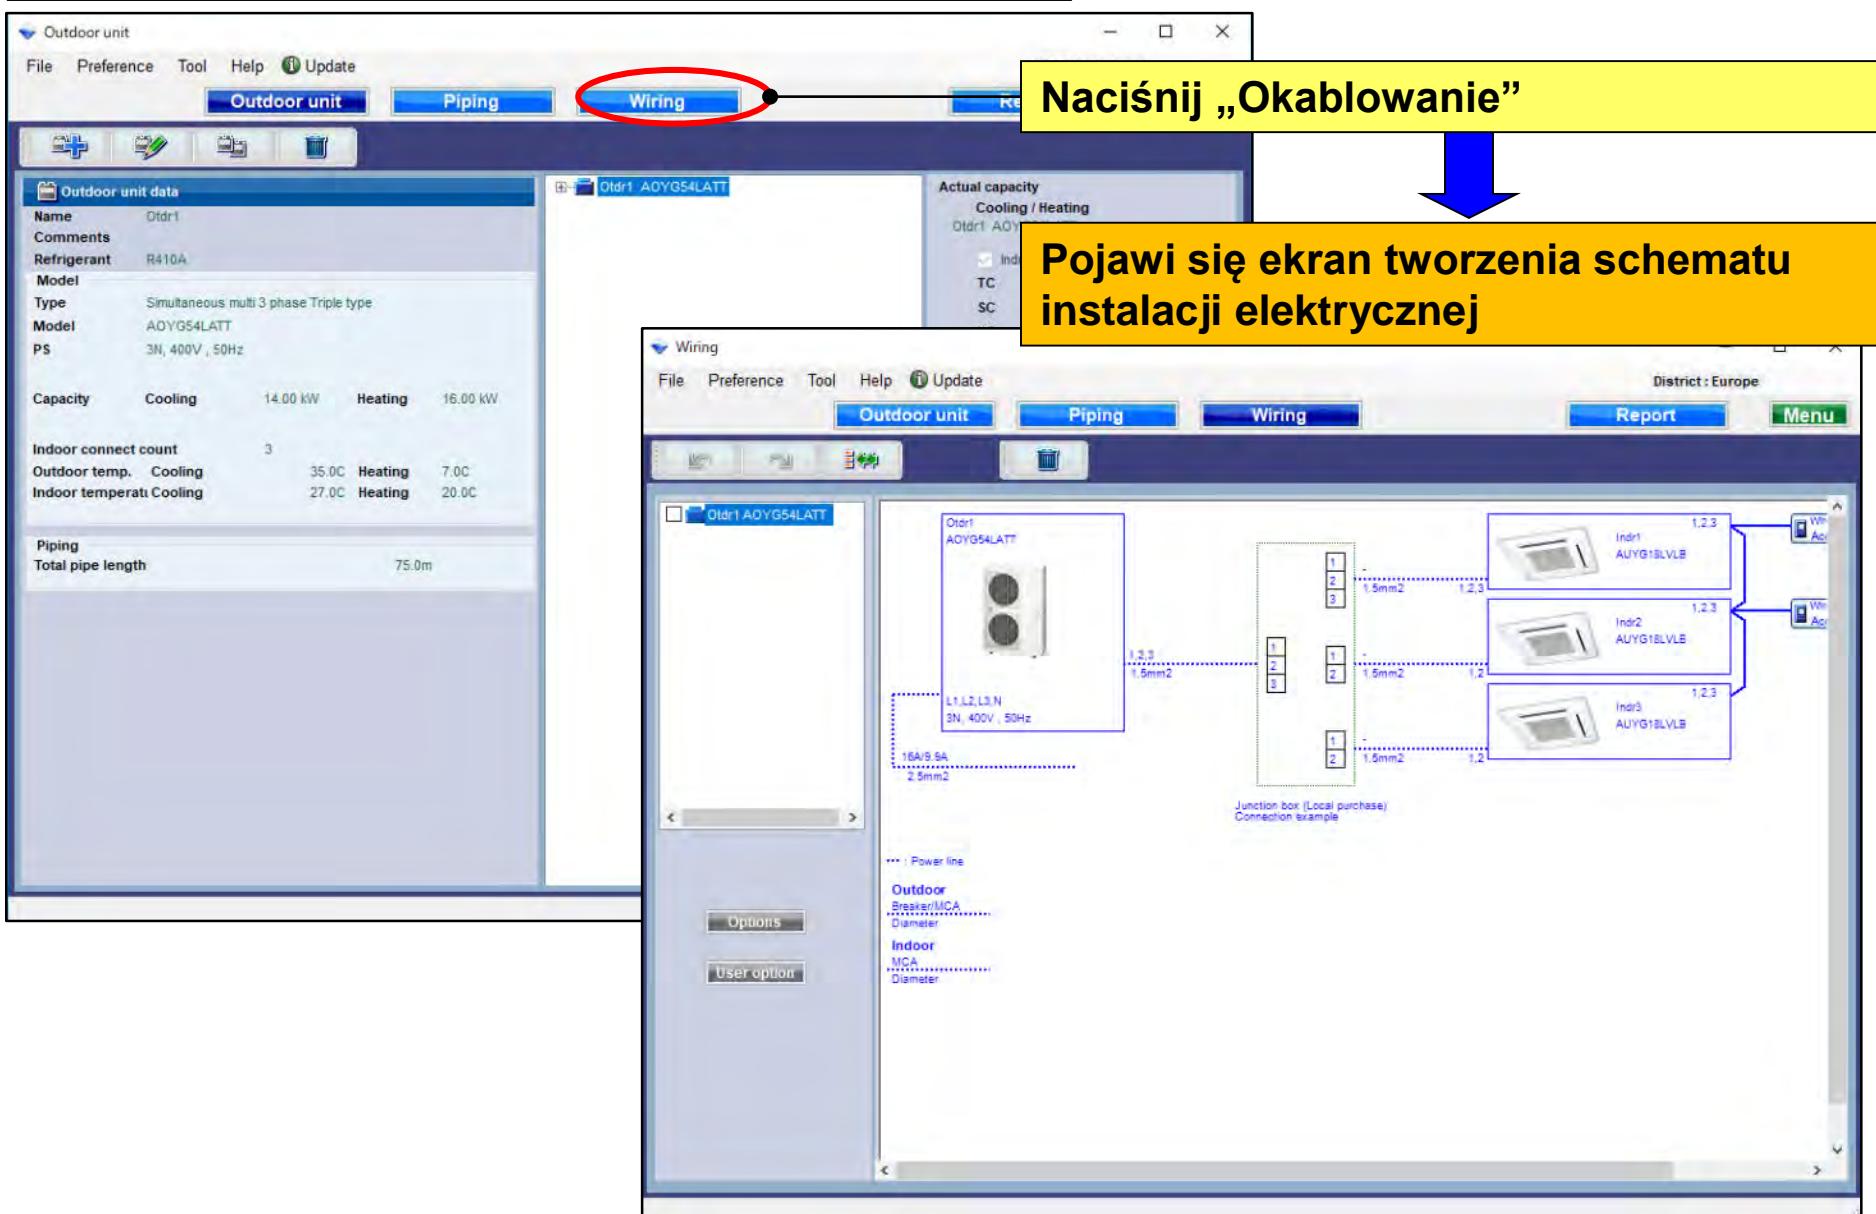

Konfiguracja okablowania


Design Simulator

Opcje

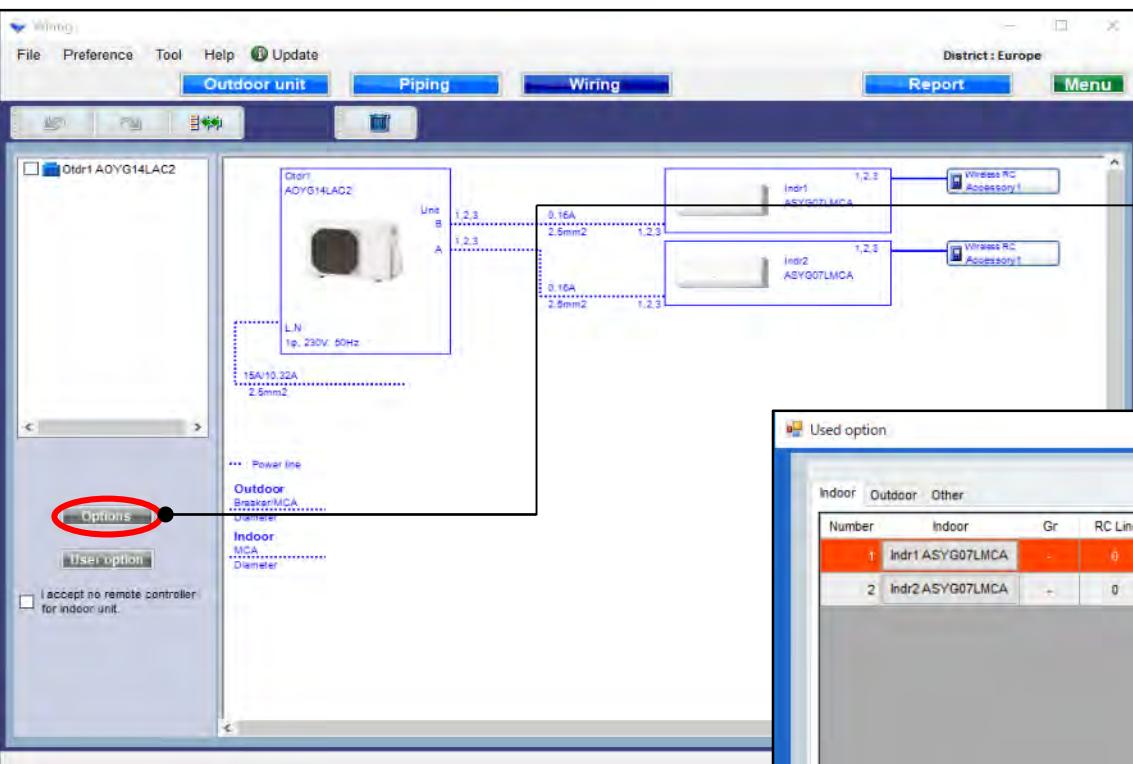

Naciśnij „Opcje”


Pojawi się ekran zastosowanych akcesoriów opcjonalnych

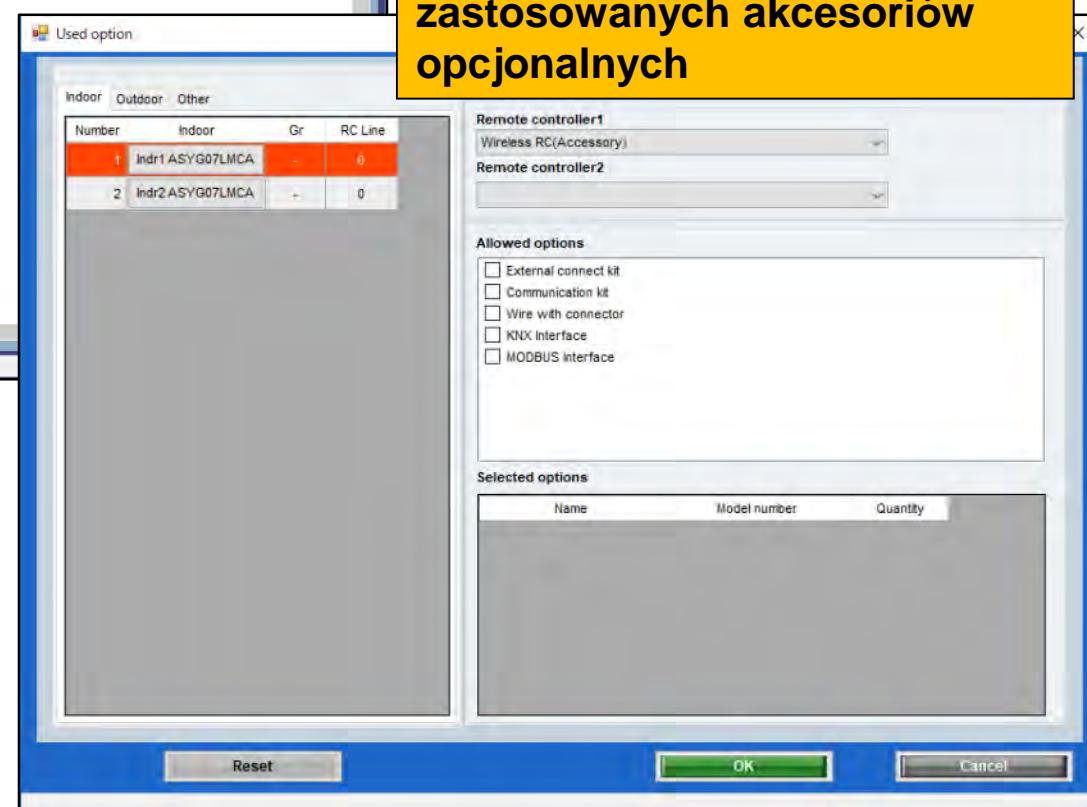

Konfiguracja okablowania

Design Simulator

Zastosowane opcje (1/2)


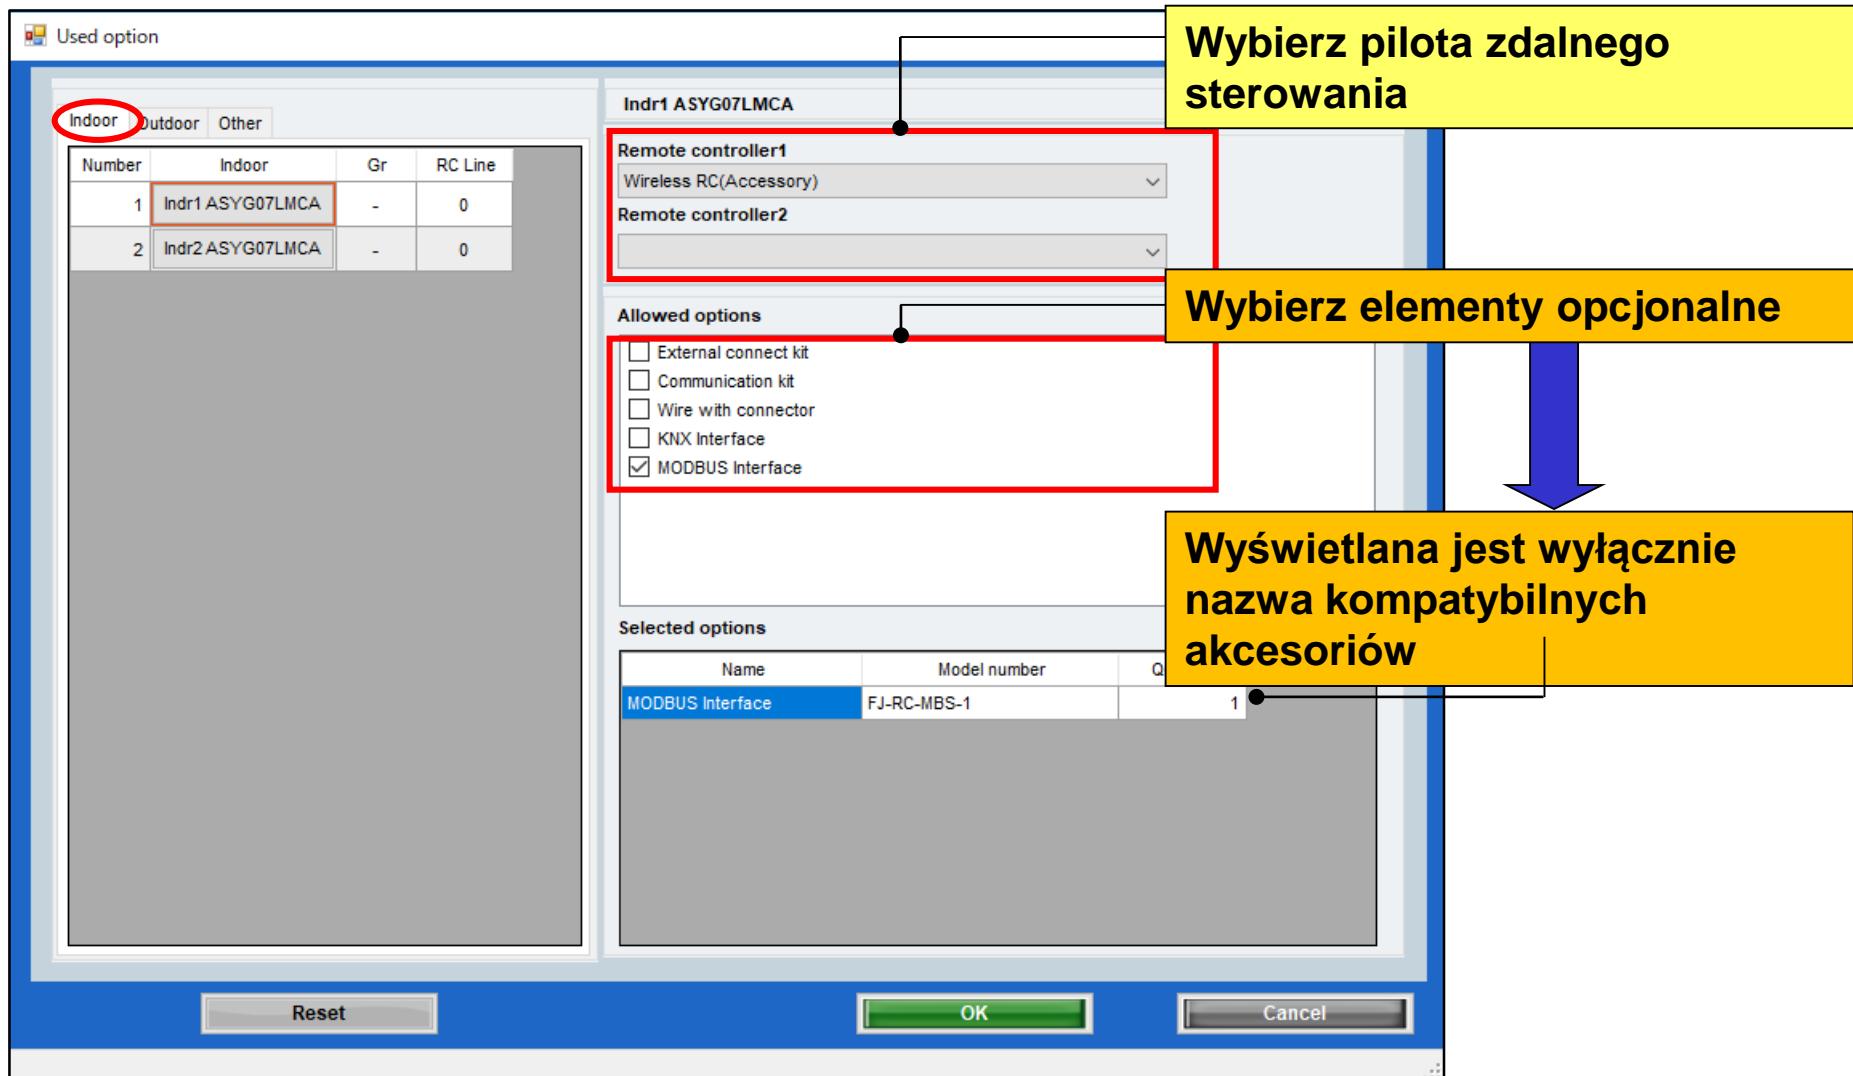


Wybrane opcje zostaną uwzględnione w raporcie

Konfiguracja okablowania

Design Simulator

Zastosowane opcje (2/2)

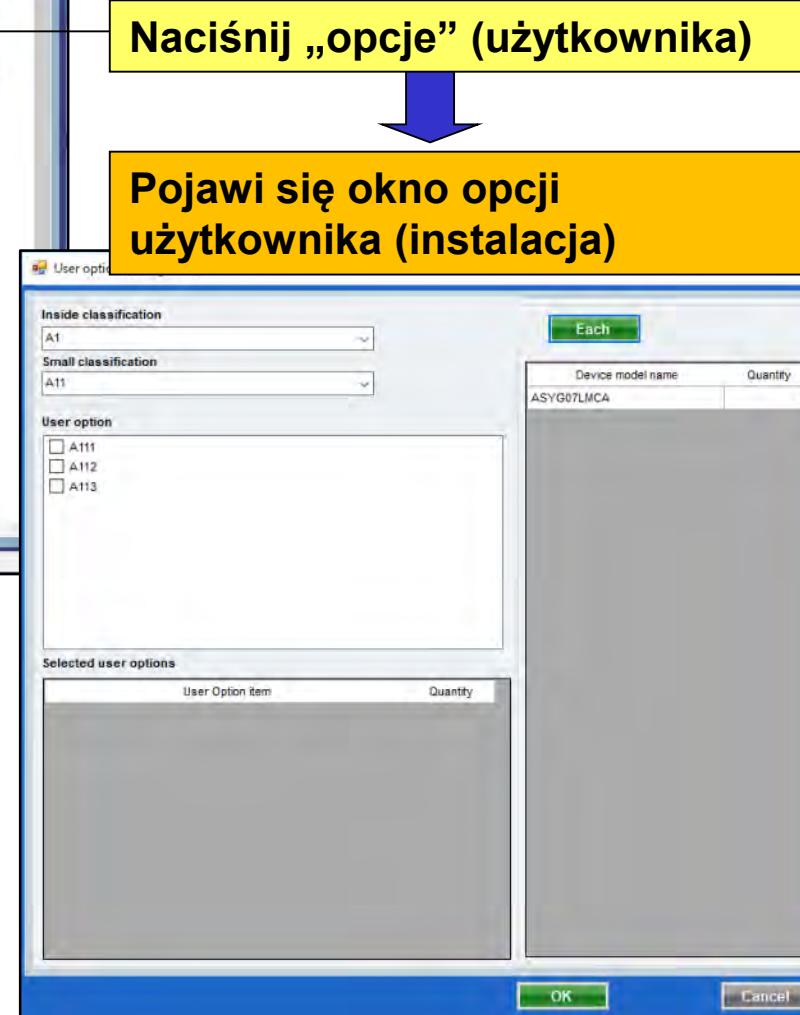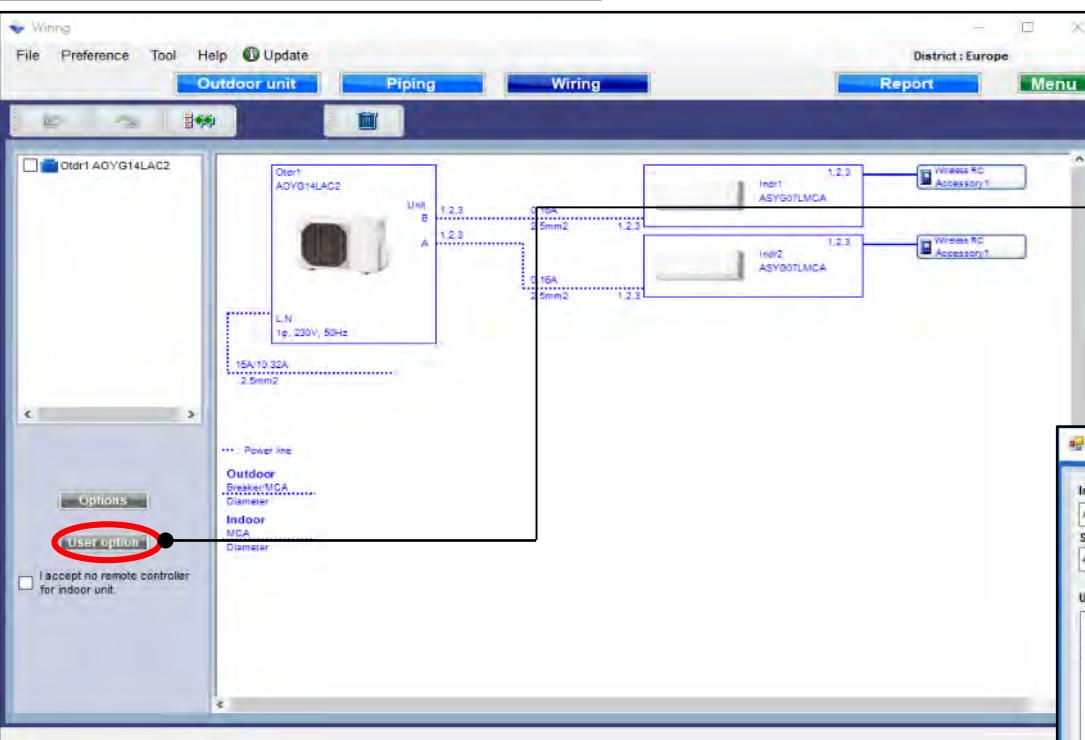


Naciśnij „opcje” (użytkownika)

Pojawi się okno opcji użytkownika (instalacja)

Konfiguracja okablowania

Design Simulator

Opcje użytkownika (instalacja)

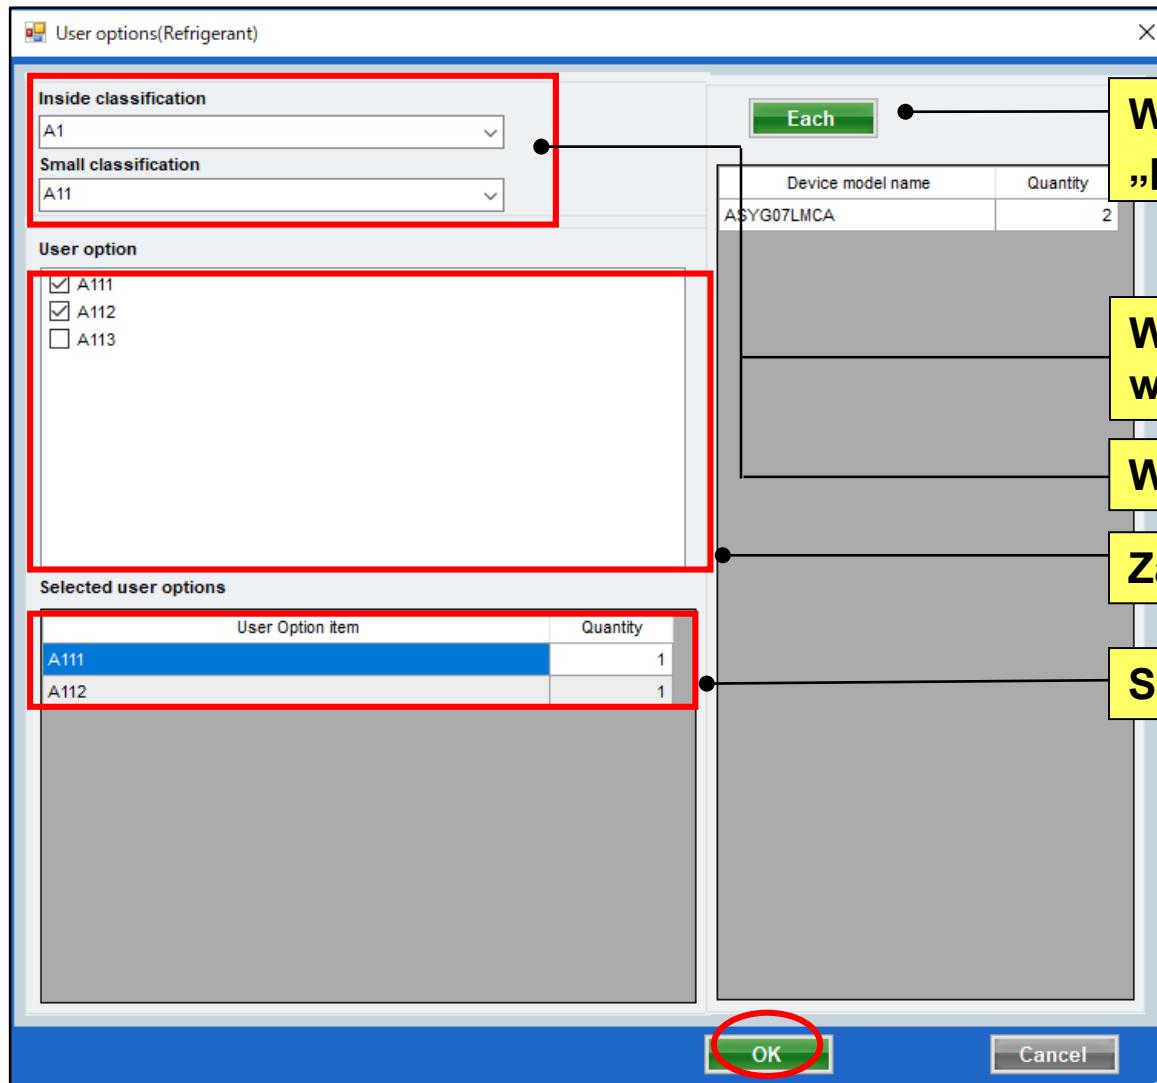

Wybierz „wszystkie” lub „podsumow.”

Wybierz „Klasyfikację wewnętrzną”

Wybierz „Małą klasyfikację”

Zaznacz „Opcje użytkownika”

Sprawdź wybrane opcje

Wybrane opcje zostaną uwzględnione w raporcie

Kablolama (Multi sistemi)


The screenshot shows the HVAC design software interface. The top menu bar includes 'File', 'Preference', 'Tool', 'Help', and 'Update'. The 'Wiring' tab is highlighted with a red circle. The main window displays 'Outdoor unit data' on the left and a wiring diagram on the right. The wiring diagram shows an outdoor unit (Odr1 A0YG14LAC2) connected to two indoor units (Ind1 ASY907LMCA and Ind2 ASY907LMCA) via power lines and wireless RC accessories. A blue arrow points from the 'Wiring' tab to the text 'Kablo sistem diyagramı ekranıdır'. At the bottom left of the wiring window, there is a checkbox labeled 'I accept no remote control for indoor unit.' Another red circle highlights this checkbox. A yellow box at the bottom left contains the text 'Uzaktan kumanda bağlı değilse, bu onay kutusunu işaretleyin.'

"Kablolama" seç

Kablo sistem diyagramı ekranıdır



Uzaktan kumanda bağlı değilse, bu onay kutusunu işaretleyin.

Soğutucu sistem kararı (Çok sistemi)

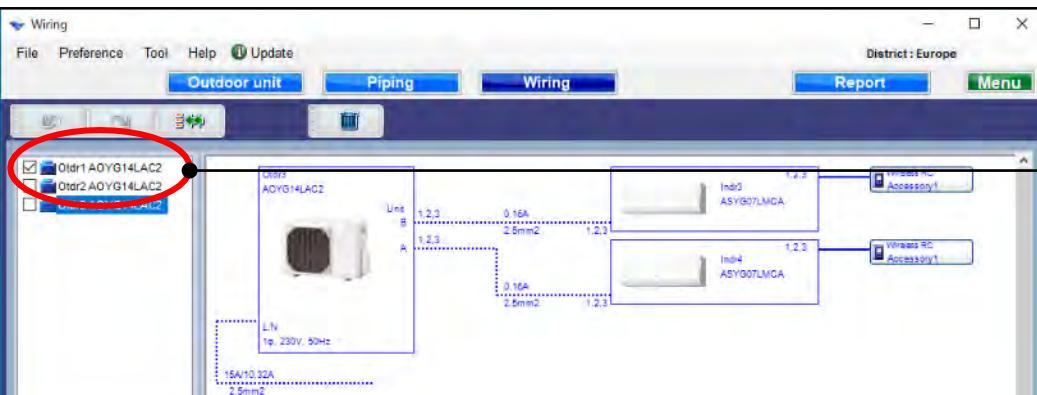

Soğutucu sistemini kontrol edin

Kontrol edilen soğutucu akışkan sistemi her ekranda düzenlenemez

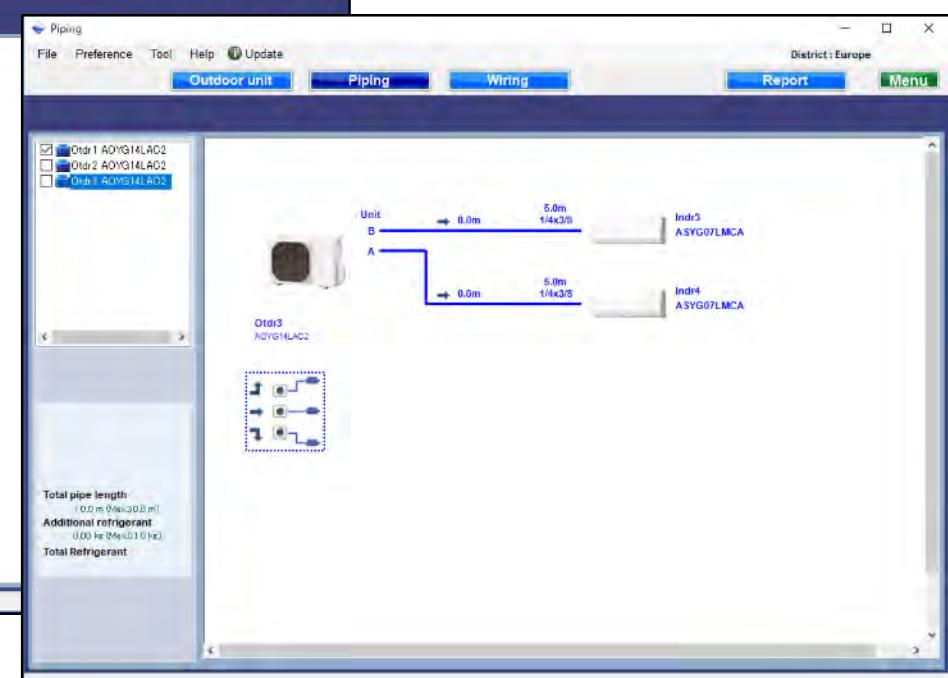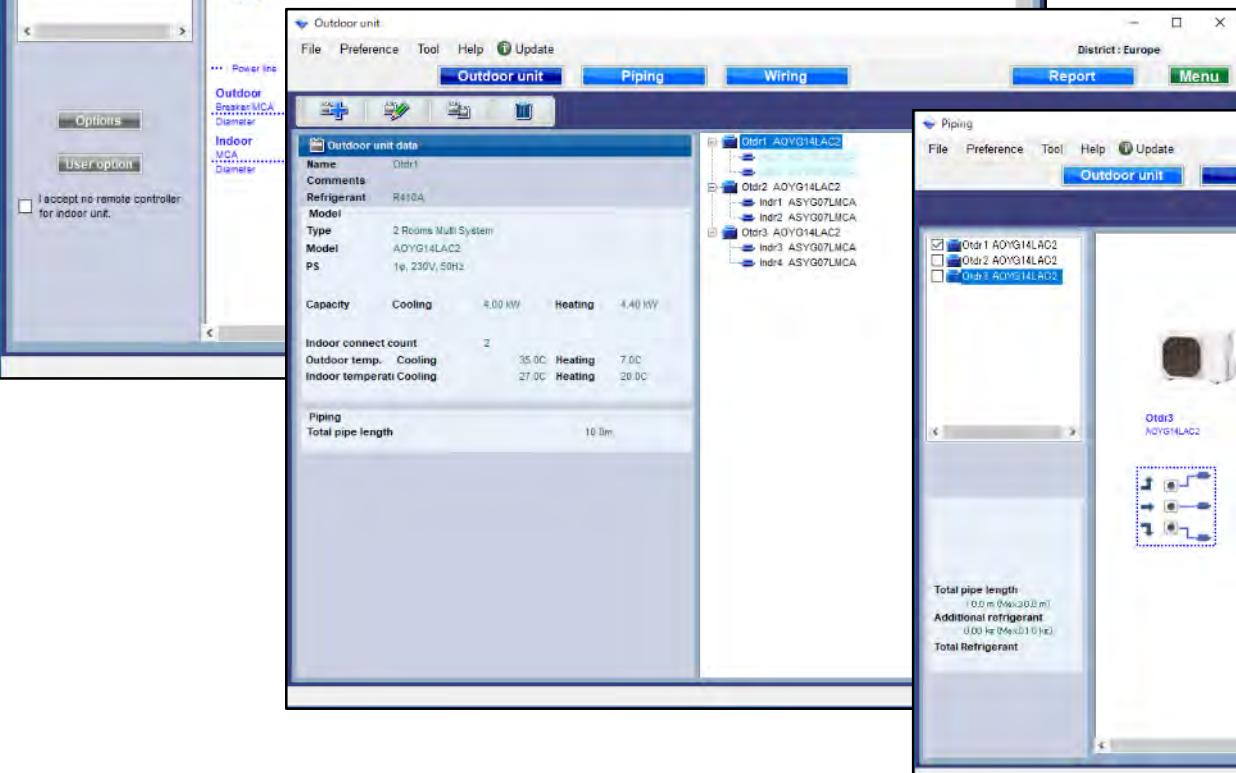

Kablolama ayarları

Tasarım Simülatörü

kablolama (Eşzamanlı çoklu sistem)

“Kablolama” seç


Kablo sistem diyagramı ekranıdır.

The screenshot illustrates the wiring configuration for a simultaneous multi-phase triple system. The left panel shows the "Outdoor unit data" for Otdr1, including details like Name (Otdr1), Comments (Comments), Refrigerant (R410A), Model (Model), Type (Simultaneous multi 3 phase Triple type), and Capacity (Cooling: 14.00 kW, Heating: 16.00 kW). The right panel displays the "Wiring" configuration, showing a connection diagram where the outdoor unit (Otdr1 ADYG54LATT) is connected to three indoor units (Indr1 AUYG1BLVLE, Indr2 AUYG1BLVLE, Indr3 AUYG1BLVLE) via power lines (1.5mm²) and junction boxes. A blue arrow points from the top text "Kablo sistem diyagramı ekranıdır." to the wiring diagram in the right panel.

Kablolama ayarları


Tasarım Simülatörü

Seçenekler

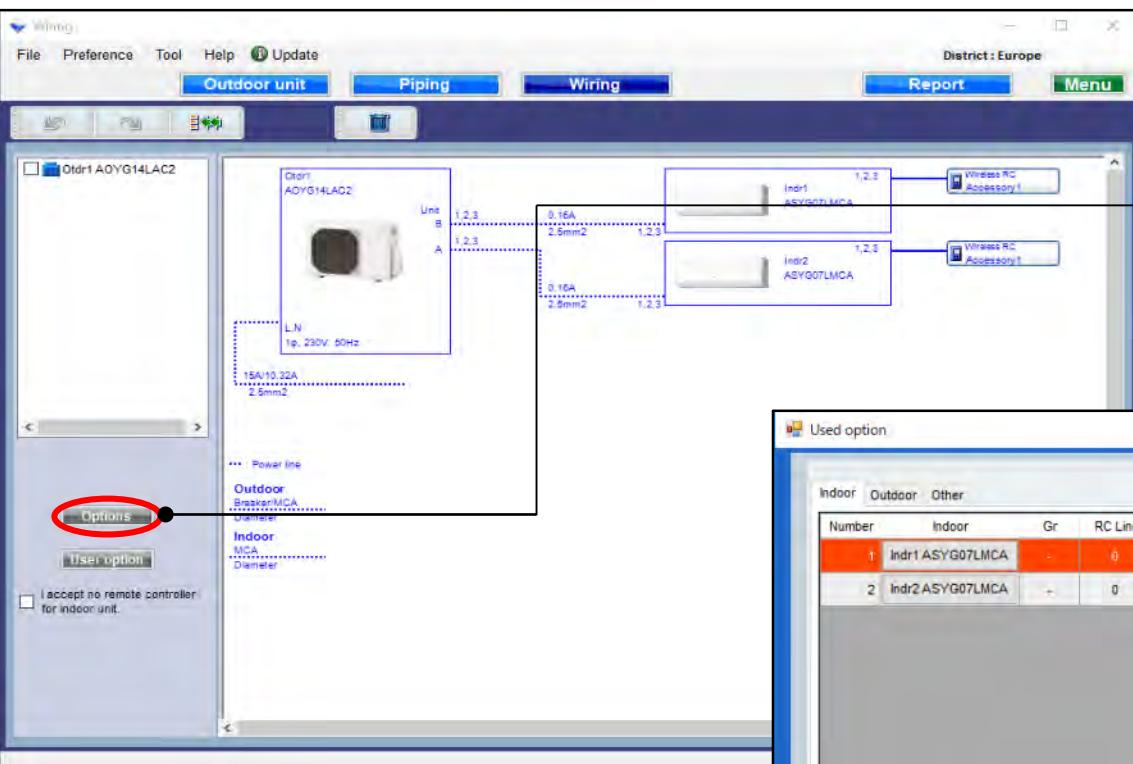


“Seçenekler” i seçin

Kullanılan seçenek ekranını aç

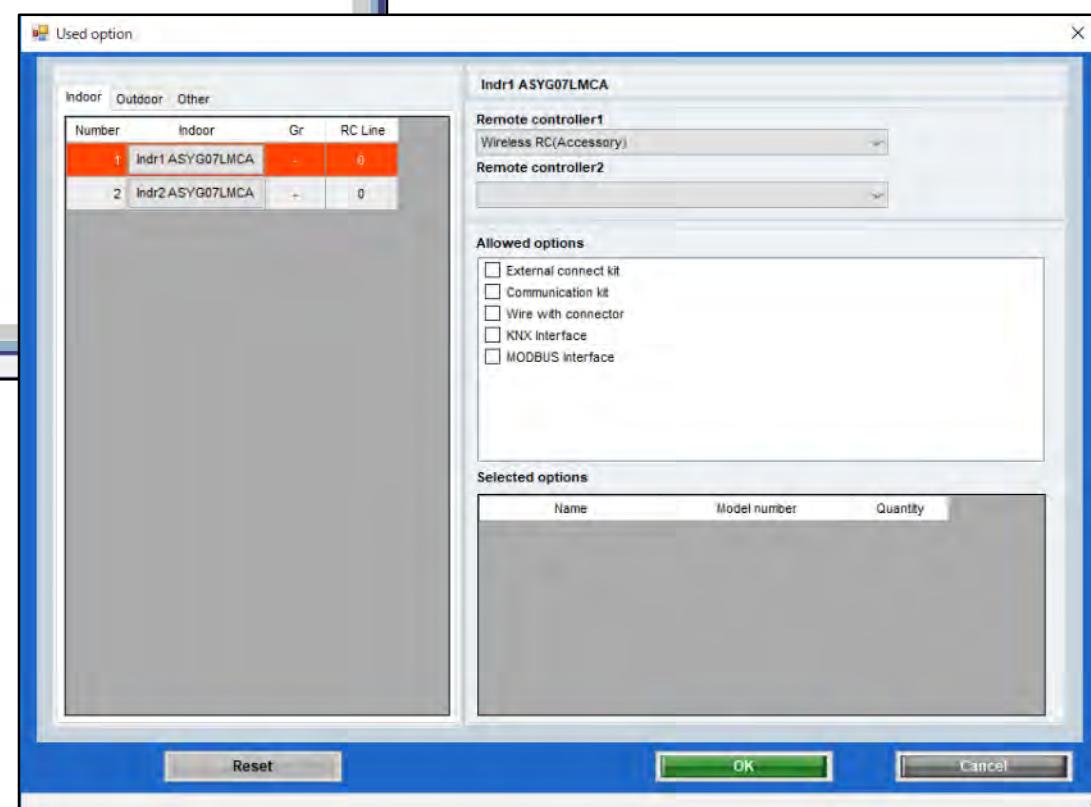


kullanımda seçenek (1/2)

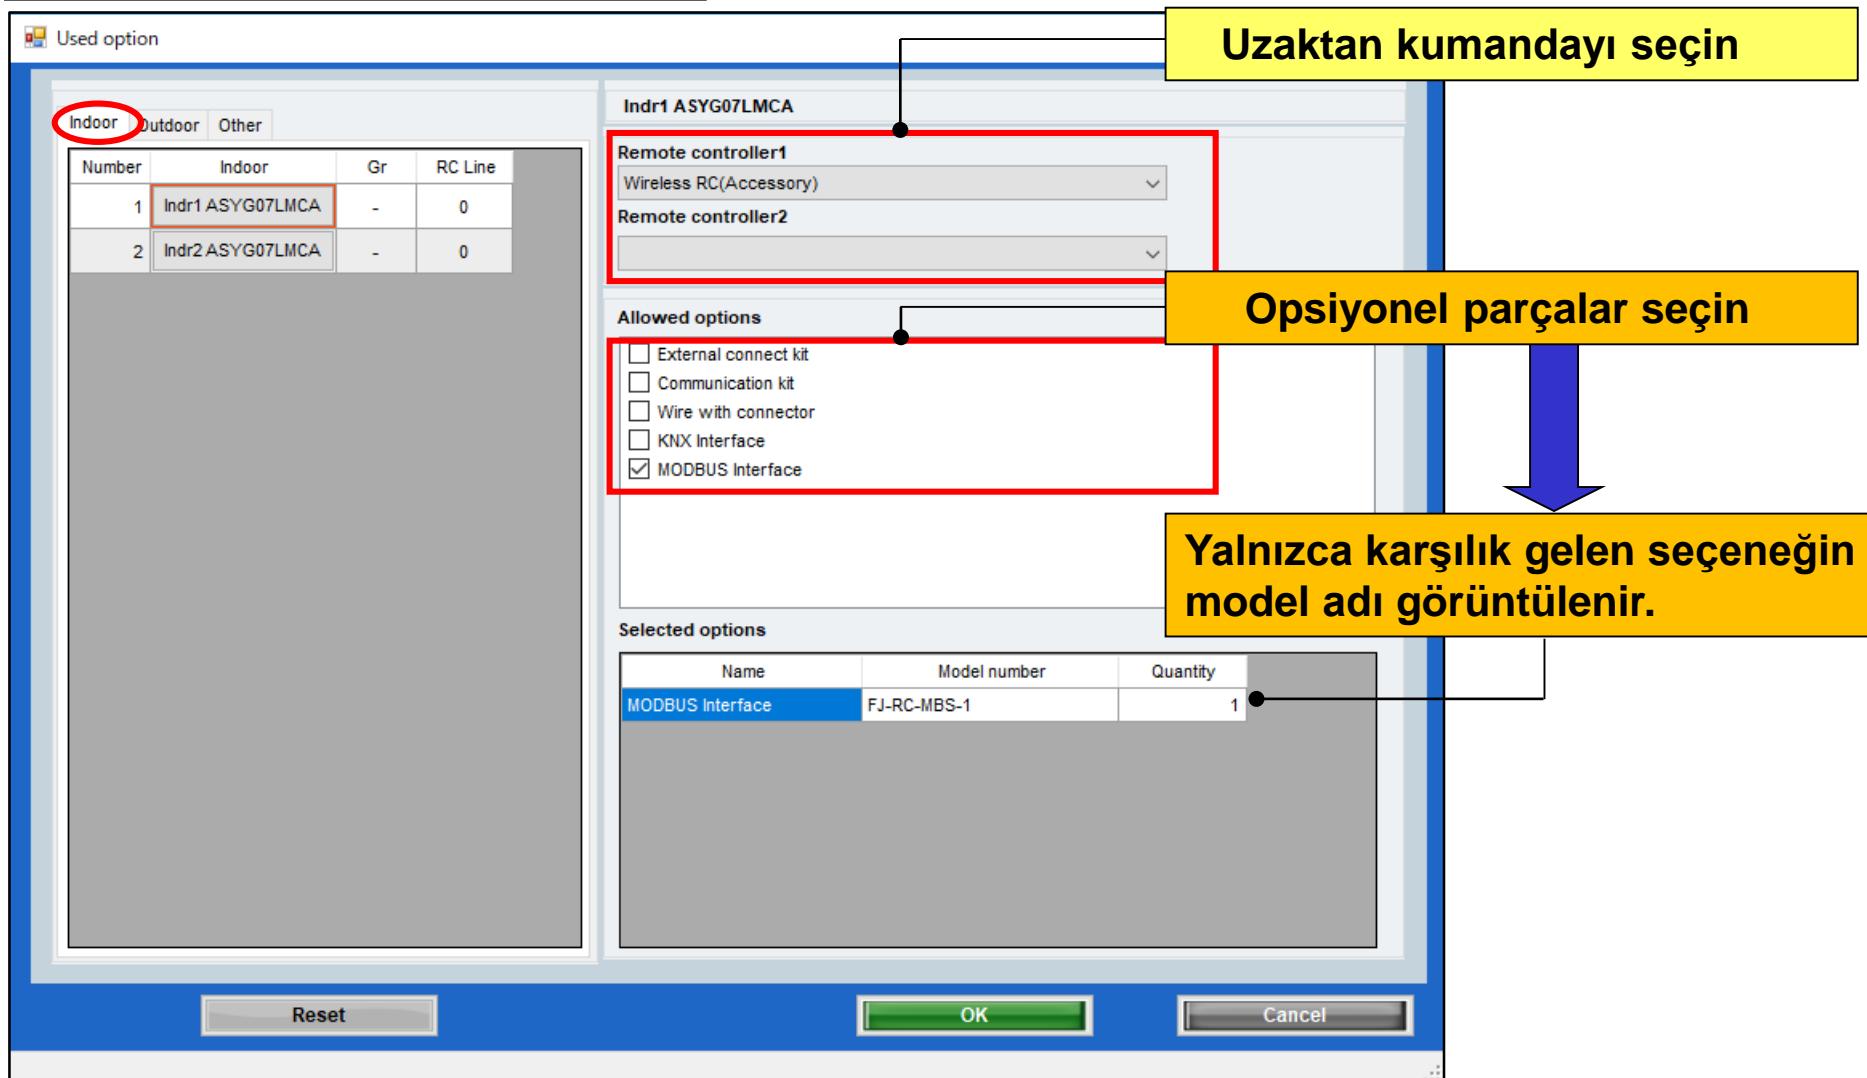


Seçilen seçenekler Raporda görüntülenir

kullanım seçenekleri (2/2)

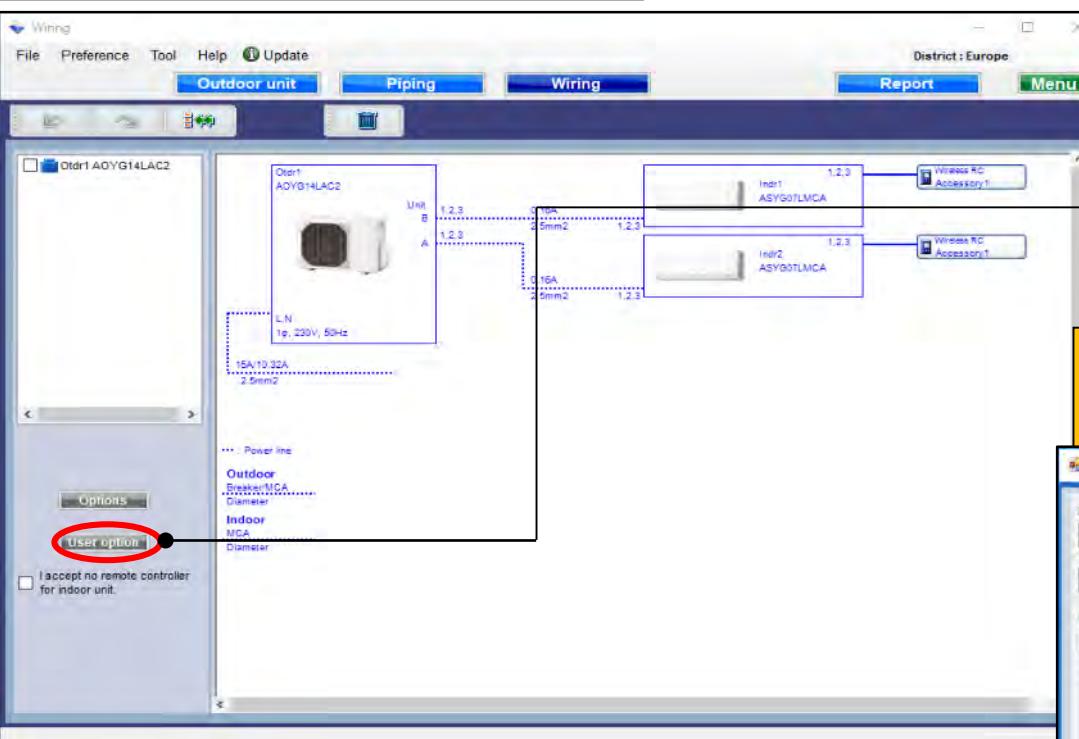


“Kullanıcı Seçenekleri” ni seçin

Kullanıcı seçeneklerini aç (Soğutucu akışkan)

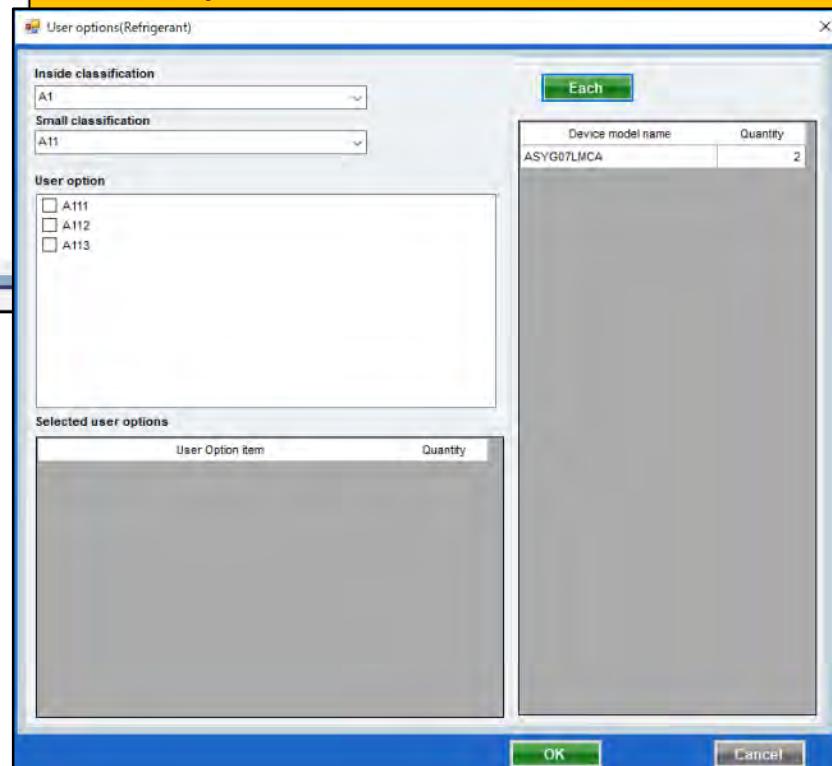

kullanıcı seçenek (Soğutucu)

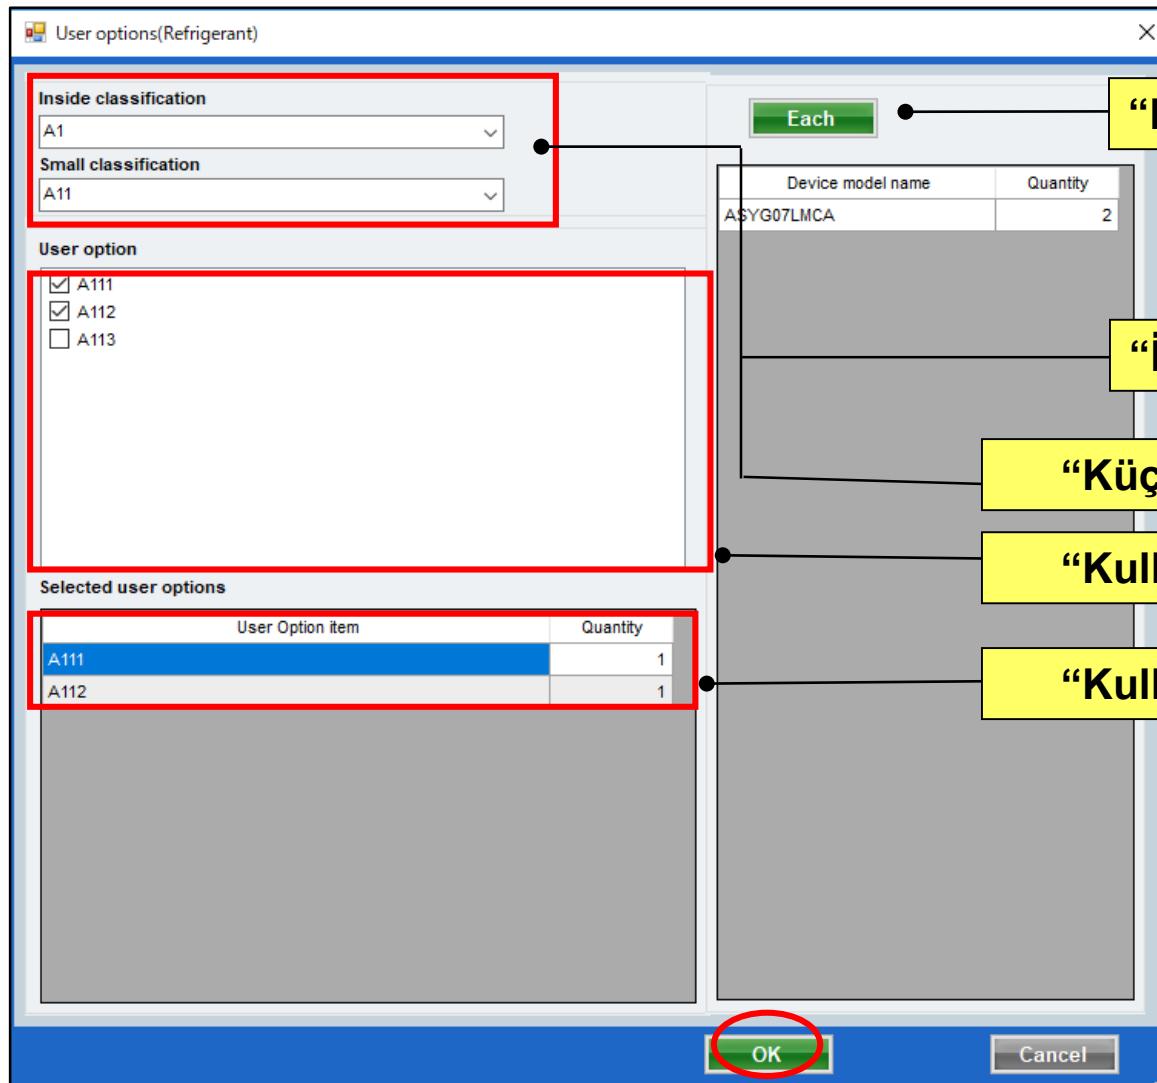

“Her biri veya Özeti” i seçin

“İç sınıflandırma” seçin

“Küçük sınıflandırma” Seç

“Kullanıcı” seçeneğini kontrol edin

“Kullanıcı” seçeneğini kontrol edin

Seçilen seçenekler Raporda görüntülenir

Podešavanje kabliranja

Design Simulator

Kabliranje (Multi sistem)

The screenshot shows the Design Simulator software interface for configuring a multi-system air conditioning setup. The main window displays the following details:

- Outdoor unit data:**
 - Name: Otdr1
 - Comments: R410A
 - Refrigerant: R410A
 - Type: 2 Rooms Multi System
 - Model: AOYG14LAC2
 - PS: 1φ, 230V, 50Hz
- Capacity:**
 - Cooling: 4.00 kW
 - Heating: 4.40 kW
- Indoor connect count:** 2
- Outdoor temp.:**
 - Cooling: 35.0C
 - Heating: 7.0C
- Indoor temperaturi:**
 - Cooling: 27.0C
 - Heating: 20.0C
- Piping:**
 - Total pipe length: 10.0m


The top navigation bar includes tabs for **Outdoor unit**, **Piping**, and **Wiring**. The **Wiring** tab is highlighted with a red circle and a callout box containing the text "Izaberite ‘Kabliranje’". A large blue arrow points from this box down to the wiring diagram window.

The wiring diagram window shows the connection between the outdoor unit (Otdr1 AOYG14LAC2) and two indoor units (Indr1 ASY907LMCA and Indr2 ASY907LMCA). The diagram includes labels for power lines (1.2.3), ground (LN), and neutral (1φ, 230V, 50Hz). Dimensions for wire sizes (0.16A, 2.8mm²) and diameters (15A/10.32A, 2.5mm²) are indicated. A checkbox at the bottom left of this window is circled in red and has a callout box containing the text "Kada daljinski upravljač nije povezan označite ovaj kvadratić".

Podešavanje kabliranja



Design Simulator

Rešenje sistema rashladnog fluida (Multi sistem)

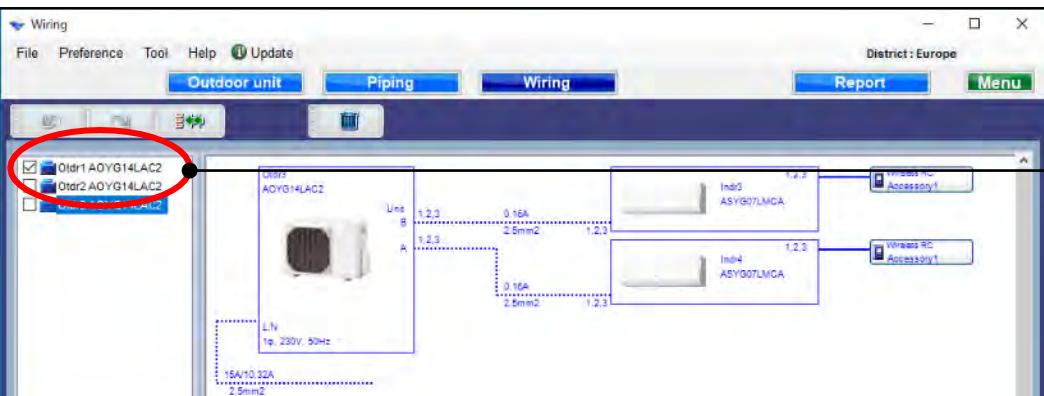

Izaberite sistem rashladnog fluida

Izabrani sistem rashladnog fluida
ne može se uređivati na svakom
ekranu

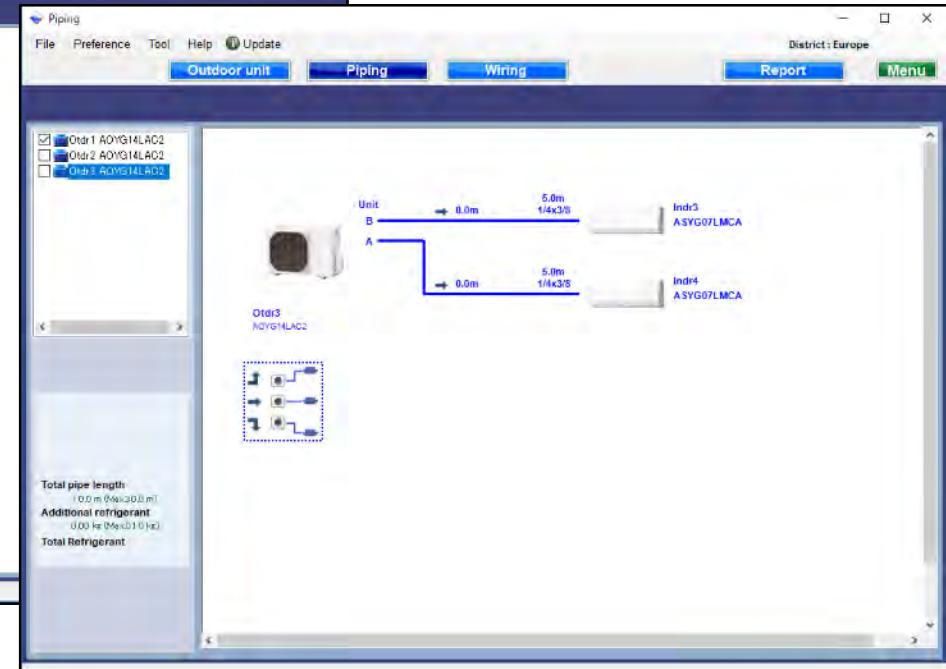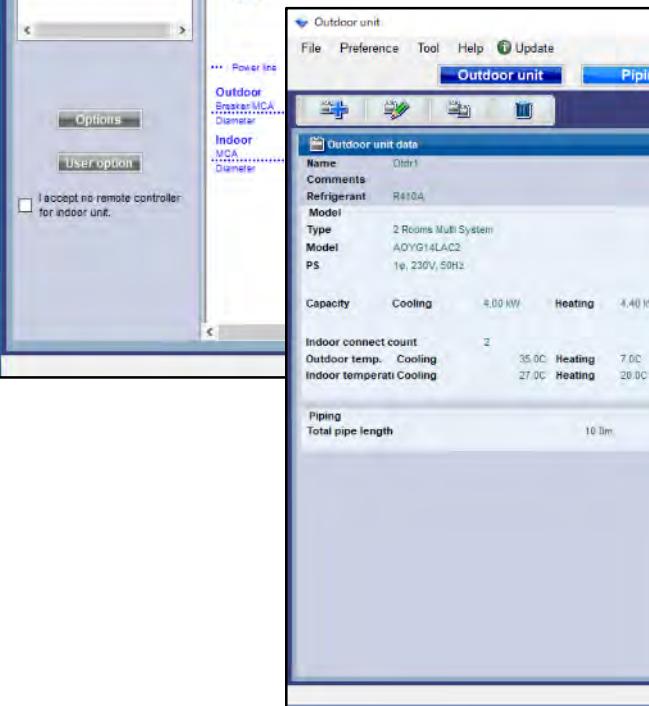

Podešavanje kabliranja

Design Simulator

Kabliranje (Simultani multi sistem)

Outdoor unit

File Preference Tool Help Update

Outdoor unit Piping Wiring

Outdoor unit data

Name: Otdr1
Comments:
Refrigerant: R410A
Model:
Type: Simultaneous multi 3 phase Triple type.
Model: ADYG54LATT
PS: 3N, 400V, 50Hz
Capacity Cooling 14.00 kW Heating 16.00 kW
Indoor connect count 3
Outdoor temp. Cooling 35.0°C Heating 7.0°C
Indoor temperature Cooling 27.0°C Heating 20.0°C
Piping Total pipe length 75.0m

Otdr1 ADYG54LATT

Actual capacity
Cooling / Heating
Otdr1 ADYG54LATT
Ind 2.73 kW

Izaberite "Kabliranje"

Kreiranje dijagrama kabliranja

Wiring

Outdoor unit Piping Wiring Report Menu

Otdr1 ADYG54LATT

L1,L2,L3,N
3N, 400V, 50Hz

16A/5.9A
2.5mm²

1.2.3 1.5mm²

Indr1 AUYG1BLVLE 1.2.3
Indr2 AUYG1BLVLE 1.2.3
Indr3 AUYG1BLVLE 1.2.3

Junction box (Local purchase)
Connection example


... : Power line
Outdoor
Breaker/MCA
Diameter
Indoor
MCA
Diameter

Options User option

Podešavanje kabliranja


Design Simulator

Opcije

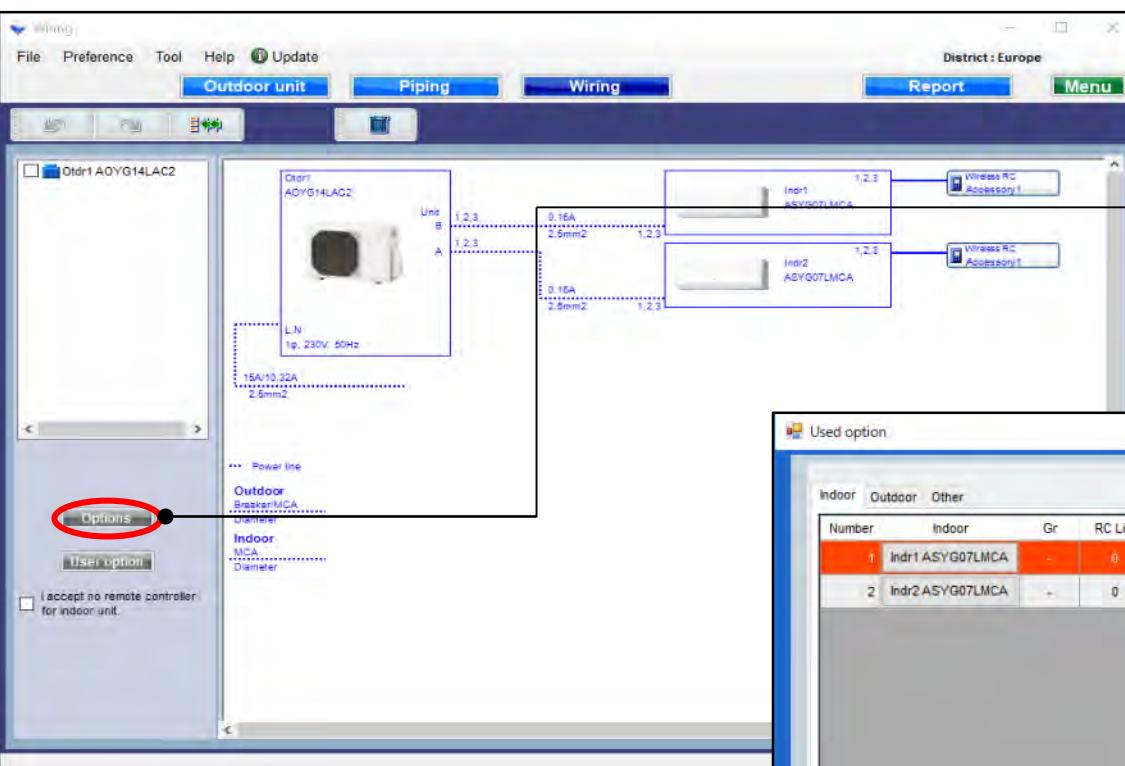


Izaberite "Opcije "

Otvorite ekran sa opcijama.

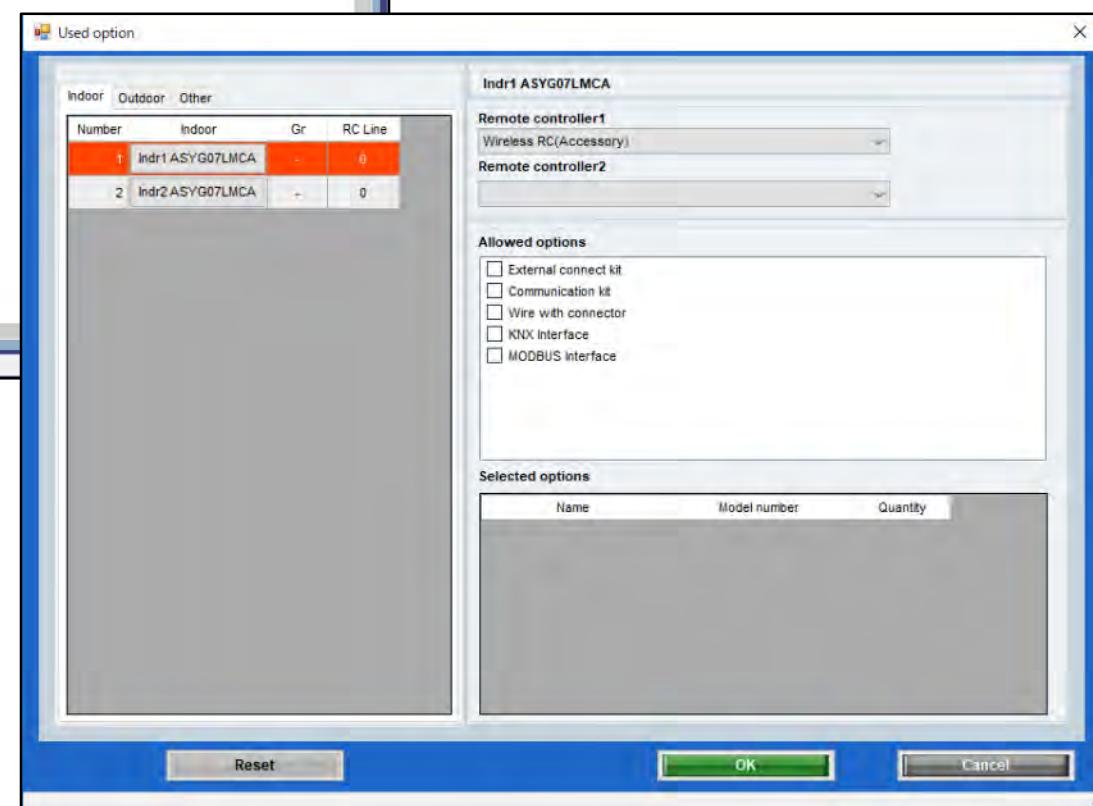


Korišćene opcije(1/2)

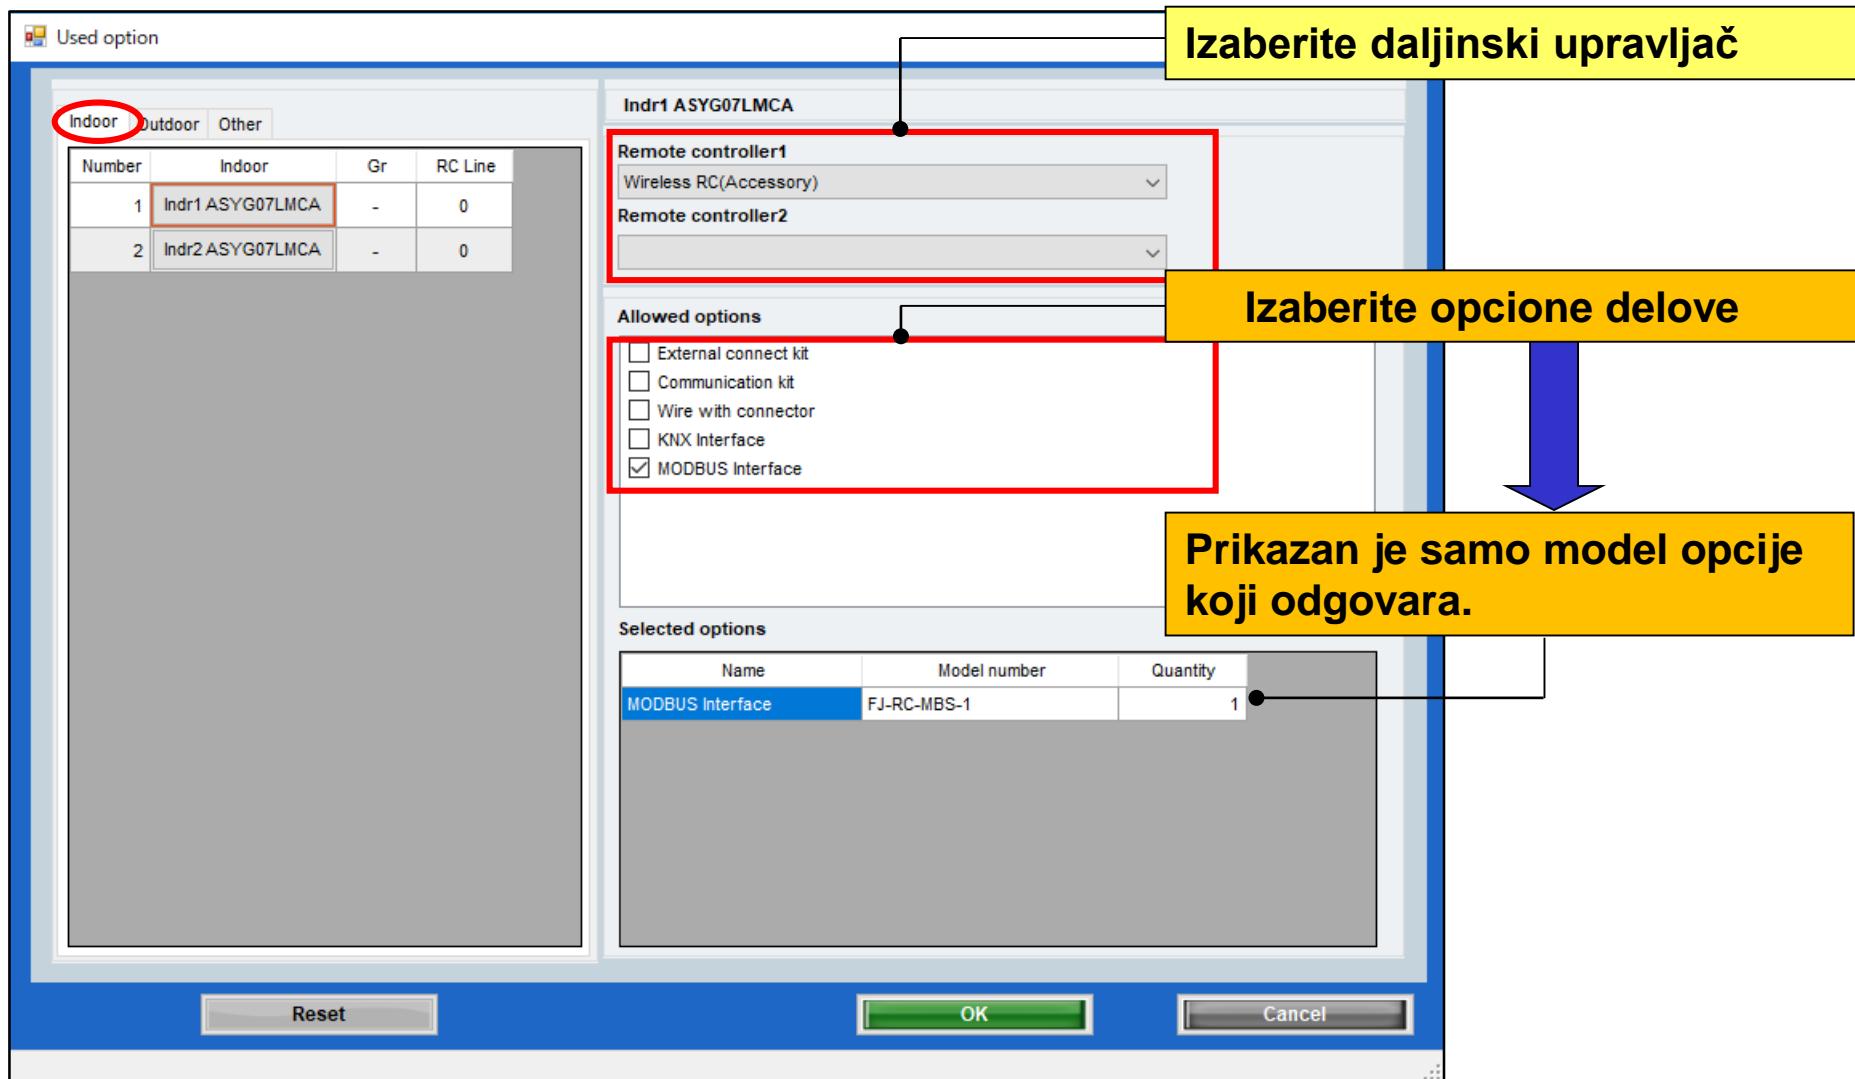

Podešavanje kabliranja


Design Simulator

Korišćene opcije (2/2)

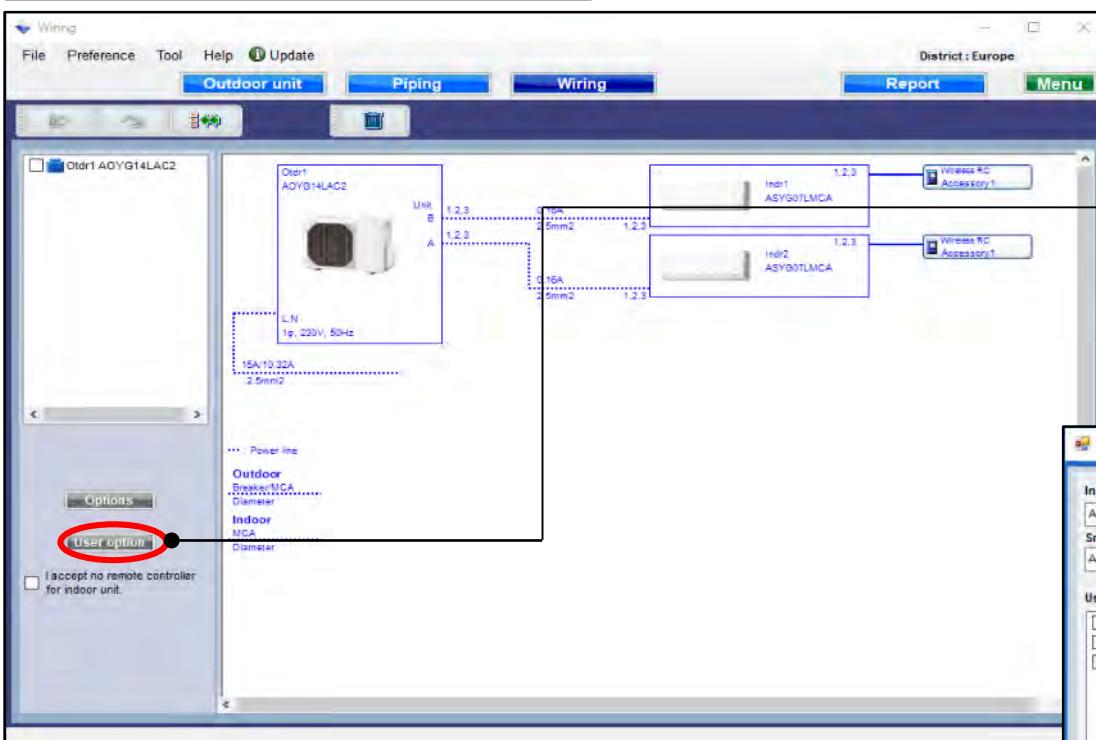


Izaberite "Korisničke opcije"

Izaberite korisničke opcije
(rashladni fluid)

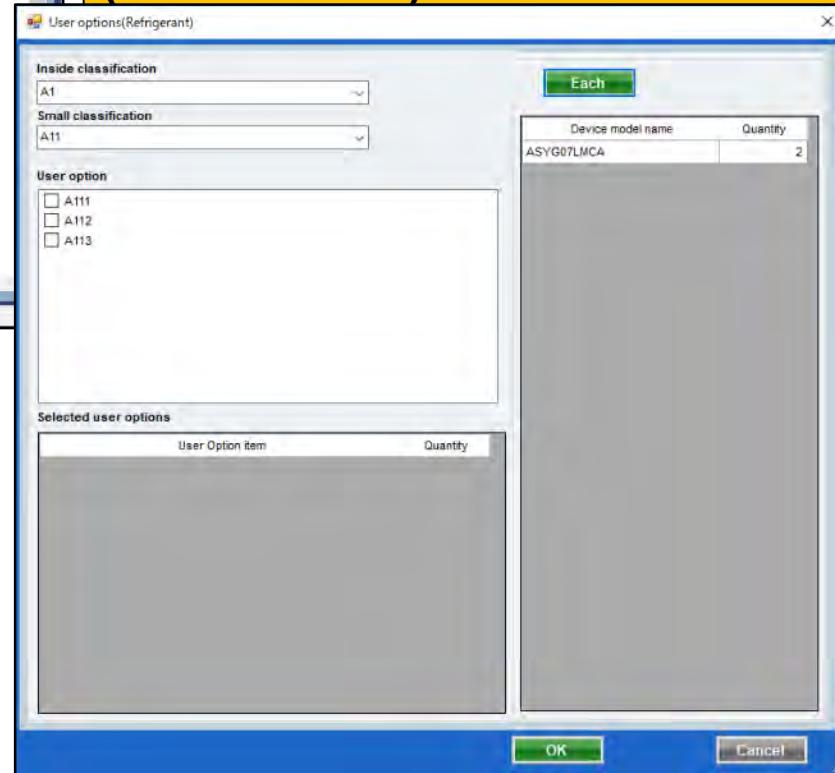

Korisničke opcije (rashladni fluid)

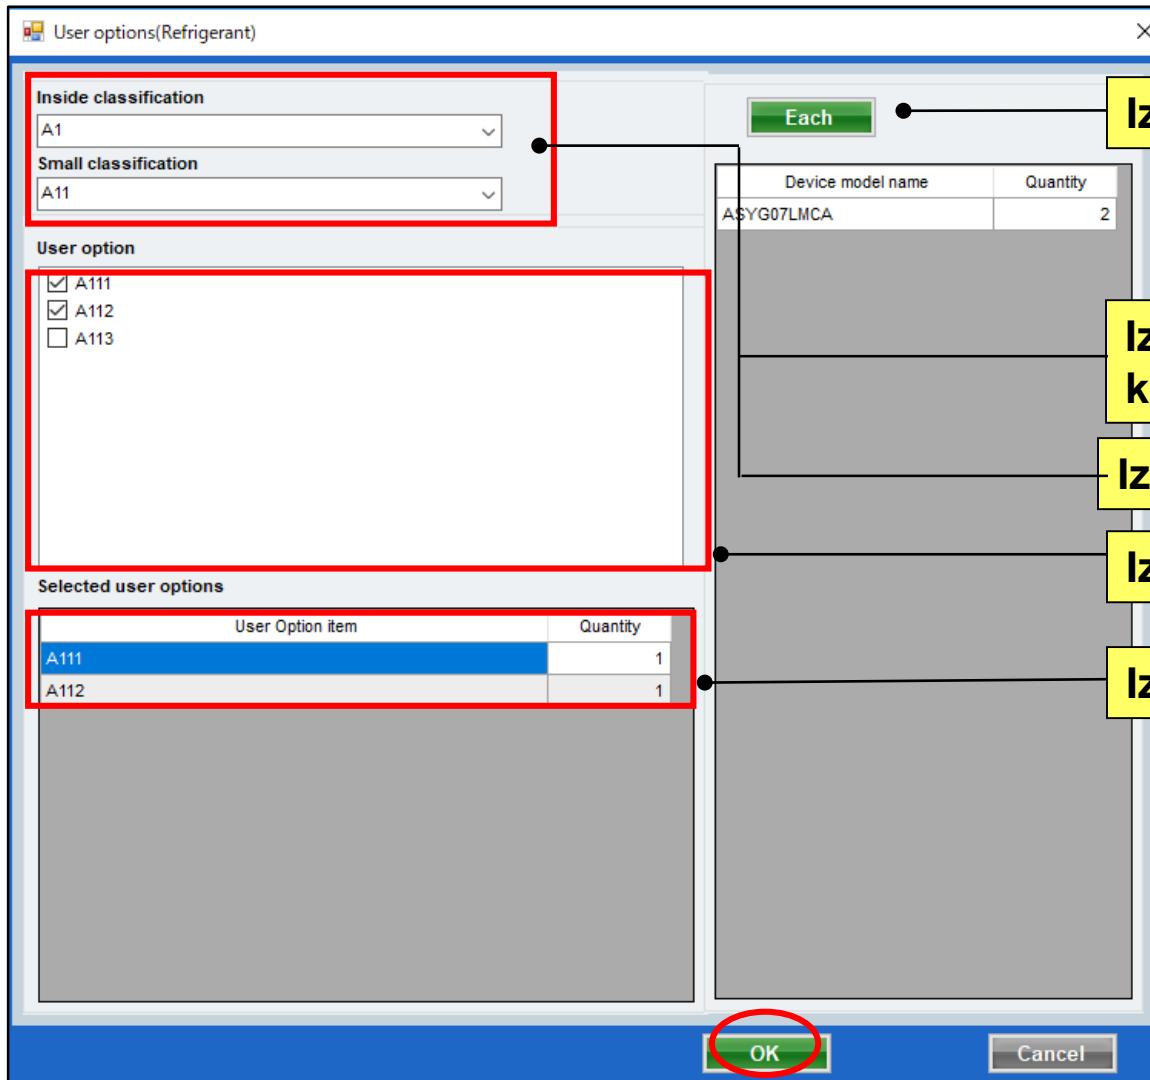

Izaberite "Zasebno ili Grupisano"

Izaberite "Unutrašnja klasifikacija"

Izaberite "detaljniju klasifikaciju"

Izaberite "Korisničke opcije"

Izaberite "Korisničke opcije"

Izabrane opcije su prikazane u "Izveštaju"

Мулти-сплит система

The screenshot shows the Design Simulator software interface for a multi-split system. The main window has tabs for "Outdoor unit", "Piping", and "Wiring". The "Wiring" tab is highlighted with a red circle, and a yellow callout box says "Изберете „Окабеляване“" (Select "Wiring"). A blue arrow points down to another yellow callout box labeled "Екран със Схема кабелно трасе" (Cable tracing diagram screen). In the bottom left corner, there is a checkbox with the text "I accept no remote control for indoor unit." circled in red, with a yellow callout box below it saying "Маркирайте това поле, ако няма свързано дистанционно управление" (Mark this field if there is no connected remote control).

Outdoor unit data:

- Name: Odr1
- Comments:
- Refrigerant: R410A
- Model:
- Type: 2 Rooms Multi System
- Model: AOYG14LAC2
- PS: 1φ, 230V, 50Hz

Capacity:

	Cooling	Heating
	4.00 kW	4.40 kW

Indoor connect count: 2

Outdoor temp.: Cooling 35.0C Heating 7.0C

Indoor temperature: Cooling 27.0C Heating 20.0C

Piping:


- Total pipe length: 10.0m

Wiring configuration:

- Outdoor unit: Odr1 AOYG14LAC2
- Indoor units: Ind1 ASY907LMCA, Ind2 ASY907LMCA
- Power line: 15A/10.32A 2.5mm²
- Unit B: 1.2.3, 0.16A 2.5mm², 1.2.3
- Unit A: 1.2.3, 0.16A 2.5mm², 1.2.3
- LN: 1φ, 230V, 50Hz
- Accessories: Wireless RC Accessory 1, Wireless RC Accessory 2

I accept no remote control for indoor unit.

Изчисление на хлад.система (мулти-сплит)

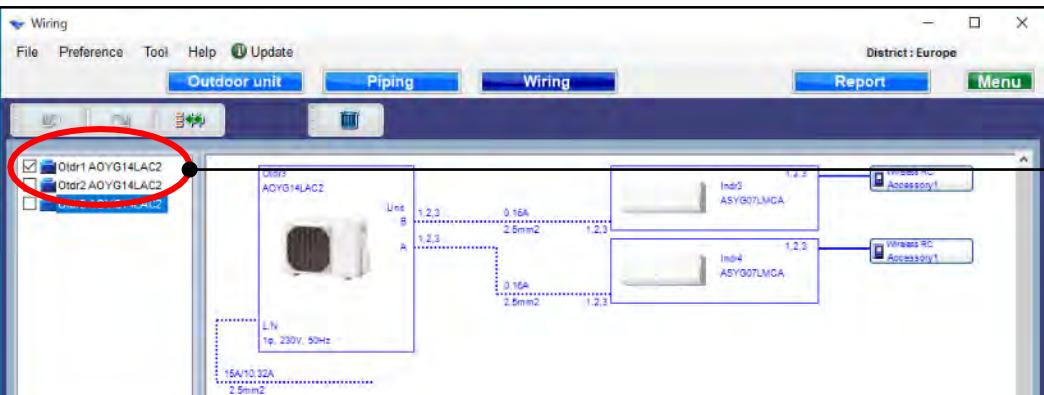

Маркирайте хладилната система

Options

User option

I accept no remote controller for indoor unit.

Outdoor unit data

Name: Odr1

Comments:

Refrigerant: R410A

Model:

Type: 2 Rooms Multi System

Model: AOYG14LAC2

PS: 1p. 230V, 50Hz

Capacity Cooling: 4.00 kW Heating: 4.40 kW


Indoor connect count: 2

Outdoor temp. Cooling: 35.0C Heating: 7.0C

Indoor temperati Cooling: 27.0C Heating: 20.0C

Piping

Total pipe length: 10.0m

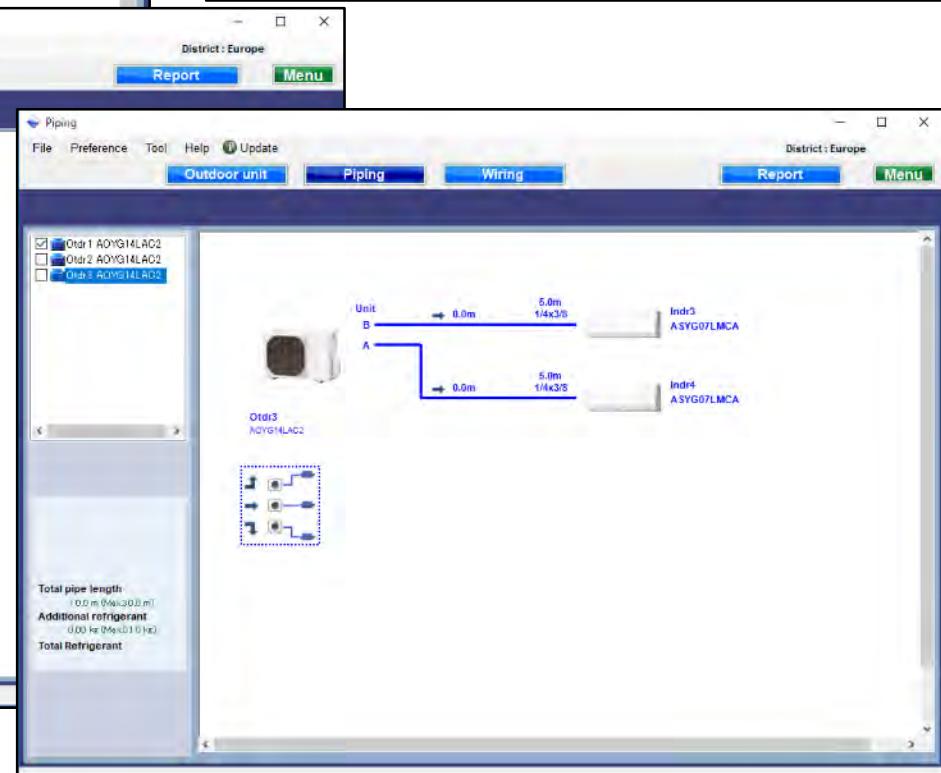

Маркирана хладилна система не може да се променя от всеки екран

Окабеляване (Симултанен мулти-сплит)

Outdoor unit Wiring

File Preference Tool Help Update

Outdoor unit Piping Wiring

Outdoor unit data

Name: Otdr1
Comments:
Refrigerant: R410A
Model:
Type: Simultaneous multi 3 phase Triple type.
Model: ADYG54LATT
PS: 3N, 400V, 50Hz
Capacity: Cooling 14.00 kW Heating 16.00 kW
Indoor connect count: 3
Outdoor temp.: Cooling 35.0°C Heating 7.0°C
Indoor temperature: Cooling 27.0°C Heating 20.0°C
Piping: Total pipe length 75.0m

Otdr1 ADYG54LATT

Actual capacity
Cooling / Heating
Otdr1 ADYG54LATT
Ind: TC SC 2.73 kW

Wiring

File Preference Tool Help Update

Outdoor unit Piping Wiring Report Menu

Otdr1 ADYG54LATT

L1,L2,L3,N
3N, 400V, 50Hz
16A/5.9A
2.5mm²

1.2.3 1.5mm²

1.2.3 1.5mm²

1.2.3 1.5mm²

Indr1 AUYG1BLVLE
Indr2 AUYG1BLVLE
Indr3 AUYG1BLVLE

Junction box (Local purchase)
Connection example

... : Power line
Outdoor
Breaker/MCA
Diameter
Indoor
MCA
Diameter

Options User option


Изберете “Окабеляване”

Създаване схема на кабелно трасе

Окабеляване


Design Simulator

Опции

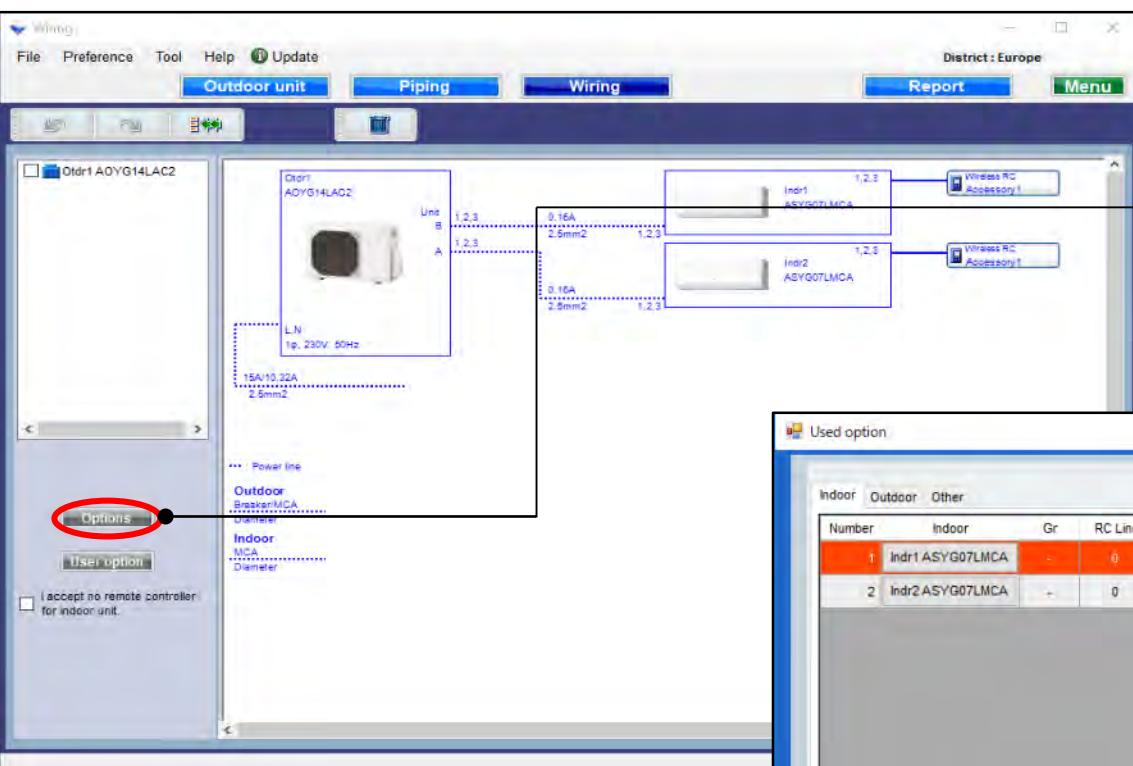


Изберете “Опции”

Екран с използвани опции

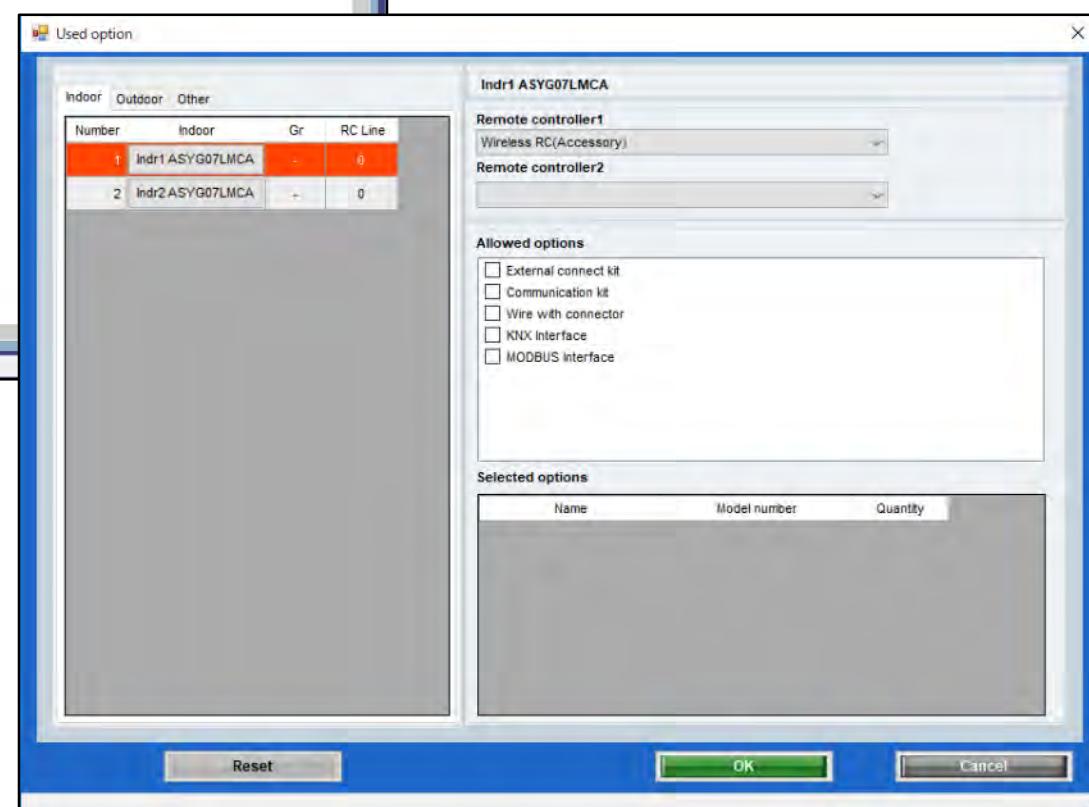


Използвани опции (1/2)

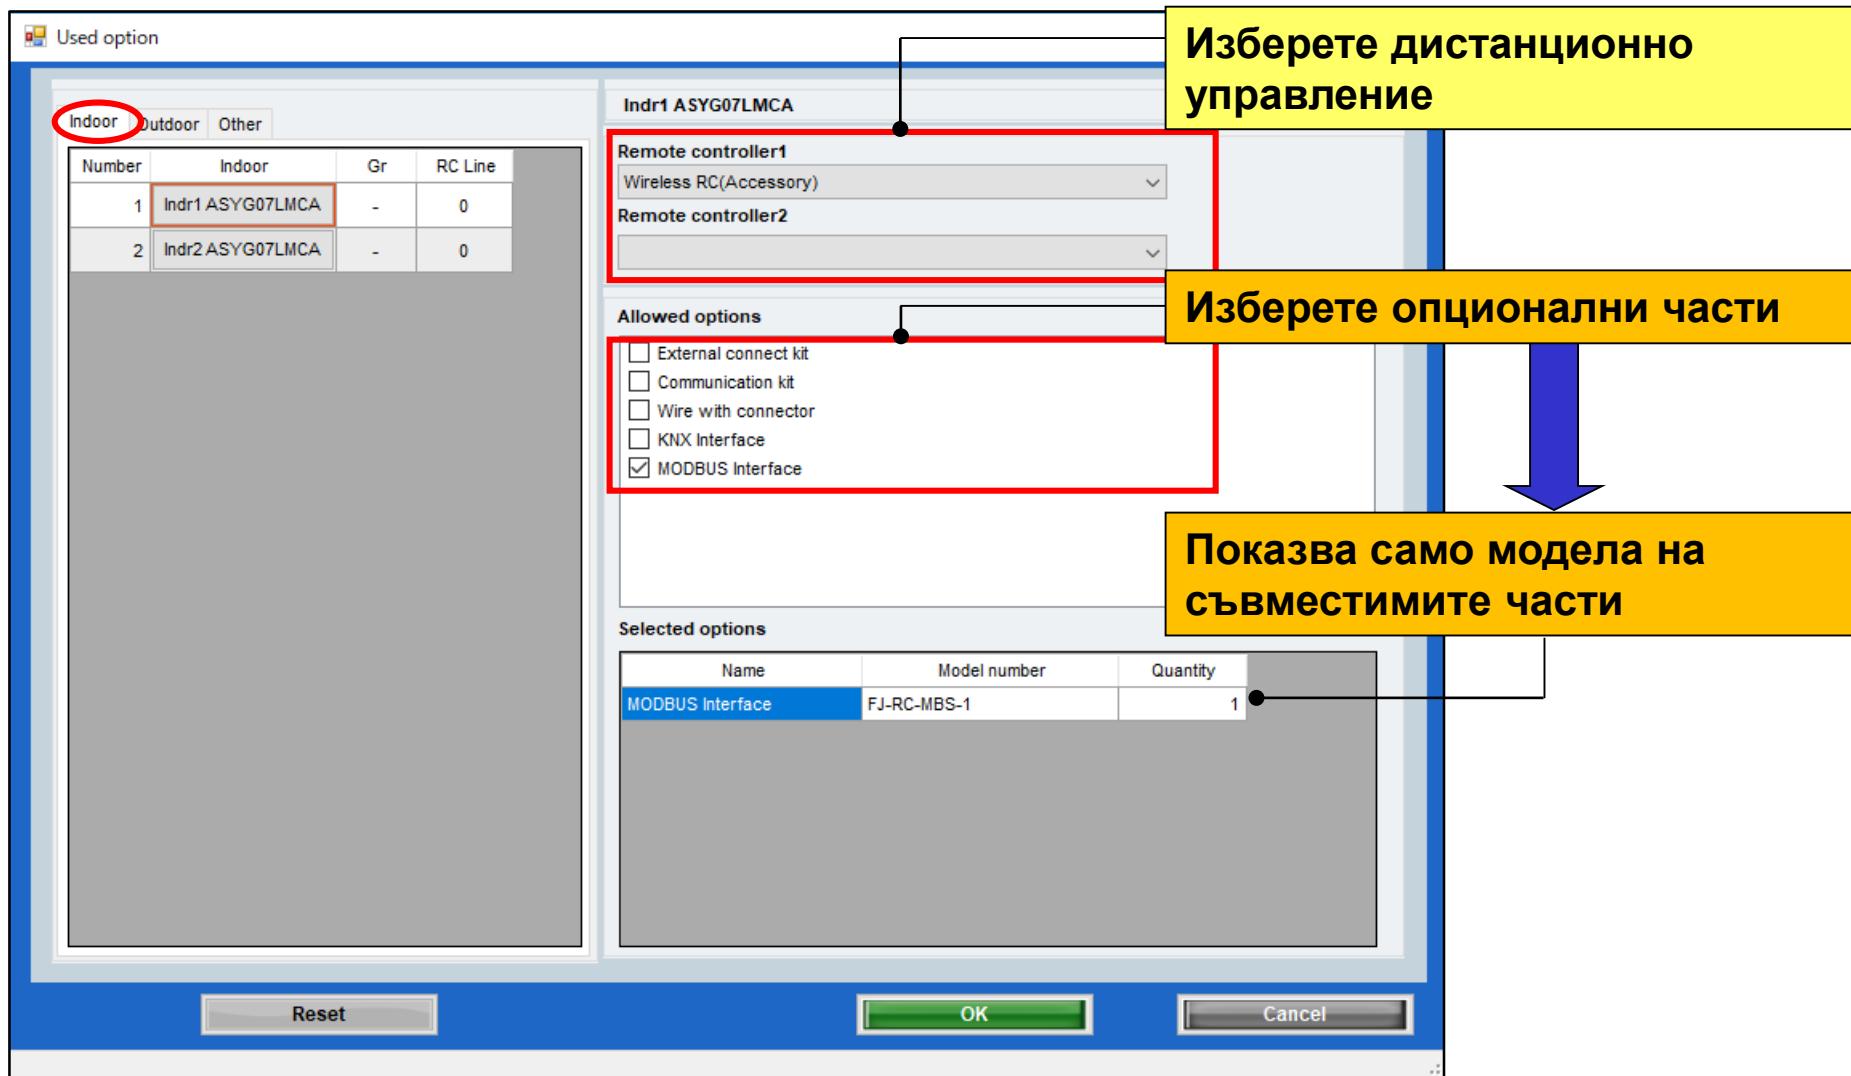

Избраните опции се извеждат в Отчета

Използвани опции (2/2)

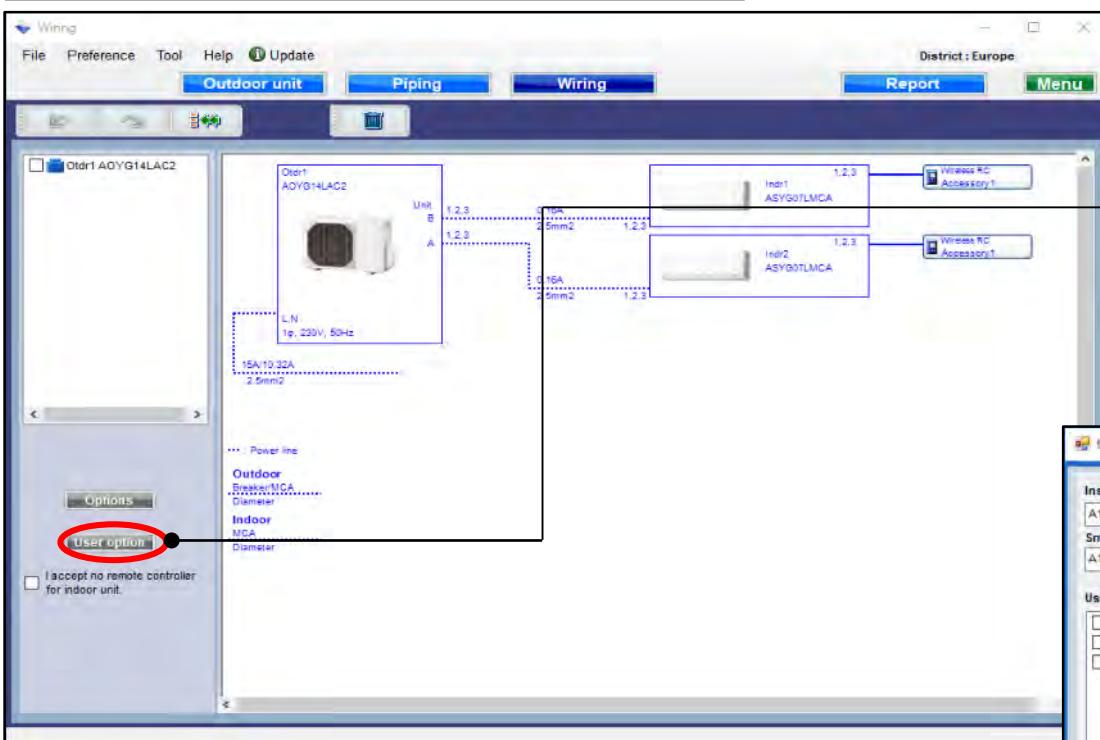

Изберете “Потребителски опции”

Отворени Потр.опции (хл.агент)

User options(Refrigerant)

Inside classification: A1

Small classification: A11

Each

Device model name	Quantity
ASYG07LMCA	2

User option:


- A111
- A112
- A113

Selected user options:

User Option Item	Quantity

OK Cancel

Потребителски опции (хл.агент)

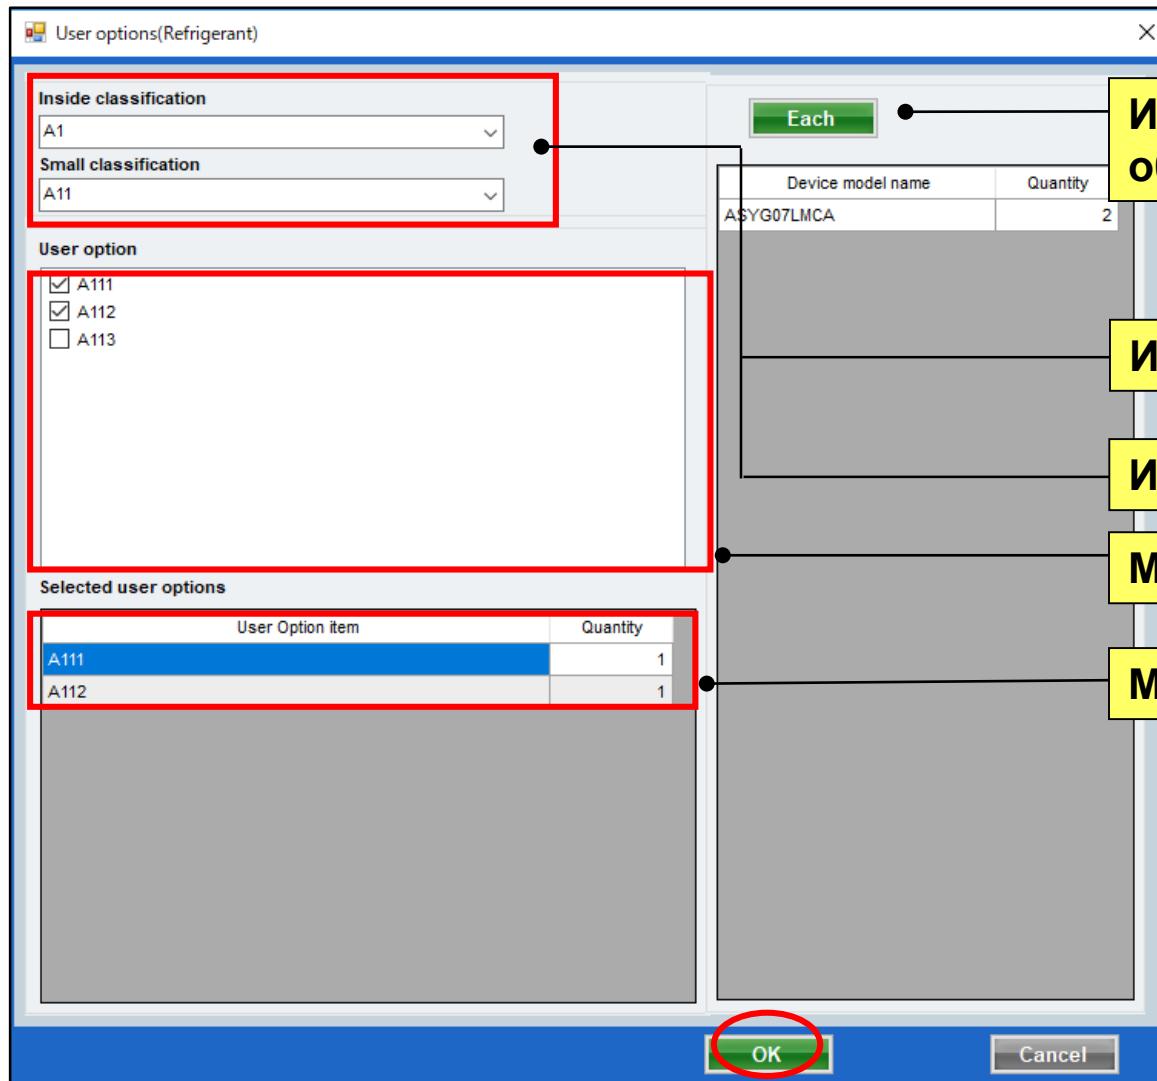

Изберете “Единично или общо”

Изберете “Категория”

Изберете “Под-категория”

Маркирайте “Потр.опции”


Маркирани “Потр.опции”

Избраните опции се извеждат в Отчета

接線設定

選機軟體


接線(多聯系統)

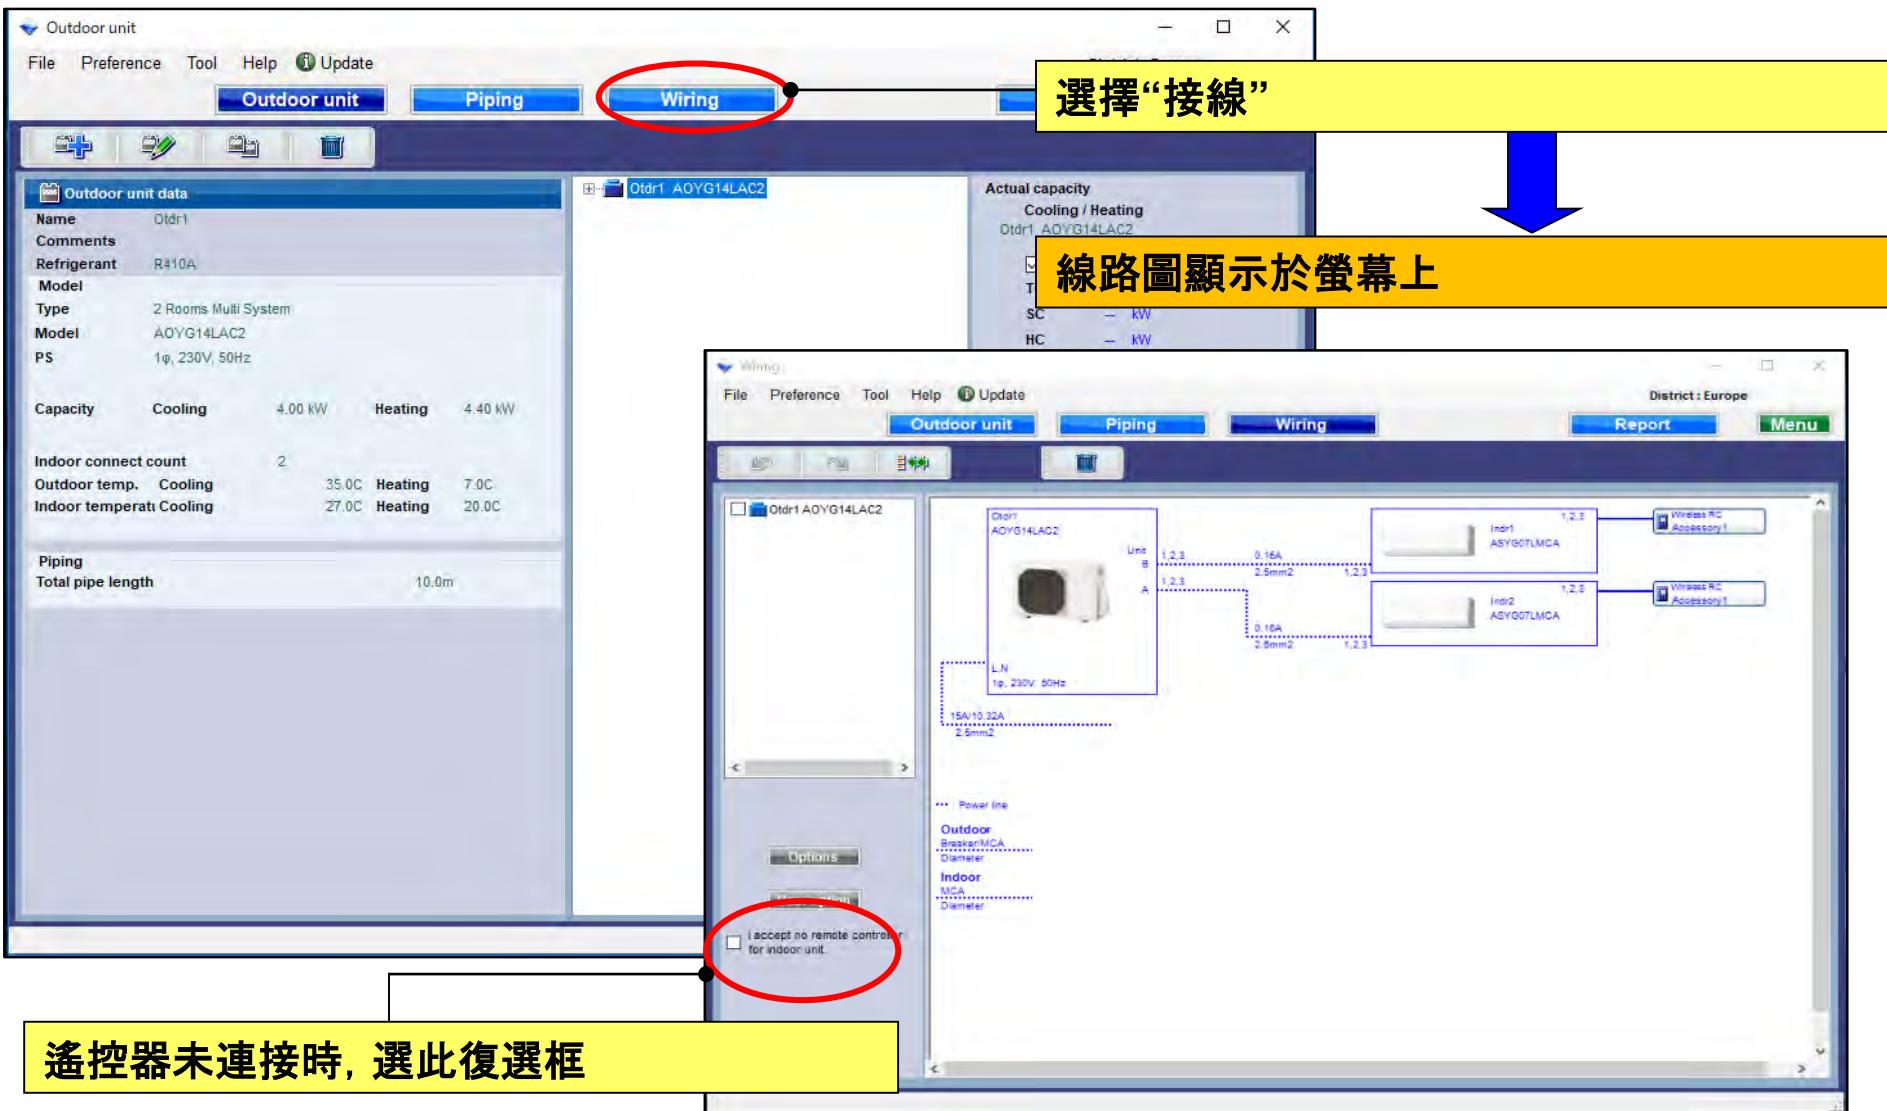

接線設定



選機軟體

冷媒系統判斷(多聯系統)

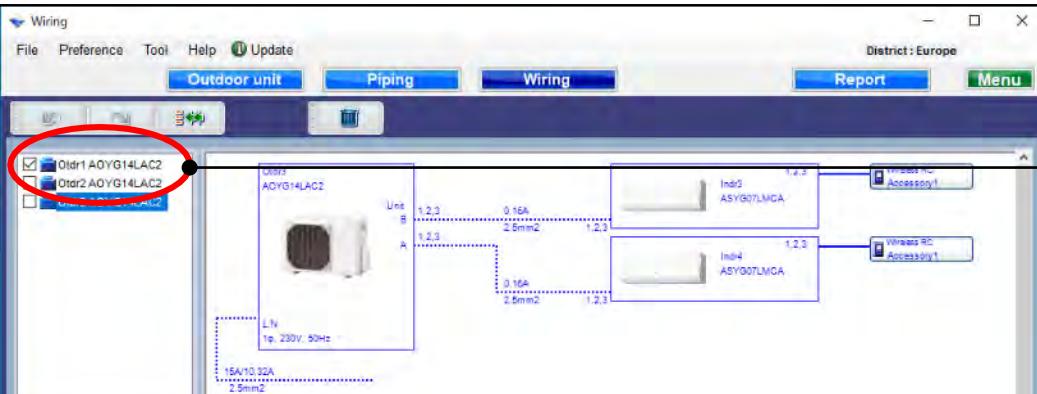

點選冷媒系統


點選冷媒系統
在這個視窗不能被編輯

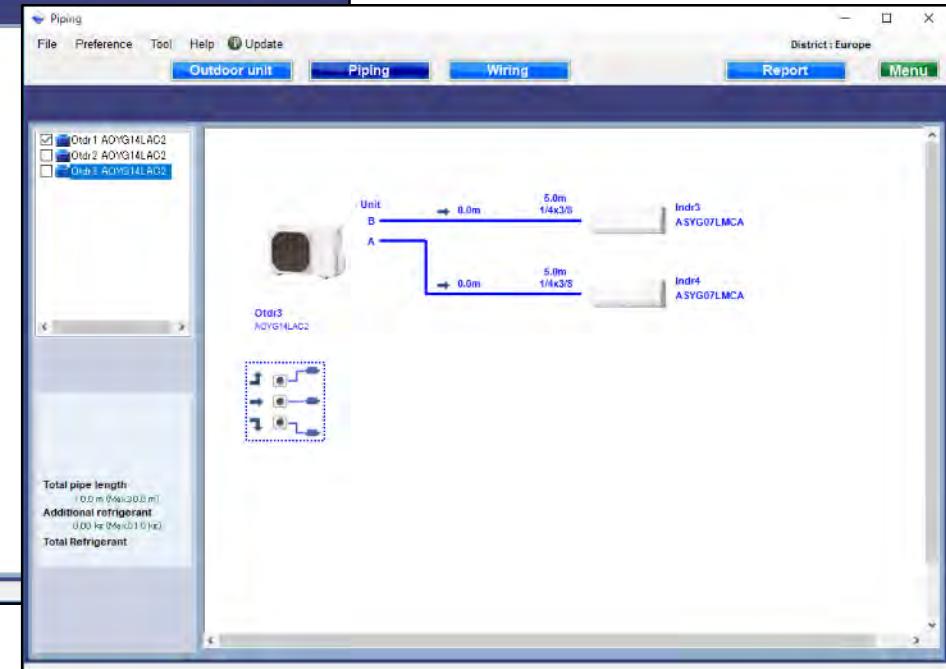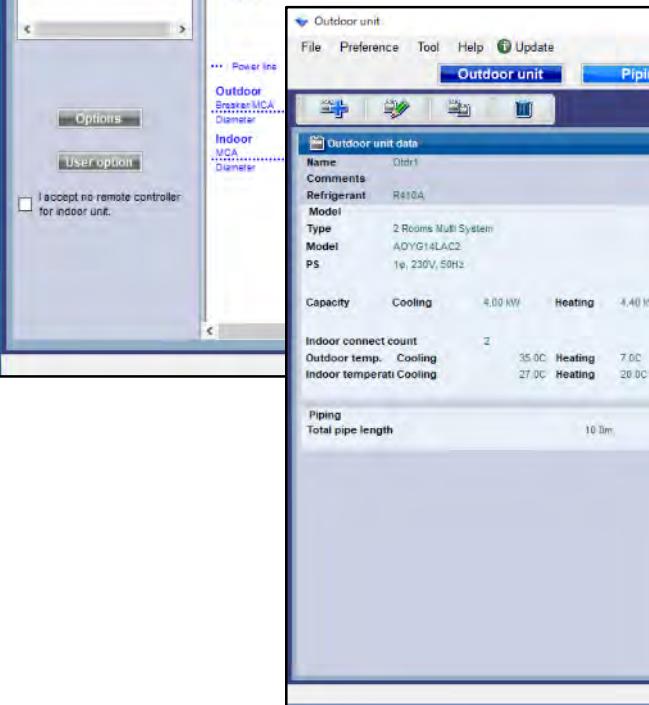

接線設定

選機軟體


接線(多組-多聯系統)

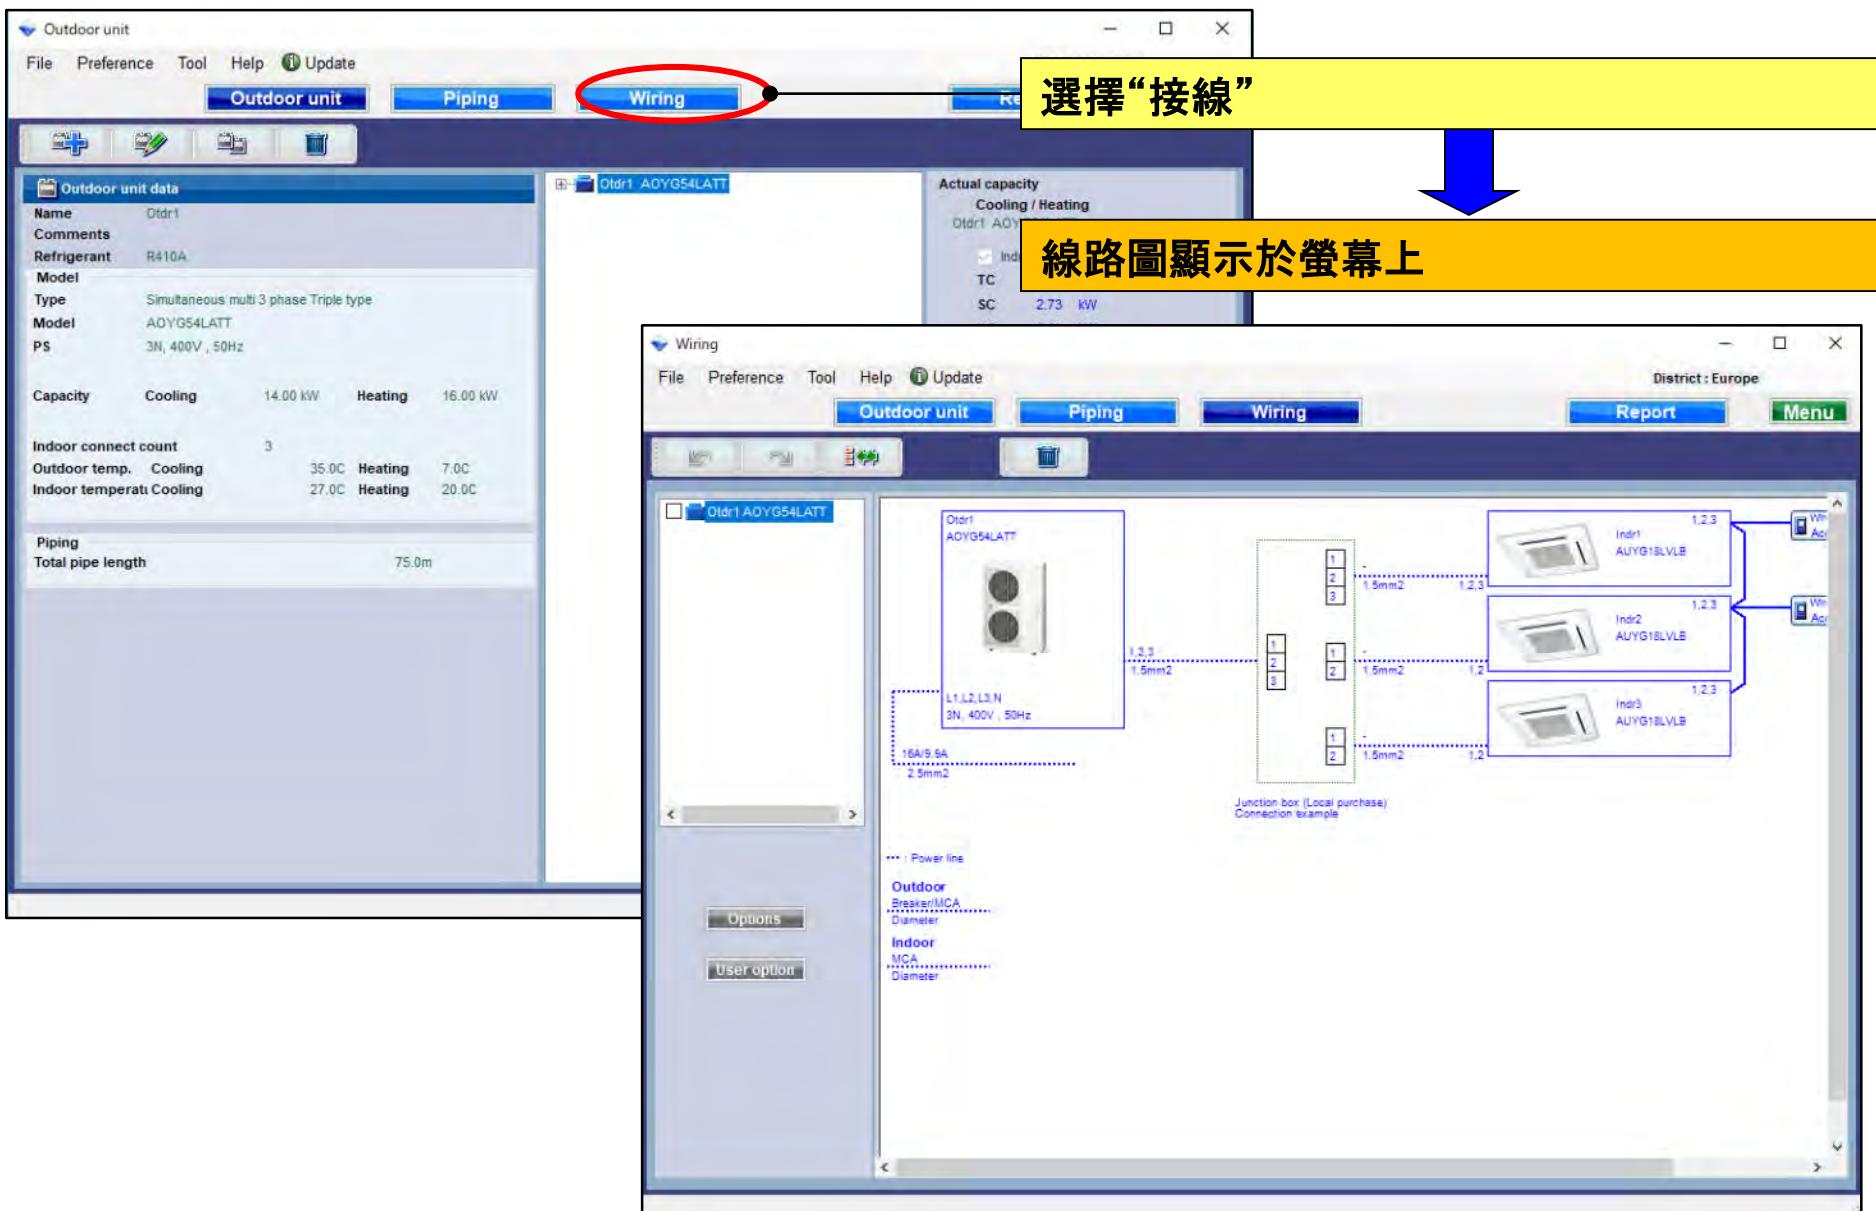

接線設定


選機軟體

使用選項

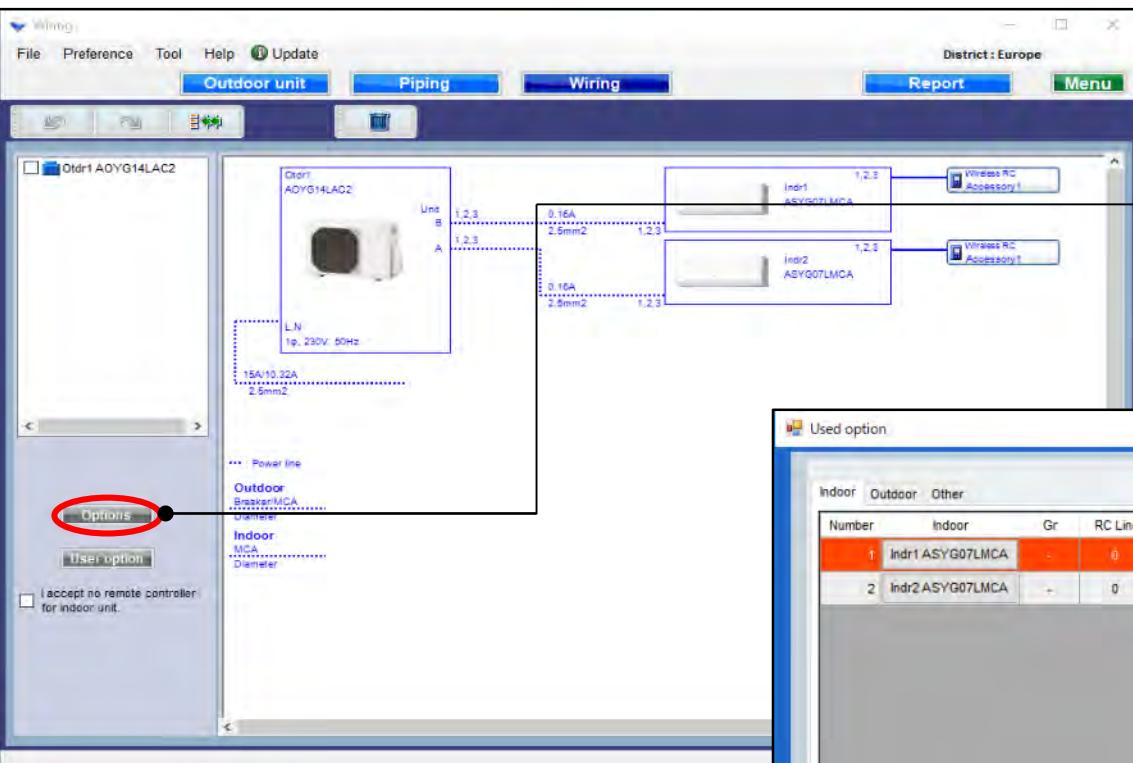


選擇“設定”

打開使用者設定視窗

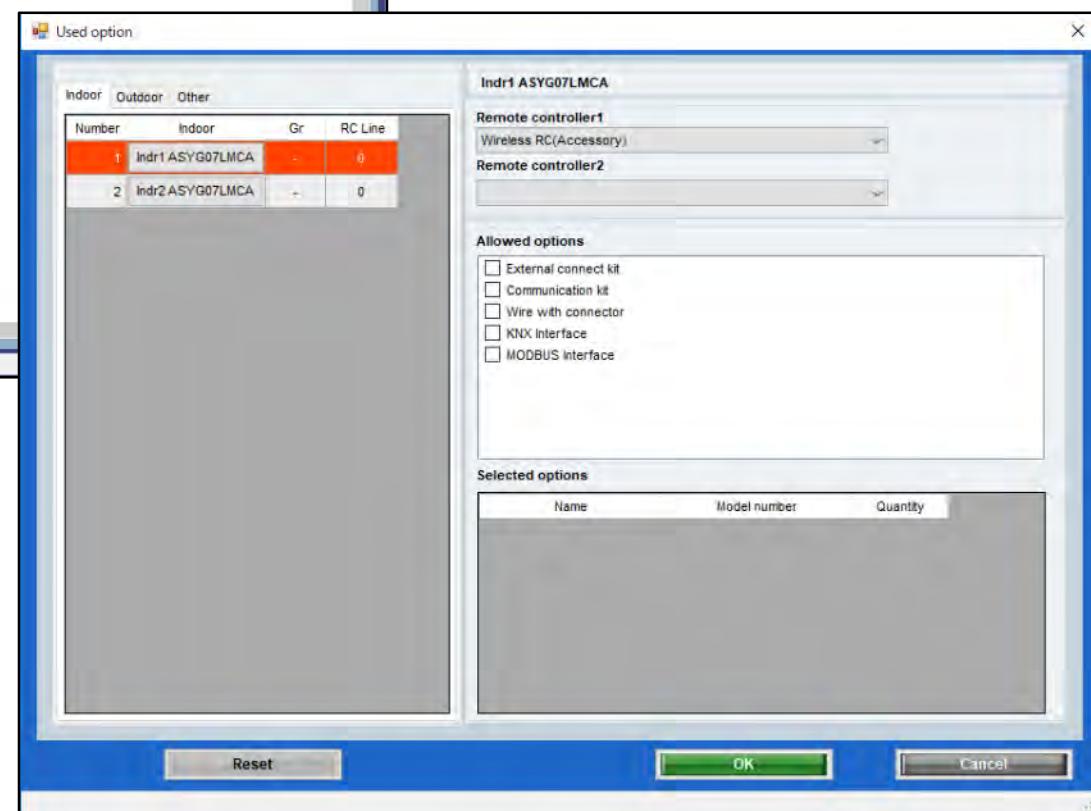

使用選項(1/2)

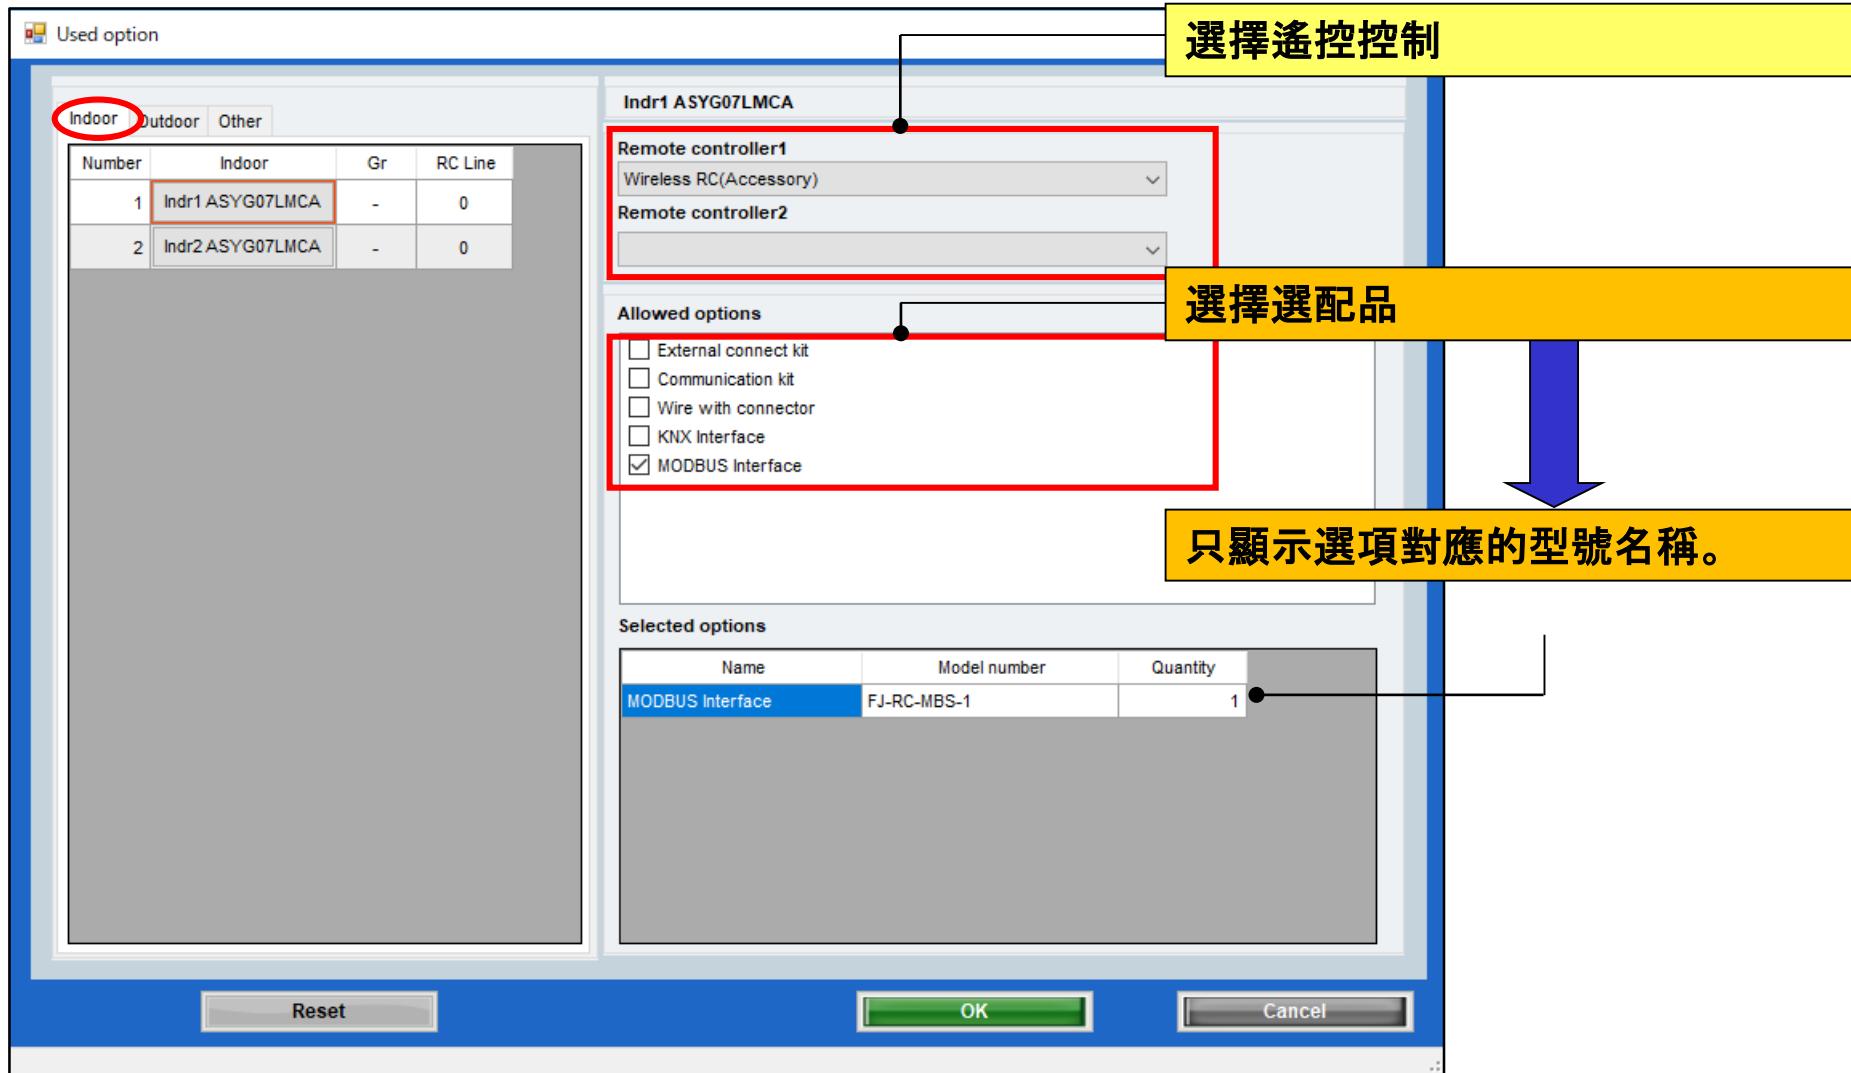


報告中顯示選定的選項

接線設定


選機軟體

使用選項(2/2)

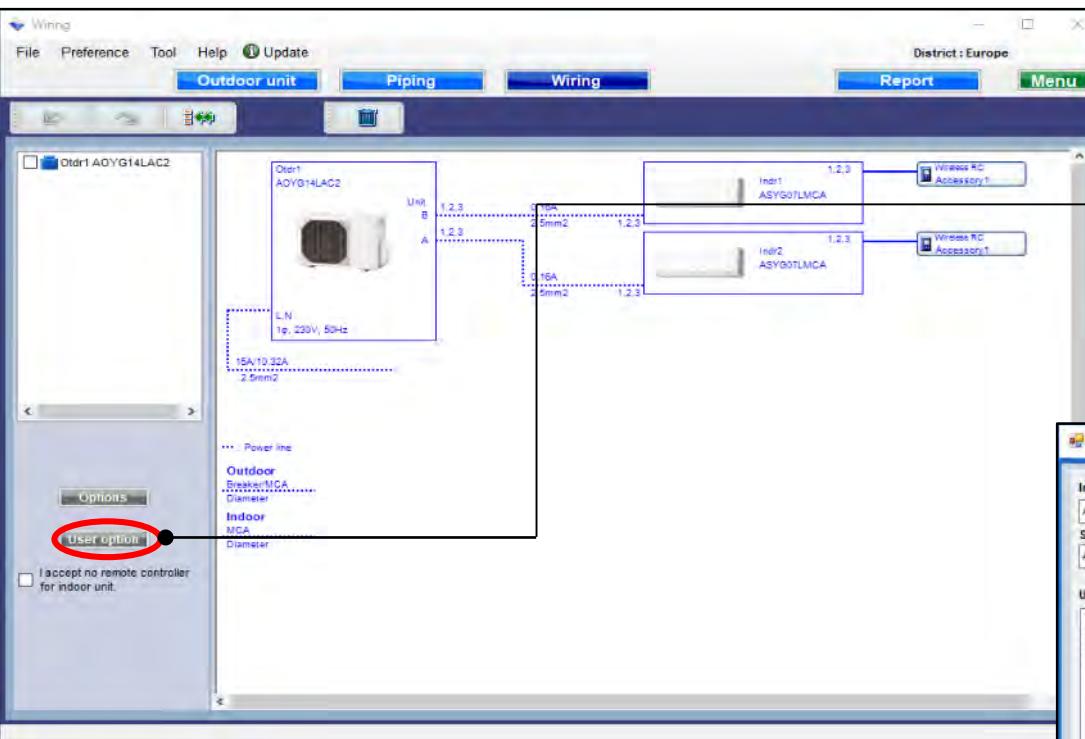


選擇“使用者設定”

打開使用者設定(冷媒)

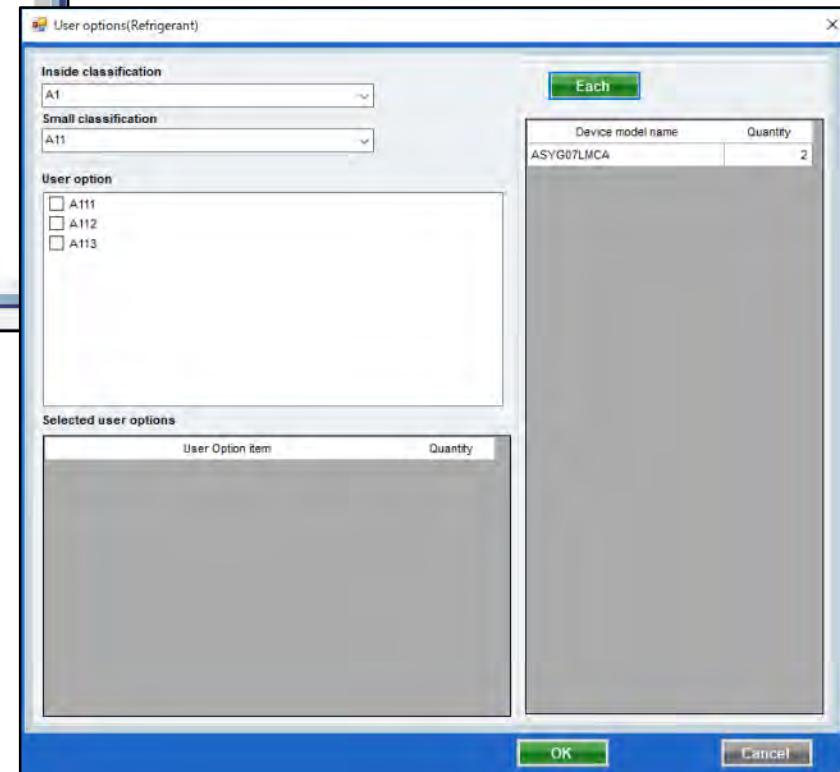

使用者選項(冷媒)

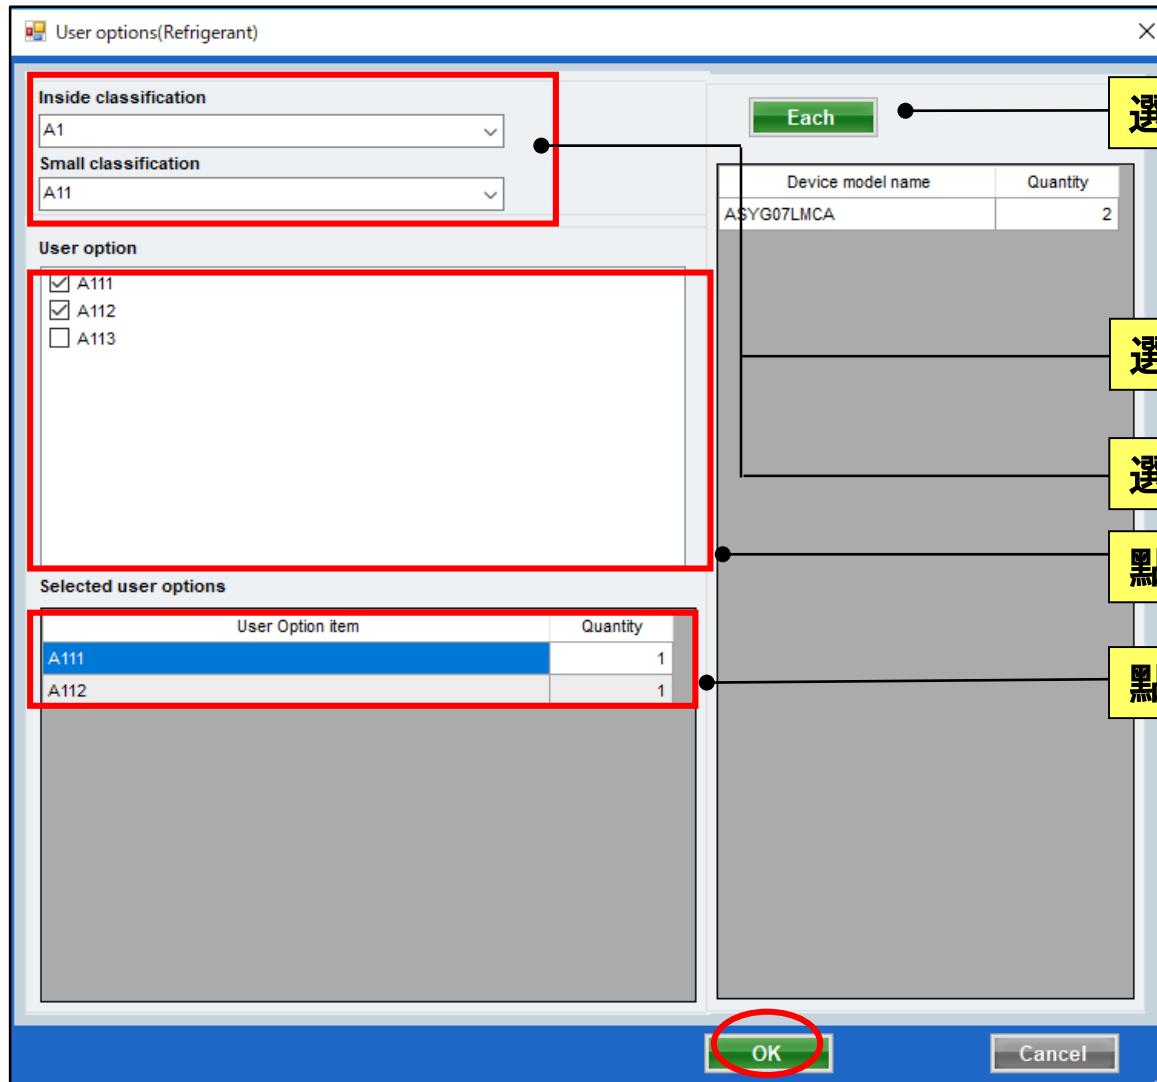


報告中顯示選定的選項

Wiring settings


Design Simulator

Transmission line

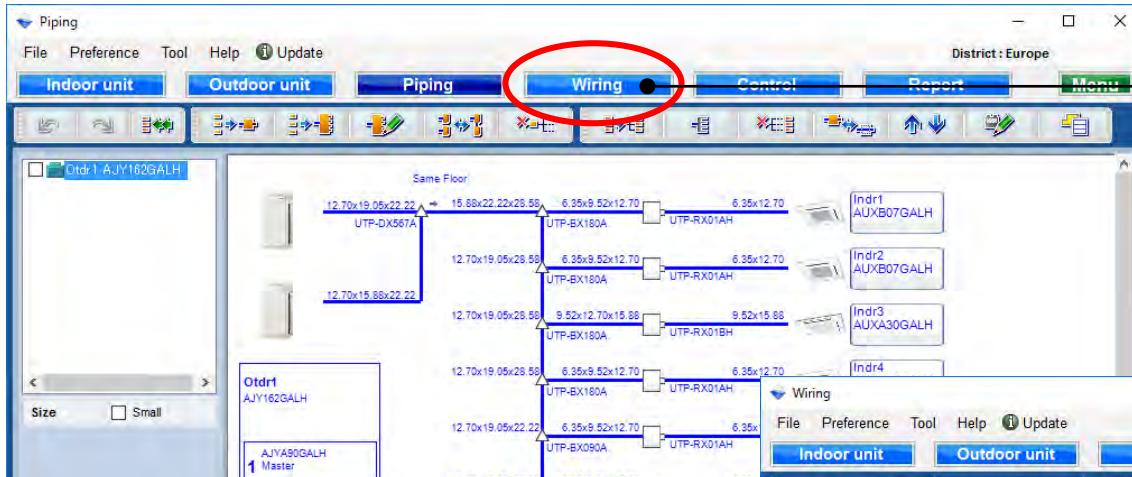

Select “Wiring”

Select “Transmission line”

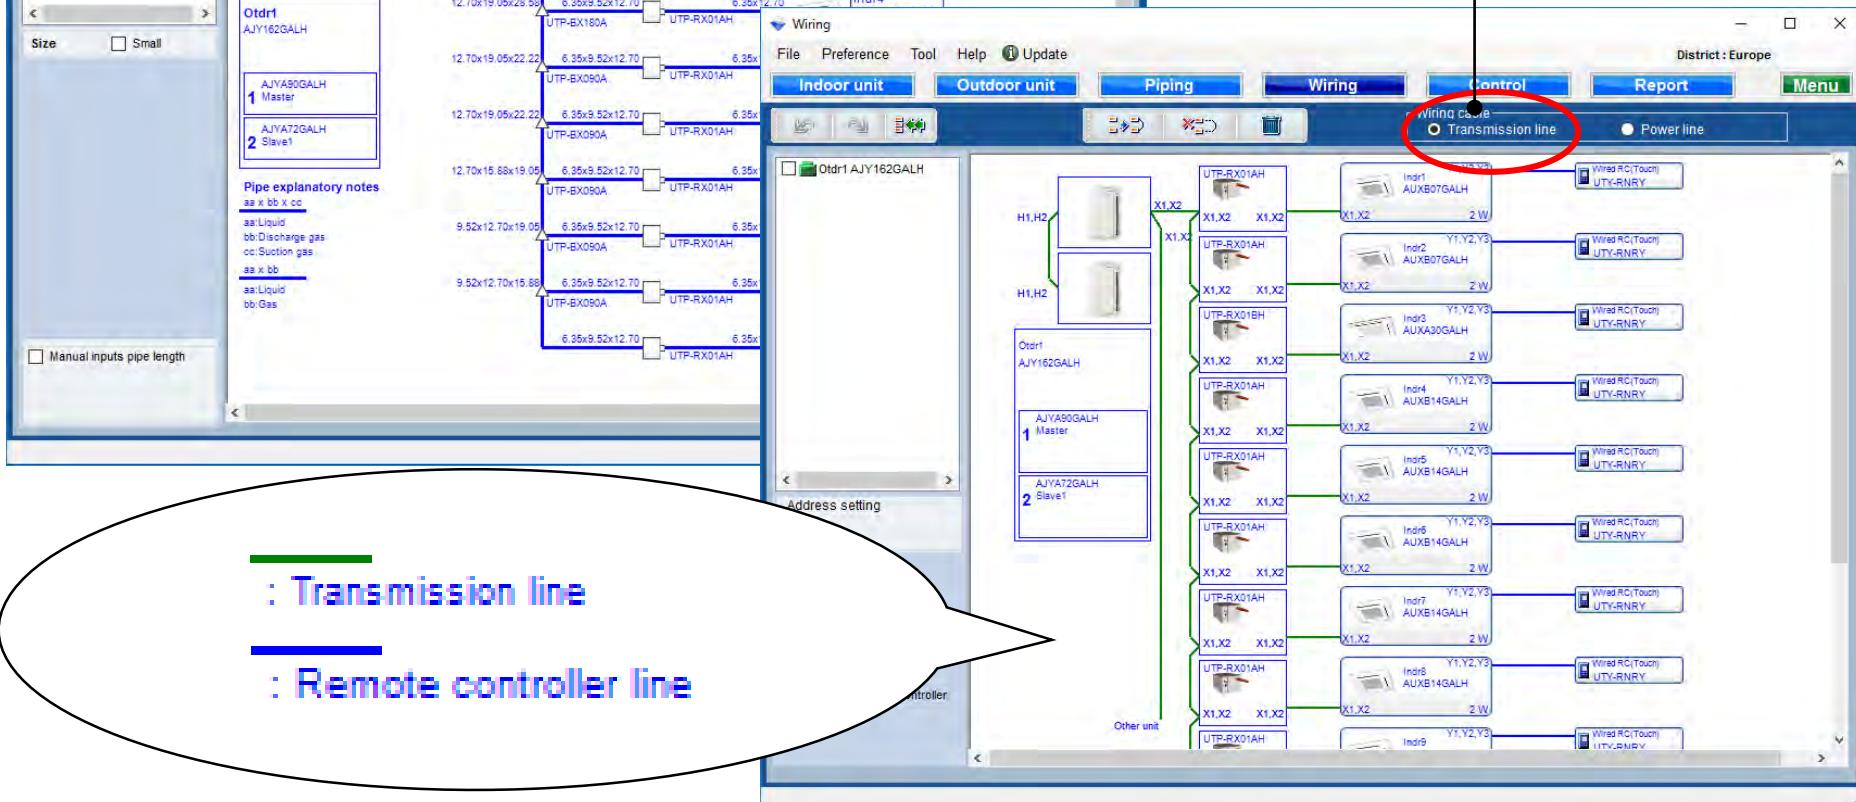


: Transmission line

: Remote controller line

Wiring settings


Design Simulator

Power line

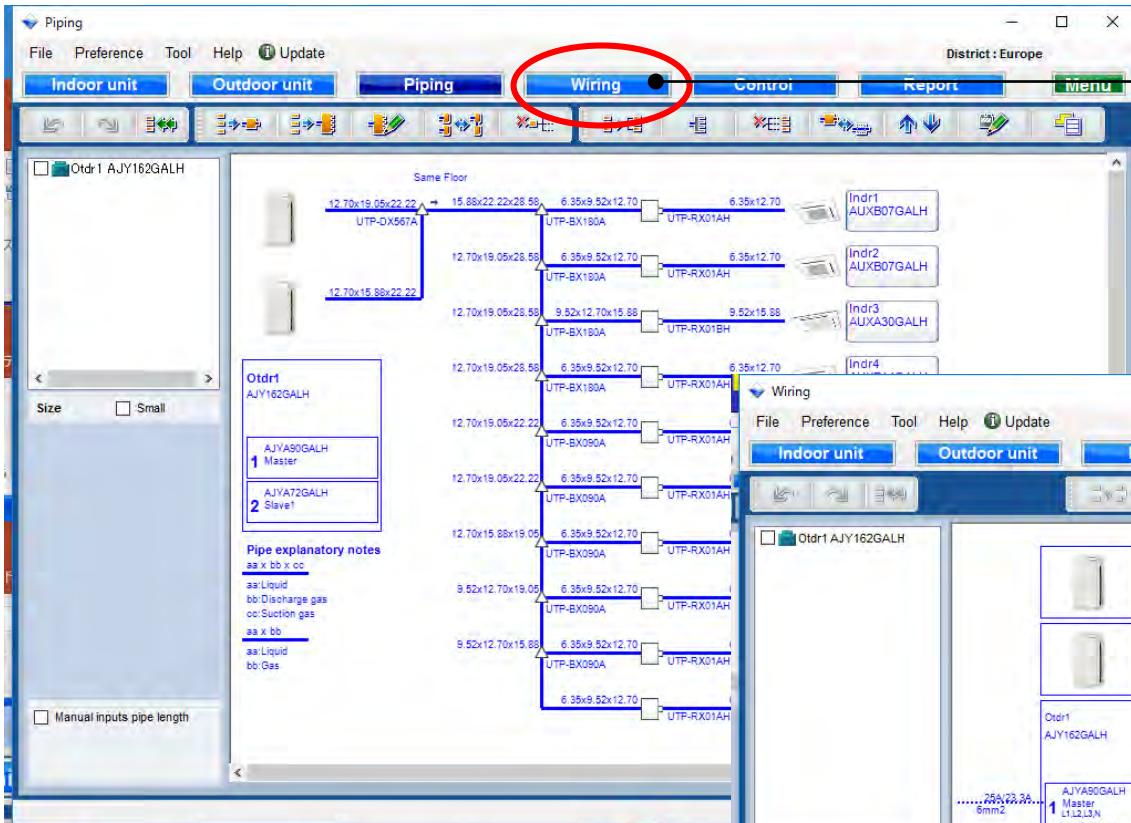

Select “Wiring”

Select “Power line”

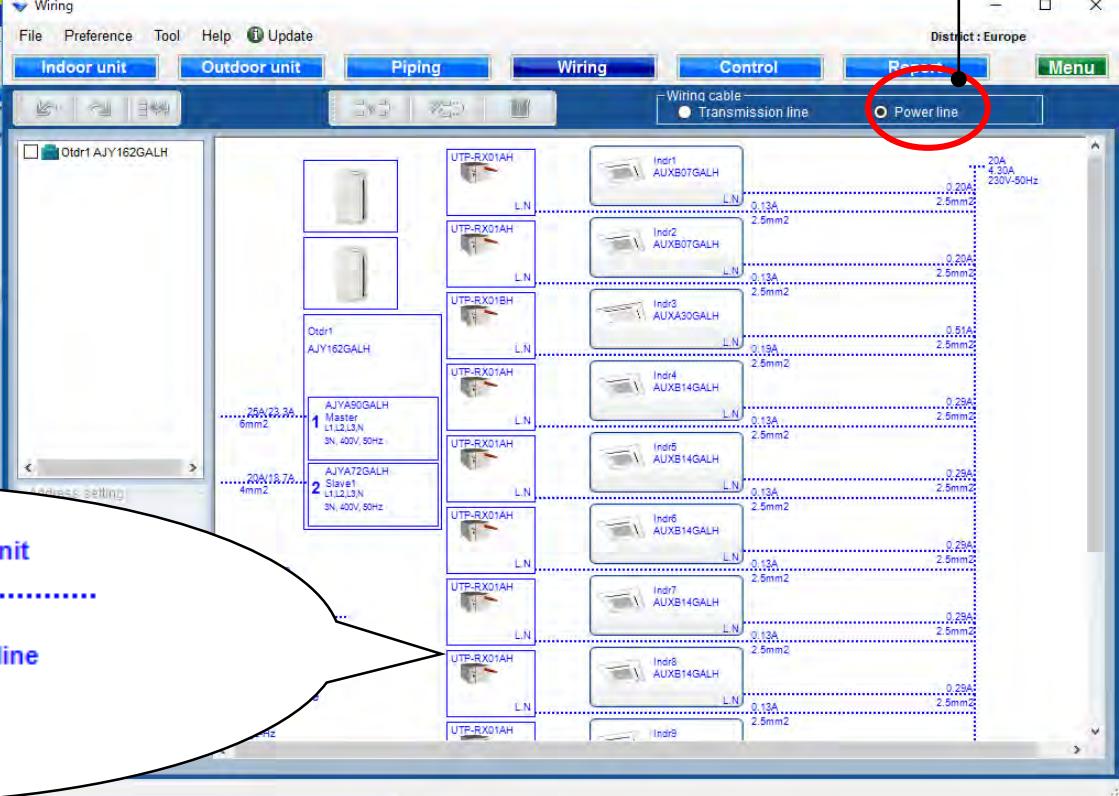

... : Power line

Indoor, RB unit

MCA

Diameter

Total power line

Breaker

MCA

Voltage-Hz

Outdoor


Breaker/MCA

Diameter

Wiring settings

Design Simulator

Grouping(1/2)

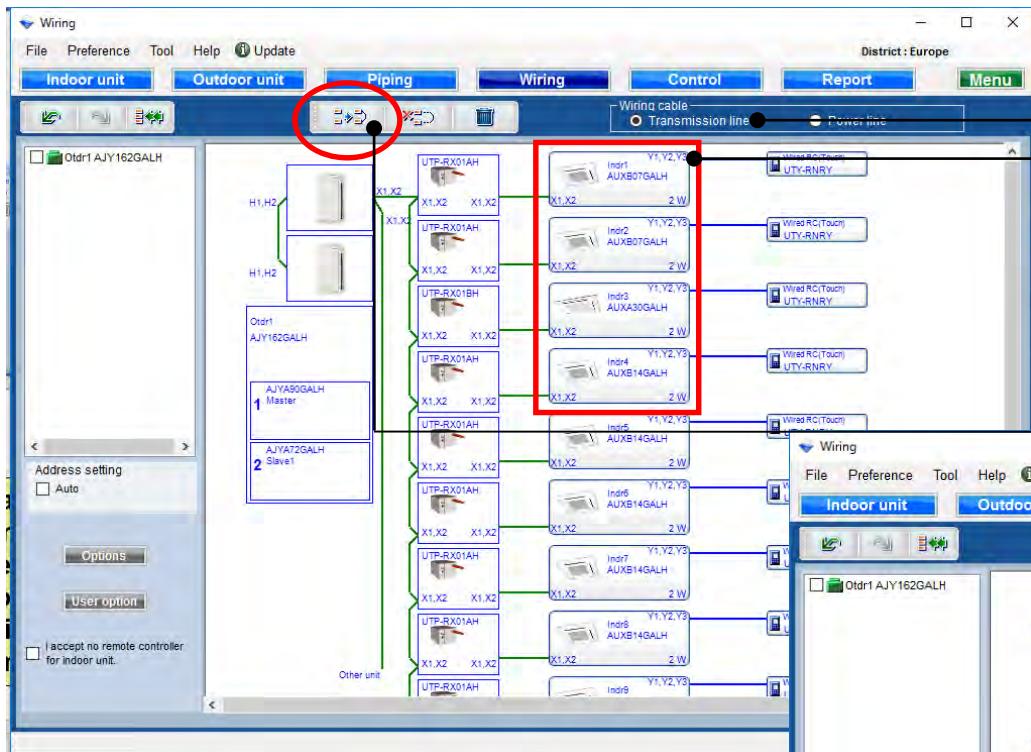


“Total powerline / Each powerline”
with “preference” can be edited

Select indoor unit

Select “Group remote controller”


Automatically create remote controller group line.

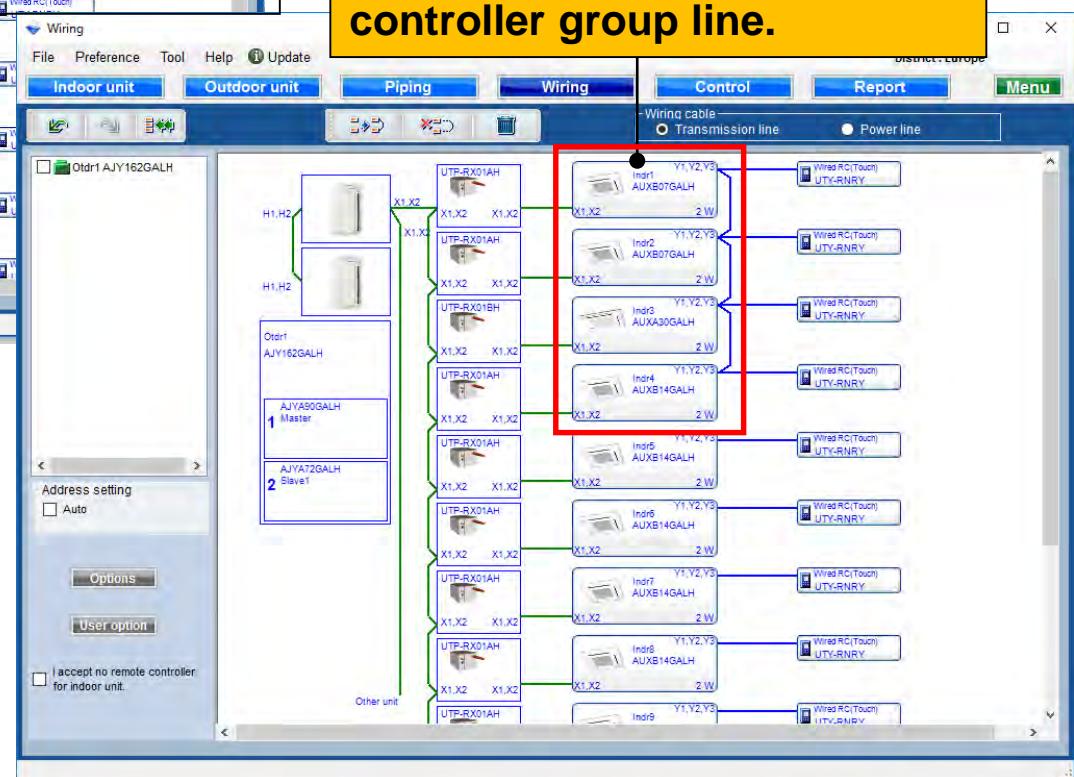

Wiring settings

Design Simulator


Grouping(2/2)

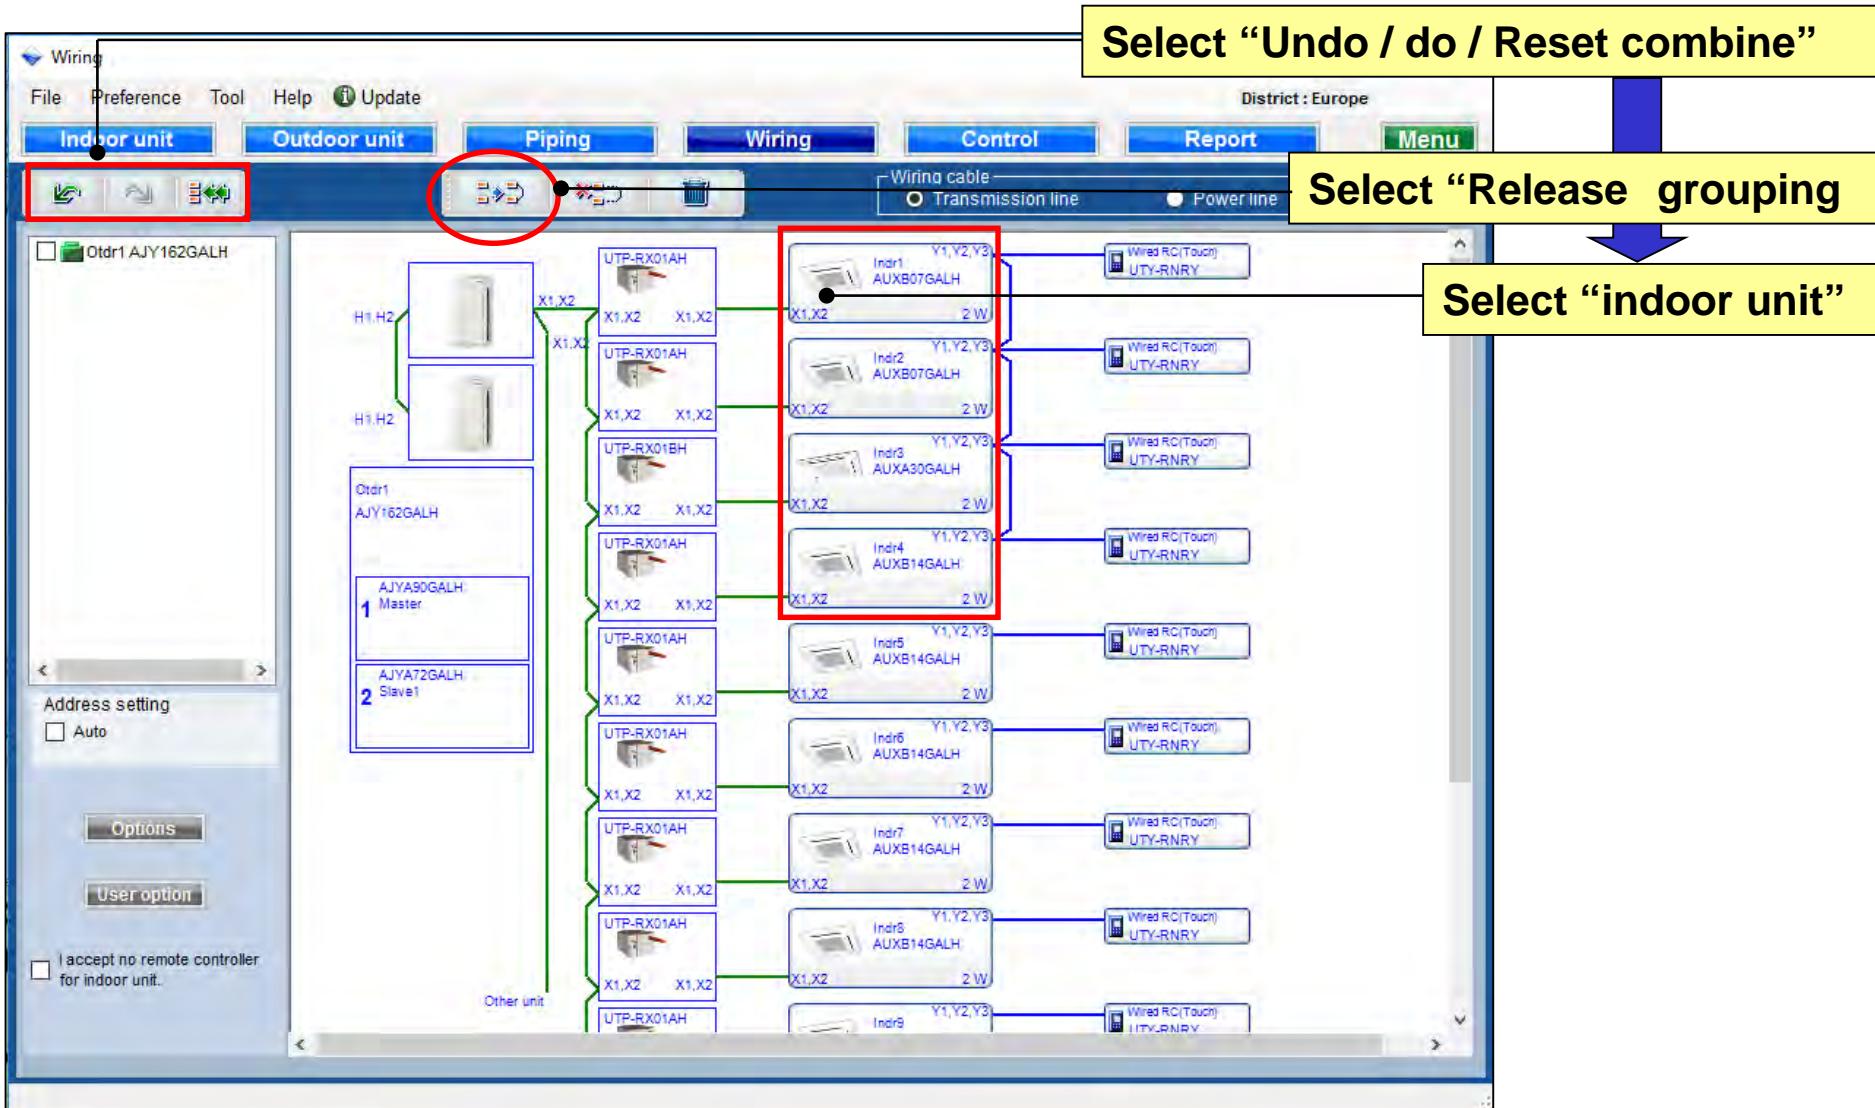

Wiring settings

Design Simulator


Check box

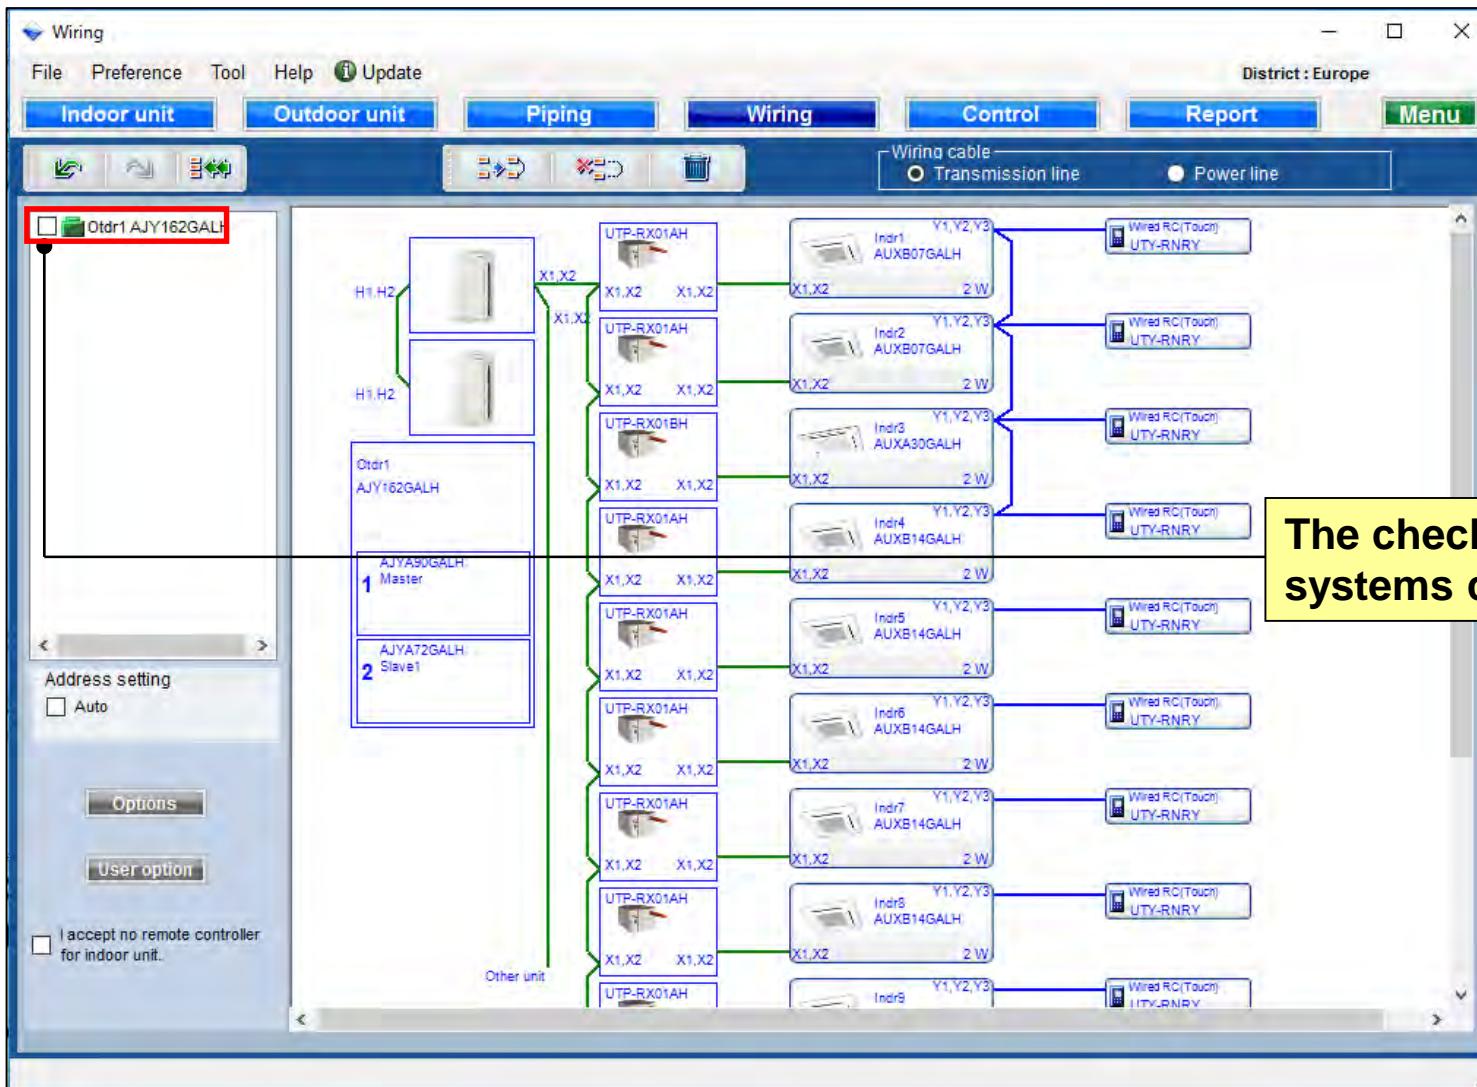

Wiring settings

Design Simulator


Delete

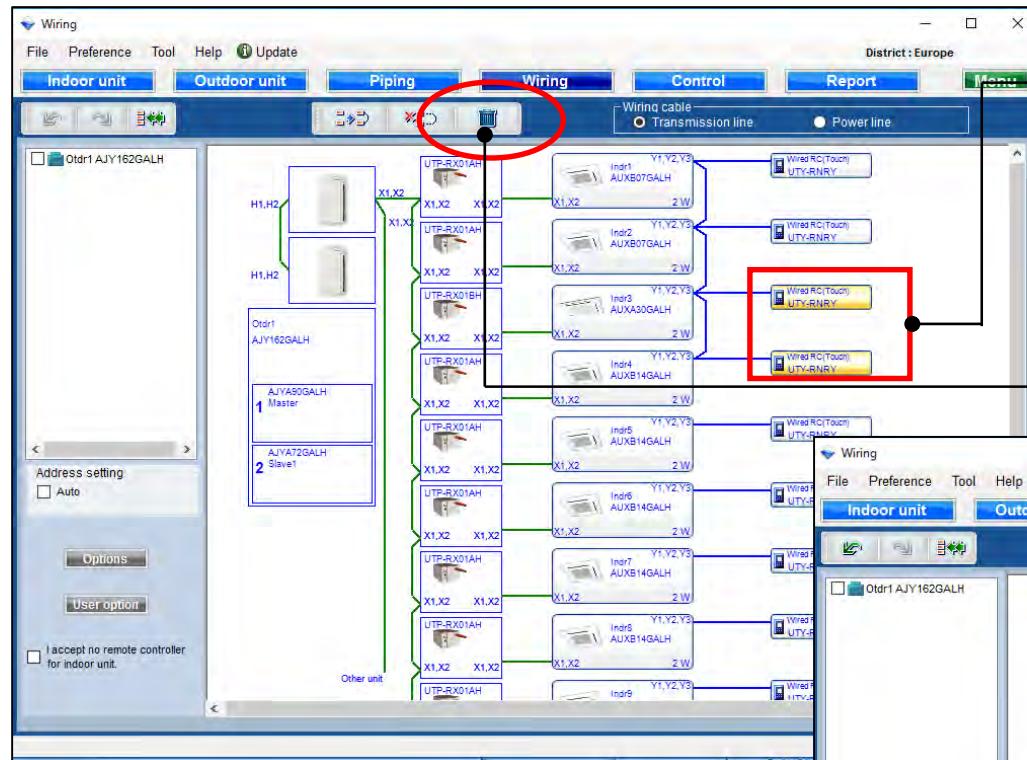

Select remote controller

Select “Delete remote controller”


Automatically delete remote controller, change blue line.

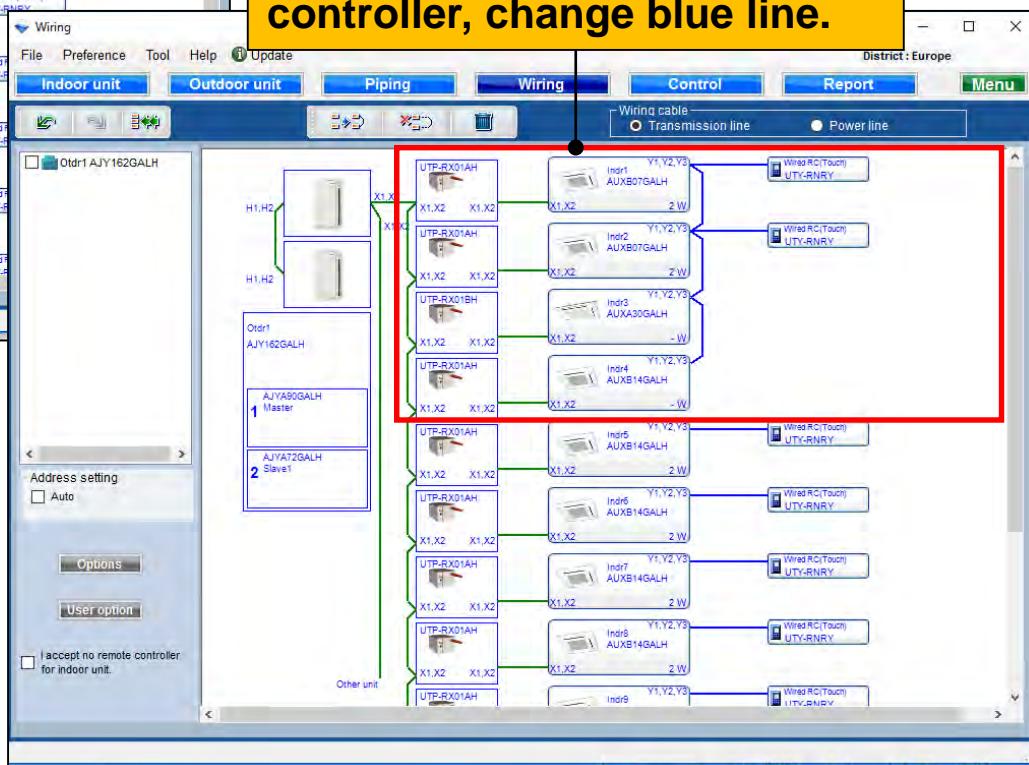


Wiring settings

Design Simulator

Address setting

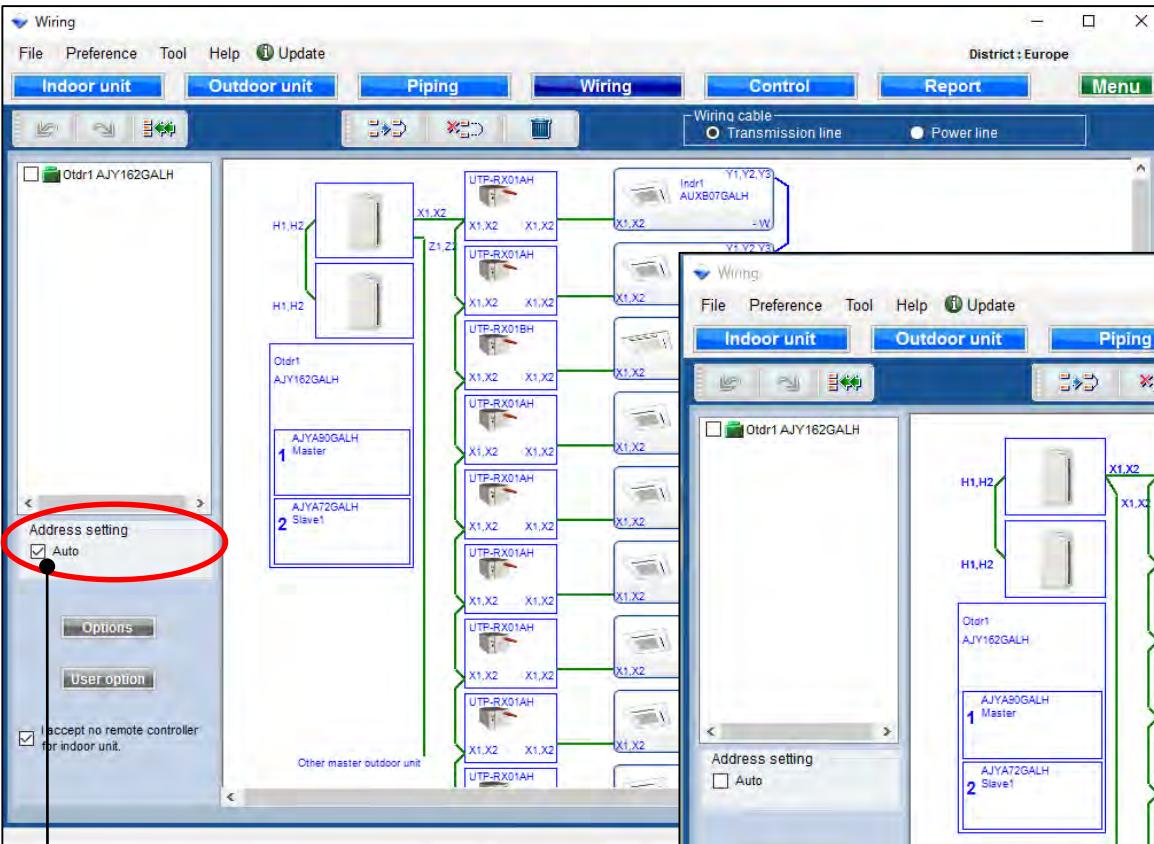

Check if “Auto Address” is used

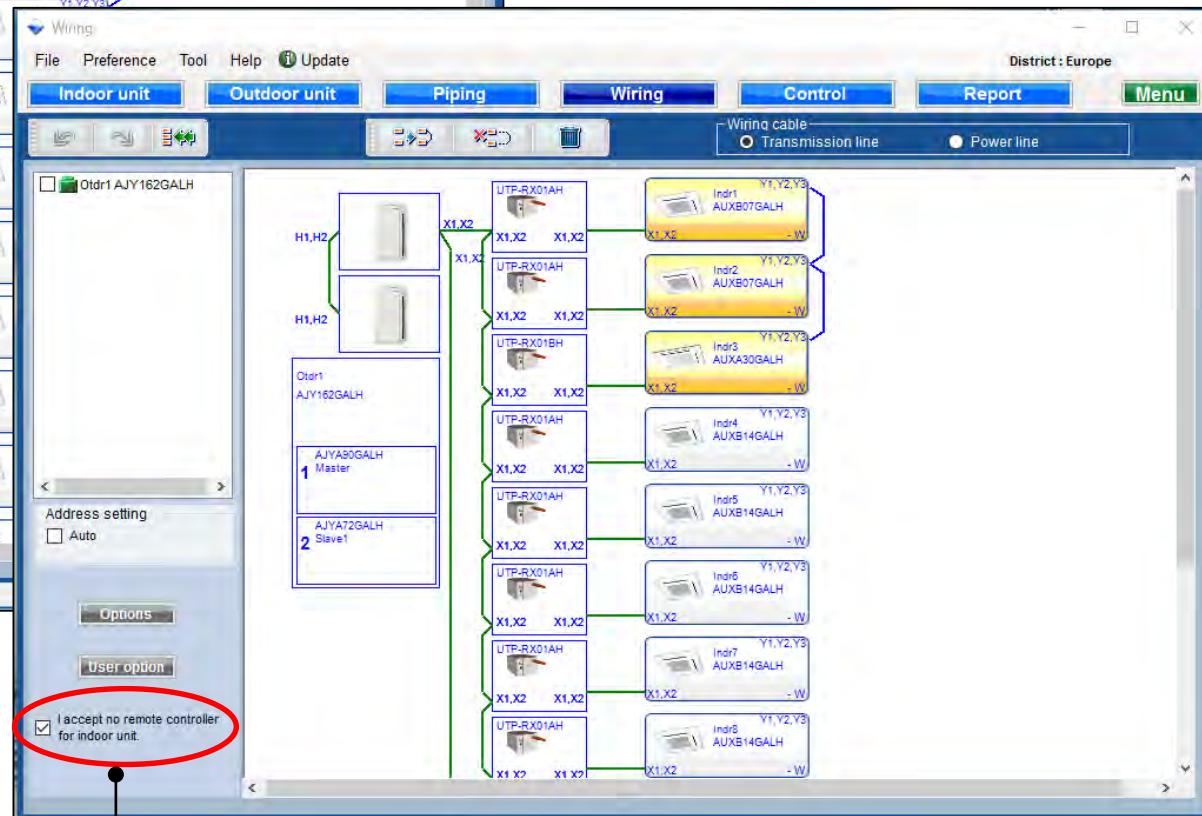


Check if “Remote controller” is unnecessary

Wiring settings

Design Simulator


option

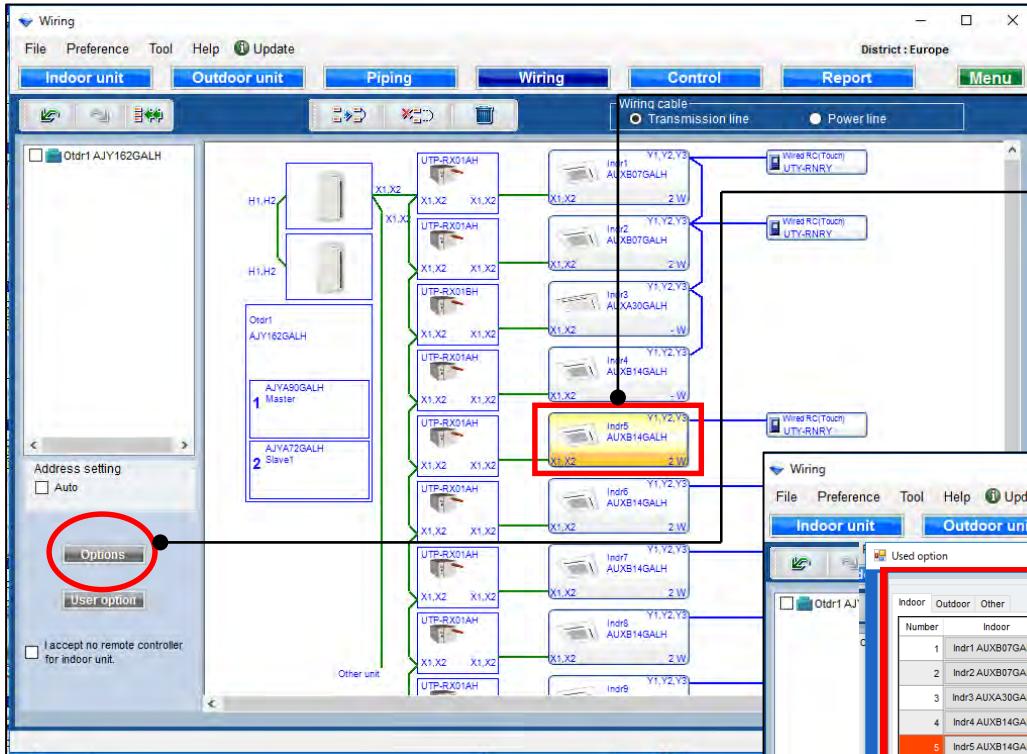

Select indoor unit

Select "Options "


Open used option screen.

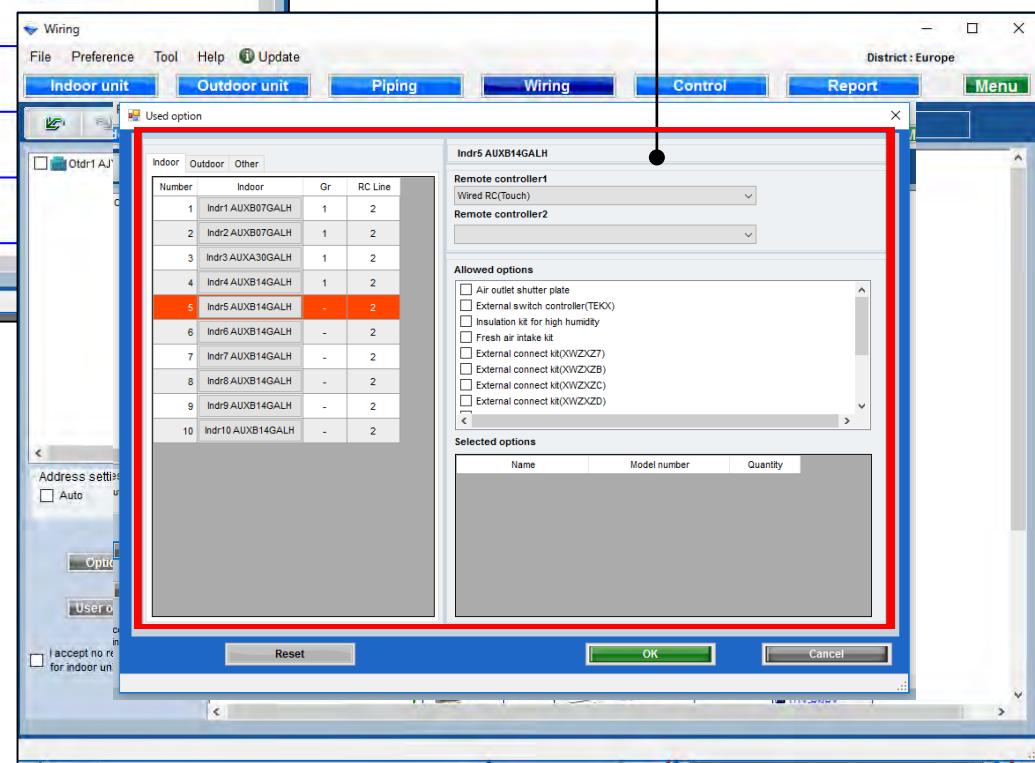

Wiring settings

Design Simulator

Used option

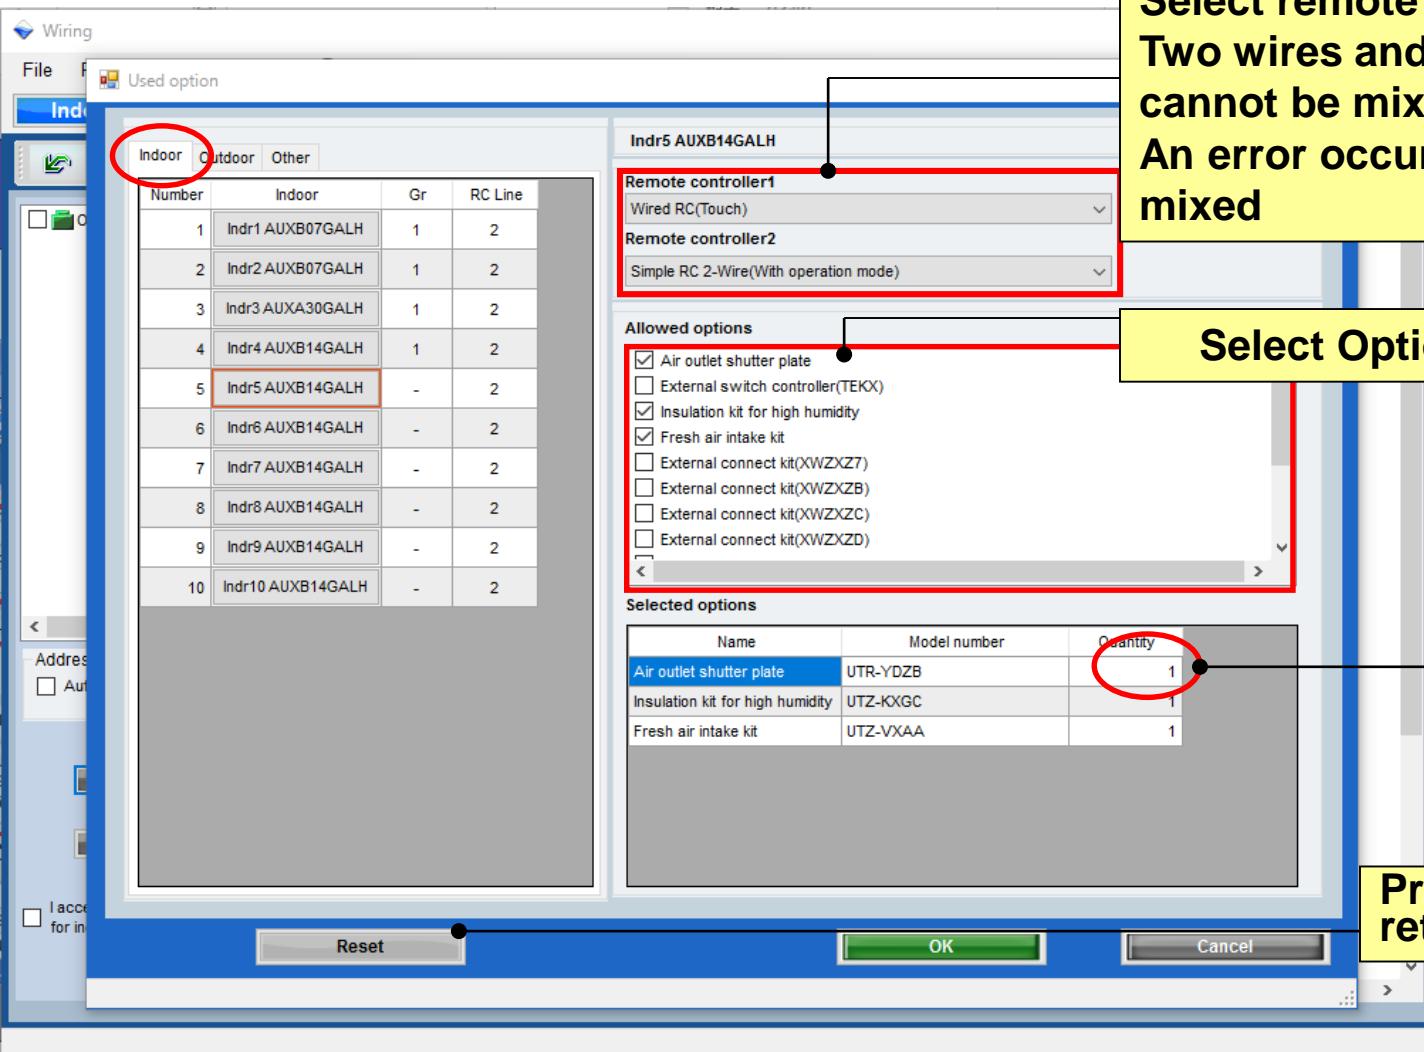

Select remote controller
Two wires and three wires
cannot be mixed
An error occurs if these are
mixed

Select Optional parts

Input quantity


Press "Reset" to
return to default

The selected options are displayed in "Report"

Wiring settings

Design Simulator

Used option

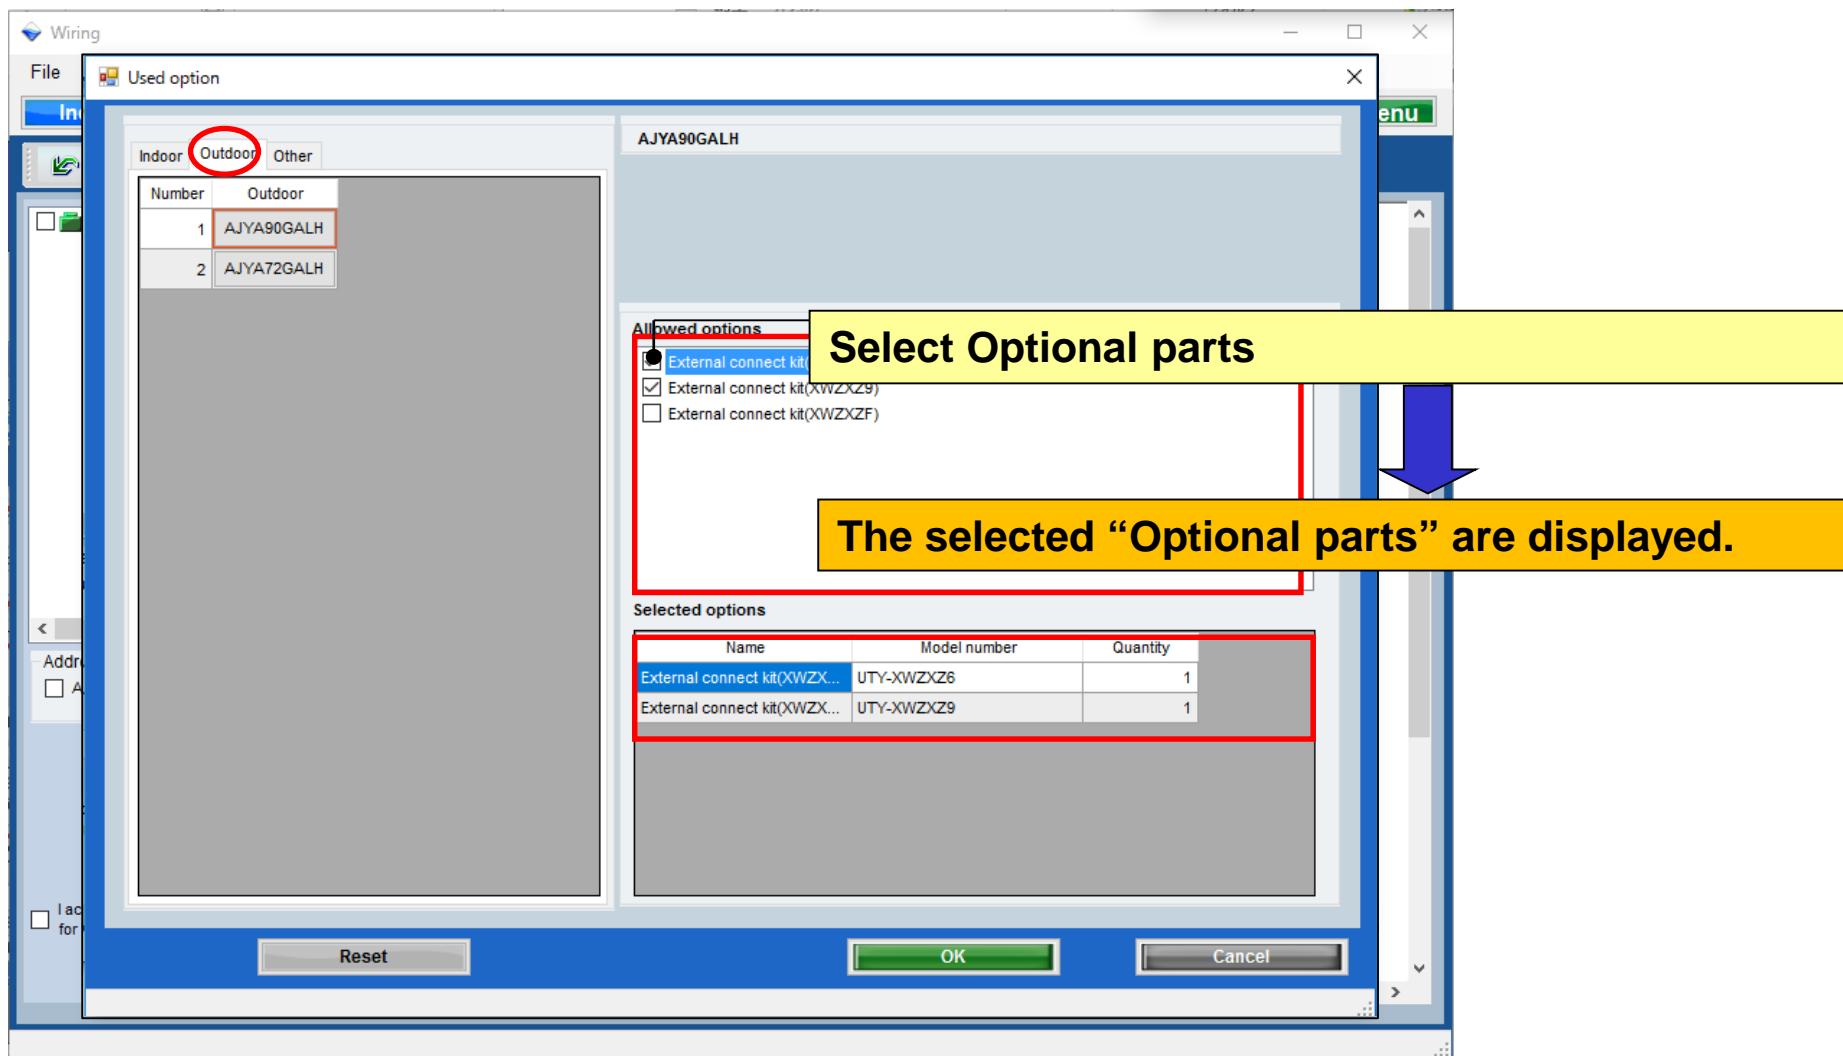


The selected options are displayed in “Report”

Wiring settings

Design Simulator

Used option

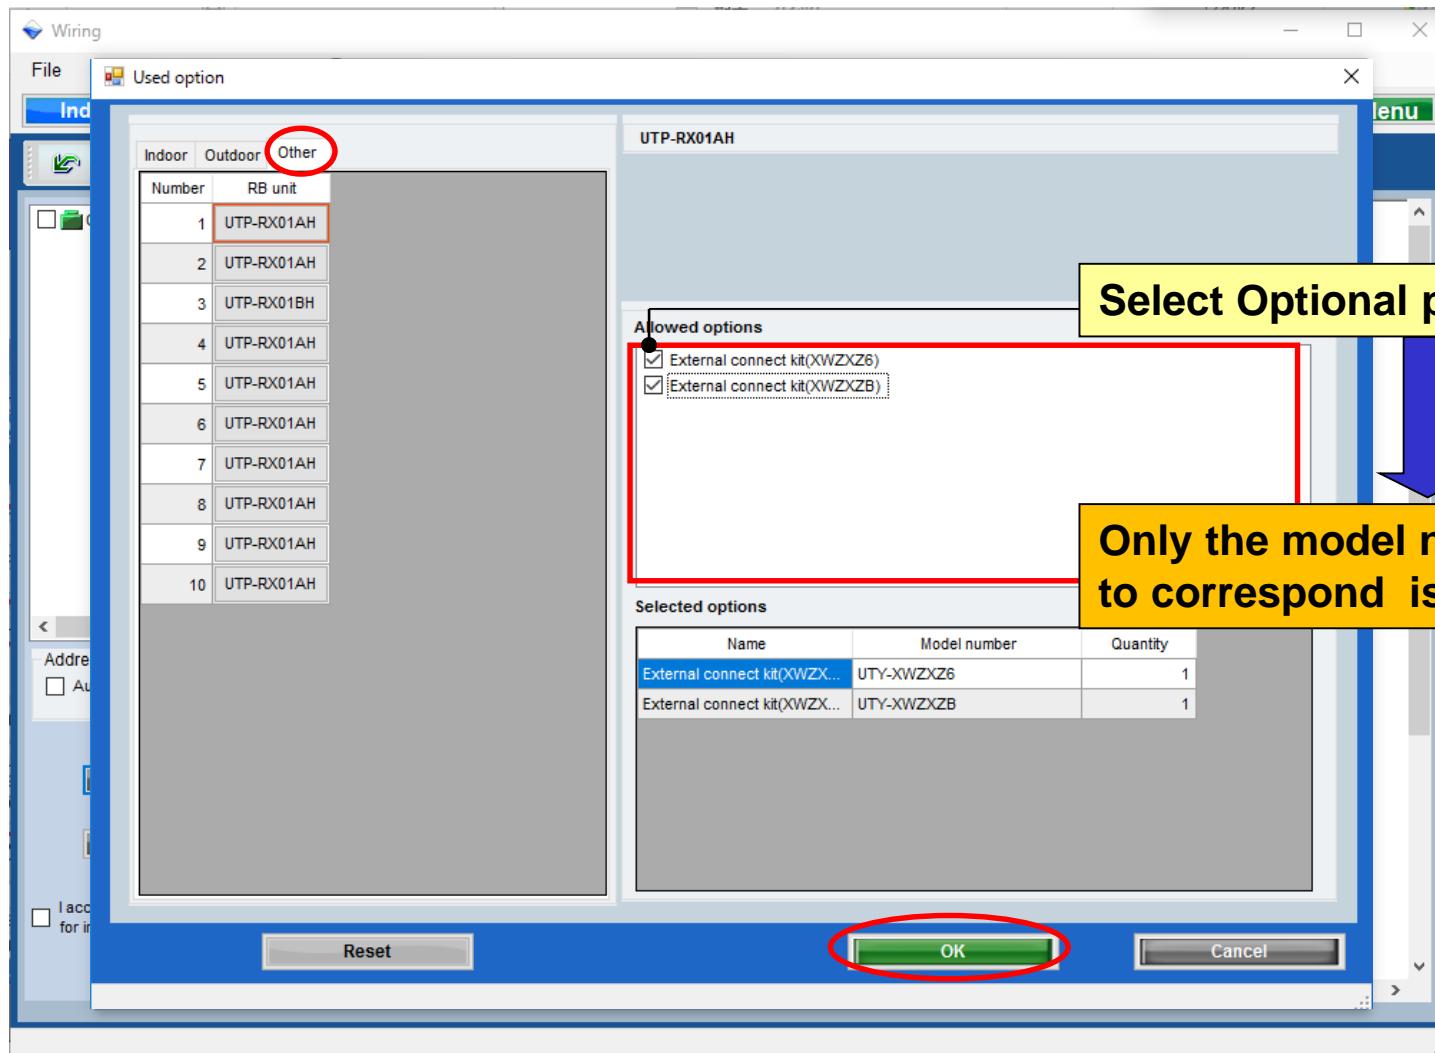


The selected options are displayed in “Report”


Wiring settings

Design Simulator

User option

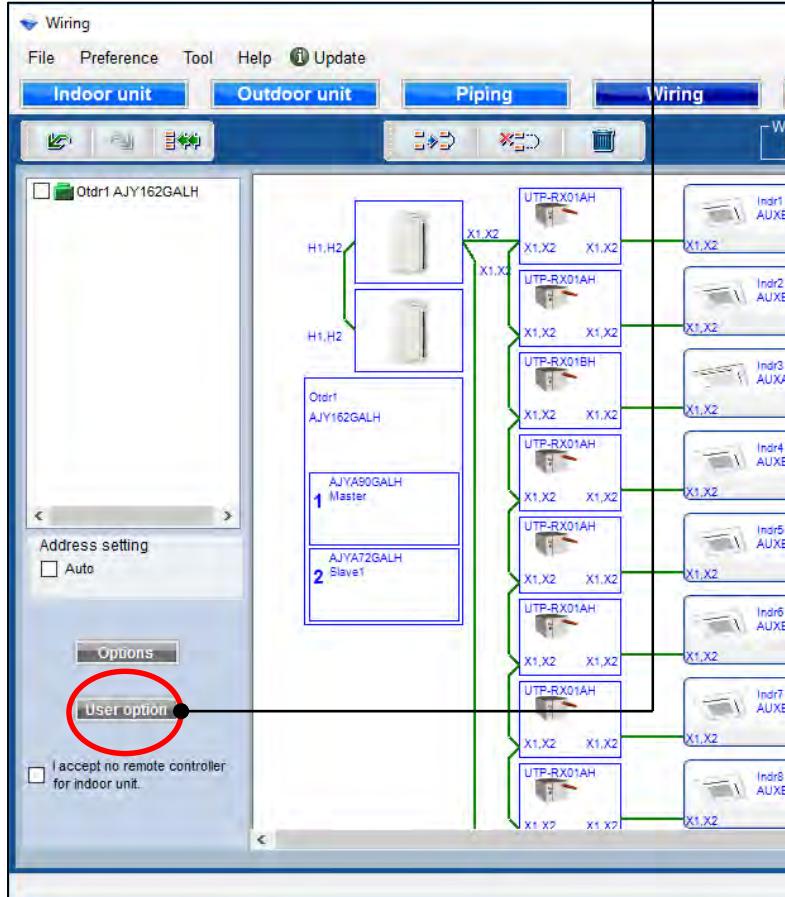


Select “User Options ”

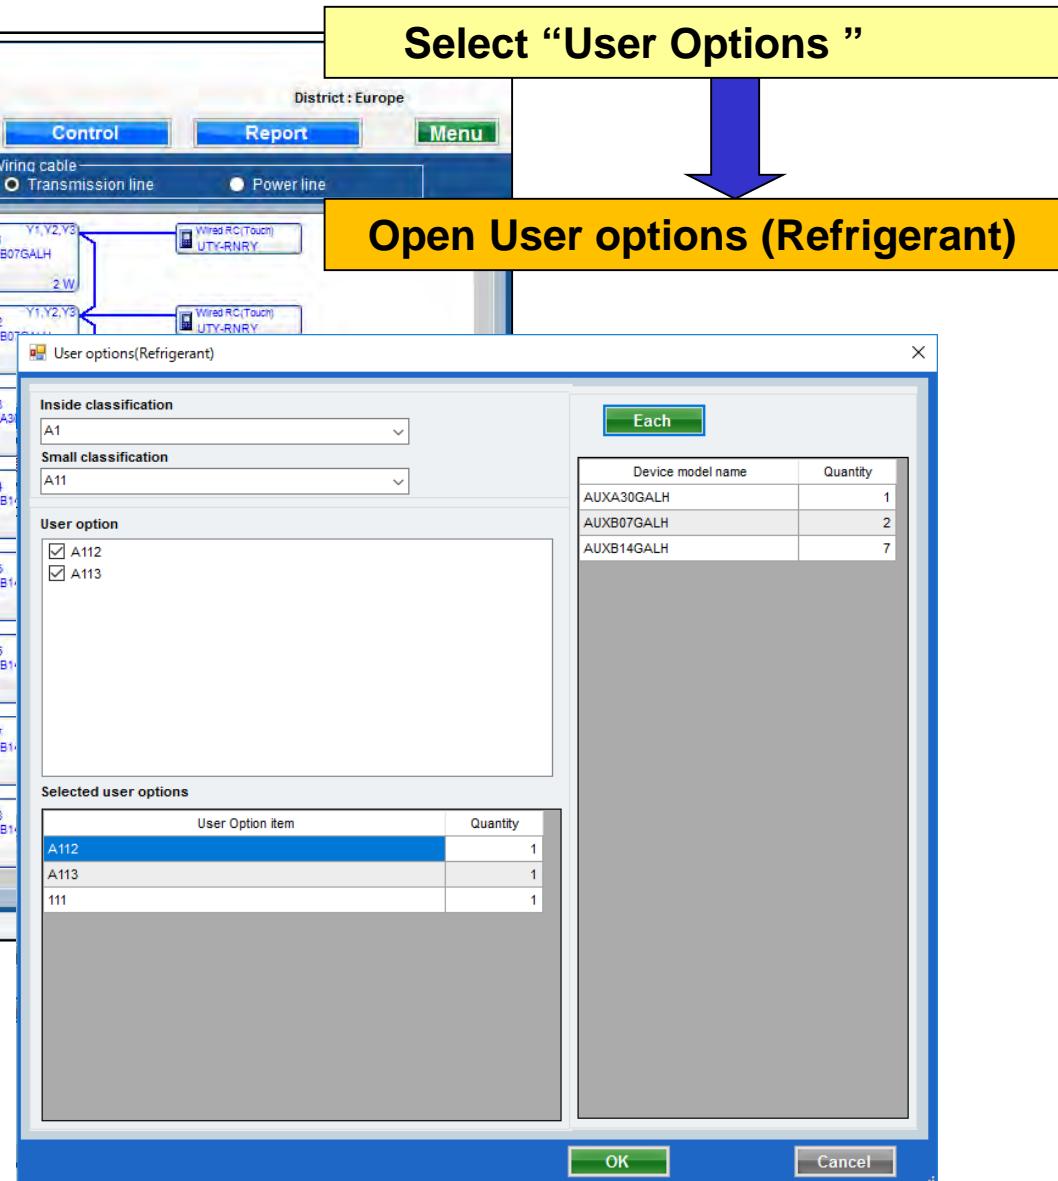

Wiring settings

Design Simulator

User option(Refrigerant)

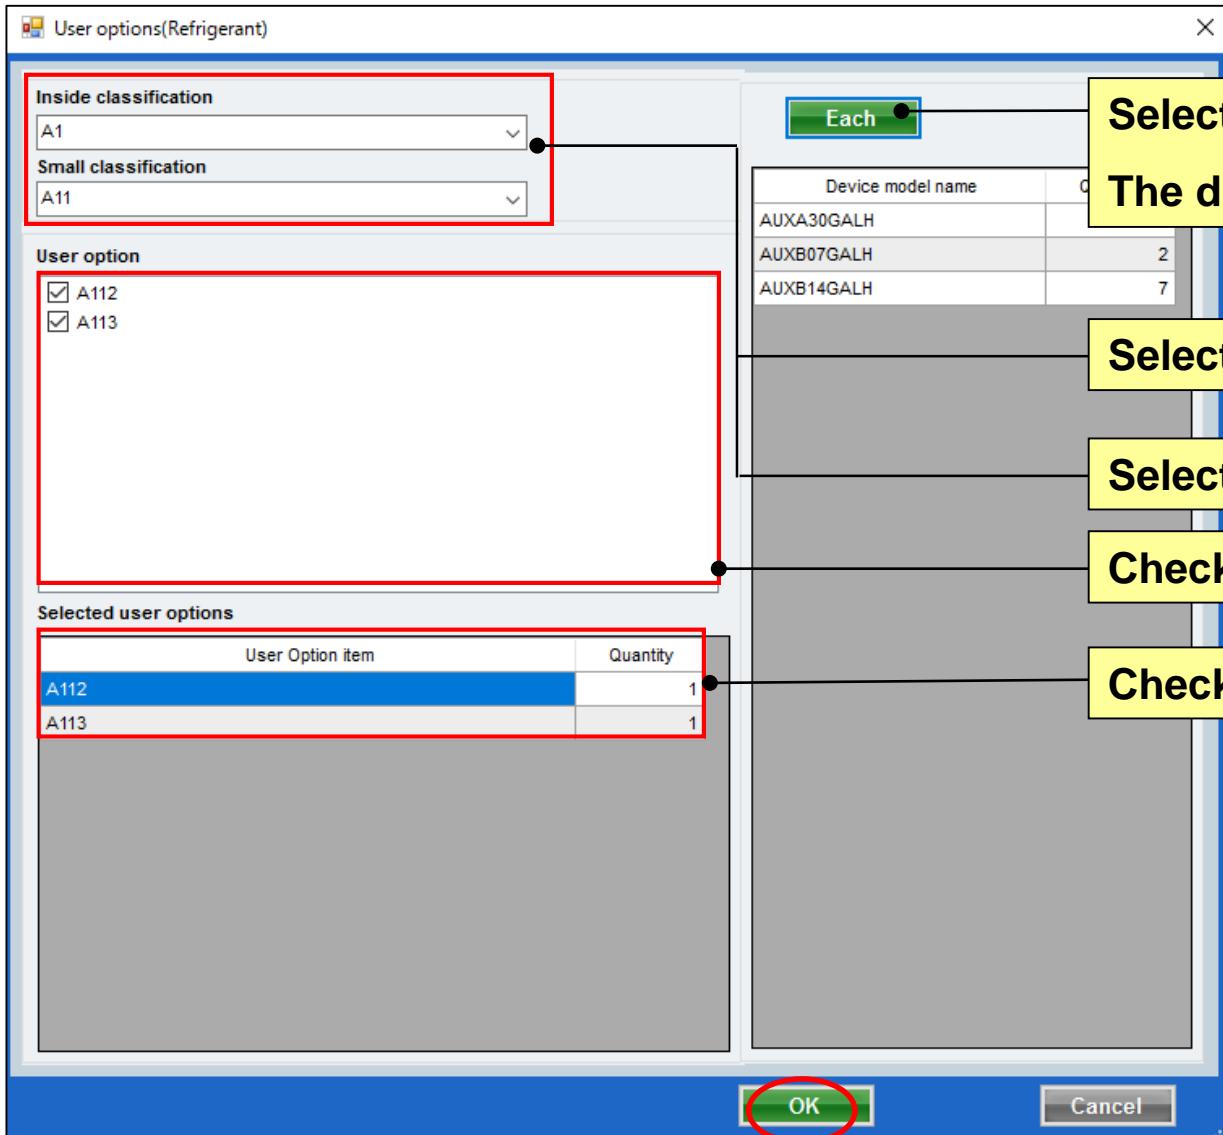

Select “Each or Summary”
The displayed content changes

Select “Inside classification”

Select “Small classification”

Check “User option”


Check “User option”

The selected options are displayed in “Report”

Konfiguracja okablowania


Design Simulator

Linia transmisji

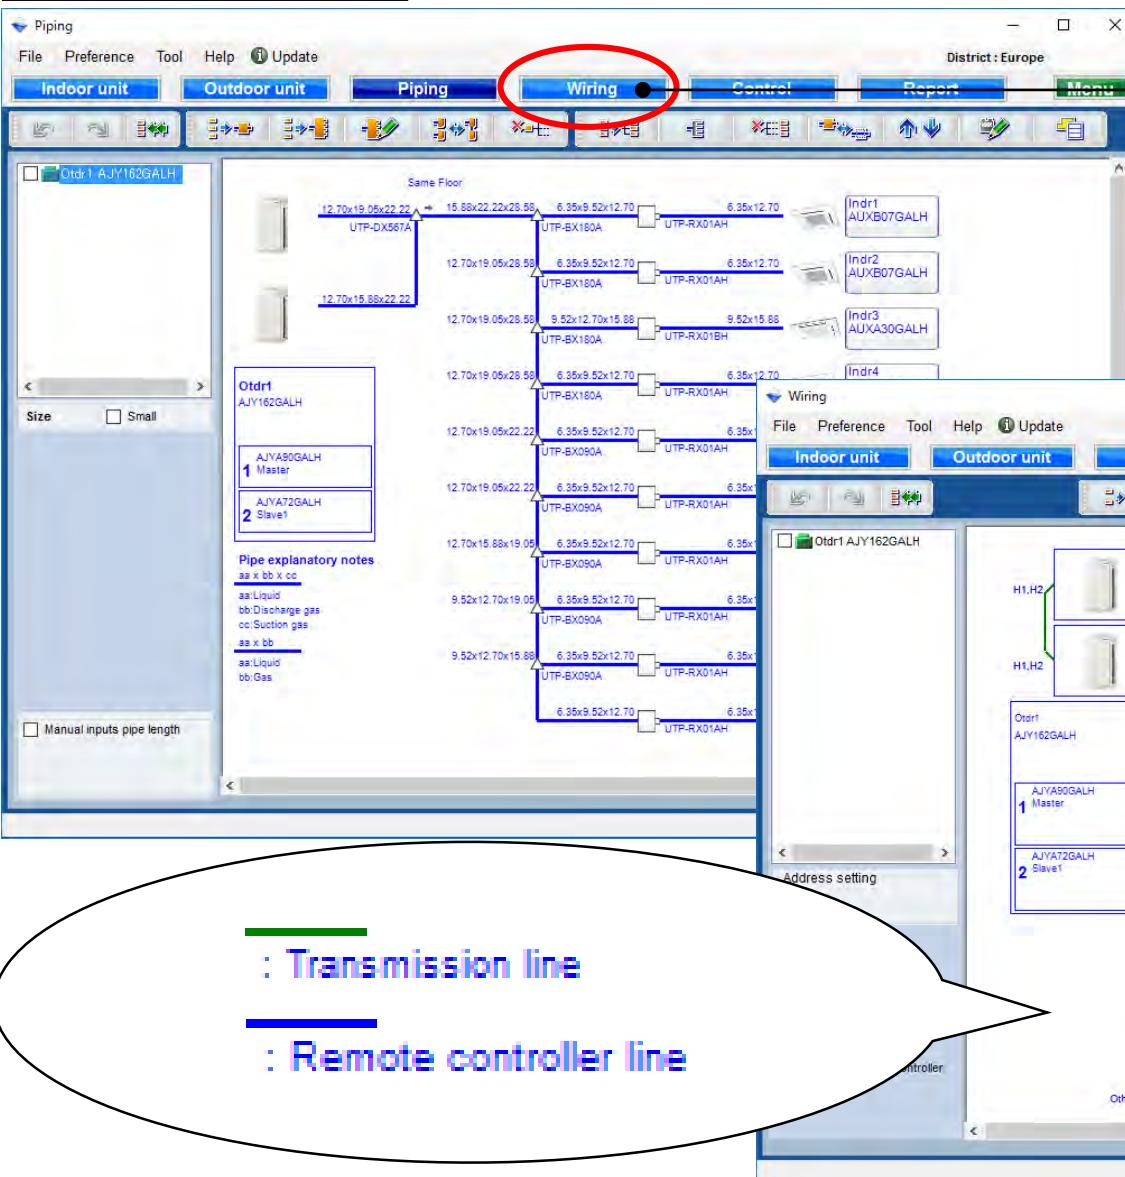

Naciśnij „Okablowanie”


Zaznacz „Linia transmisji”

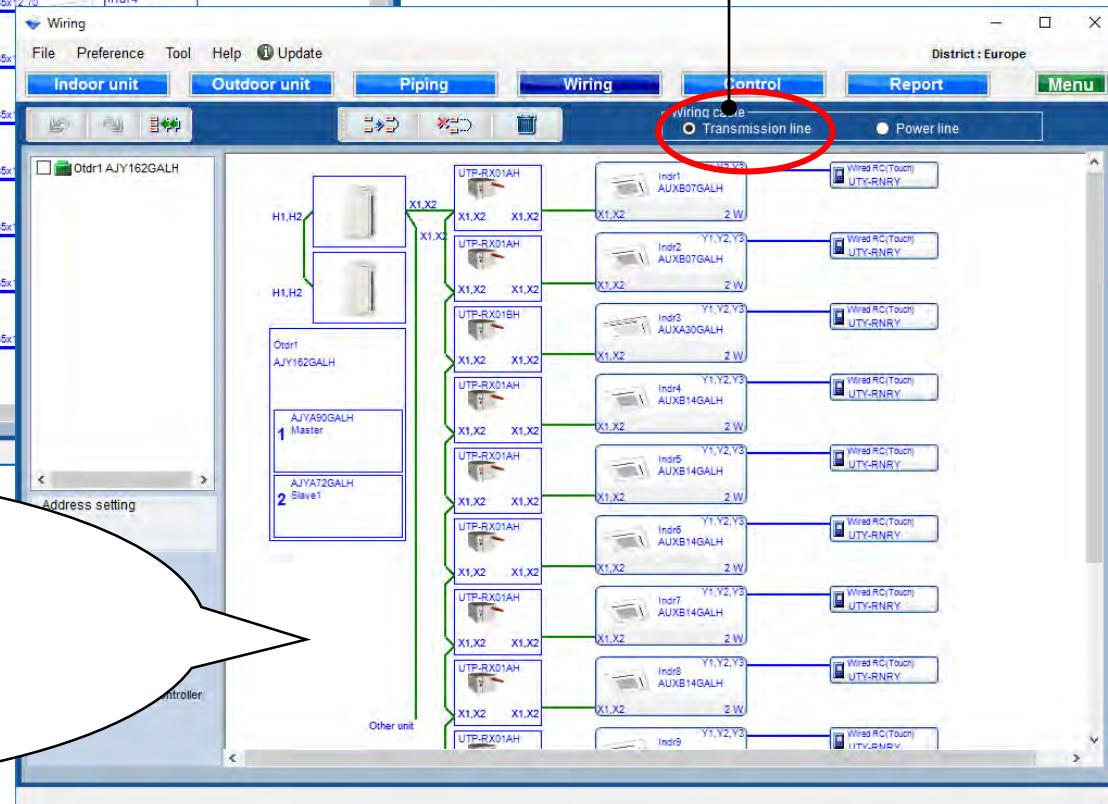

Konfiguracja okablowania

Design Simulator

Linia zasilania

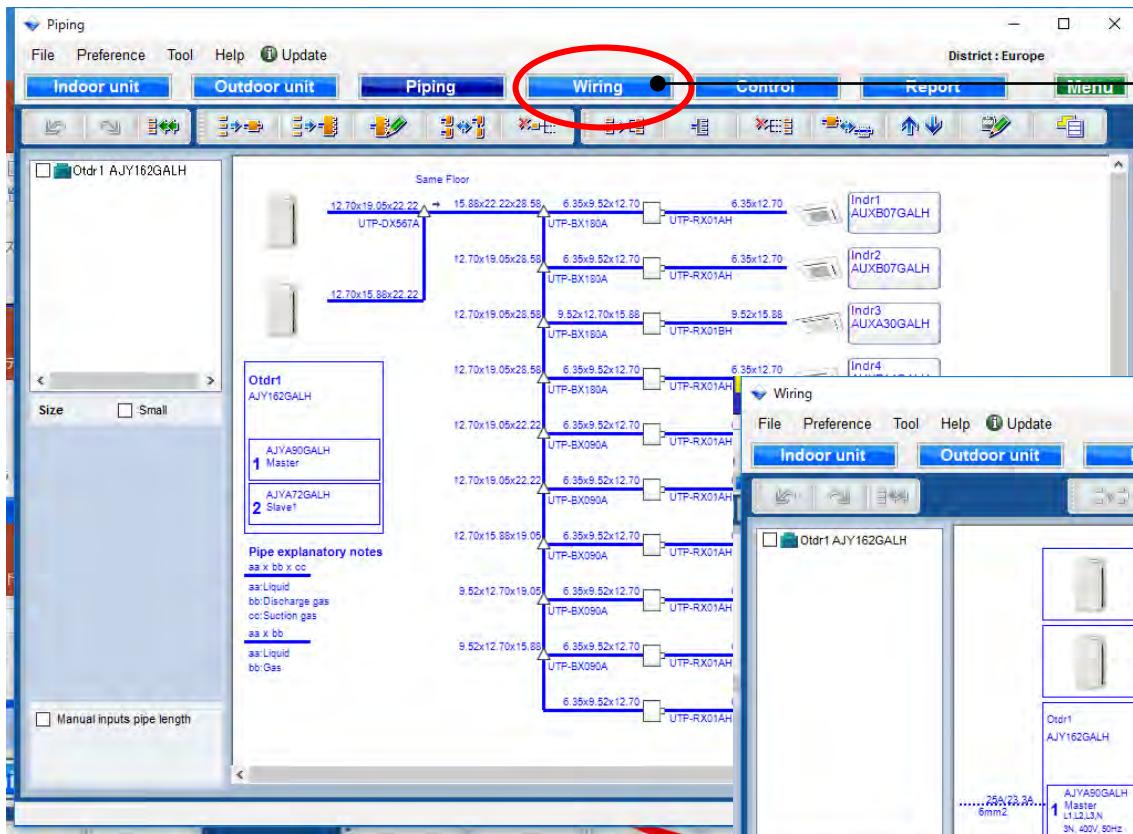

Naciśnij „Okablowanie”

Zaznacz „Linia zasilania”

... : Power line

Outdoor
Breaker/MCA
Diameter

Indoor, RB unit

MCA


Diameter

Total power line

Breaker

MCA


Voltage-Hz

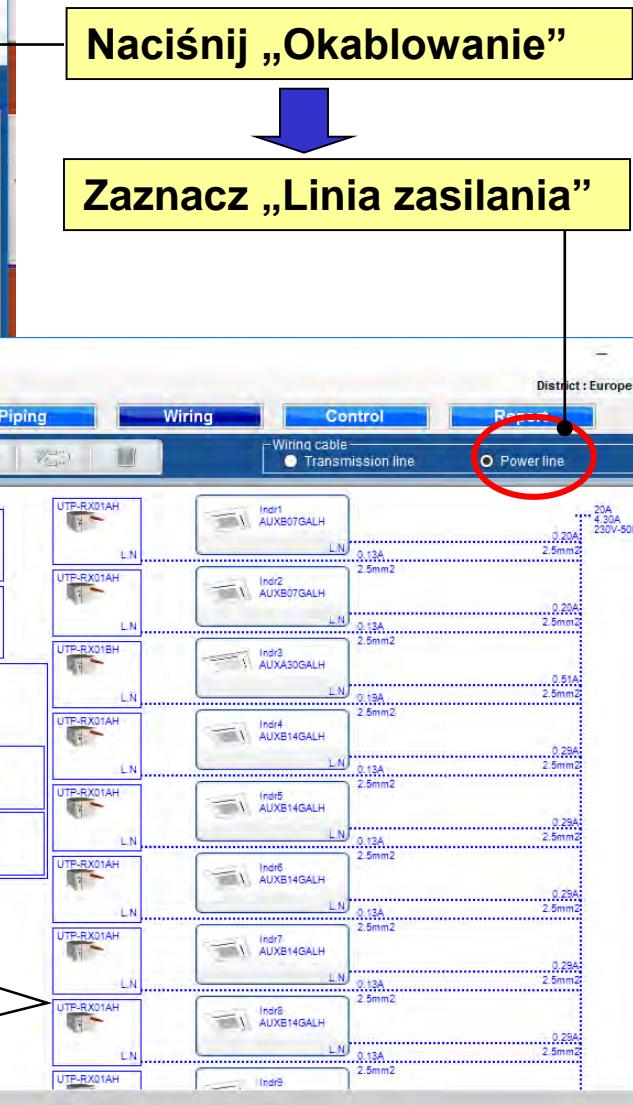

Konfiguracja okablowania

Design Simulator

Grupowanie (1/2)

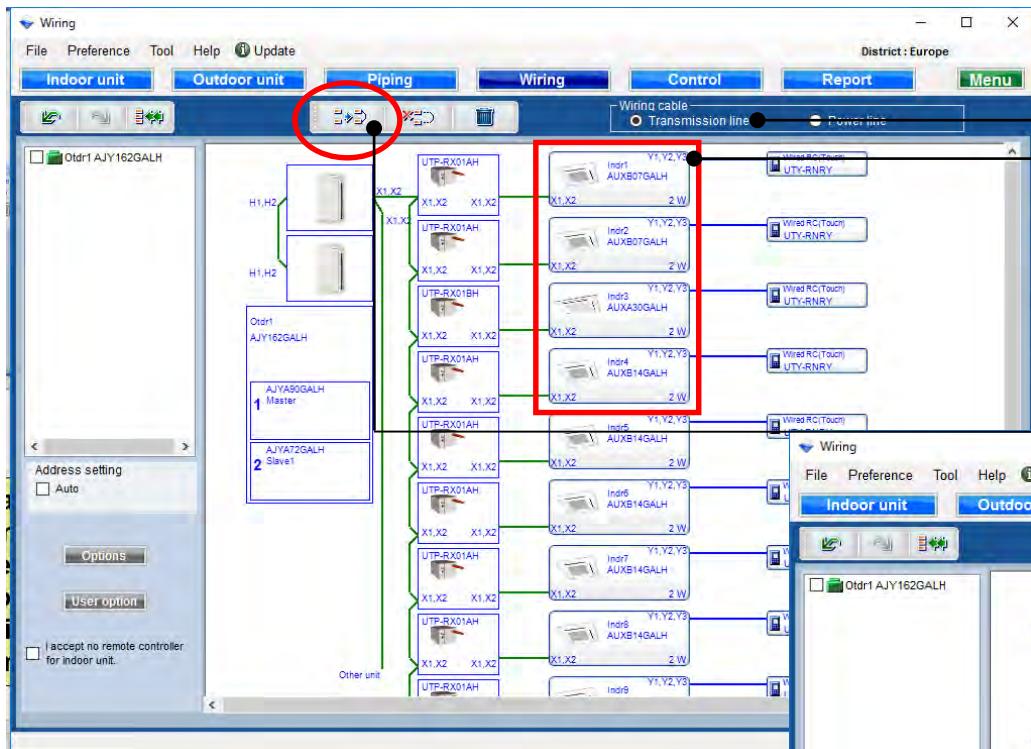


W „Preferencjach” można ustawić
„Całkowita długość linii zasilania /
Poszczególne linie zasilania”

Wybierz jednostki wewnętrzne

Naciśnij „Sterownik grupowy”




Linia grupy pilota zostanie
utworzona automatycznie

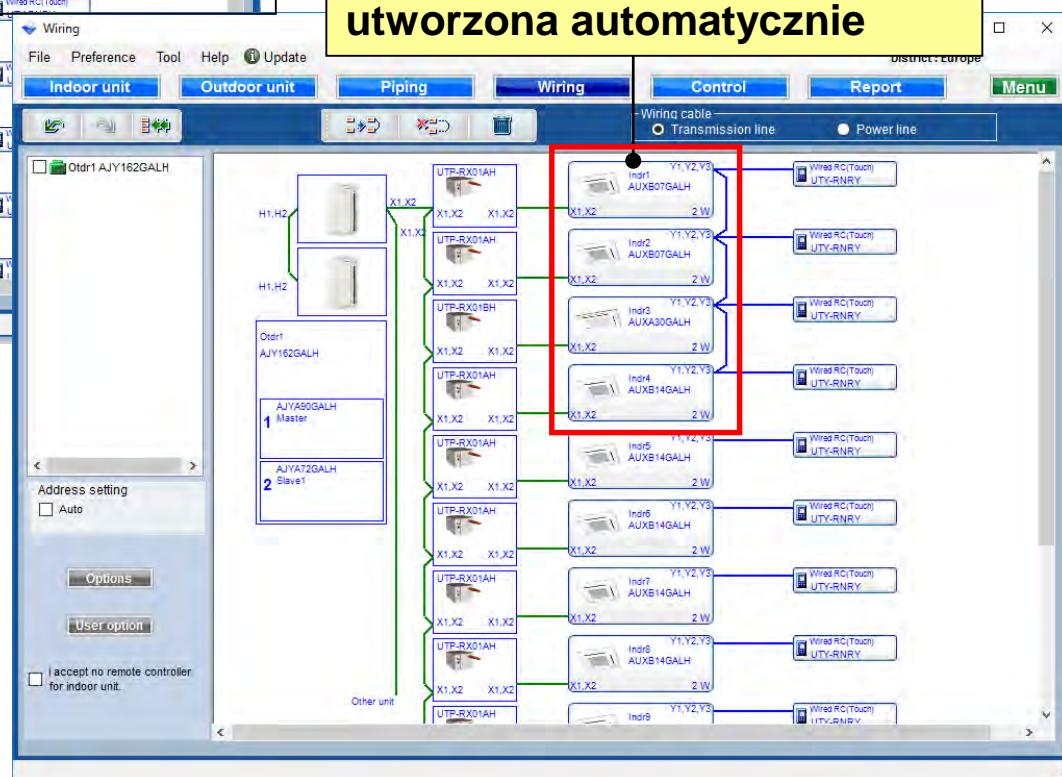

Konfiguracja okablowania

Design Simulator


Grupowanie (2/2)

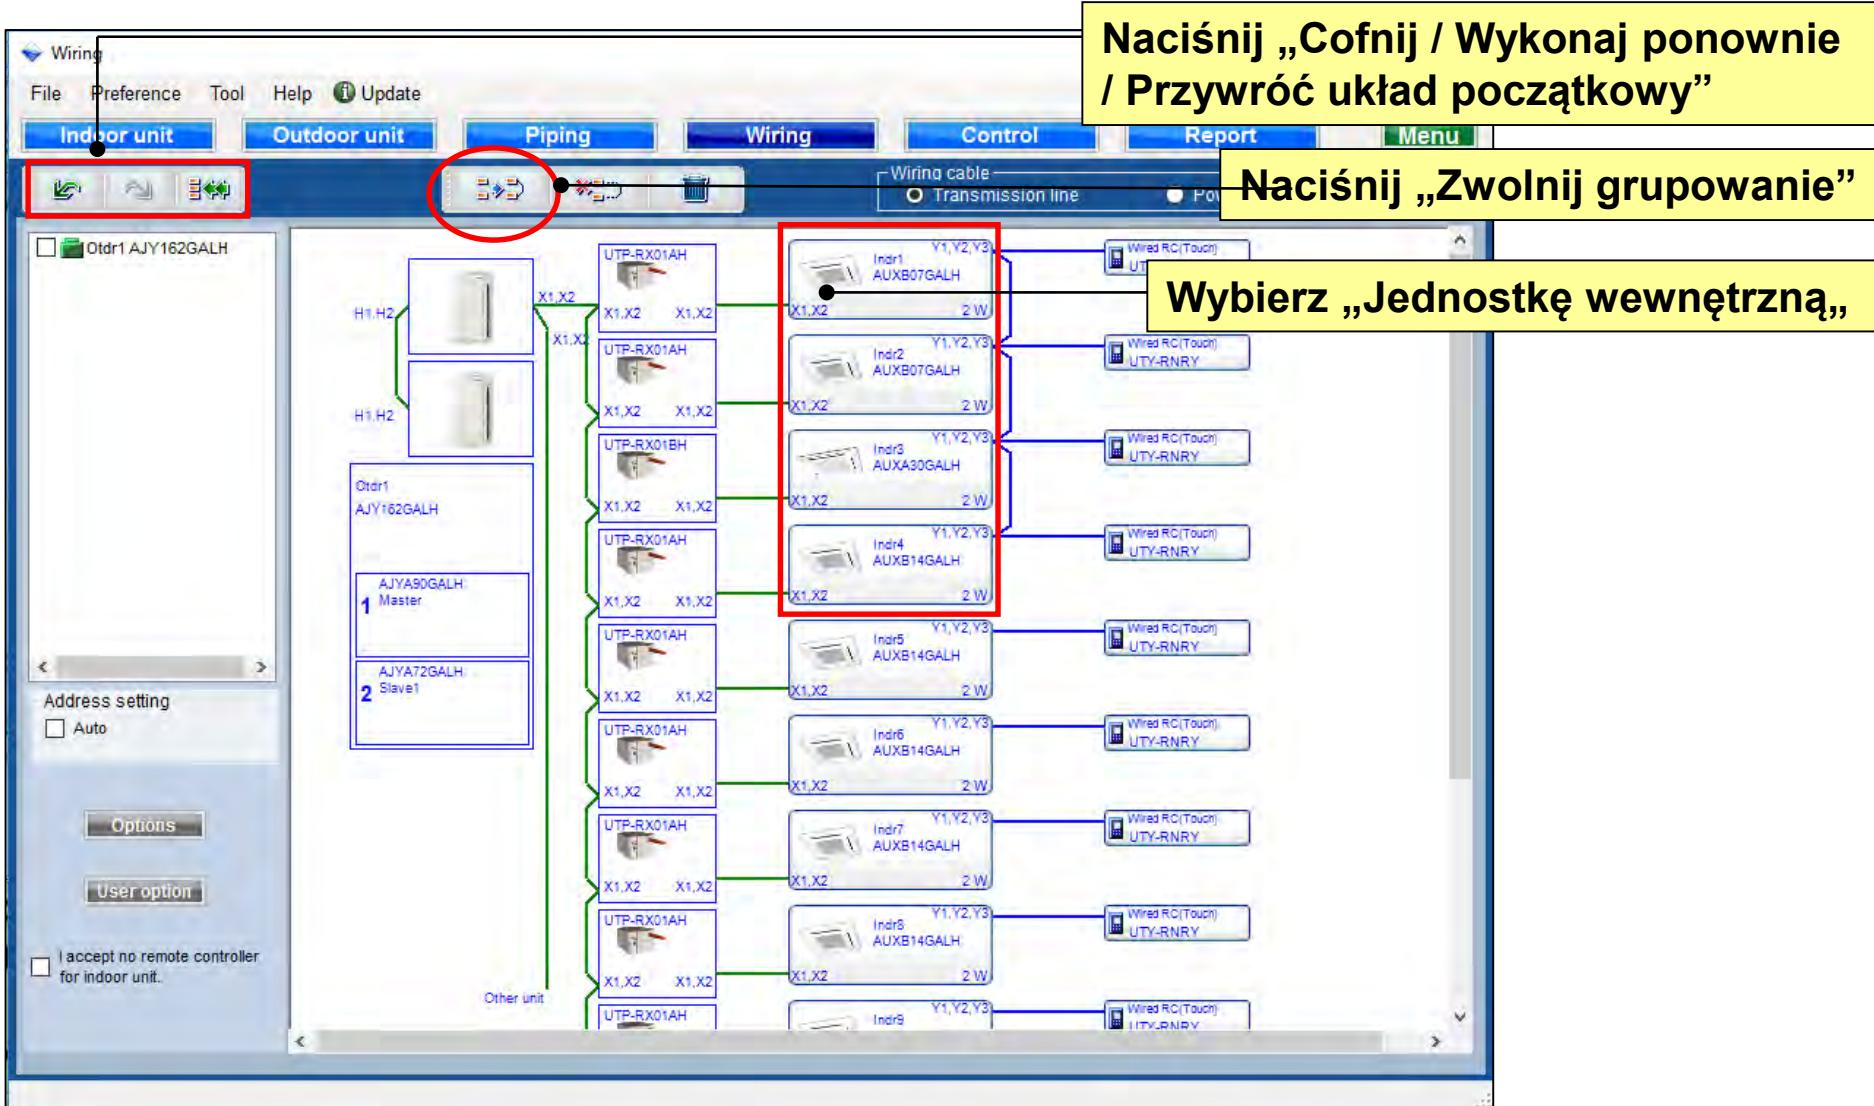

Konfiguracja okablowania

Design Simulator


Pole wyboru

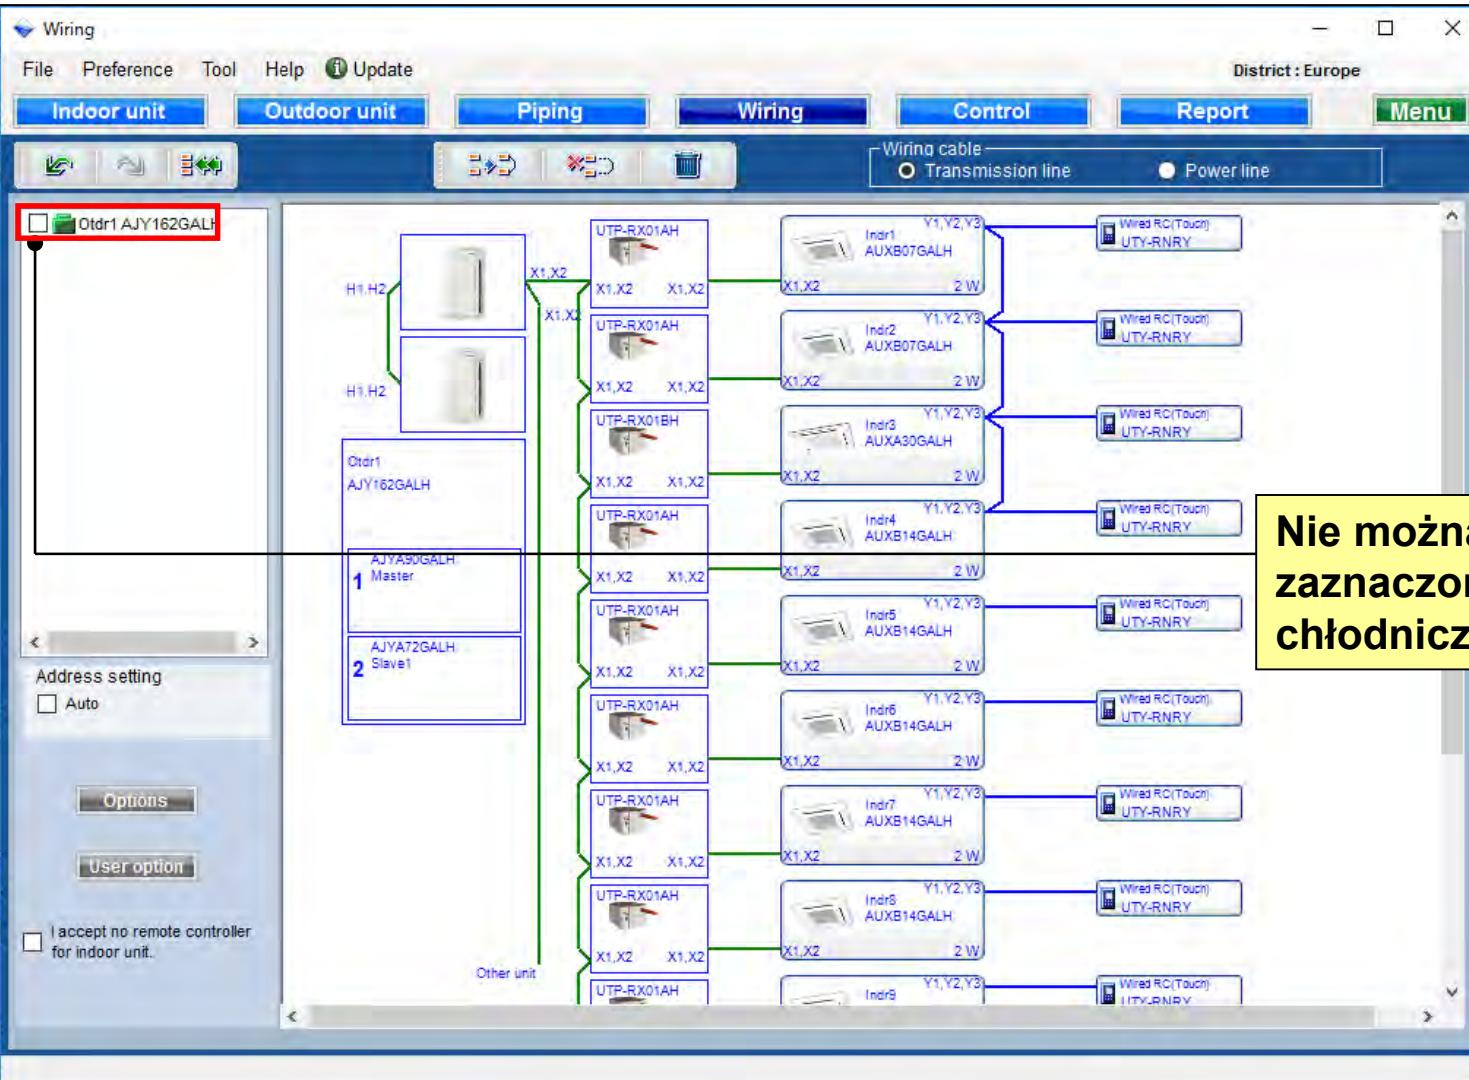

Konfiguracja okablowania


Design Simulator

Usuwanie

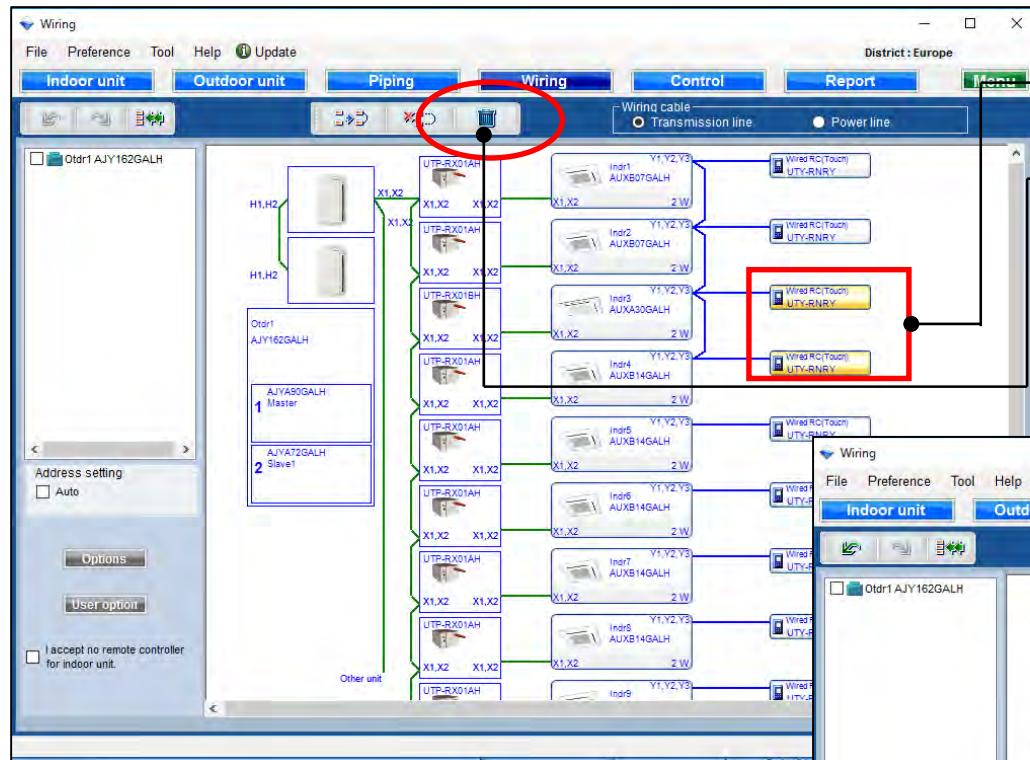


Wybierz sterownik

Naciśnij „Usuń sterownik”

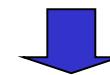


Po usunięciu sterownika,
niebieska linia zostanie
automatycznie zmieniona.

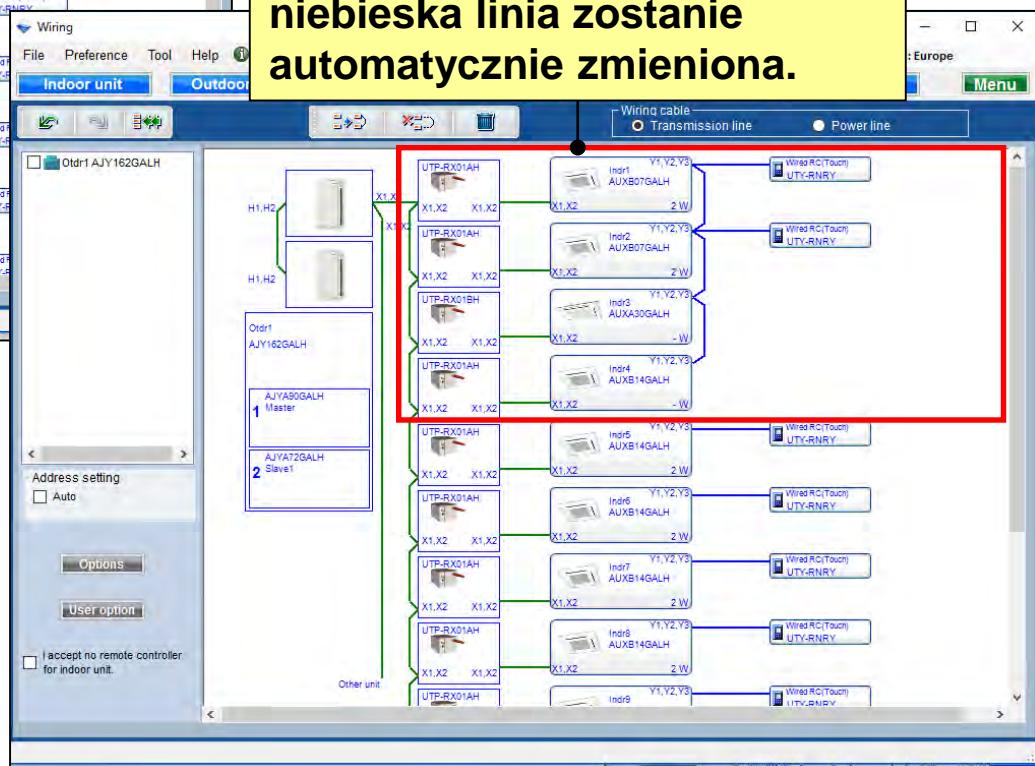


Konfiguracja okablowania

Design Simulator

Adresowanie

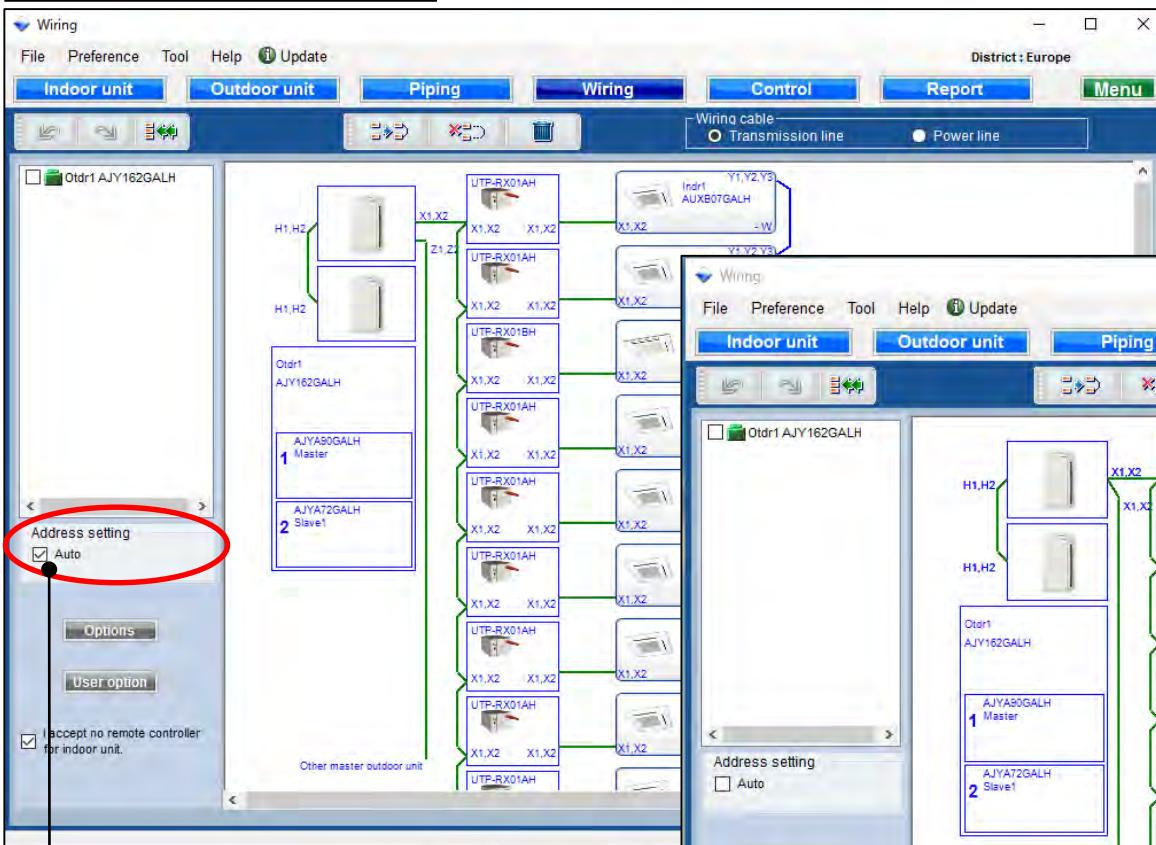

Zaznacz w przypadku automatycznego adresowania

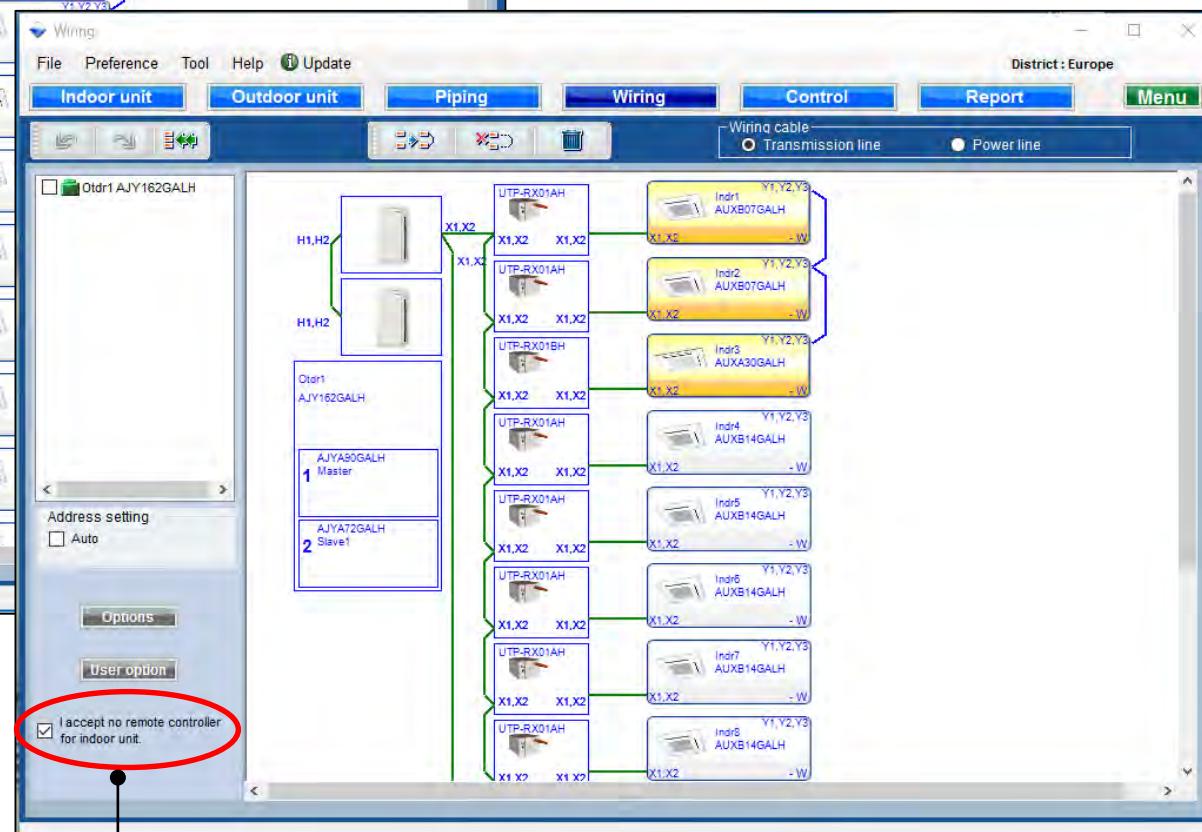


Zaznacz jeżeli „pilot” nie jest wymagany

Konfiguracja okablowania

Design Simulator


Opcje

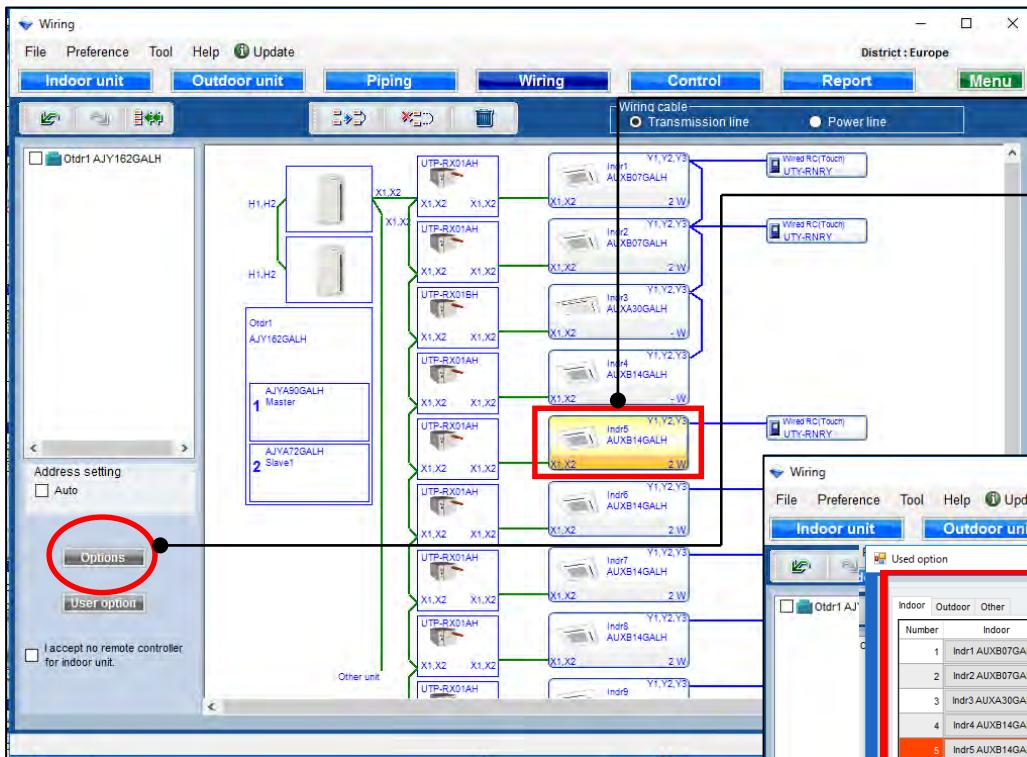

Wybierz jednostkę wewnętrzną

Naciśnij „Opcje”


Pojawi się ekran zastosowanych akcesoriów opcjonalnych

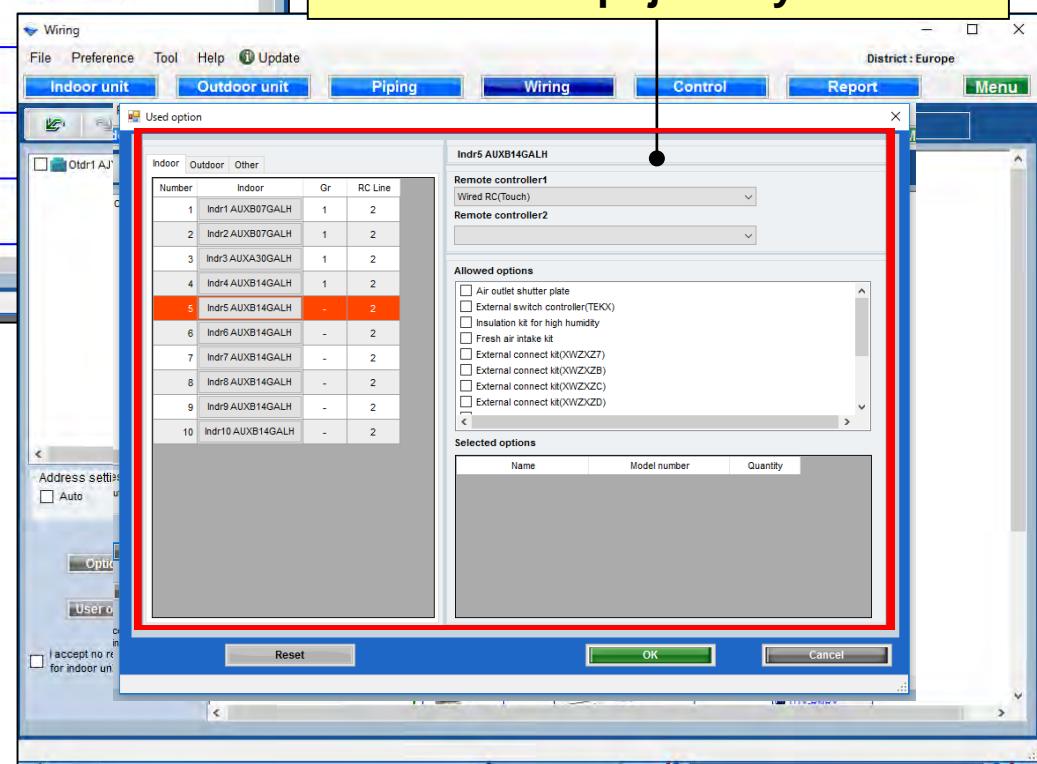

Konfiguracja okablowania

Design Simulator

Zastosowane opcje

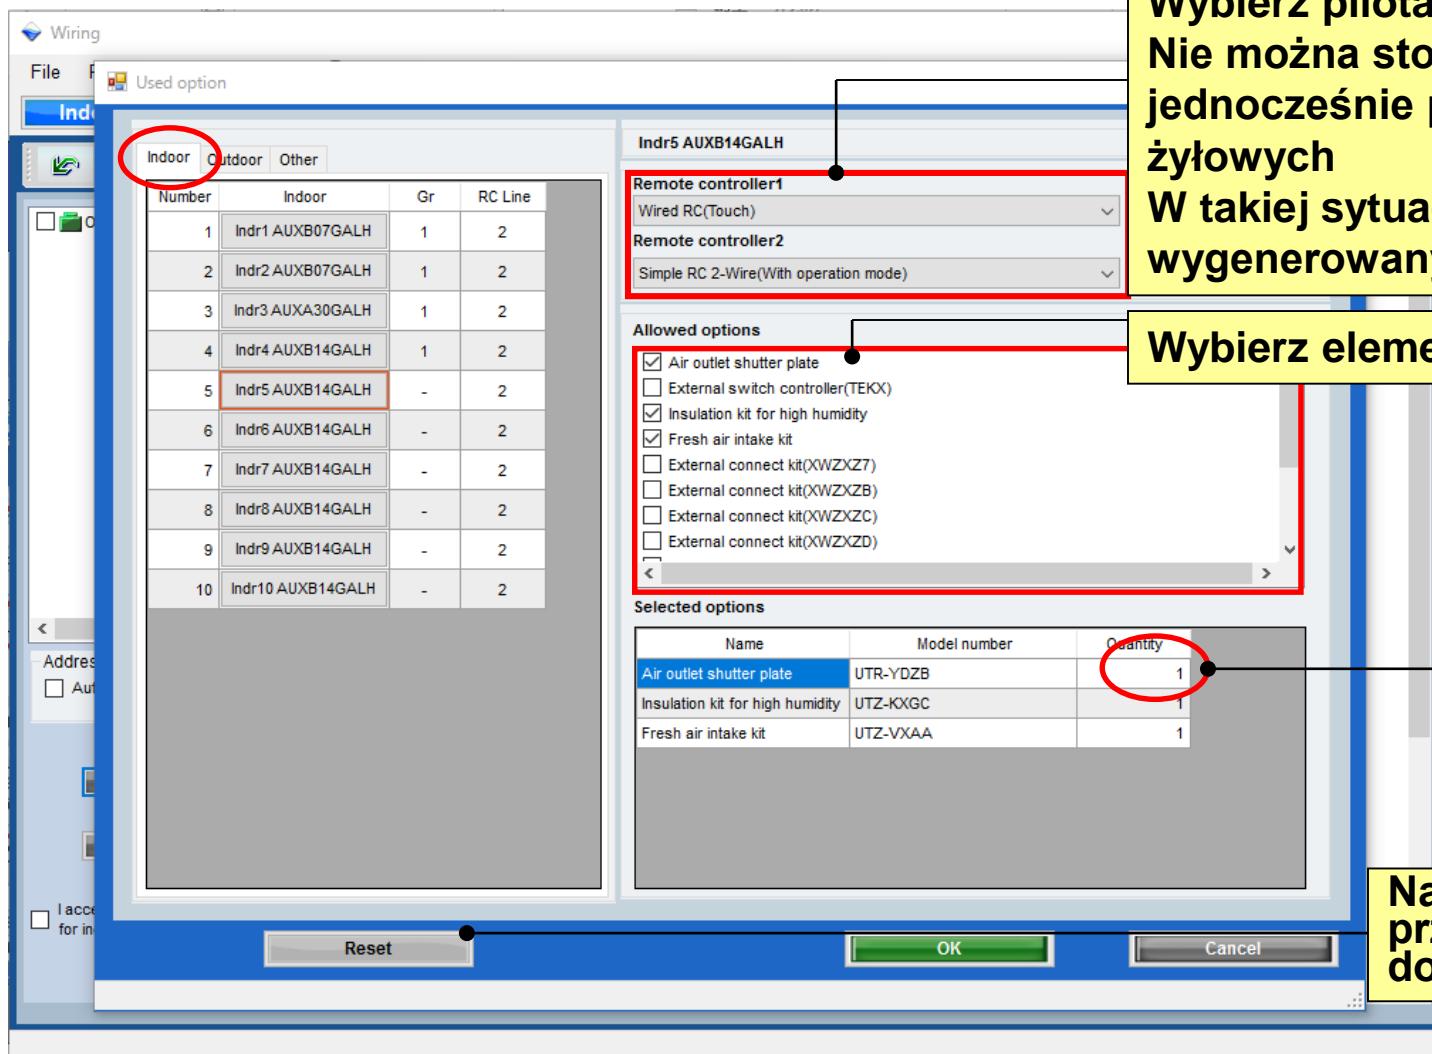

Wybierz pilota

Nie można stosować jednocześnie pilotów 2- i 3-żywotowych

W takiej sytuacji zostanie wygenerowany błąd

Wybierz elementy opcjonalne

Wpisz ilość


Naciśnij „Reset” aby przywrócić wartości domyślne

Wybrane opcje zostaną uwzględnione w „Raporcie”


Konfiguracja okablowania

Design Simulator

Zastosowane opcje

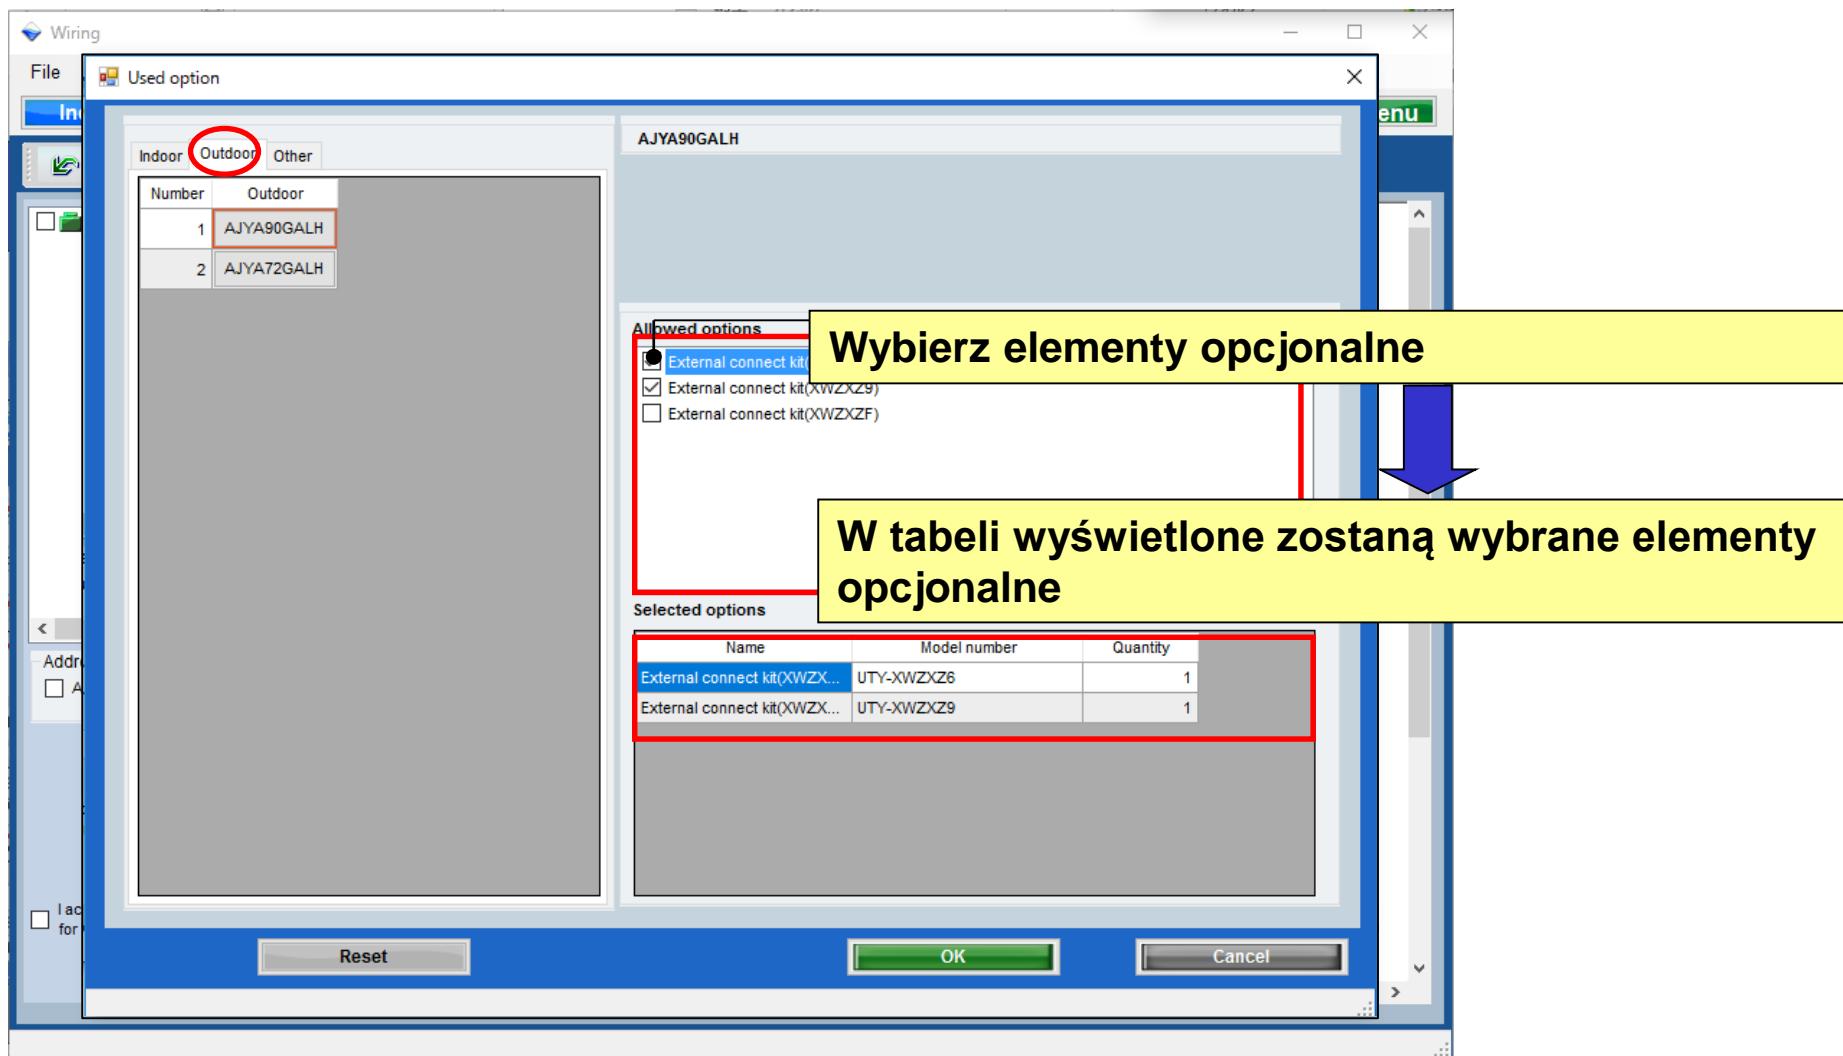


Zastosowane opcje

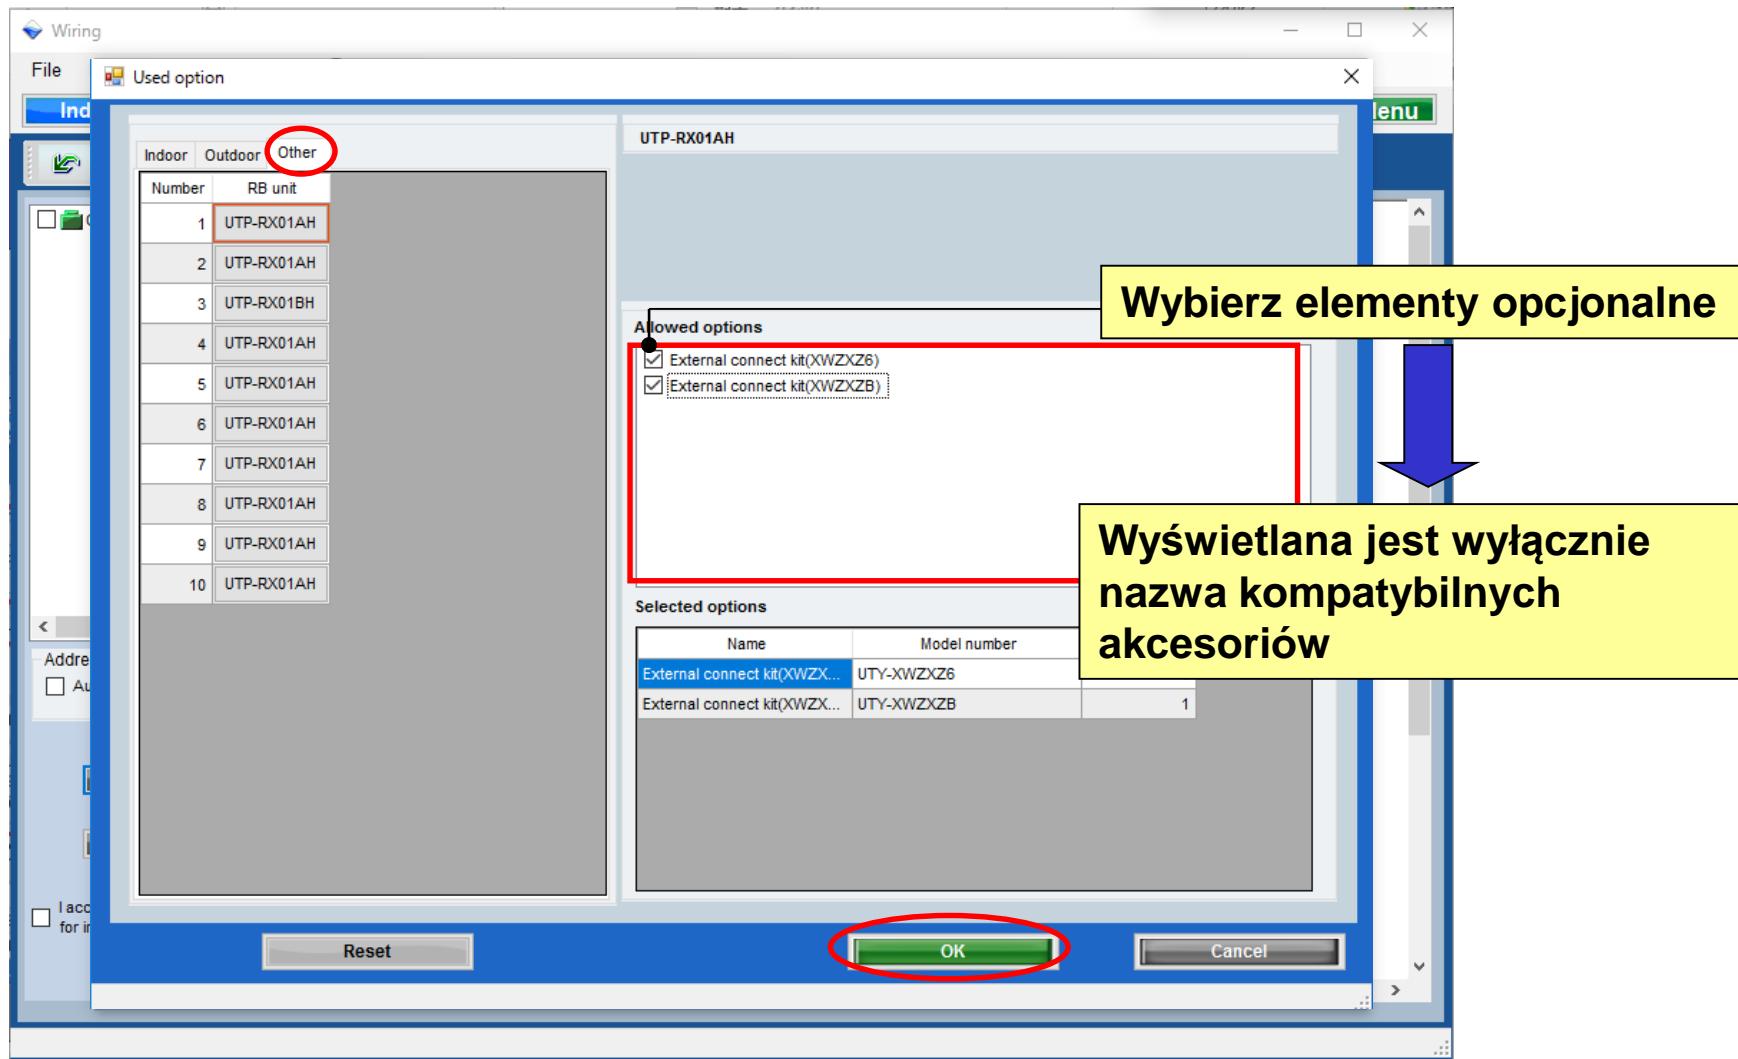


Konfiguracja okablowania

Design Simulator

Opcje użytkownika

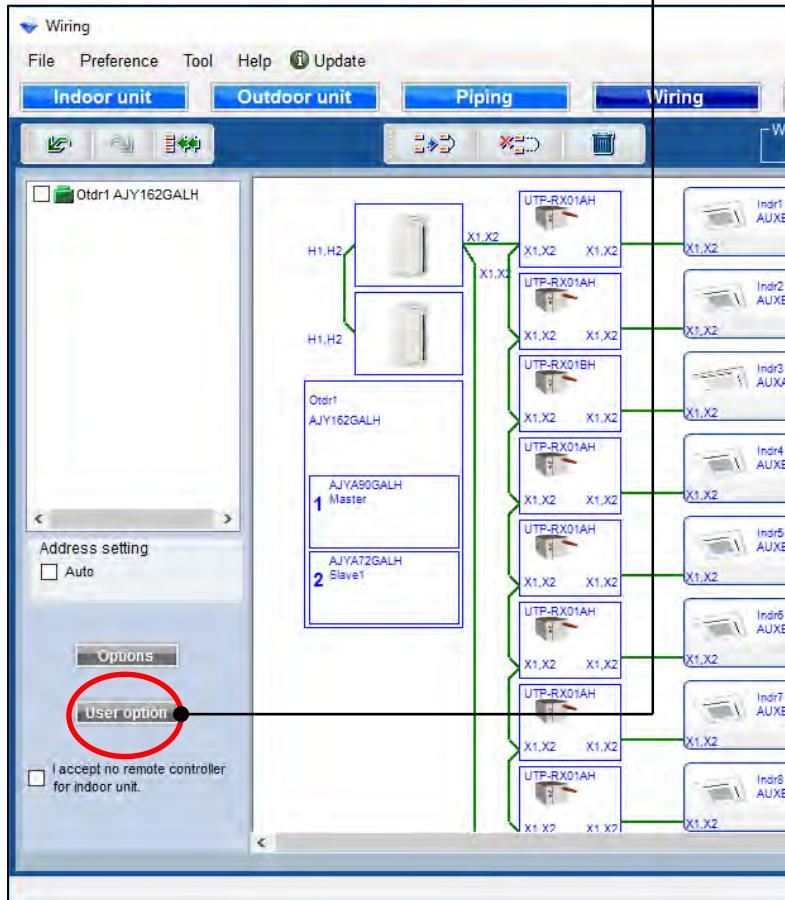


Naciśnij „opcje” (użytkownika)

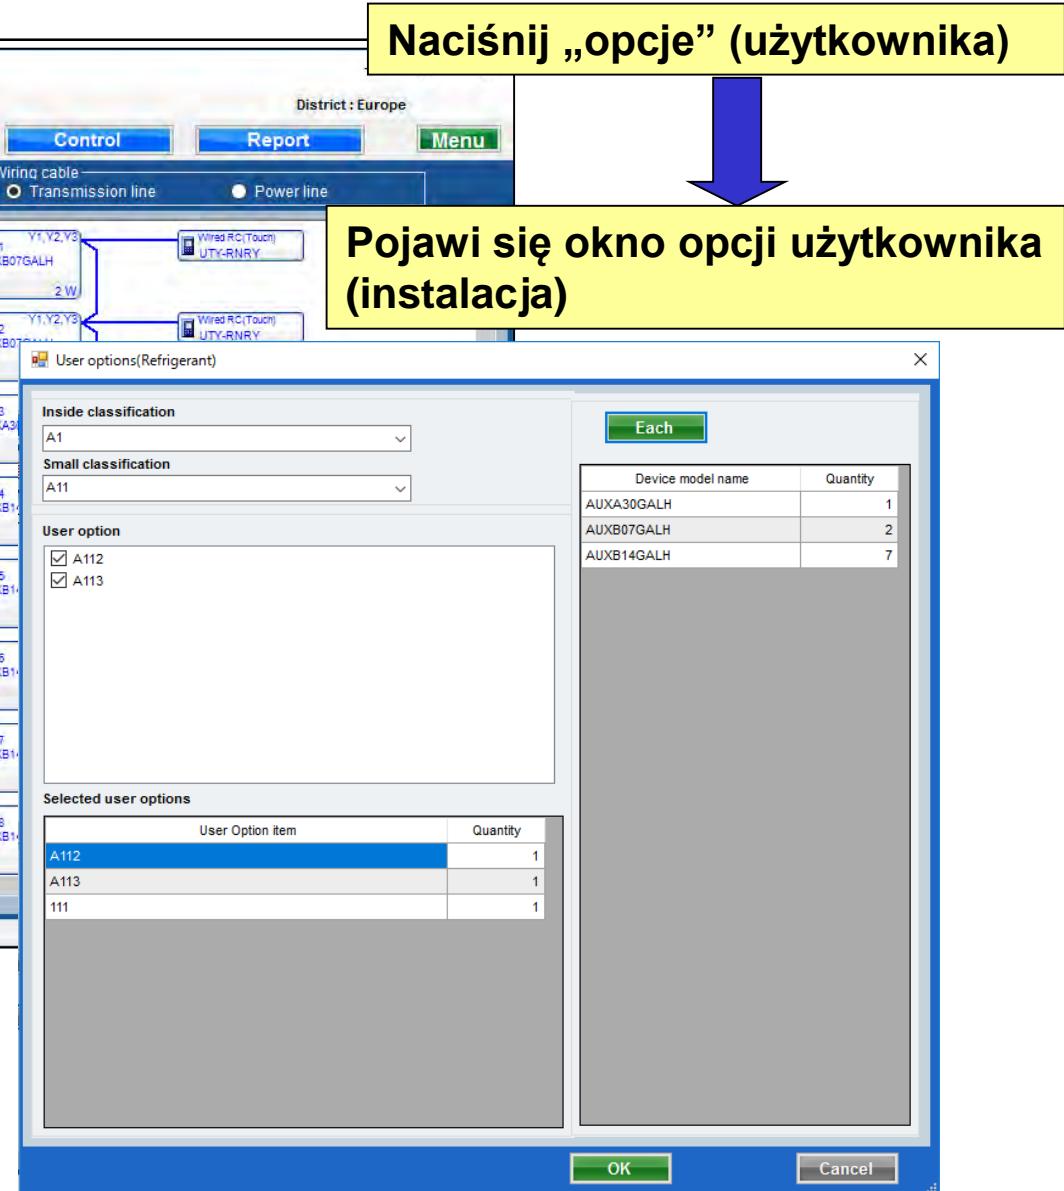

Konfiguracja okablowania

Design Simulator

Opcje użytkownika (instalacja)

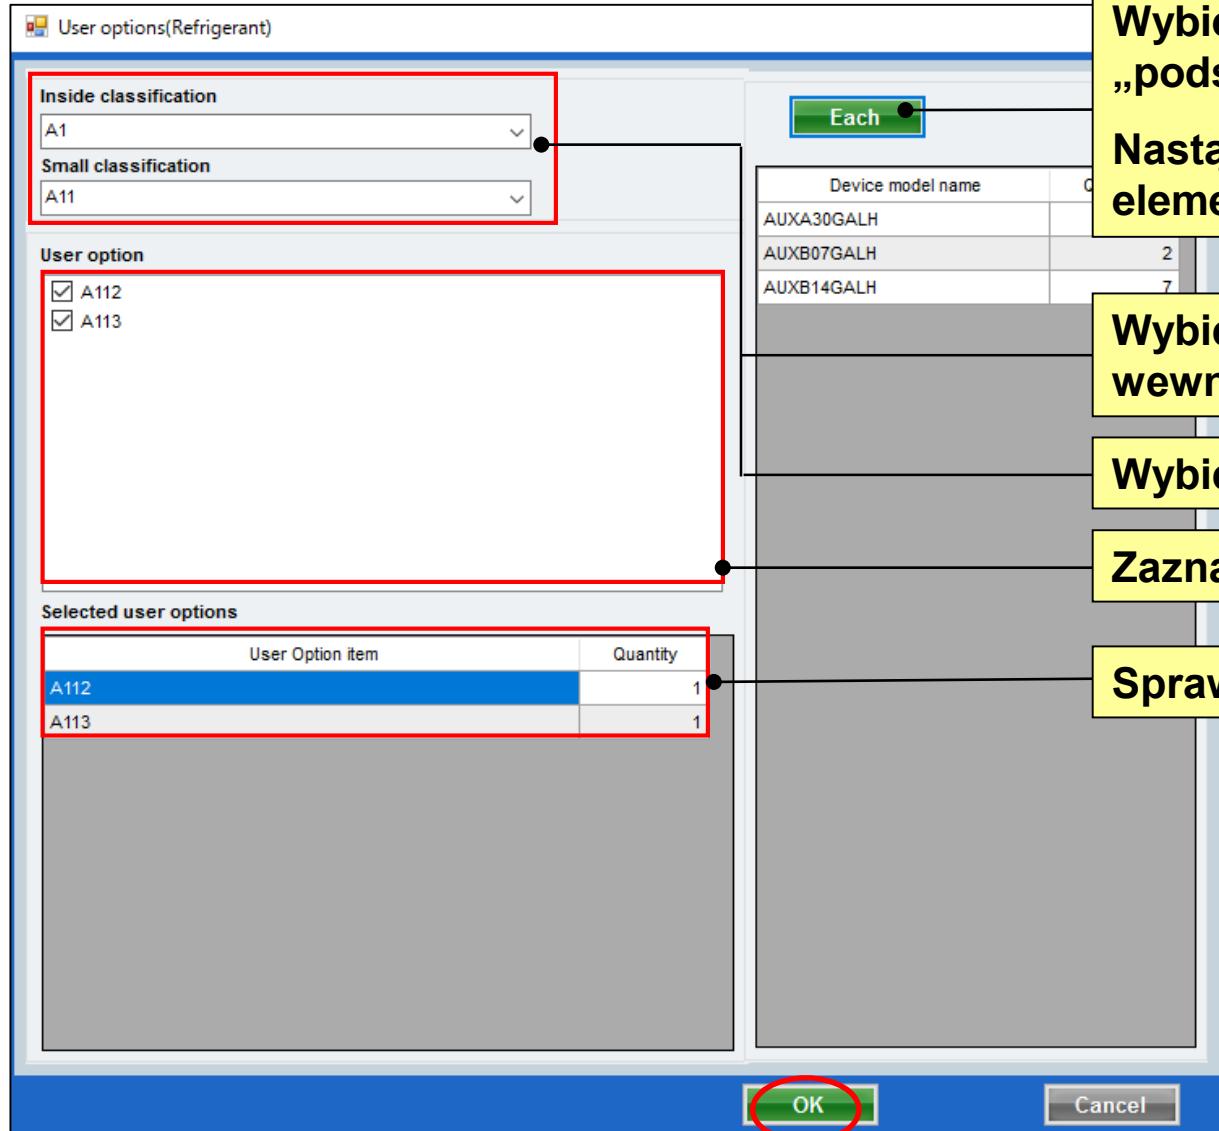

Wybierz „wszystkie” lub „podsumow.”

Nastąpi zmiana wyświetlanych elementów

Wybierz „Klasyfikację wewnętrzną”

Wybierz „Małą klasyfikację”

Zaznacz „Opcje użytkownika”


Sprawdź wybrane opcje

Wybrane opcje zostaną uwzględnione w „Raportie”

Kablolama ayarları


Tasarım Simülatörü

İletişim hattı

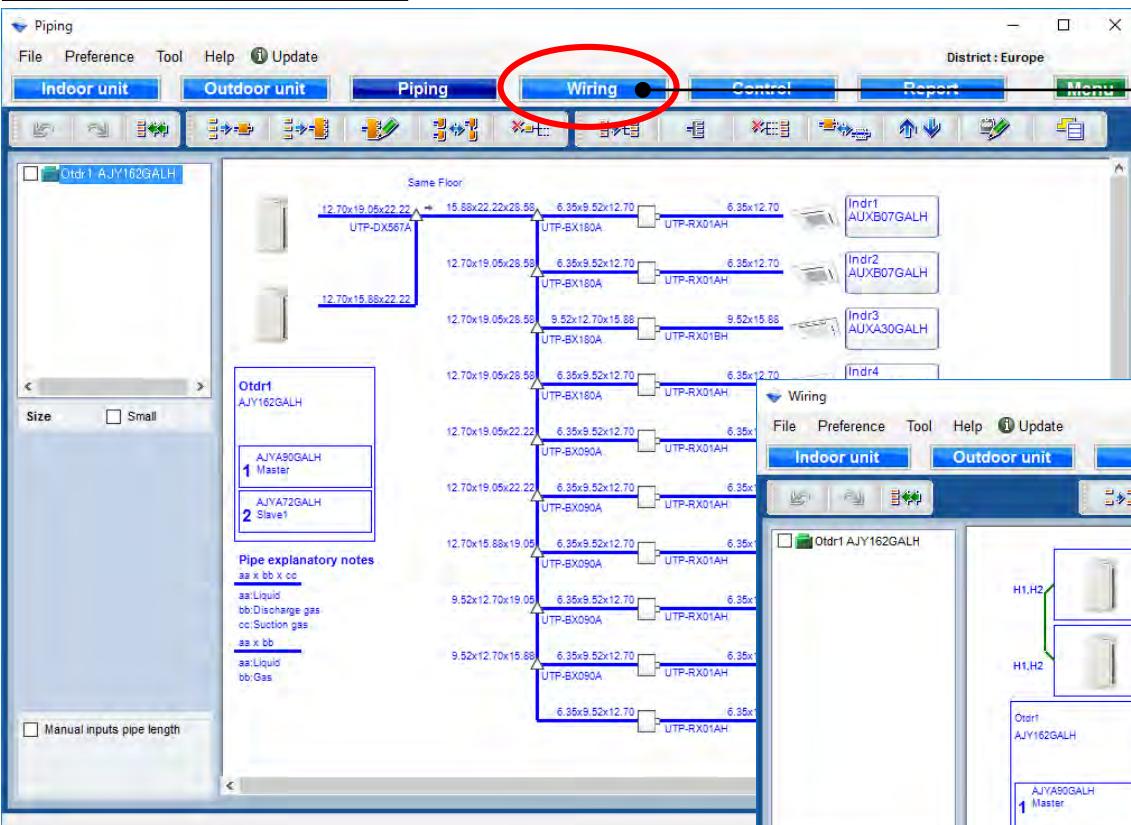

“kablolama” seç

“İletim hattı ” seç

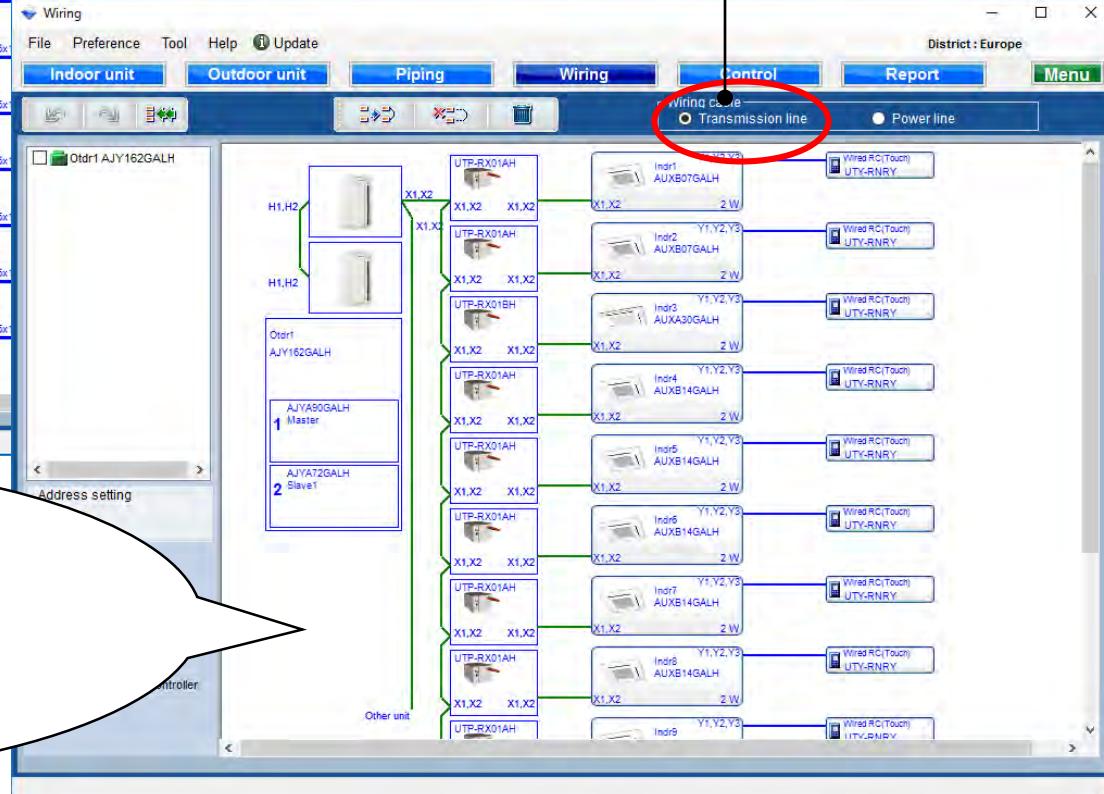


: Transmission line

: Remote controller line

Kablolama ayarları


Tasarım Simülatörü

Güç hattı

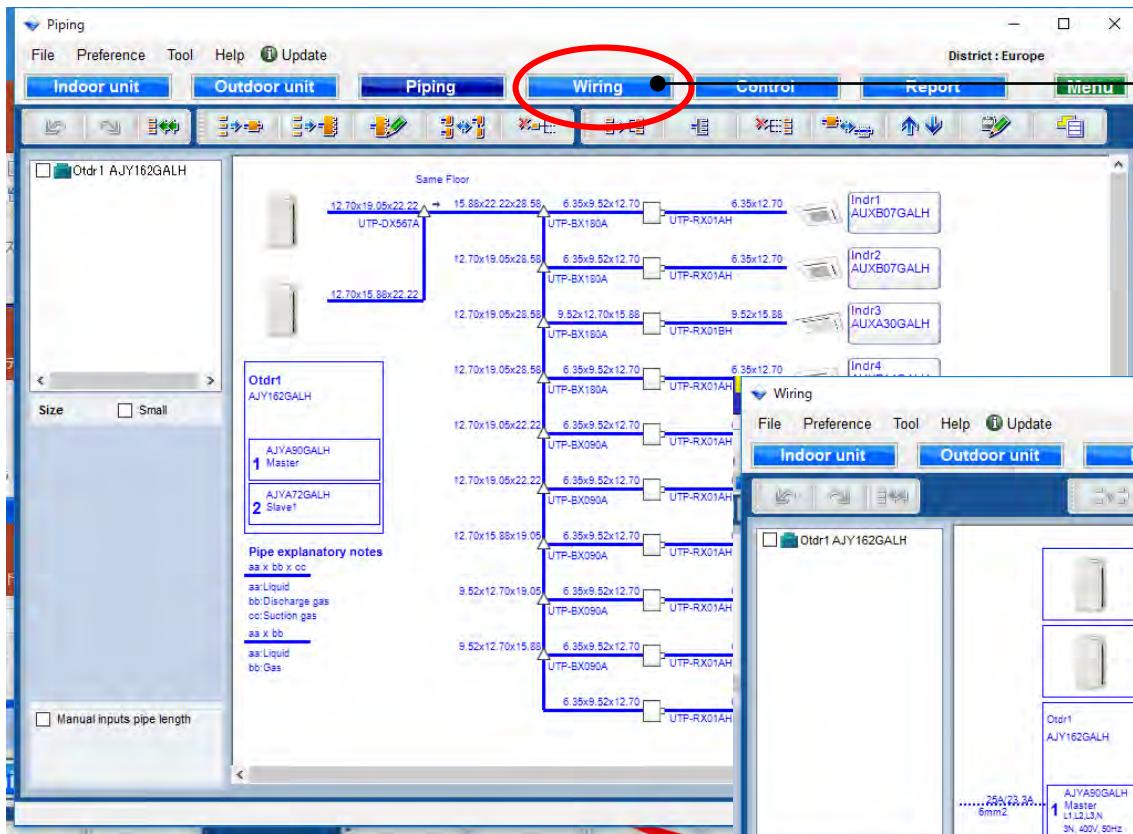

“Kablolama” seç

“Güç hattı” ni seçin

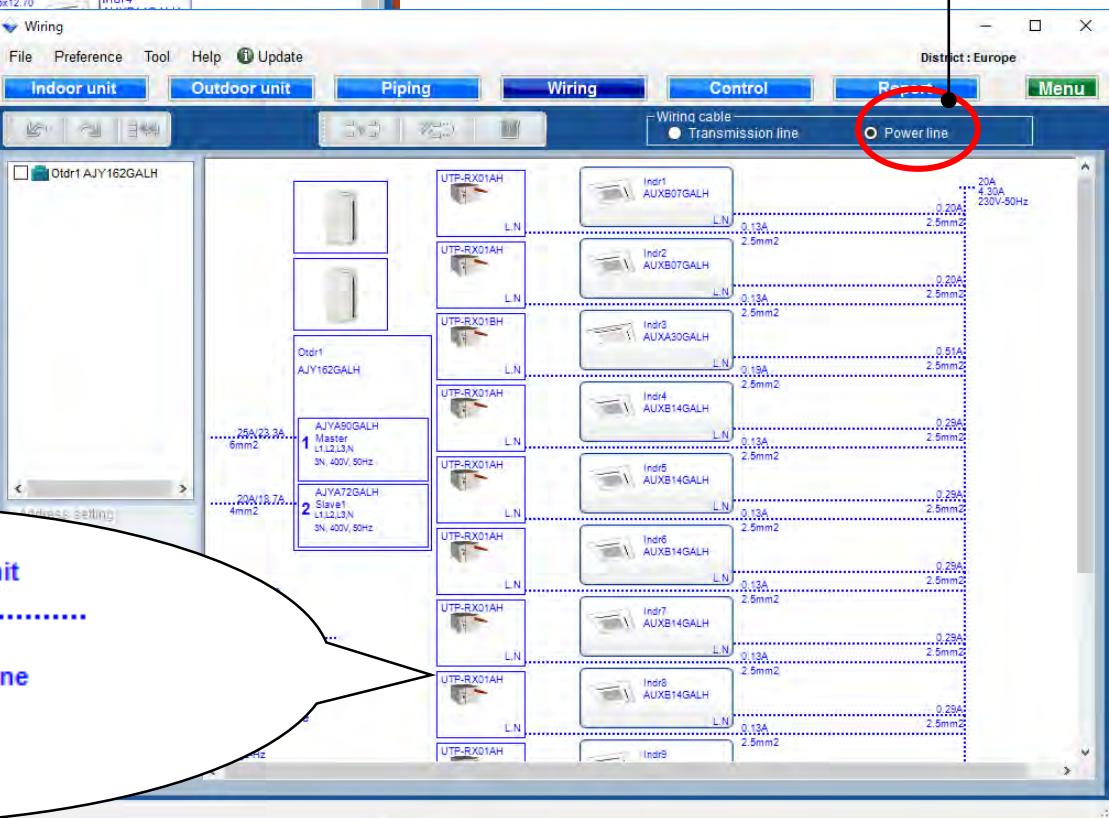

... : Power line


Indoor
Outdoor
Breaker/MCA
Diameter

Indoor, RB unit
MCA
Diameter
Total power line
Breaker
MCA
Voltage-Hz

Kablolama ayarları

Tasarım Simülatörü


Gruplandırma (1/2)

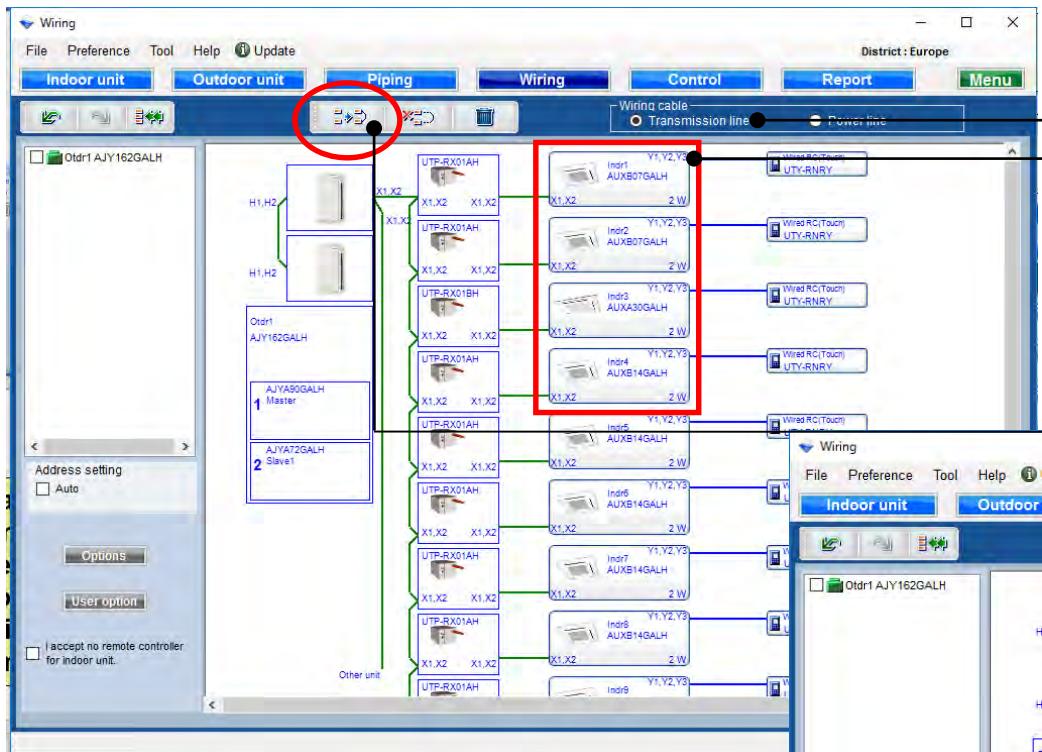


“Tercihli” “Toplam elektrik hattı / Her elektrik hattı” düzenlenebilir

İç birimi seç

“Grup uzaktan kumandayı” Sec

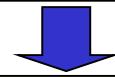


Otomatik olarak uzaktan kumanda grubu satırı oluşturun.

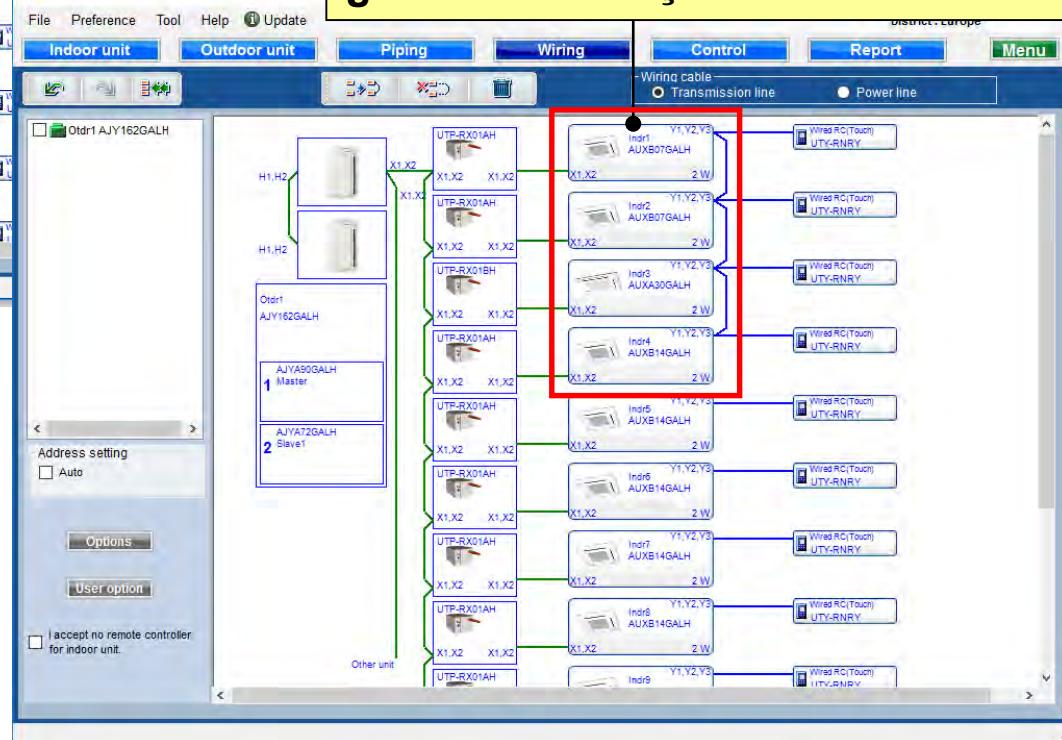


Kablolama ayarları

Tasarım Simülatörü

Gruplandırma (2/2)

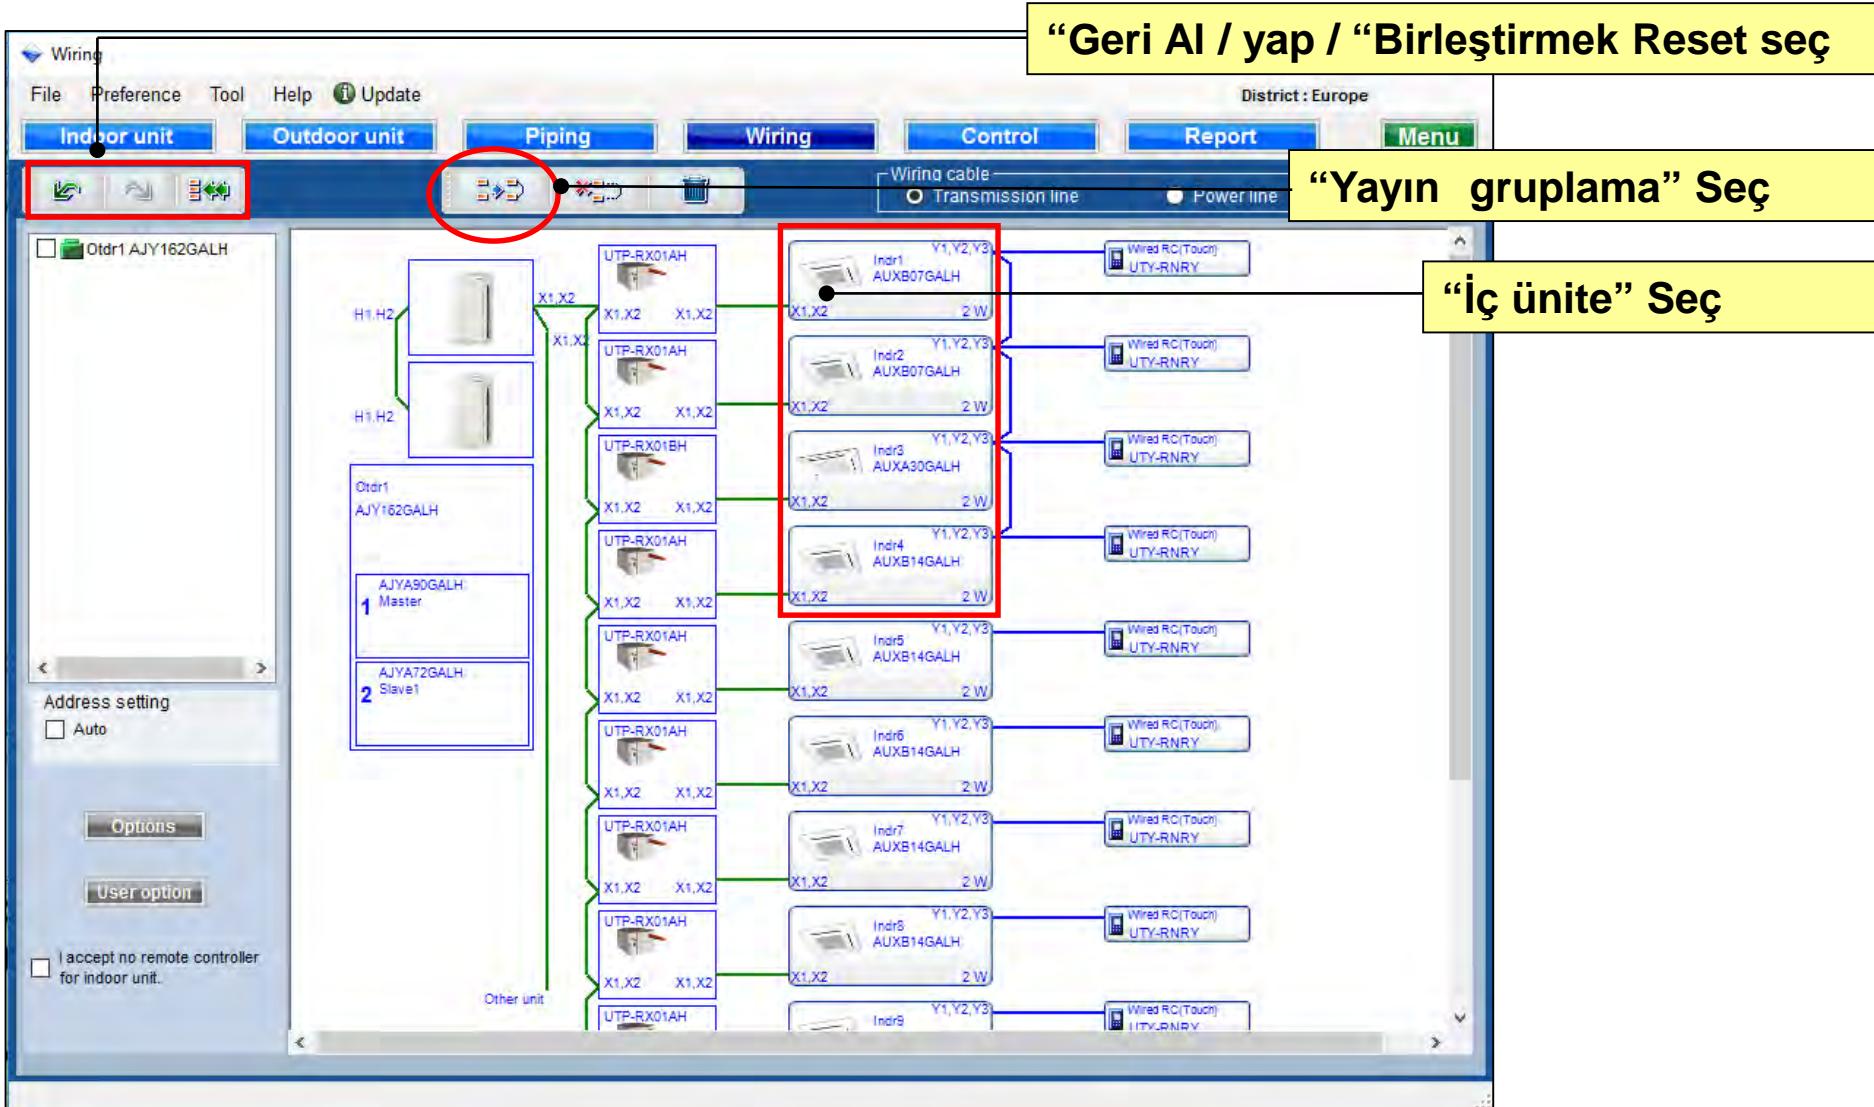


Onaykutusu

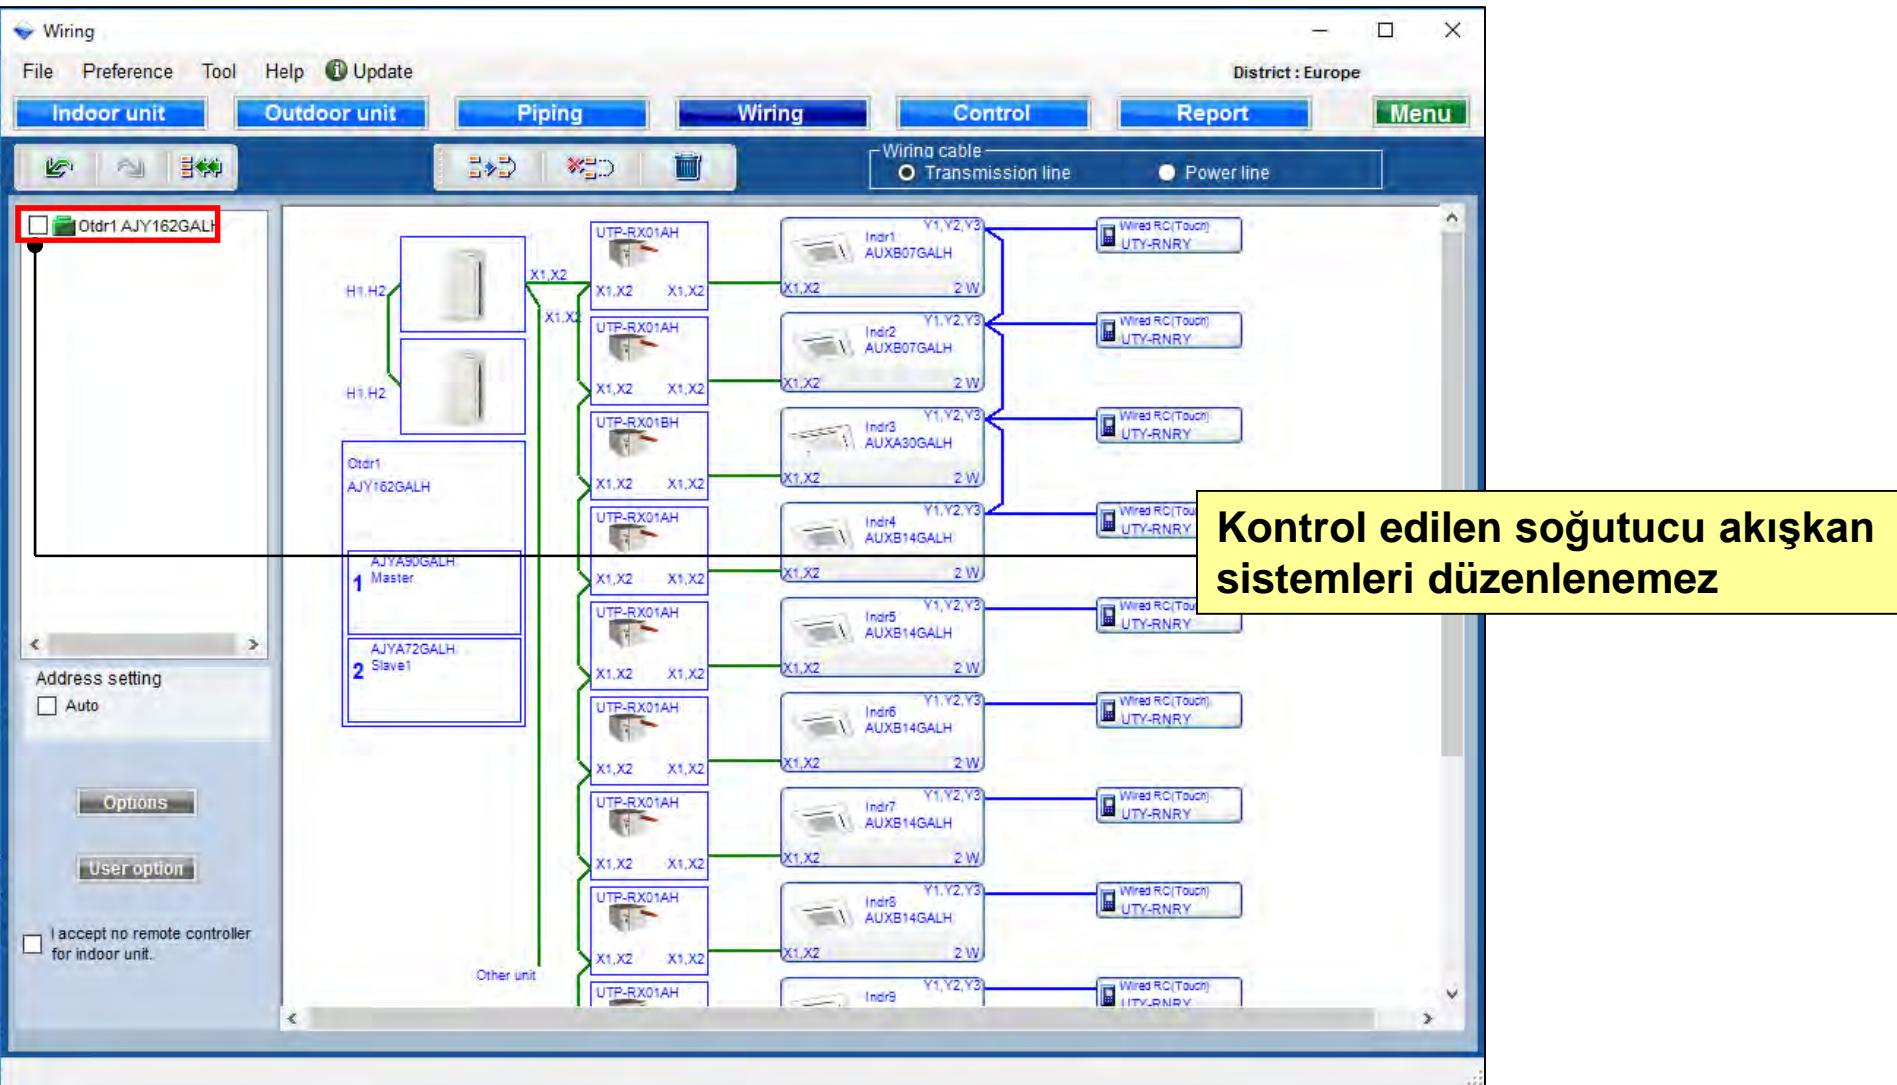

Kablolama ayarları

Tasarım Simülatörü


Silmek

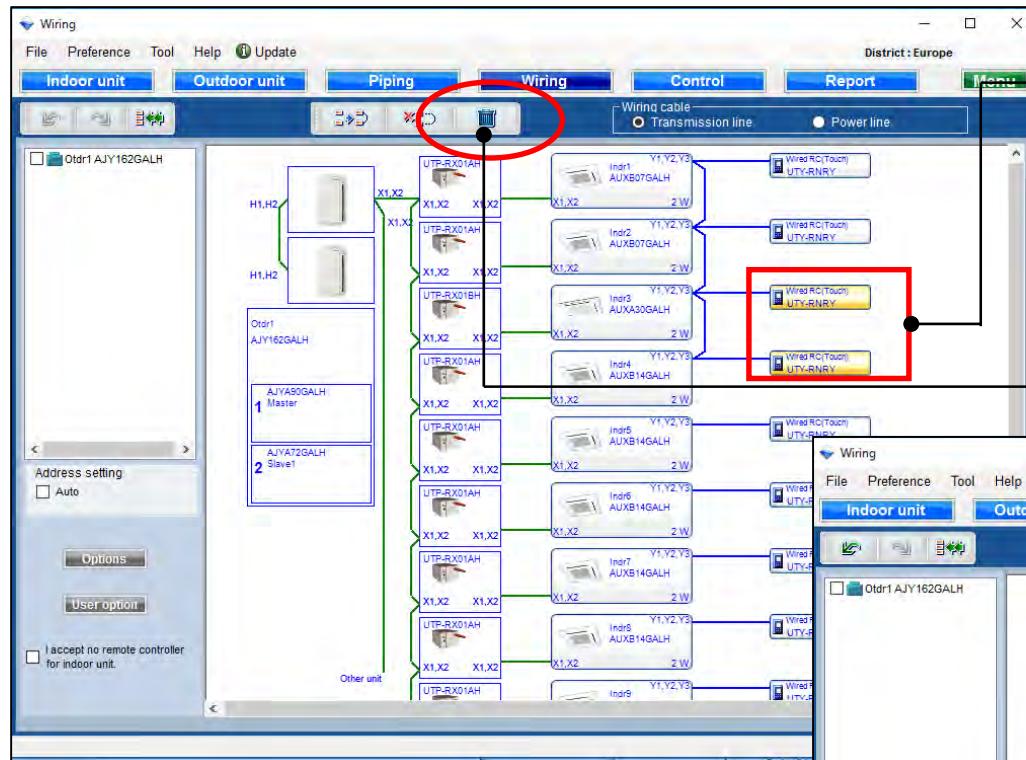

Uzaktan kumanda seçin

“Uzaktan kumandayı sil” i seçin

Otomatik olarak mavi çizгиyi
değiştirmek uzaktan kumandayı silin.

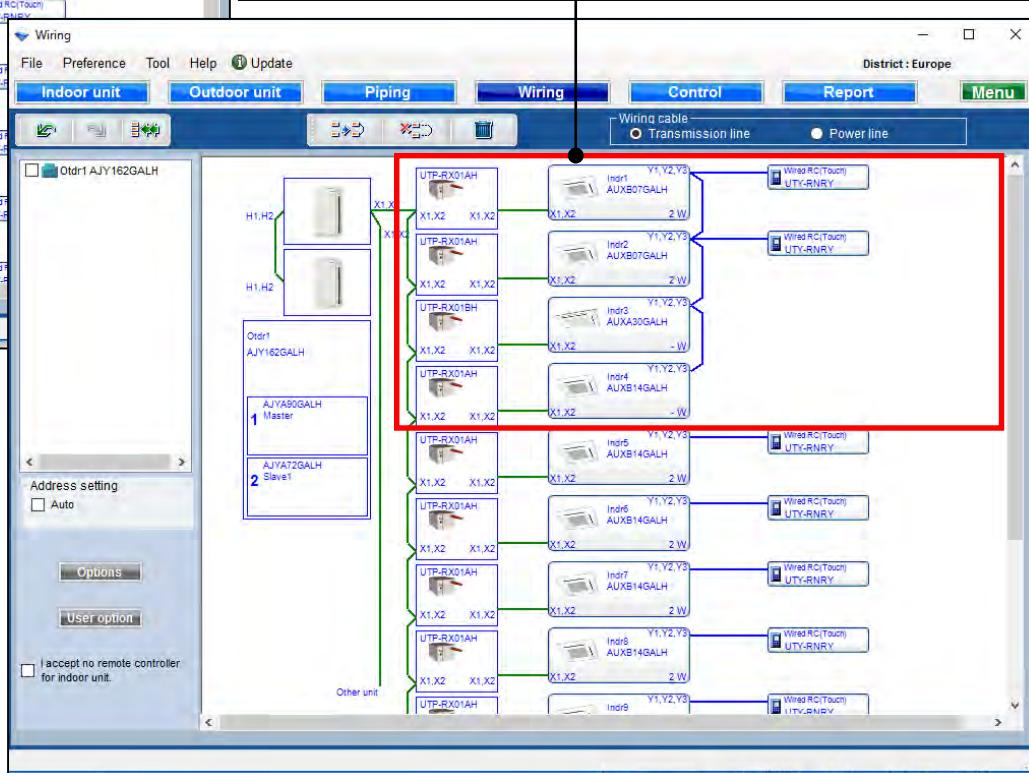

Kablolama ayarları

Tasarım Simülatörü

Adres ayarı

The screenshot shows two instances of the 'Wiring' software interface. Both instances have the title bar 'Wiring' and the menu bar 'File Preference Tool Help Update'. The top window is titled 'District : Europe' and has tabs for Indoor unit, Outdoor unit, Piping, Wiring, Control, Report, and Menu. The 'Wiring' tab is selected. A toolbar below the tabs includes icons for opening files, saving, printing, and deleting. A status bar at the bottom indicates 'Wiring cable Transmission line'.

The left window displays a network diagram with several nodes connected by green lines labeled 'X1,X2'. One node is labeled 'Indr1 AJY162GALH'. Below the diagram is a configuration panel with the following options:

- Address setting:** A dropdown menu with 'Auto' selected, circled in red.
- Options:** A button.
- User option:** A button.
- I accept no remote controller for indoor unit.**: A checked checkbox.

The right window also displays a similar network diagram with nodes and connections. It has a configuration panel with the following options:

- Address setting:** A dropdown menu with 'Auto' selected, circled in red.
- Options:** A button.
- User option:** A button.
- I accept no remote controller for indoor unit.**: A checked checkbox.


Text Labels:

- "Otomatik Adres" kullanılıp kullanılmadığını kontrol edin
- "Uzaktan kumanda" gereksiz olup olmadığını kontrol edin

Kablolama ayarları

Tasarım Simülatörü

seçenek

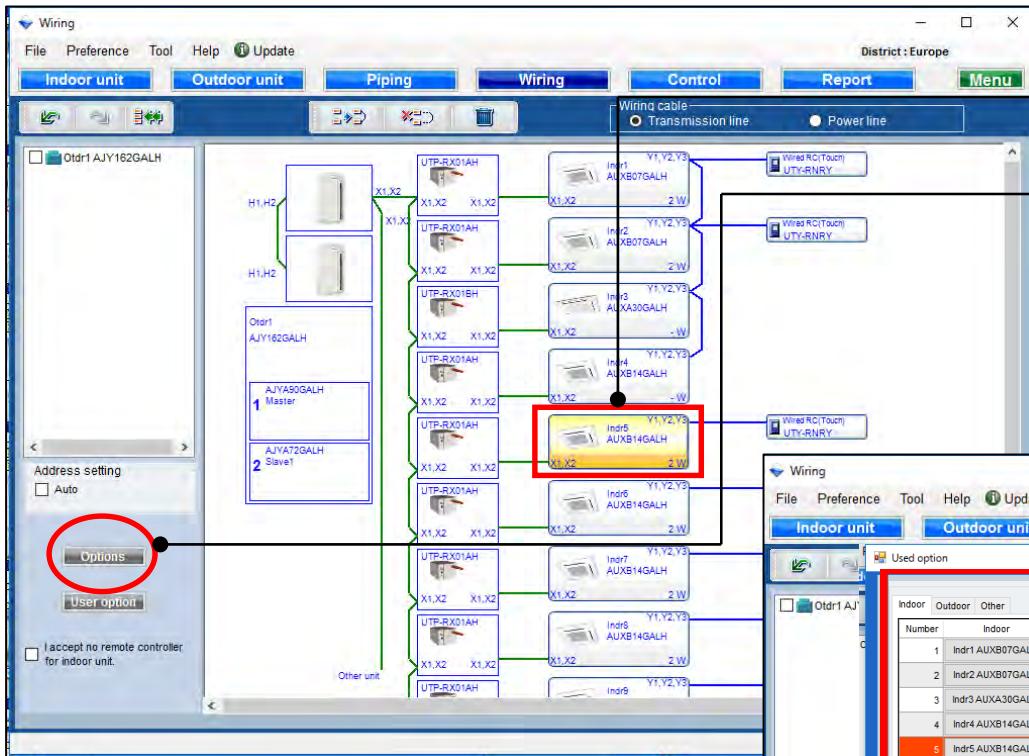


İç ünite seç

“Seçenekler” i seçin




Kullanılan seçenek ekranını açın.

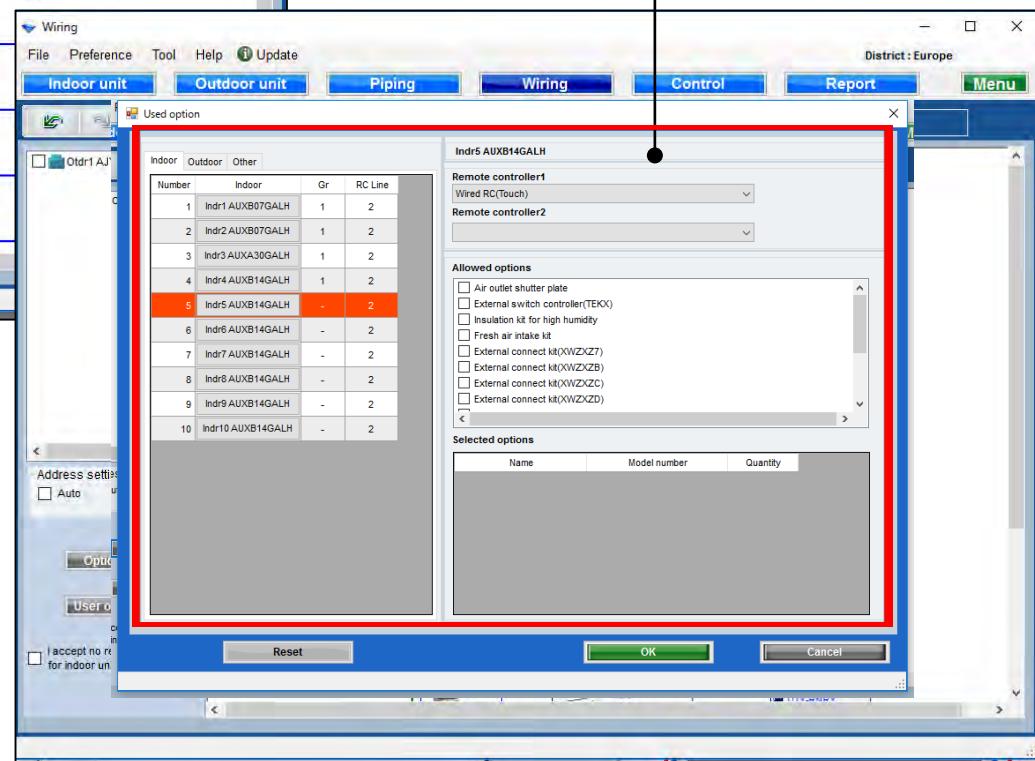

Kablolama ayarları


Tasarım Simülatörü

Kullanılmış seçenek

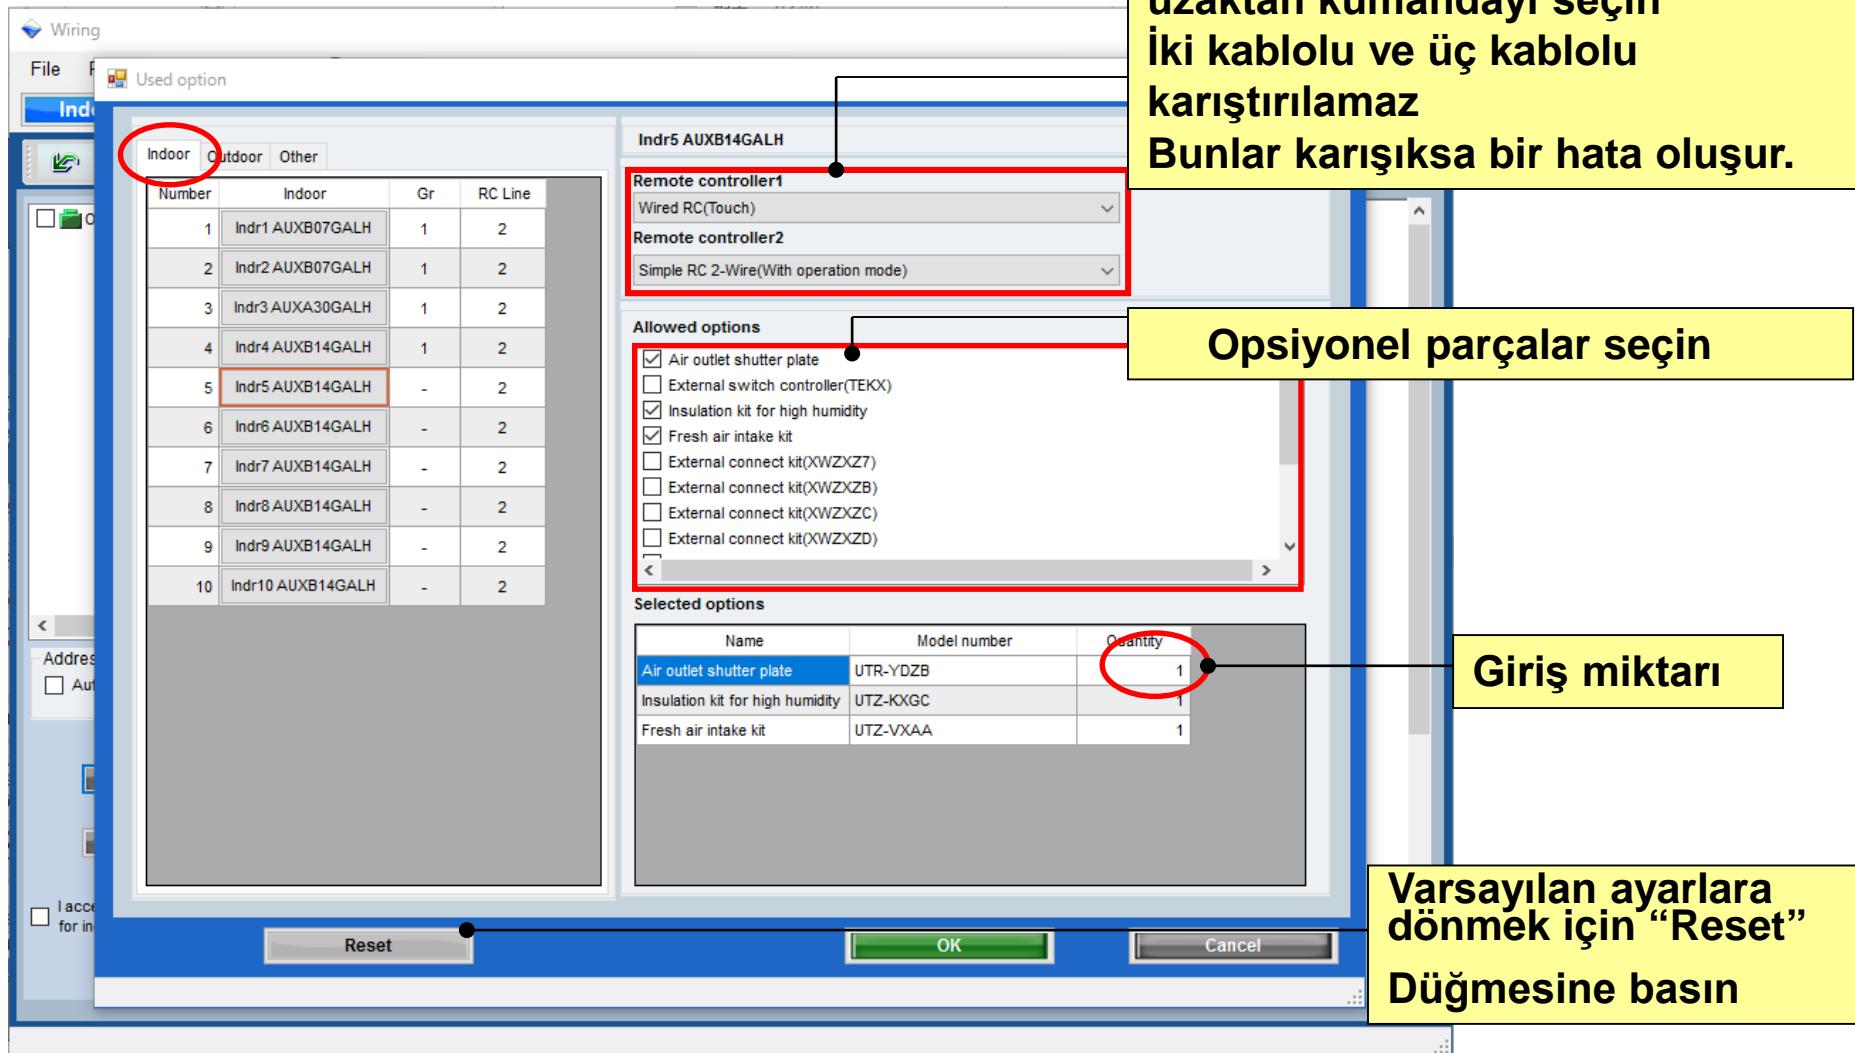


Seçilen seçenekler “Rapor” da görüntülenir.

Kullanılmış seçenek

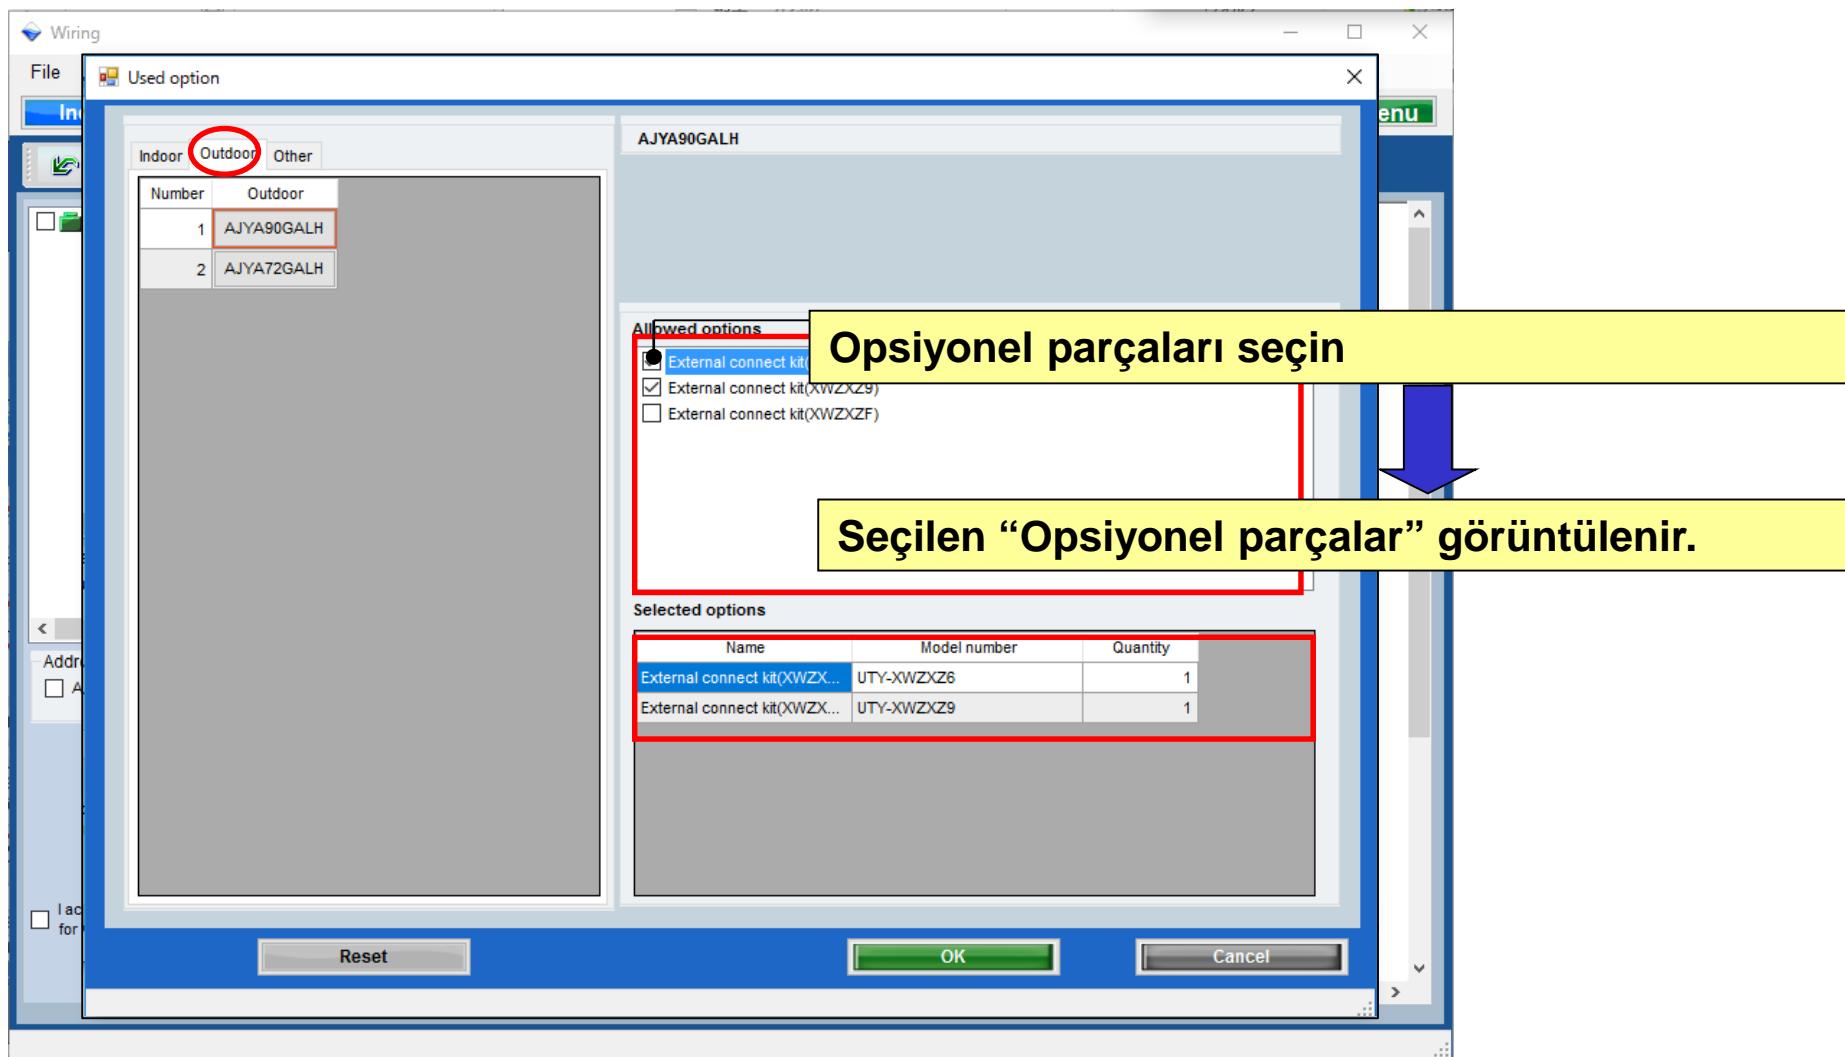

Kullanılmış seçenek

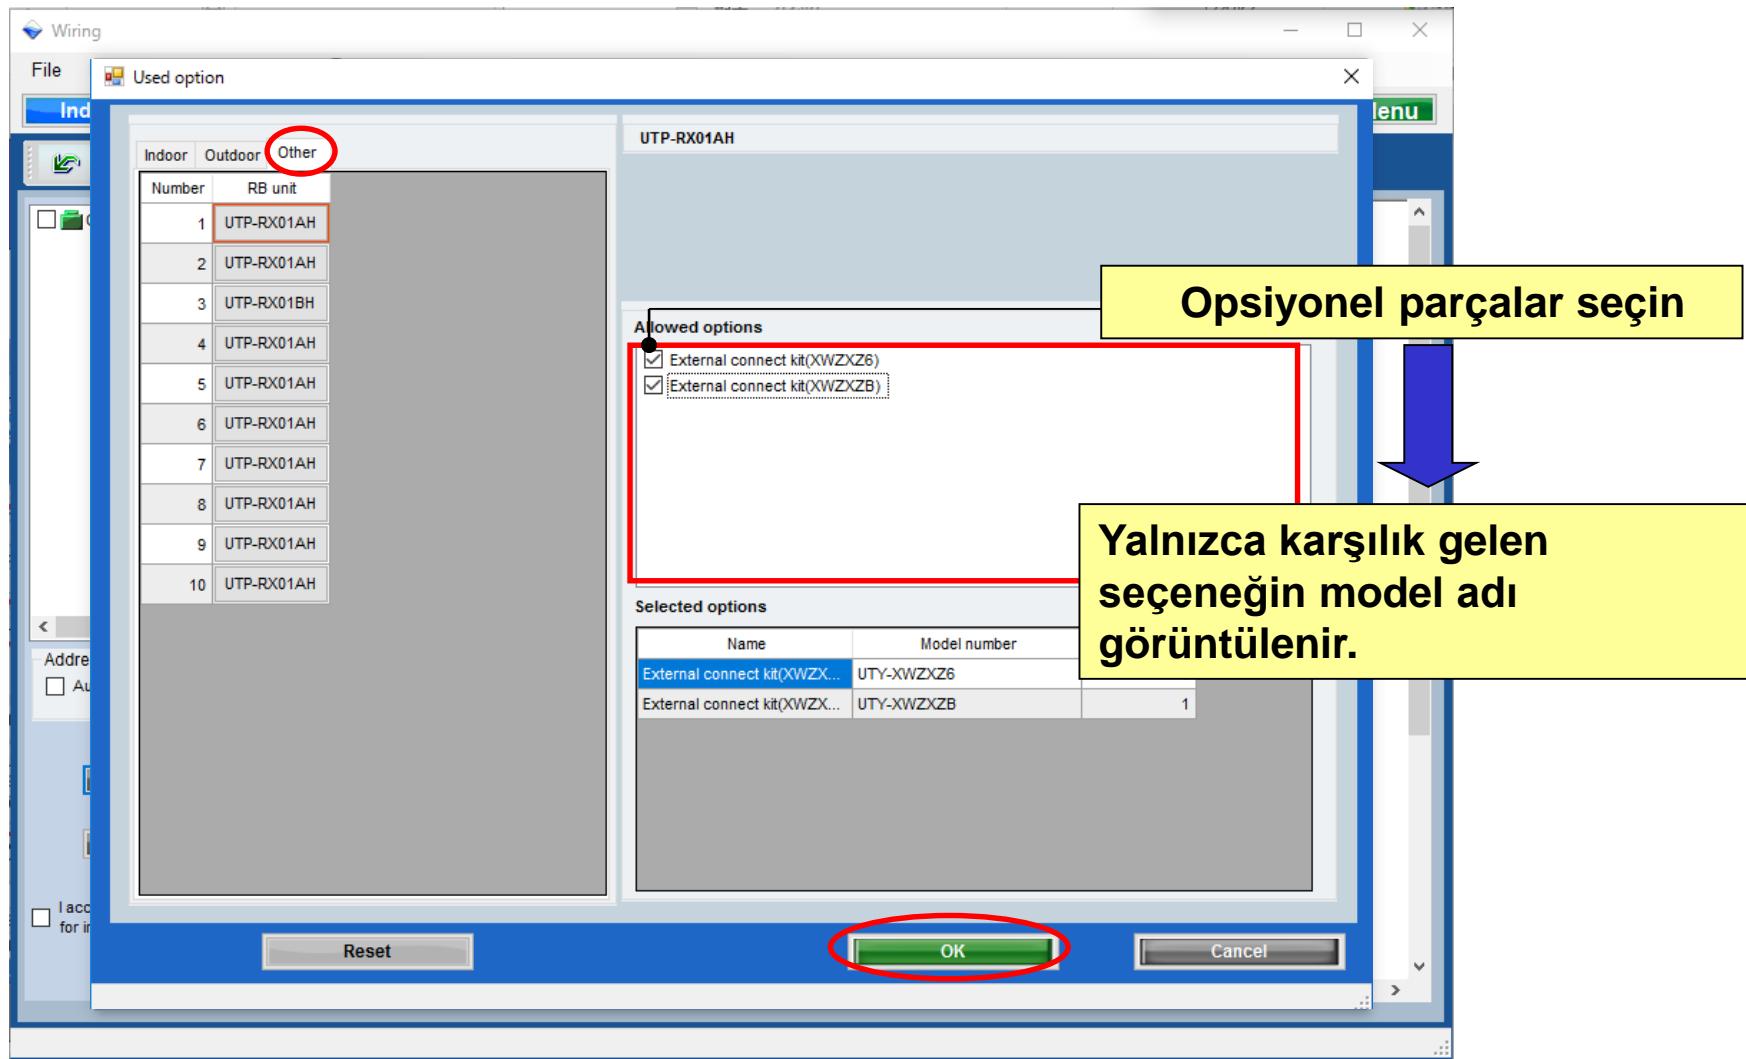


Seçilen seçenekler “Raporu” görüntülenir


Kablolama ayarları

Tasarım Simülatörü

kullanıcı seçenek

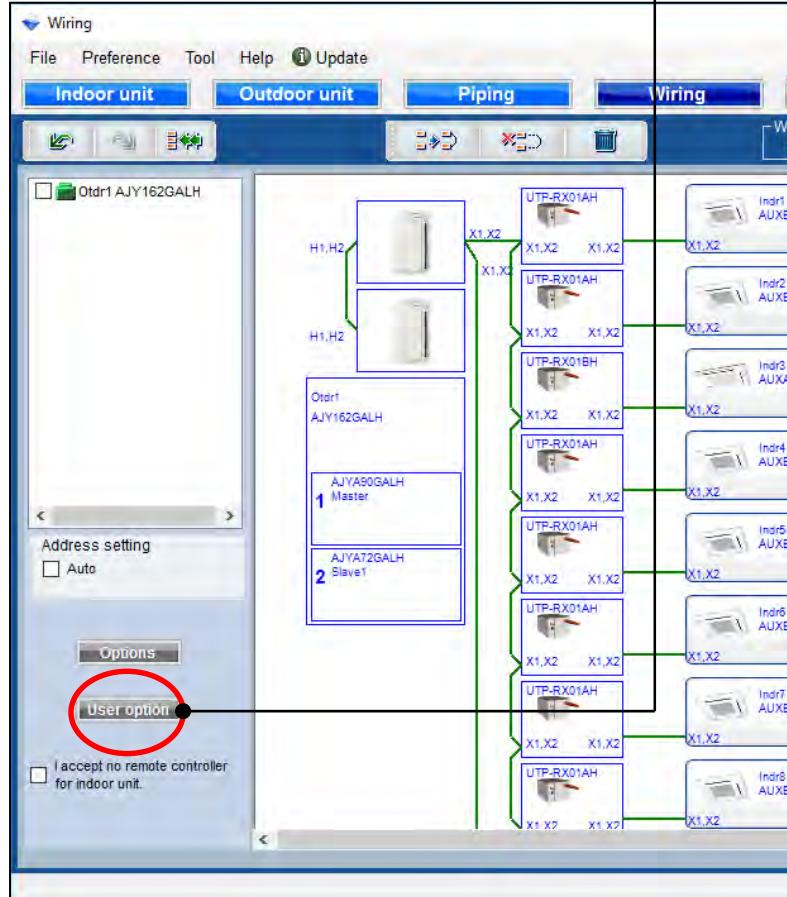

Kullanıcı Seçenekler" seç

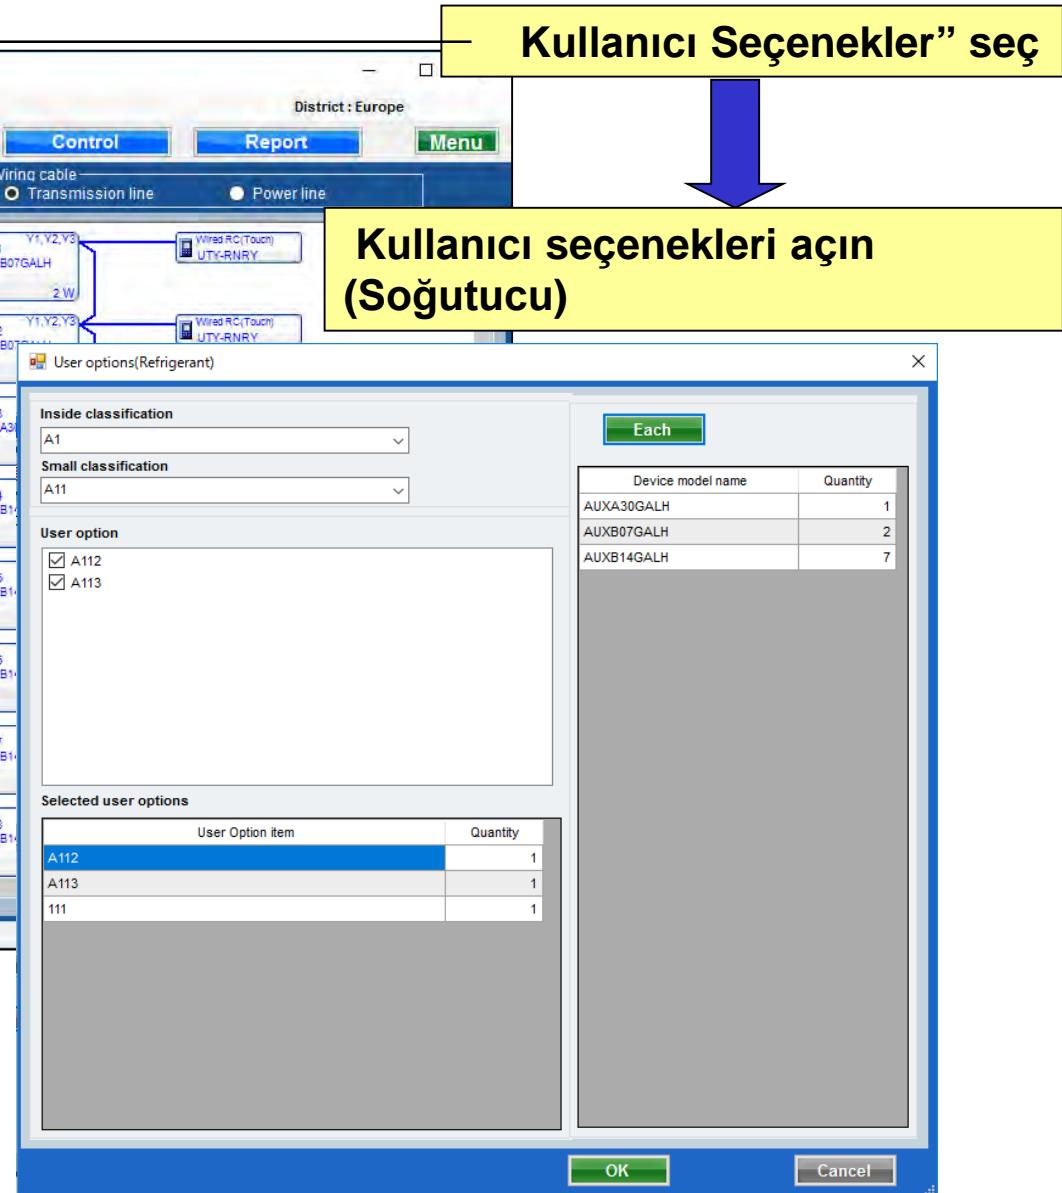


Kullanıcı seçenekleri açın
(Soğutucu)

Kablolama ayarları

Tasarım Simülatörü

kullanıcı seçenek(Soğutucu)

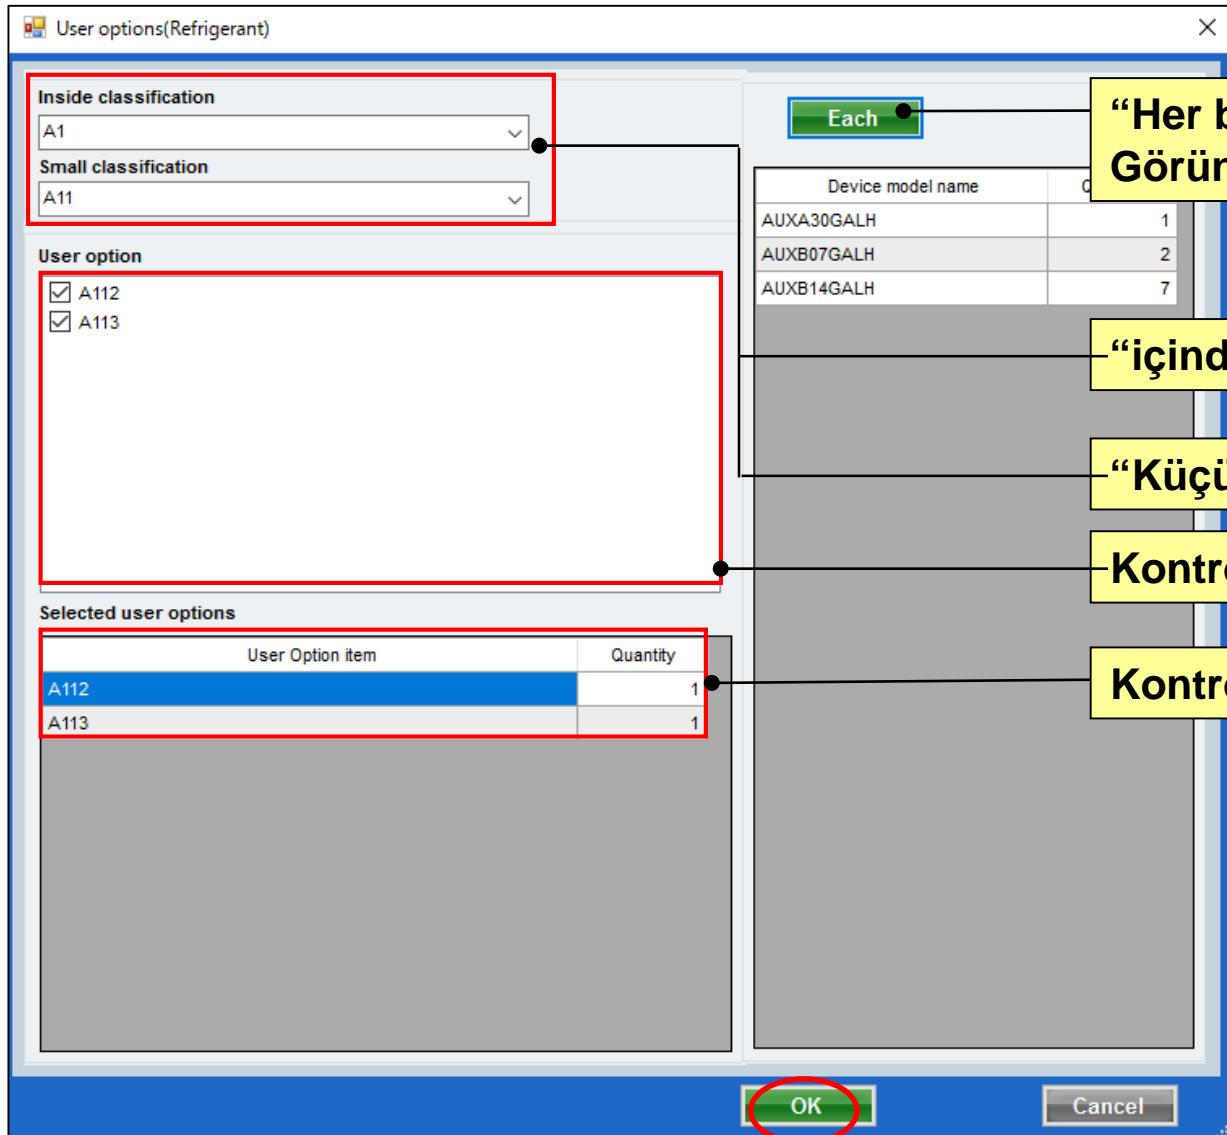

Seçilen seçenekler "Rapor" da görüntülenir.

"Her biri veya Özeti" i seçin.
Görüntülenen içerik değişir.

"İçinde sınıflandırma" seçin

"Küçük sınıflandırma" seçin


Kontrol "Kullanıcı seçeneği"

Kontrol "Kullanıcı seçeneği"

Podešavanje kabliranja


Design Simulator

Prenosni vod

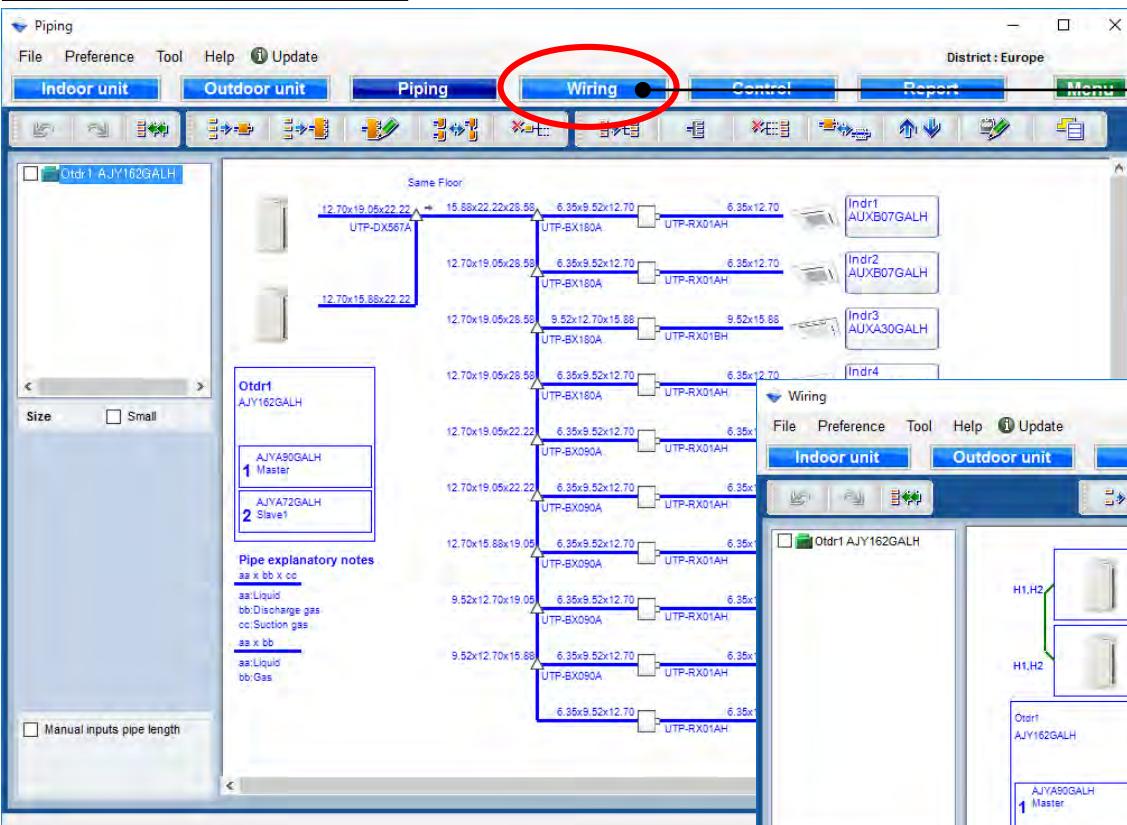

Izaberite "Kabliranje"


Izaberite "Prenosni vod"

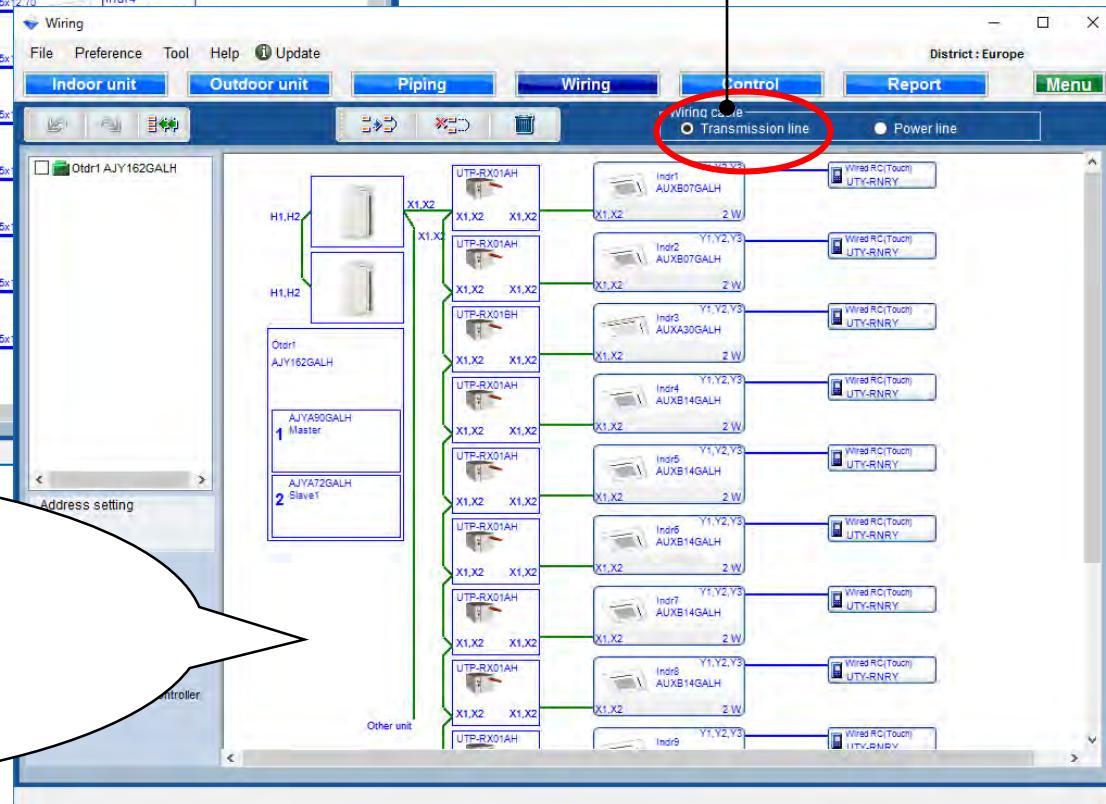

Podešavanje kabliranja

Design Simulator

Strujni vod

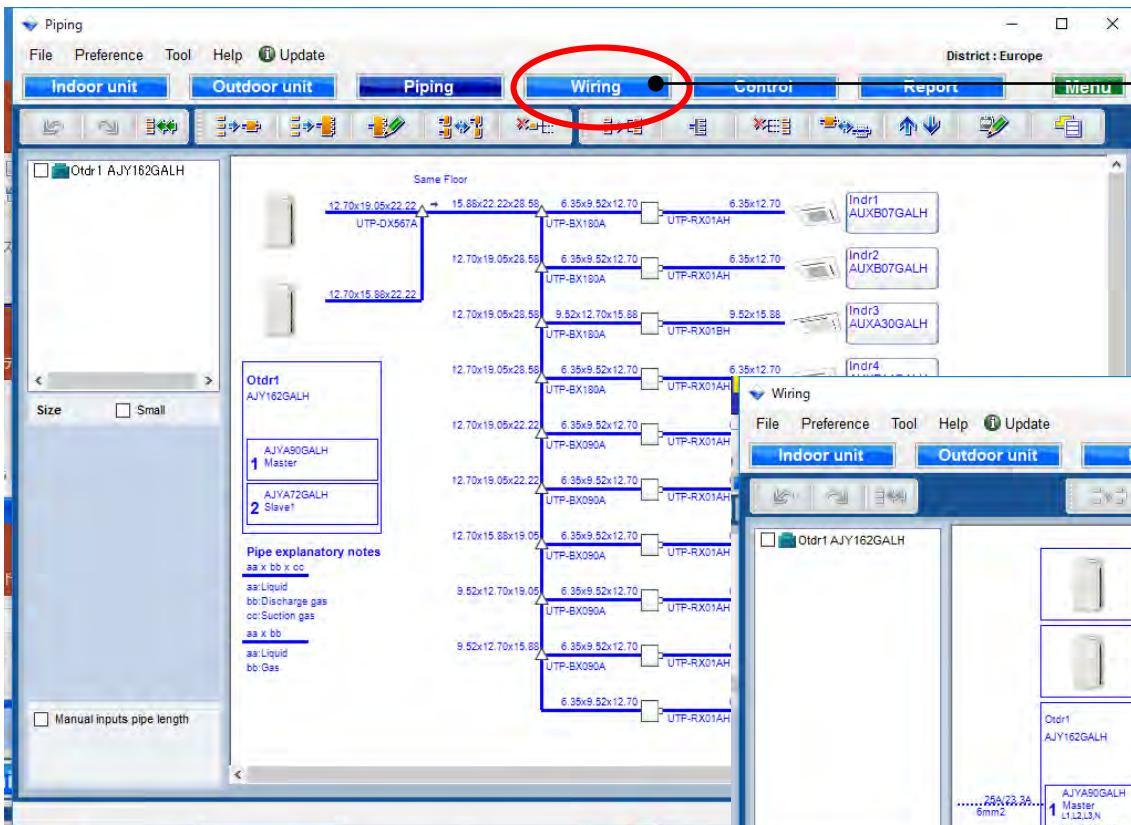

Izaberite "Kabliranje"

Izaberite "Strujni vod"

... : Power line


Outdoor
Breaker/MCA
Diameter

Indoor, RB unit


MCA
Diameter

Total power line

Breaker
MCA
Voltage-Hz

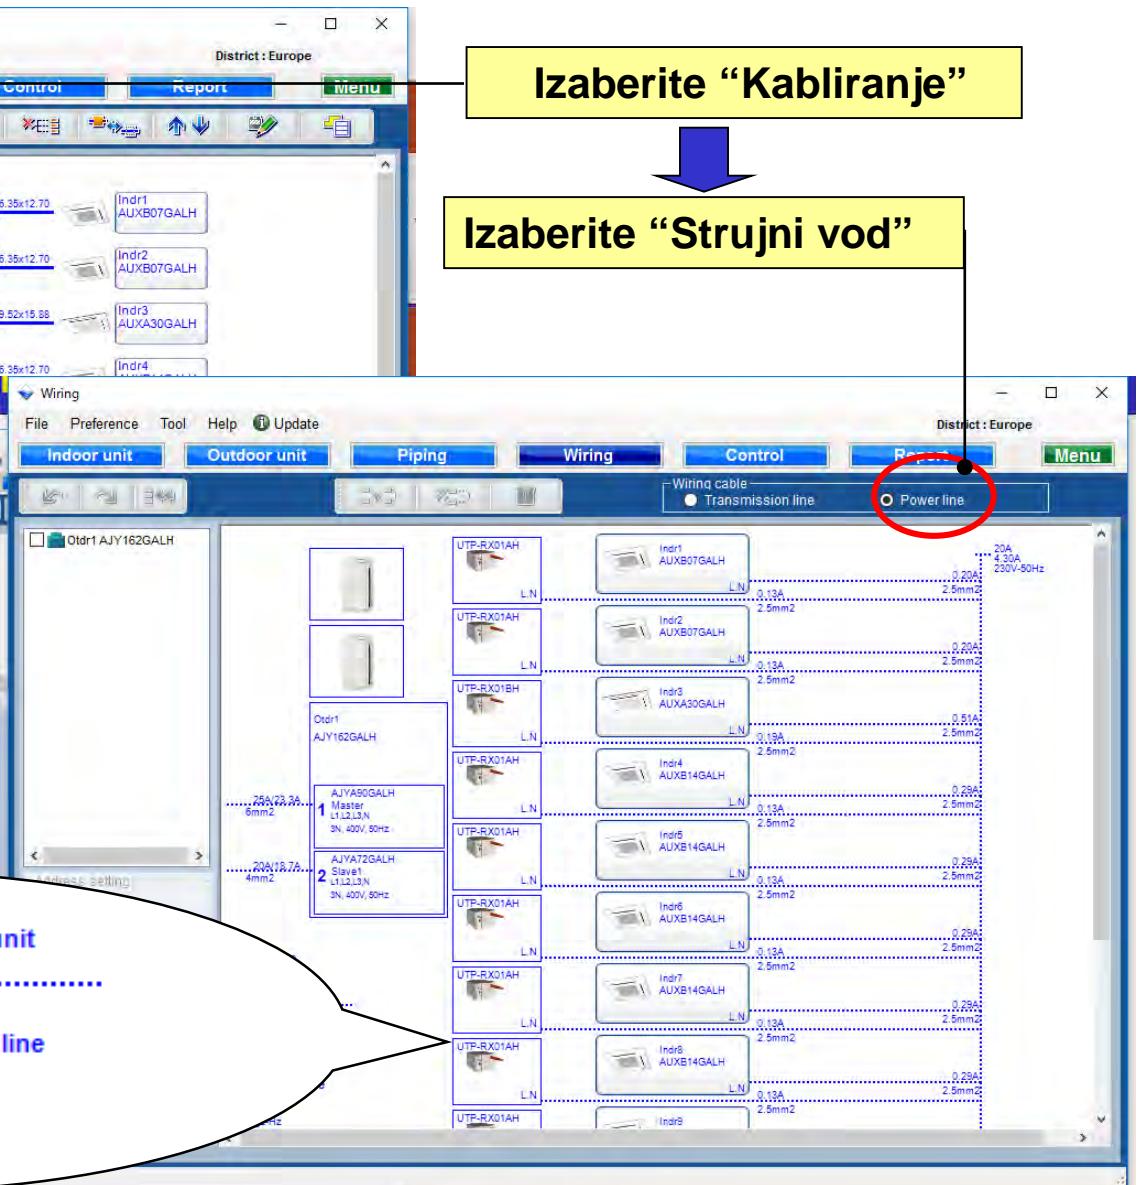

Grupisanje(1/2)

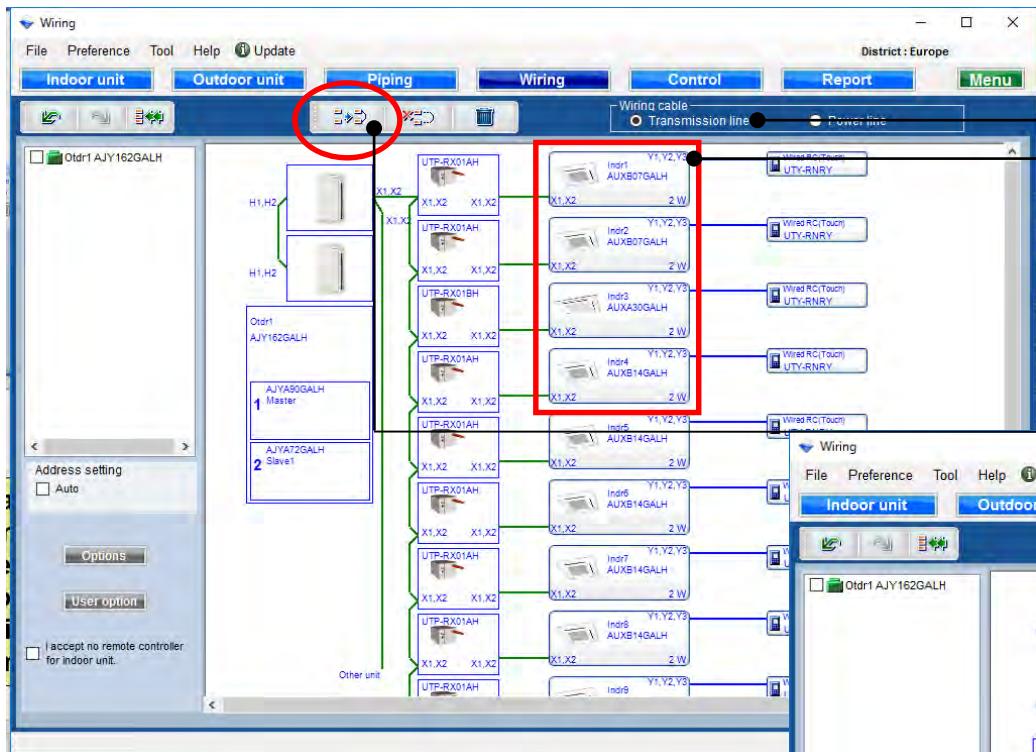


“Celokupan strujni vod / Pojedinačni strujni vod” sa “preferencom” može se uređivati


Izaberite unutrašnju jedinicu

Izaberite “Zajednički daljinski upravljač”

Automatski kreirate grupnu vezu daljinskog upravljača

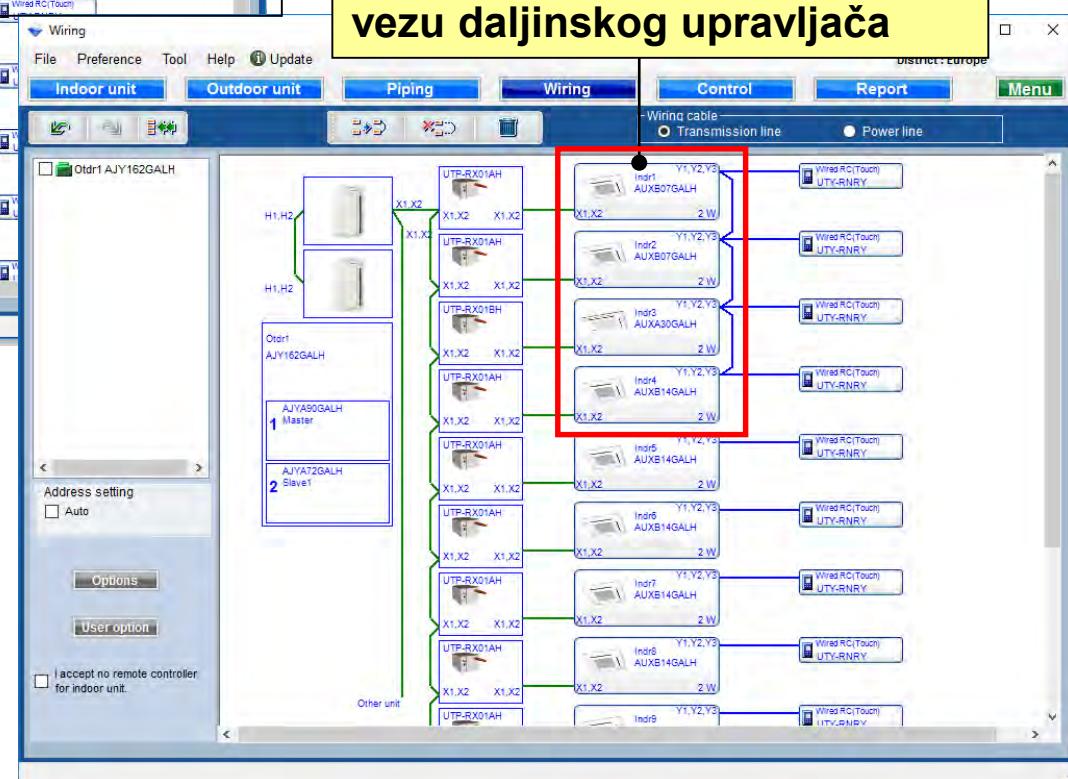

Grupisanje(2/2)

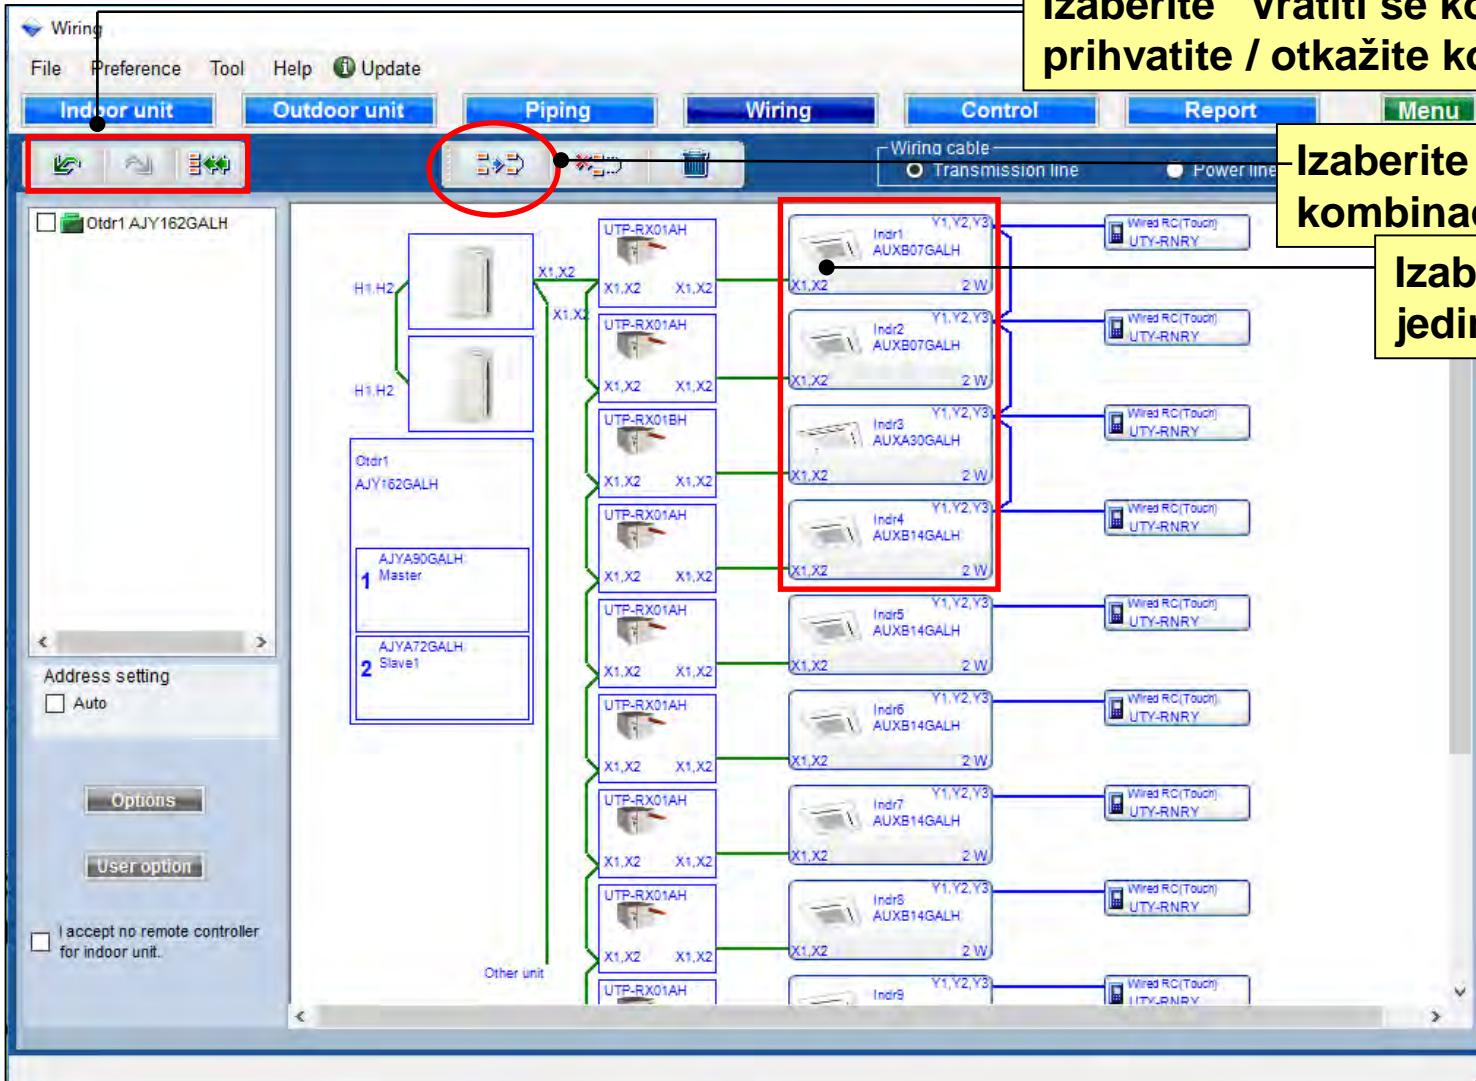


Izaberite "Vratiti se korak nazad / prihvati / otkažite kombinaciju"


Izaberite "Otkažite kombinaciju"

Izaberite "unutrašnja jedinica"

Polje za potvrdu

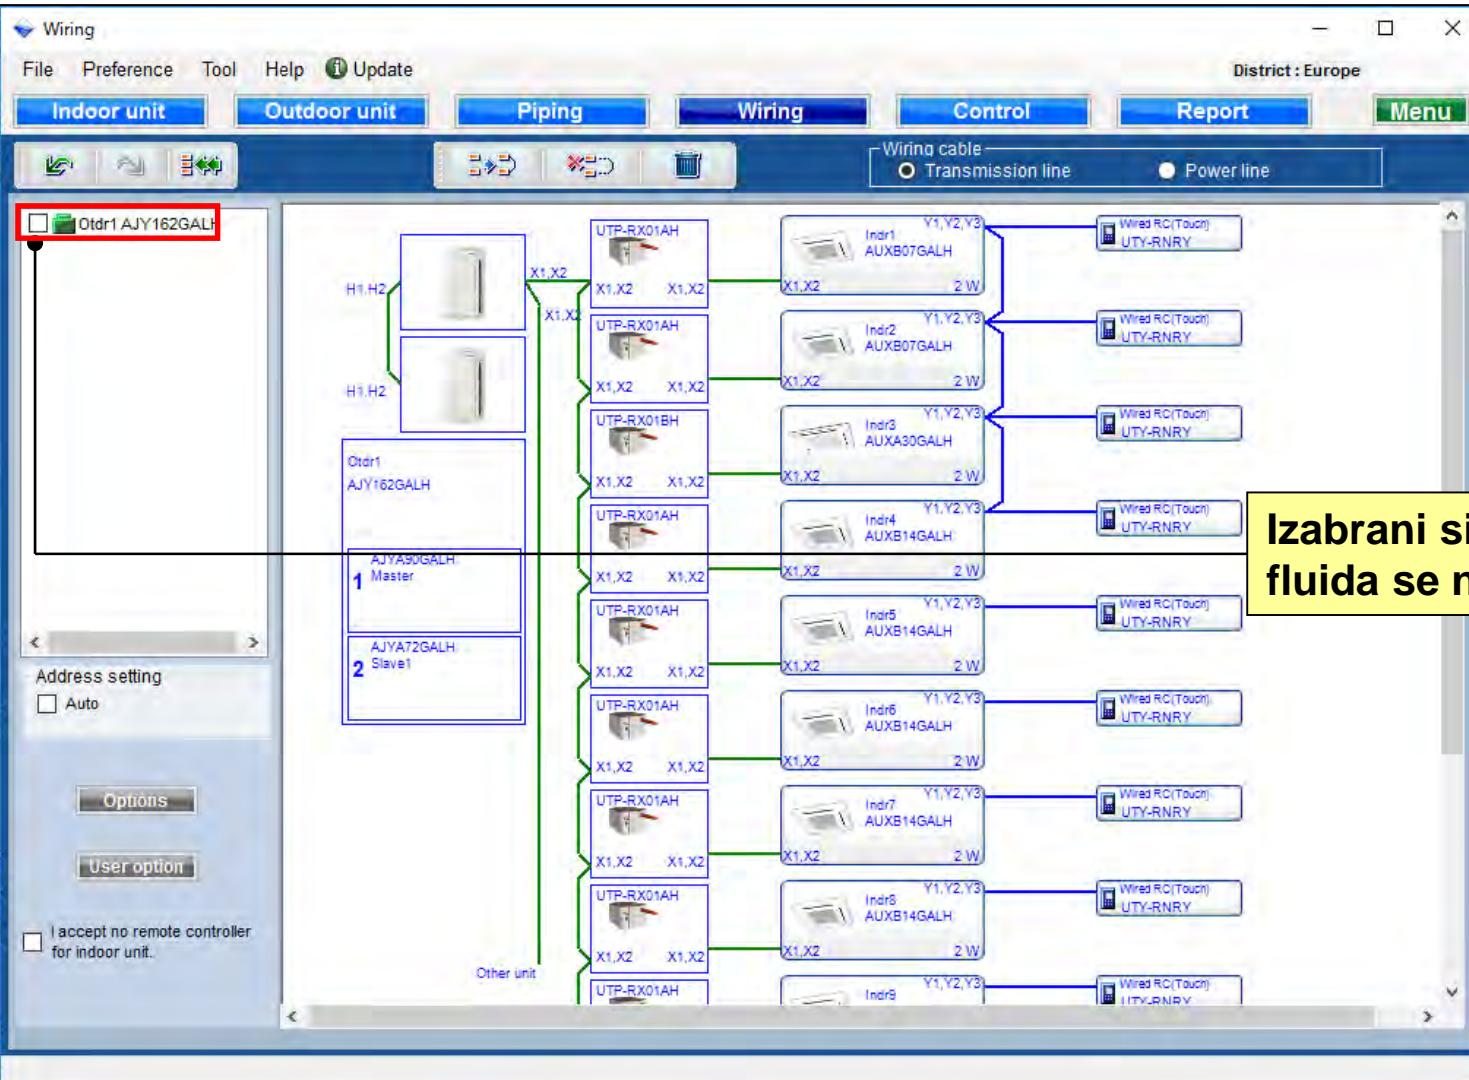


Brisanje

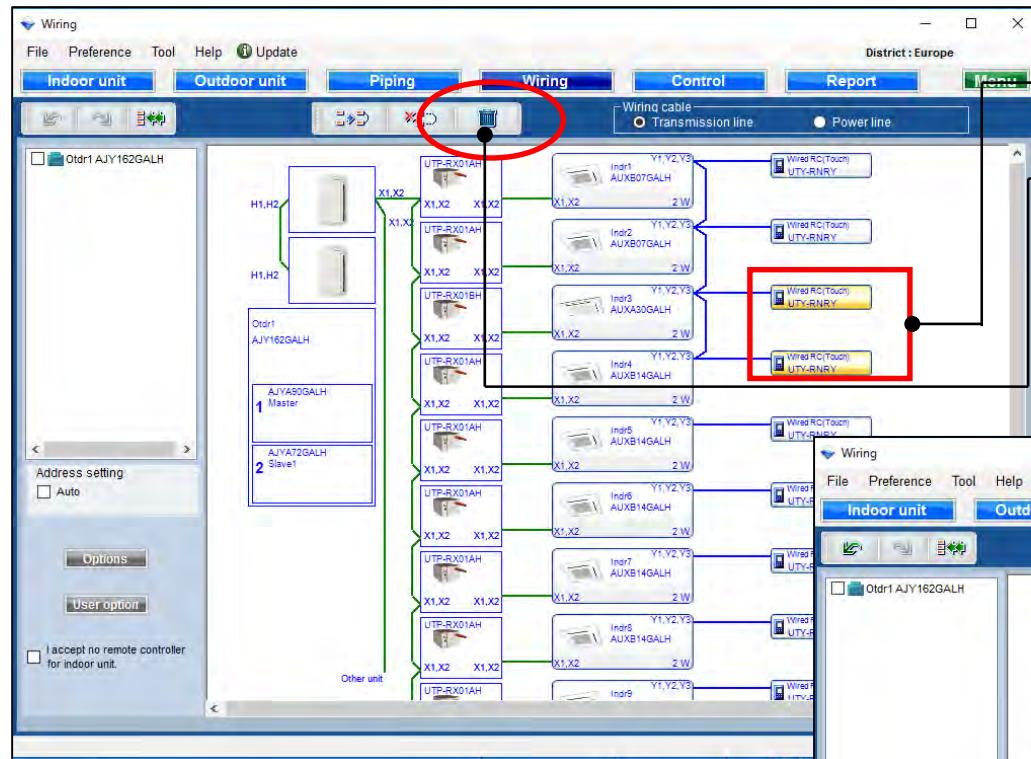


Izaberite daljinski upravljač

Izaberite "Obrišite daljinski upravljač"


Automatsko brisanje
daljinskog upravljača,
promenite plavu liniju.

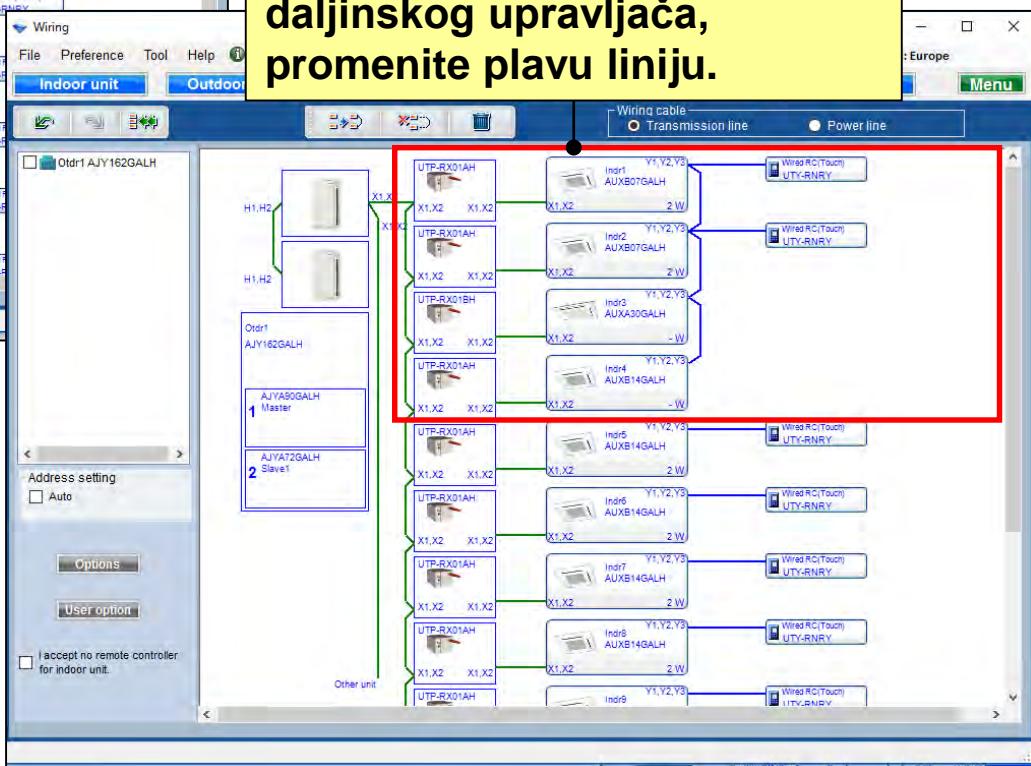

Podešavanje adrese

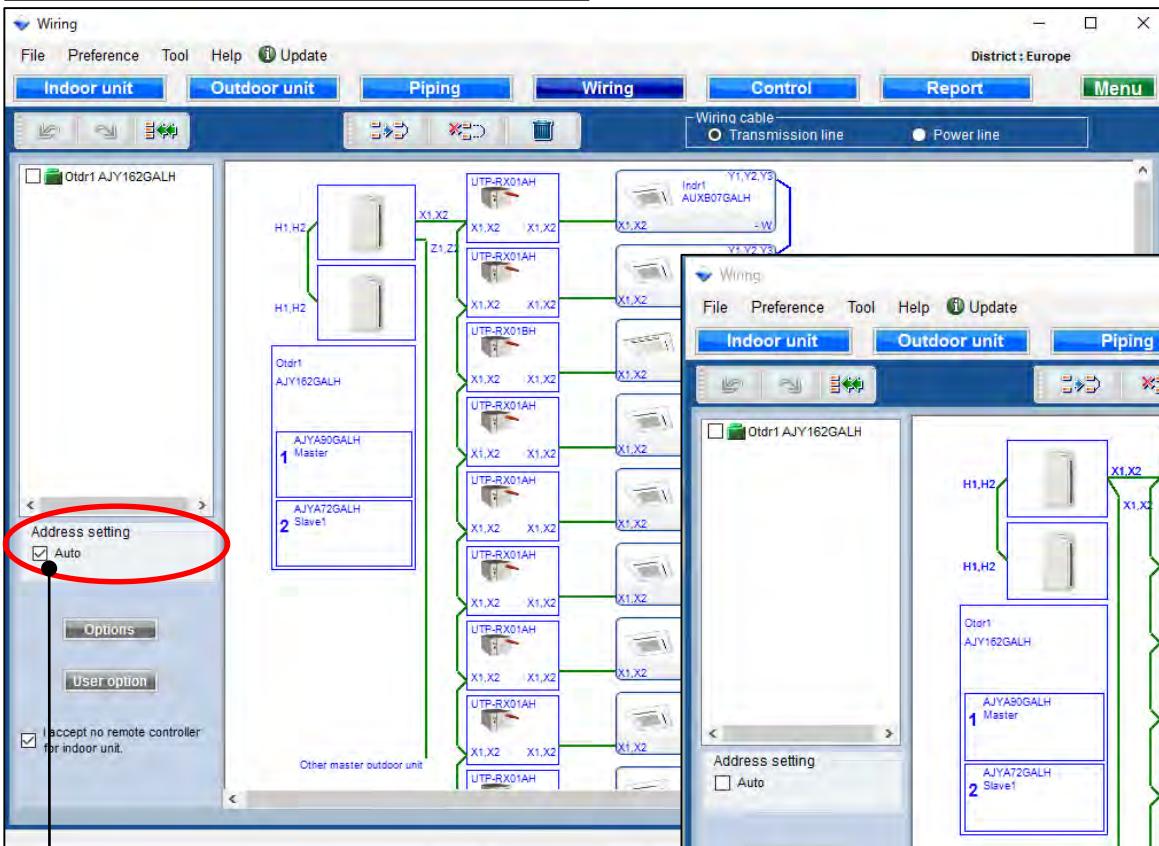

Izaberite ako se koristi "Auto Adresa"

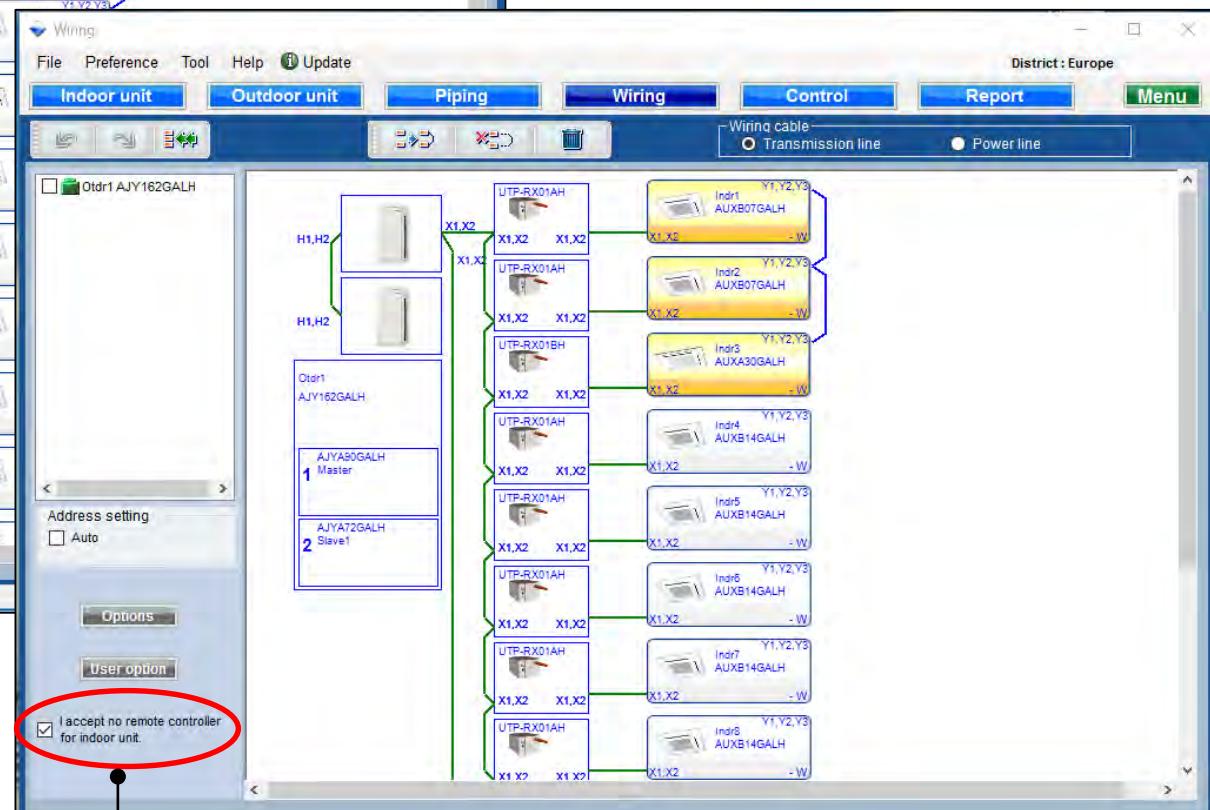


Izaberite ako je "daljinski upravljač" neophodan

Podešavanje kabliranja

Design Simulator

Opcije

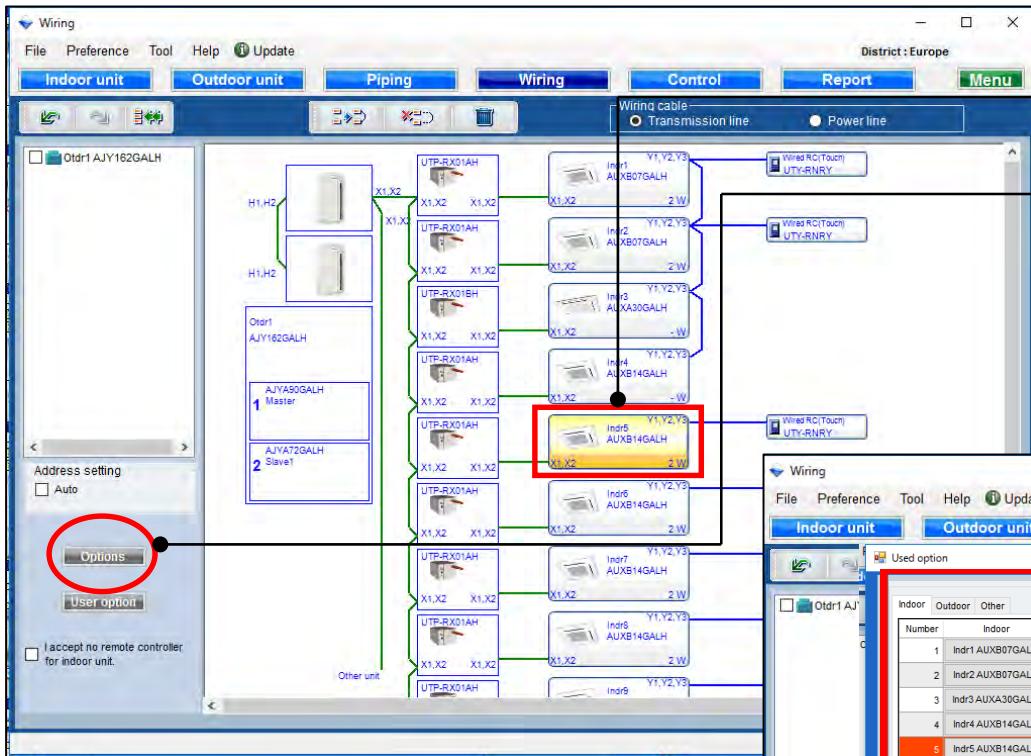


Izaberite unutrašnju jedinicu


Izaberite "Opcije"




Otvorite ekran sa opcijama.

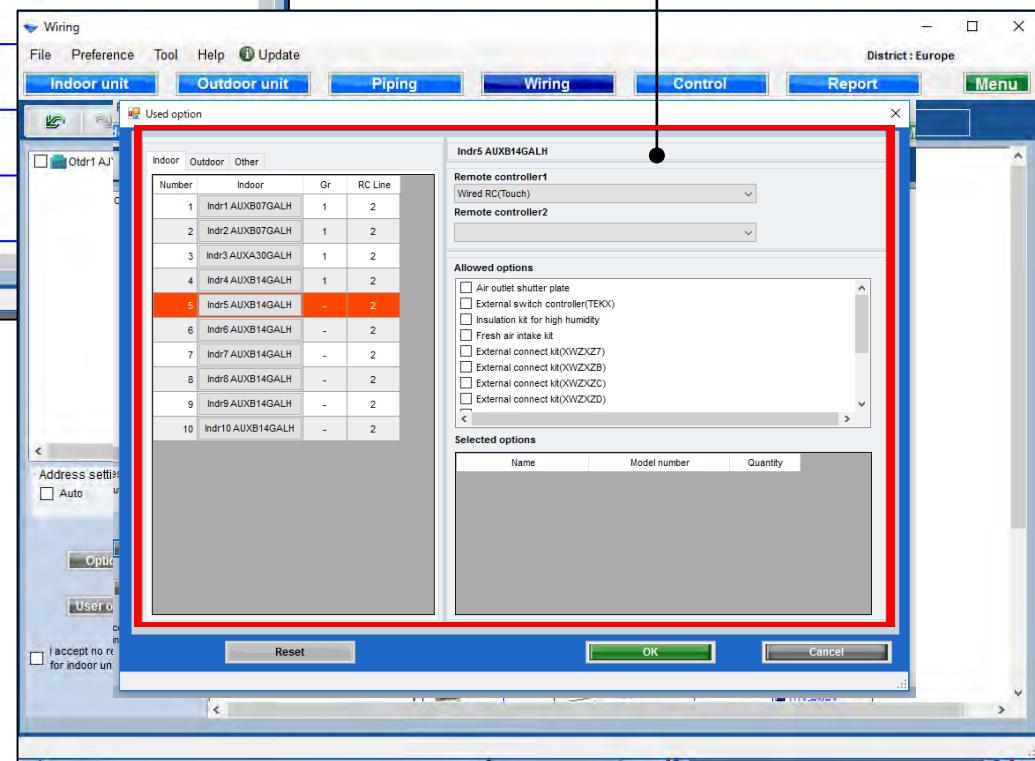


Opcije

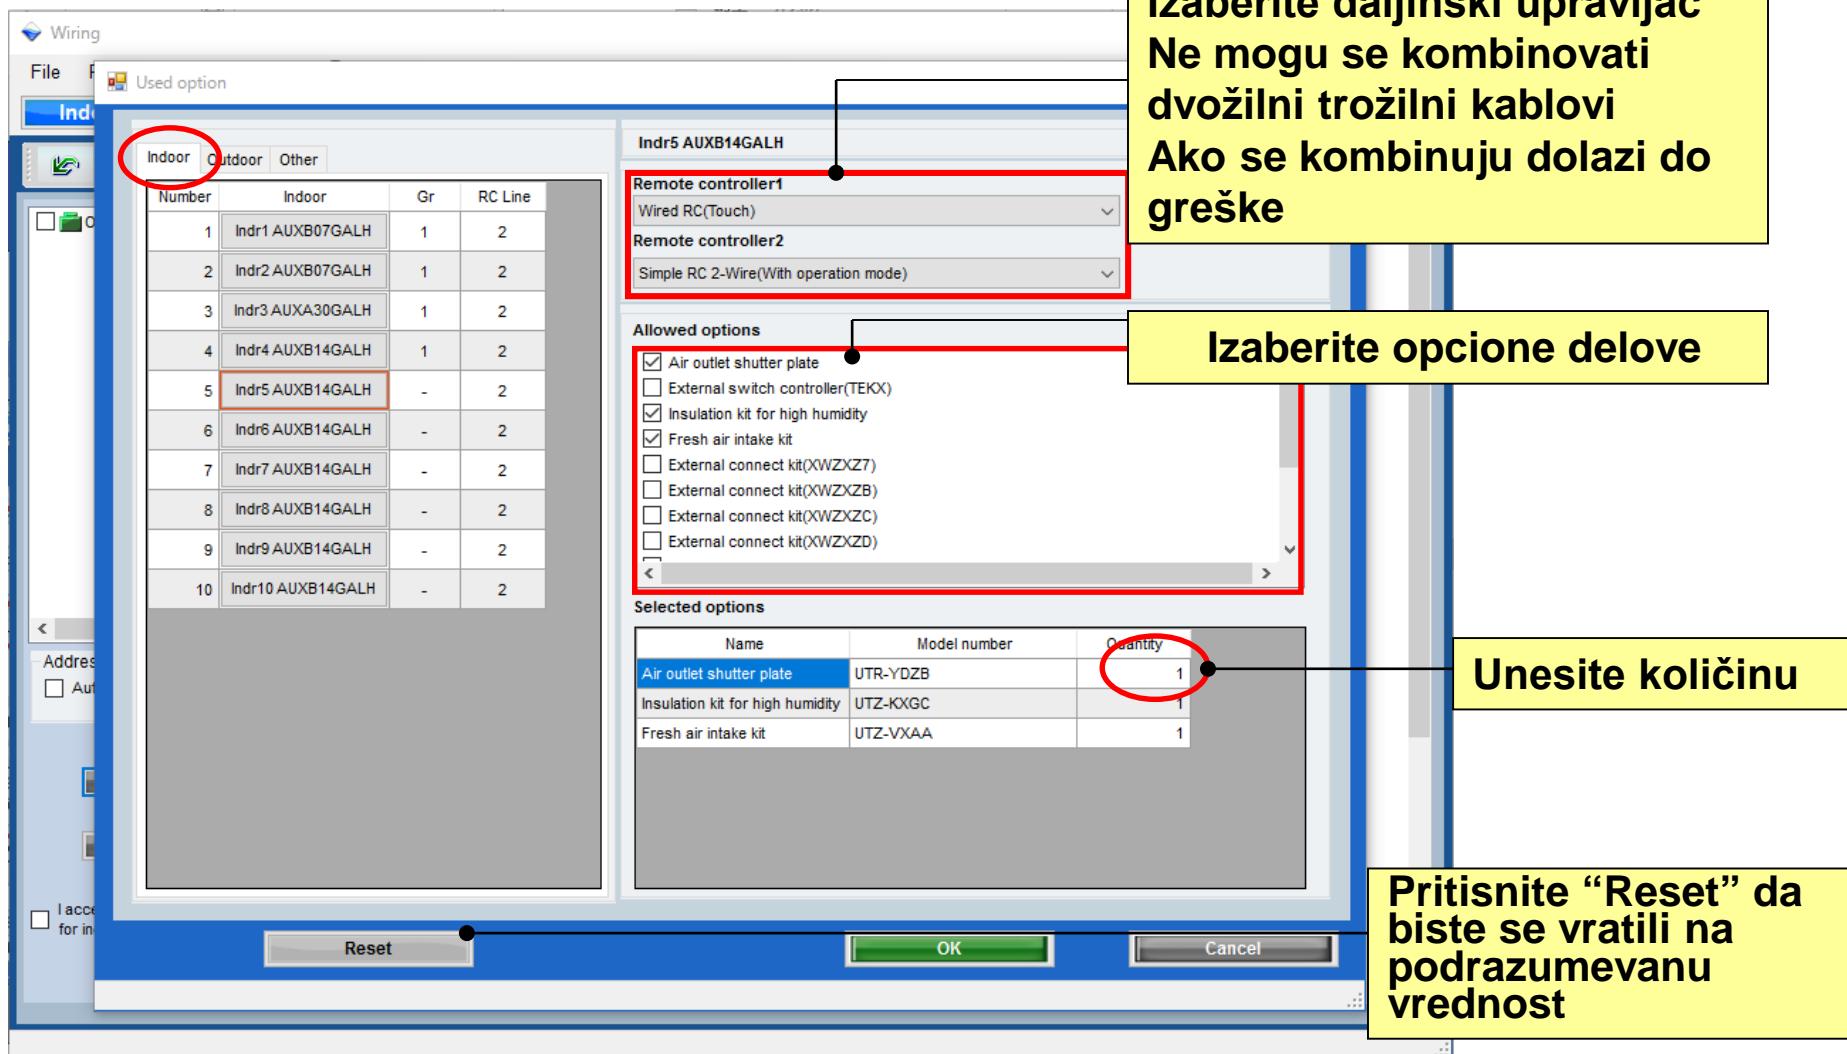


Korišćene opcije

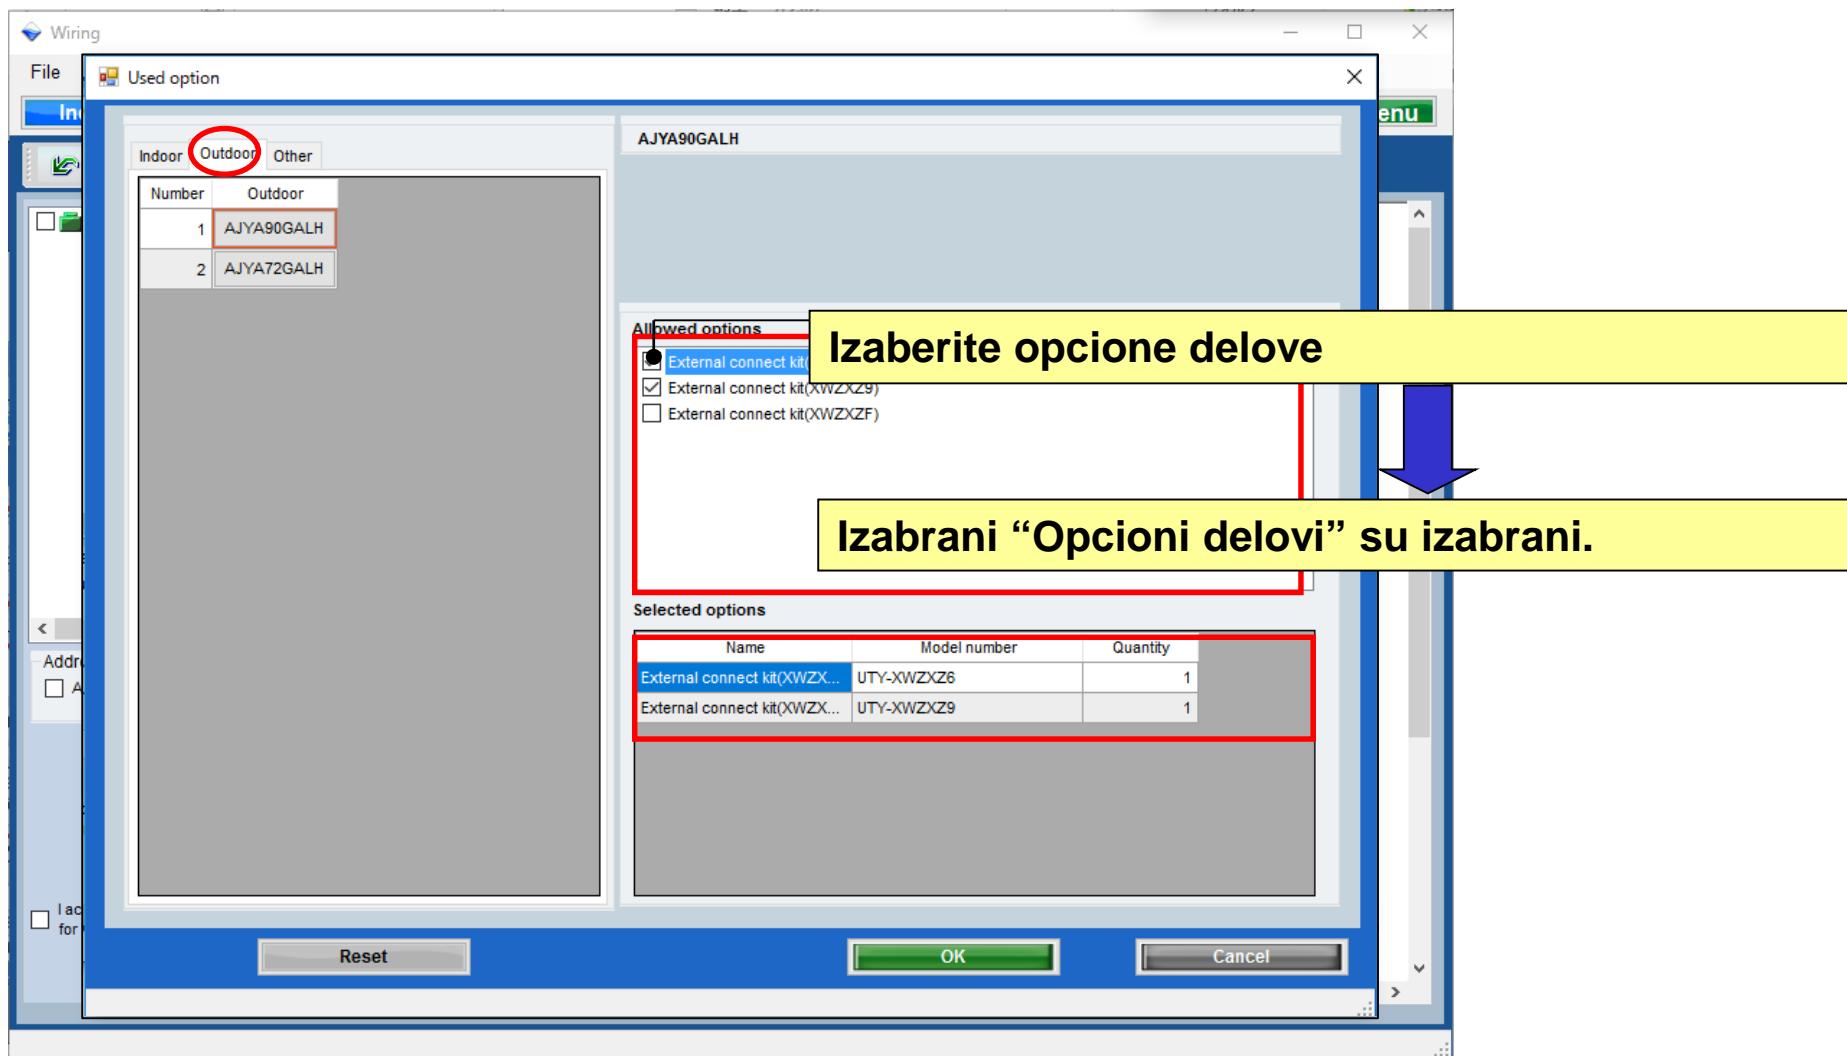


Korišćene opcije

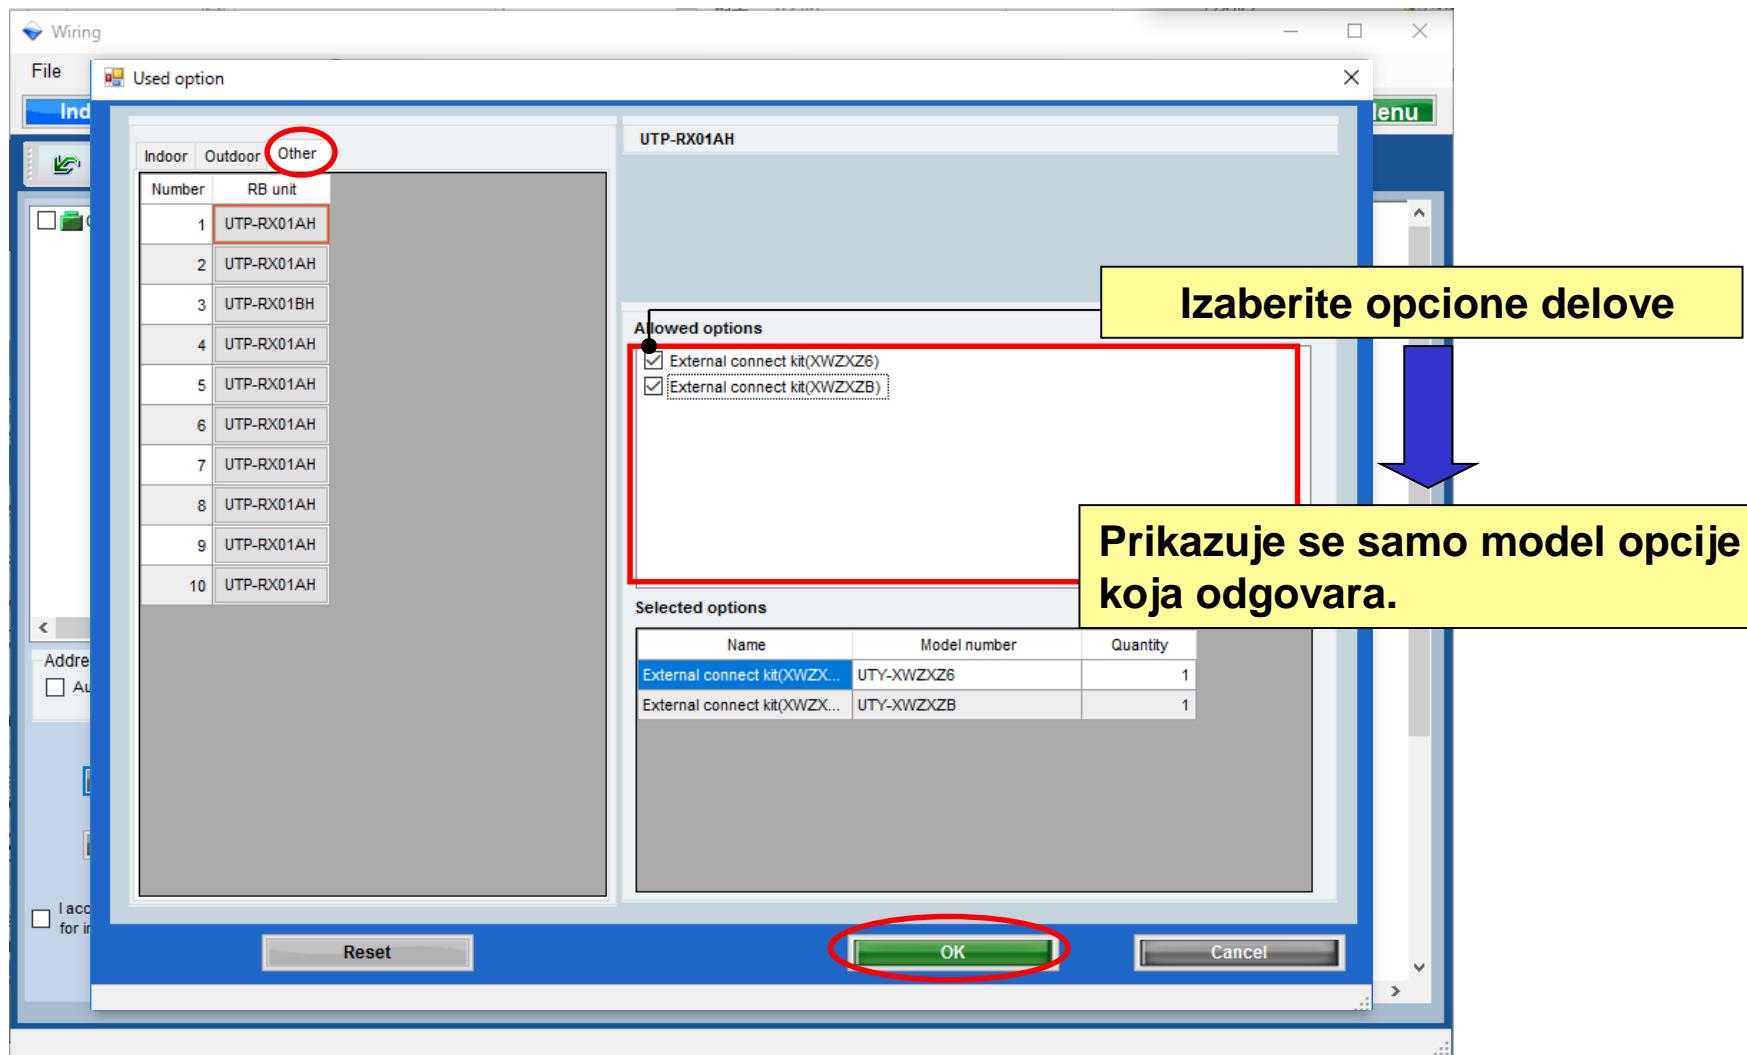

Korišćene opcije

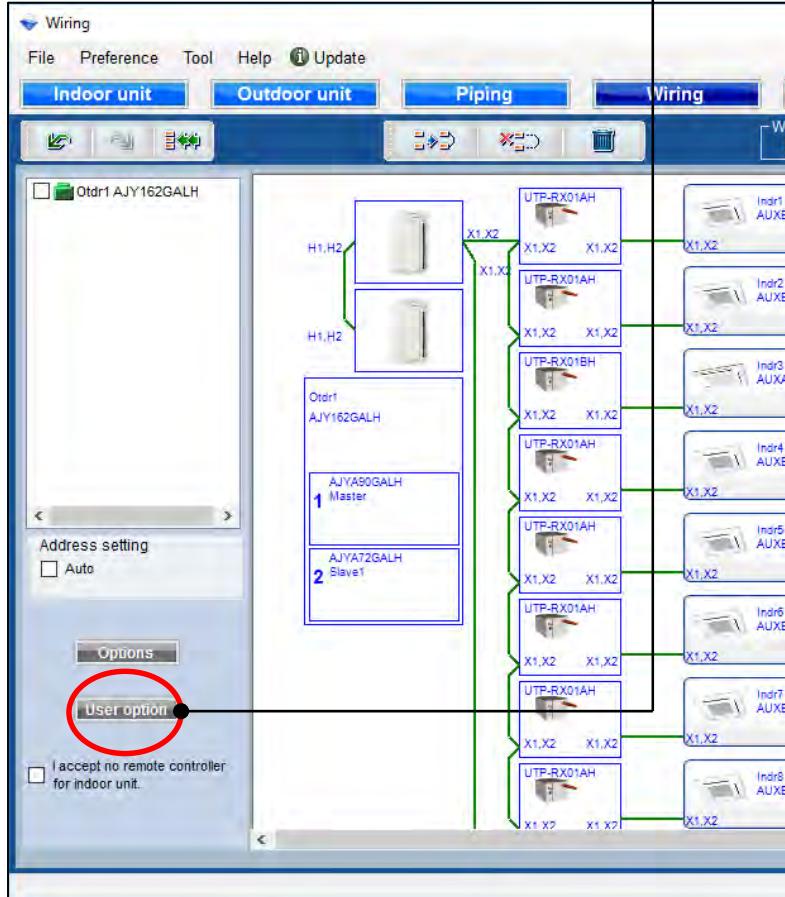

Izaberite "Korišćene opcije"

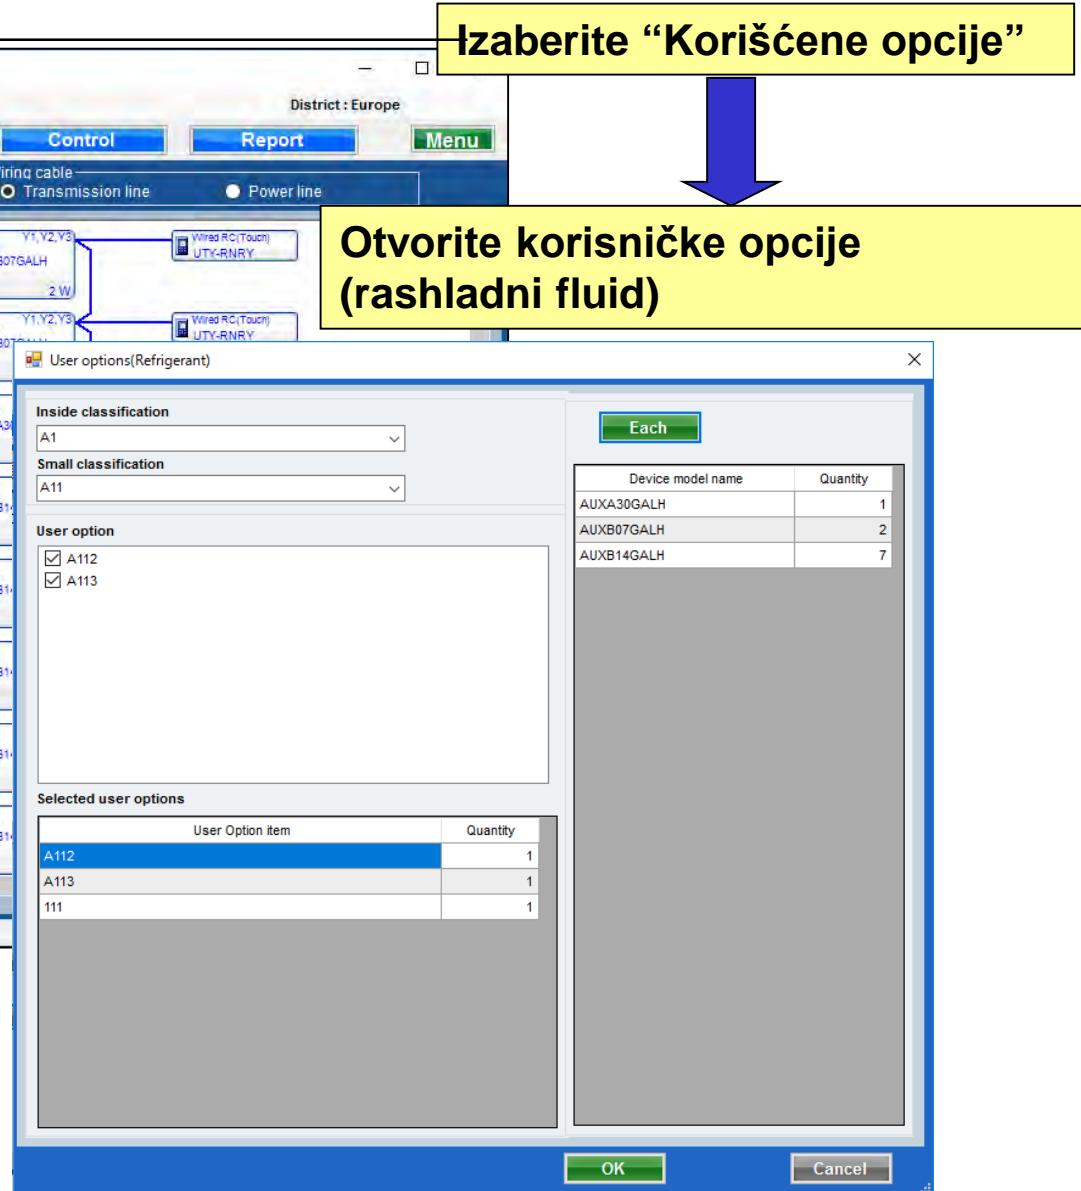

Otvorite korisničke opcije
(rashladni fluid)

Korisnička opcija (rashladni fluid)

Inside classification
A1

Small classification
A11

User option
 A112
 A113

Selected user options

User Option item	Quantity
A112	1
A113	1

Each

Izaberite “Zasebno ili Grupisano”
Prikazani sadržaj se menja

Izaberite “Unutrašnja klasifikacija”


Izaberite “detaljniju klasifikaciju”

Izaberite “Korisničke opcije”

Izaberite “Korisničke opcije”

OK Cancel


Izabrane opcije su prikazane u “Izveštaju”

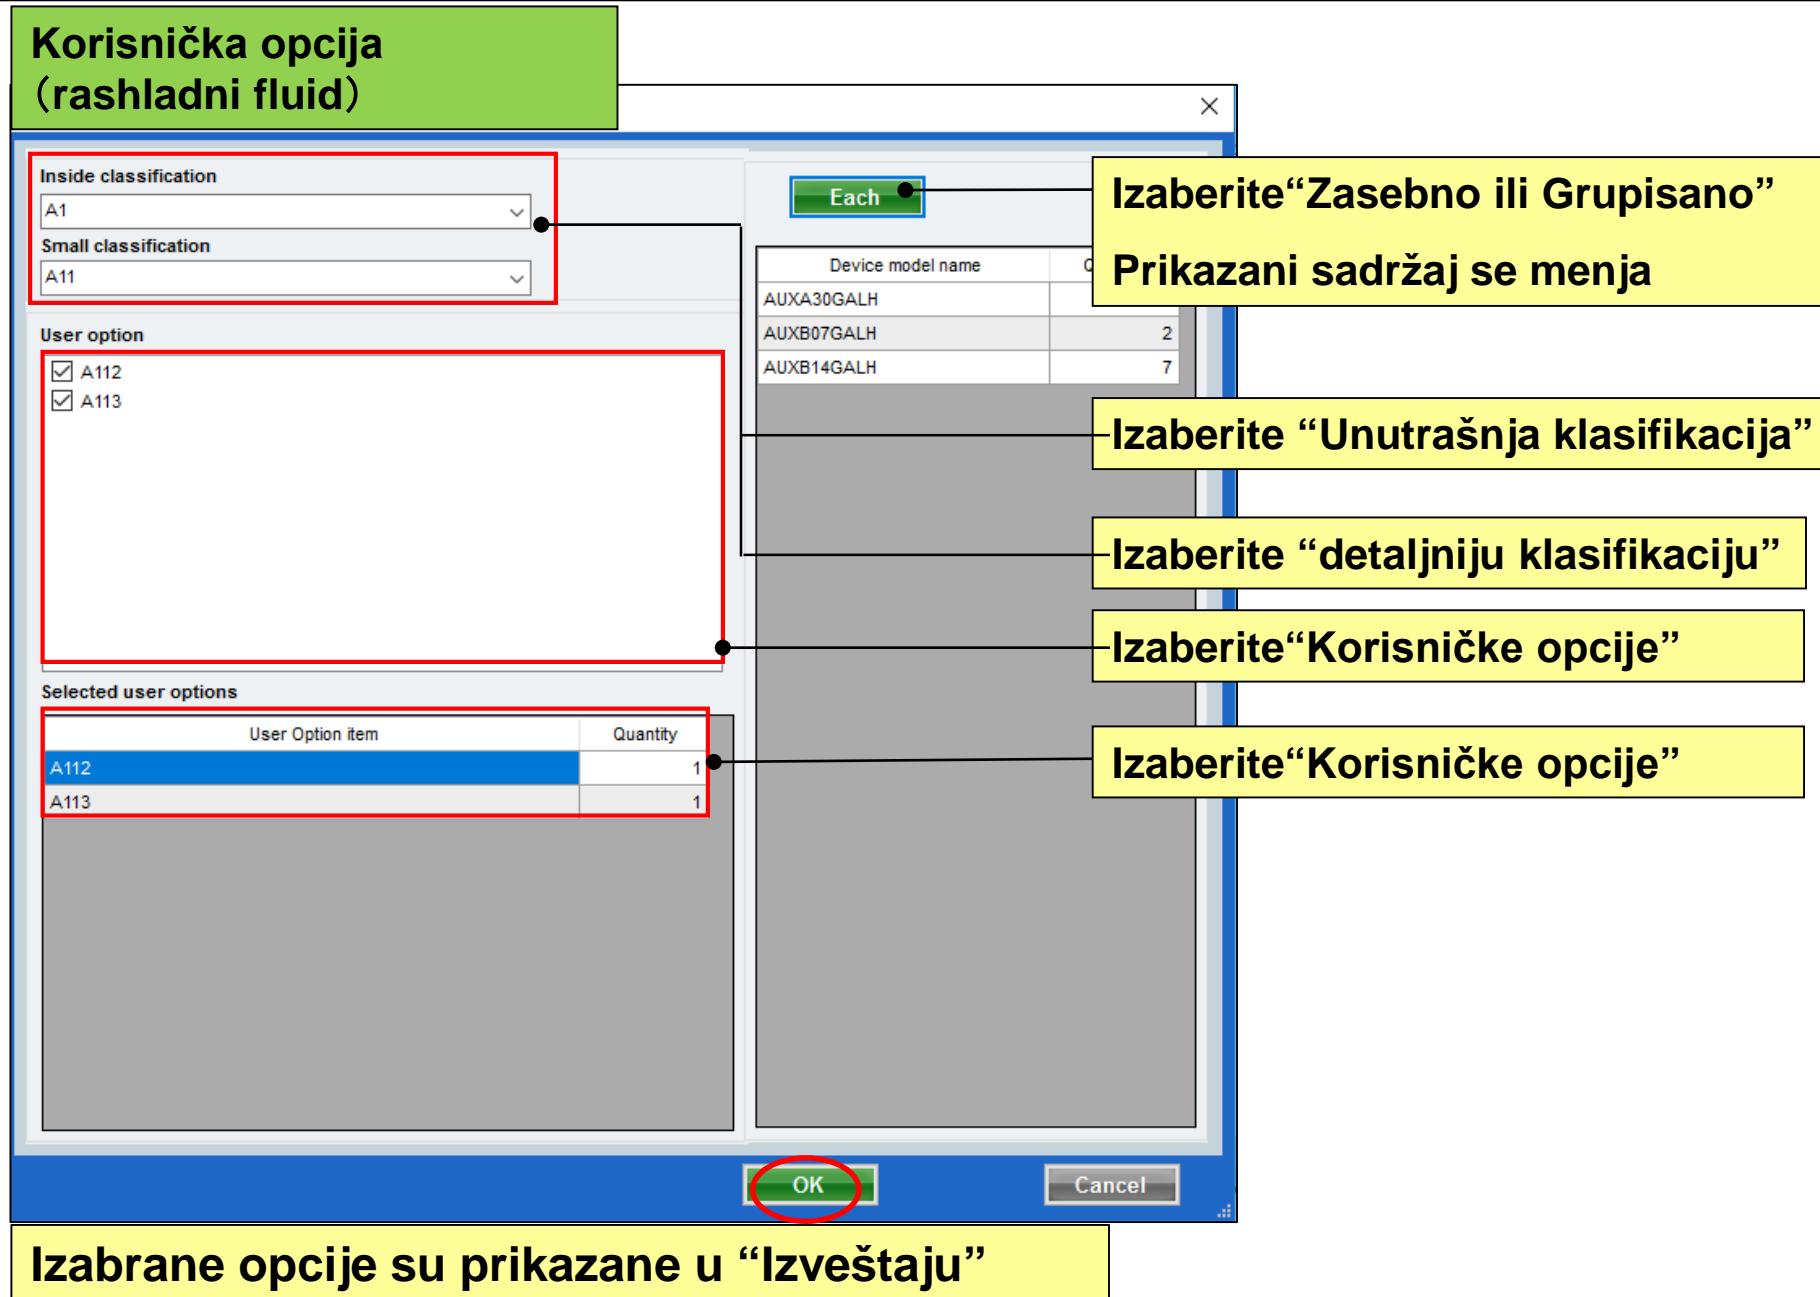

Окабеляване

Design Simulator

Комуникационна линия

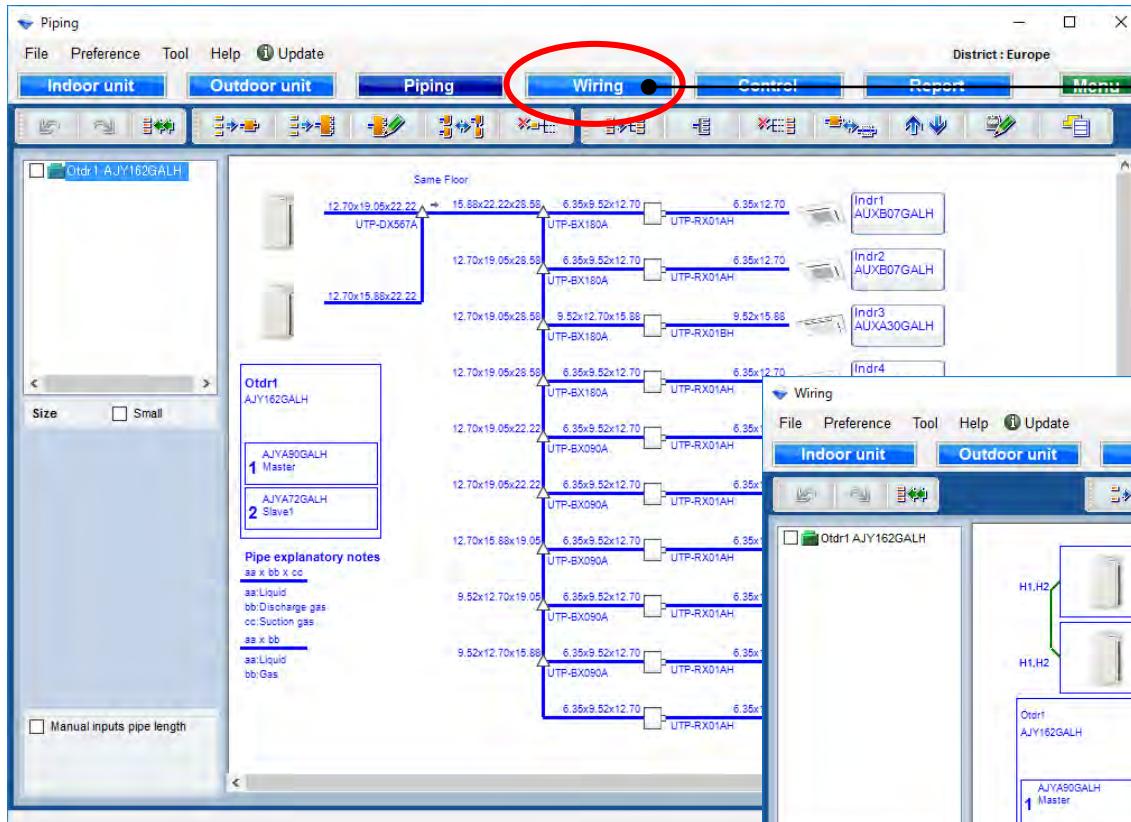


: Transmission line

• Remote controller line

Изберете “Окабеляване”


Изберете “Комуникационна линия”

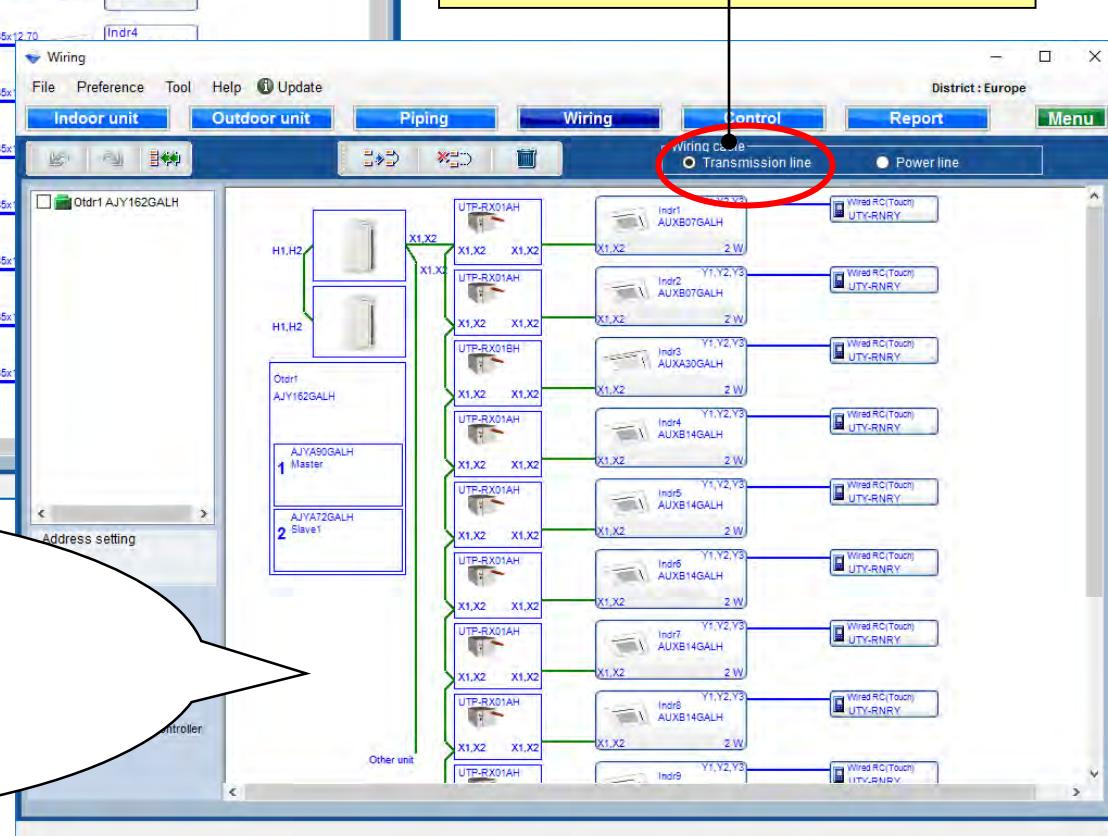

Окабеляване

Design Simulator

Захранваща линия

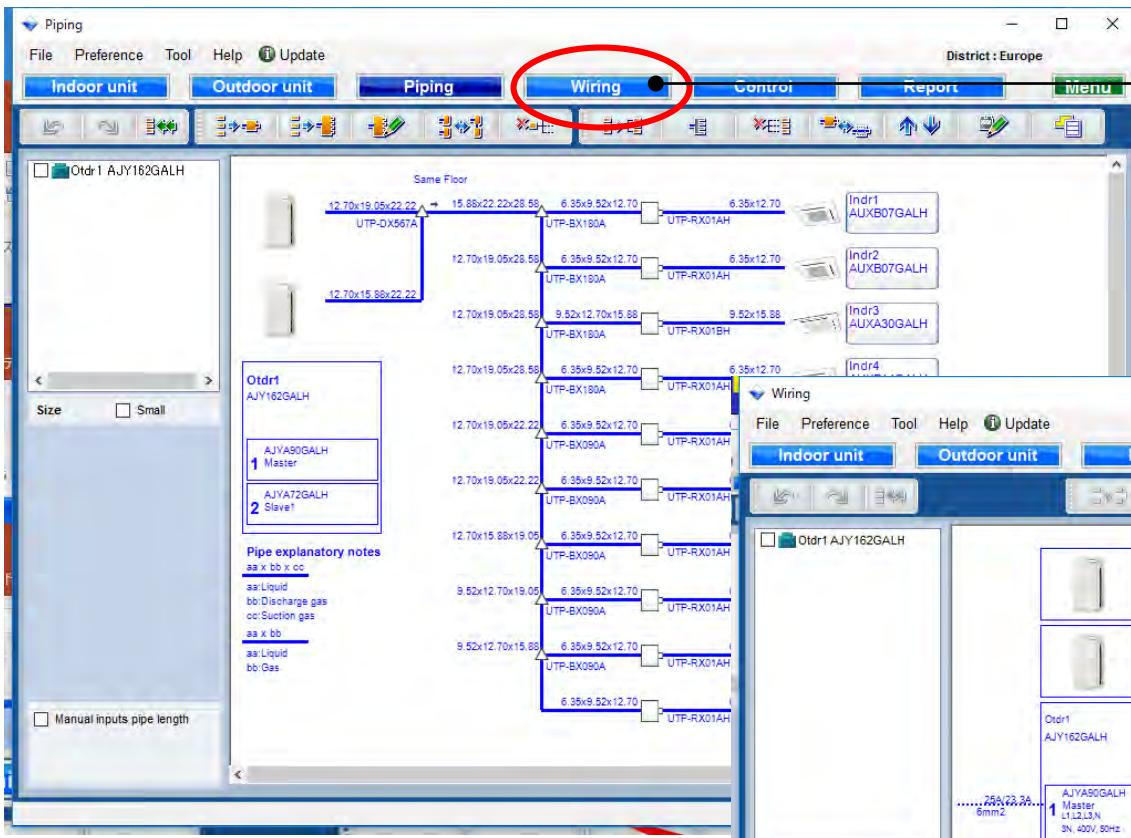

Изберете “Окабеляване”

Изберете “Захранваща линия”

... : Power line

Outdoor

Breaker/MCA

Diameter

Indoor, RB unit

MCA

Diameter

Total power line

Breaker

MCA

Voltage-Hz

Hz

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254

255

256

257

258

259

260

261

262

263

264

265

266

267

268

269

270

271

272

273

274

275

276

277

278

279

280

281

282

283

284

285

286

287

288

289

290

291

292

293

294

295

296

297

298

299

300

301

302

303

304

305

306

307

308

309

310


311

312

Окабеляване

Design Simulator


Групиране (1/2)

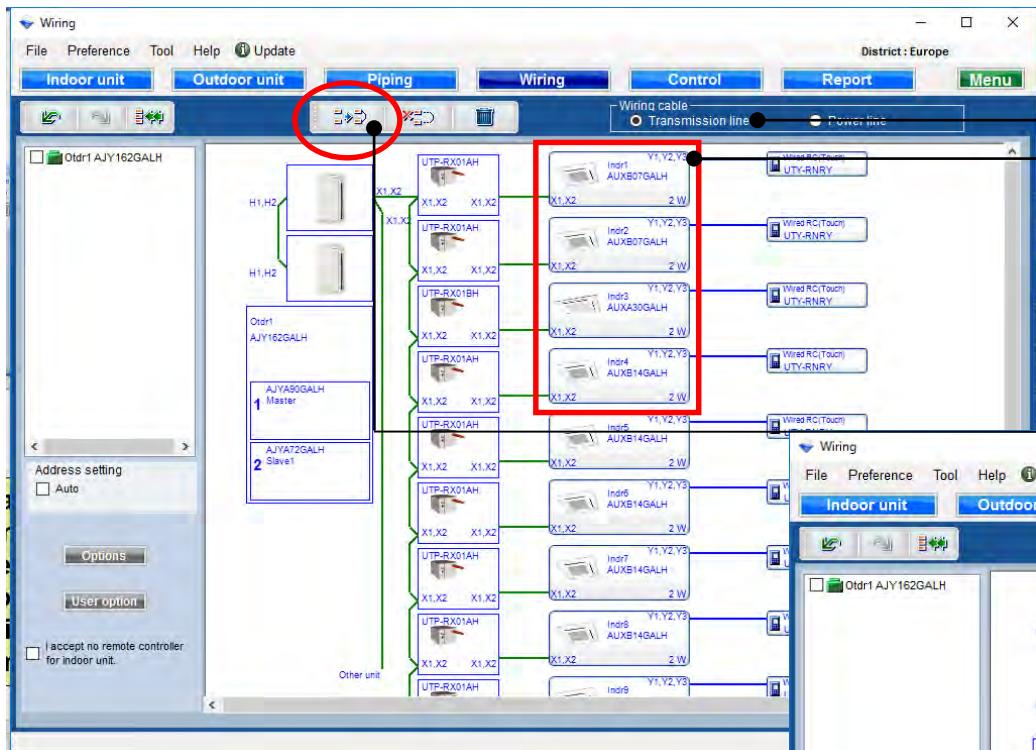


Може да се избере
“Общо/единично захранване”

Изберете вътрешно тяло


Изберете “Групов контролер”

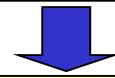


Автоматично създава обща
група за управление.

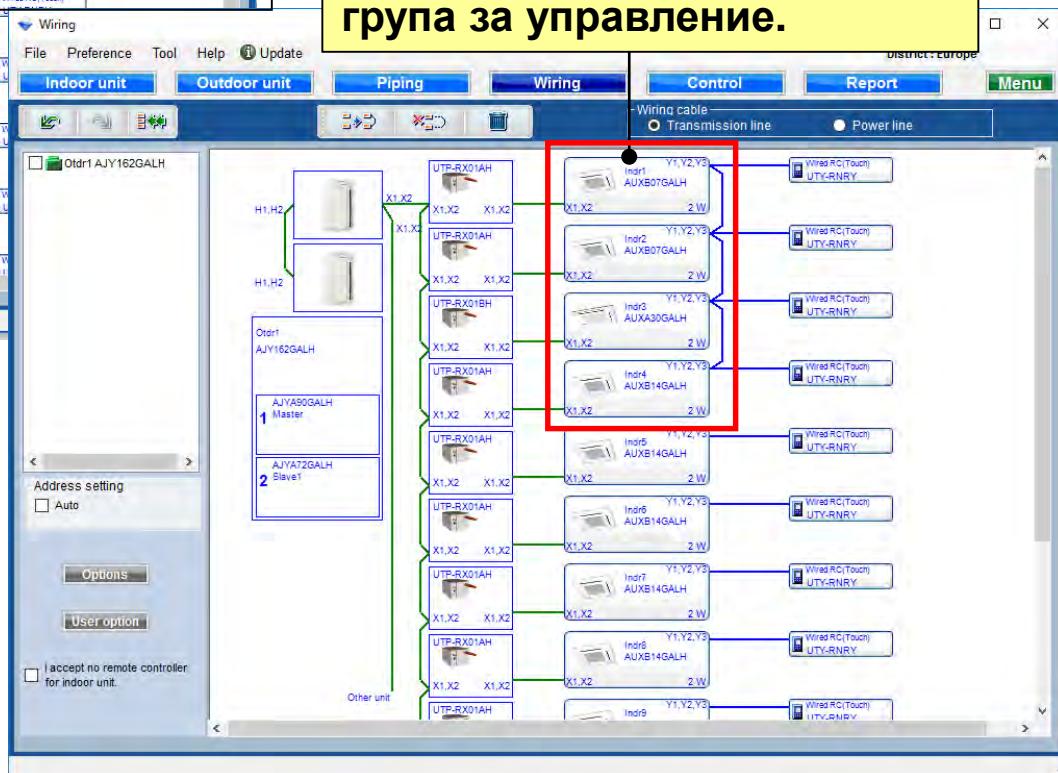


Групиране (2/2)

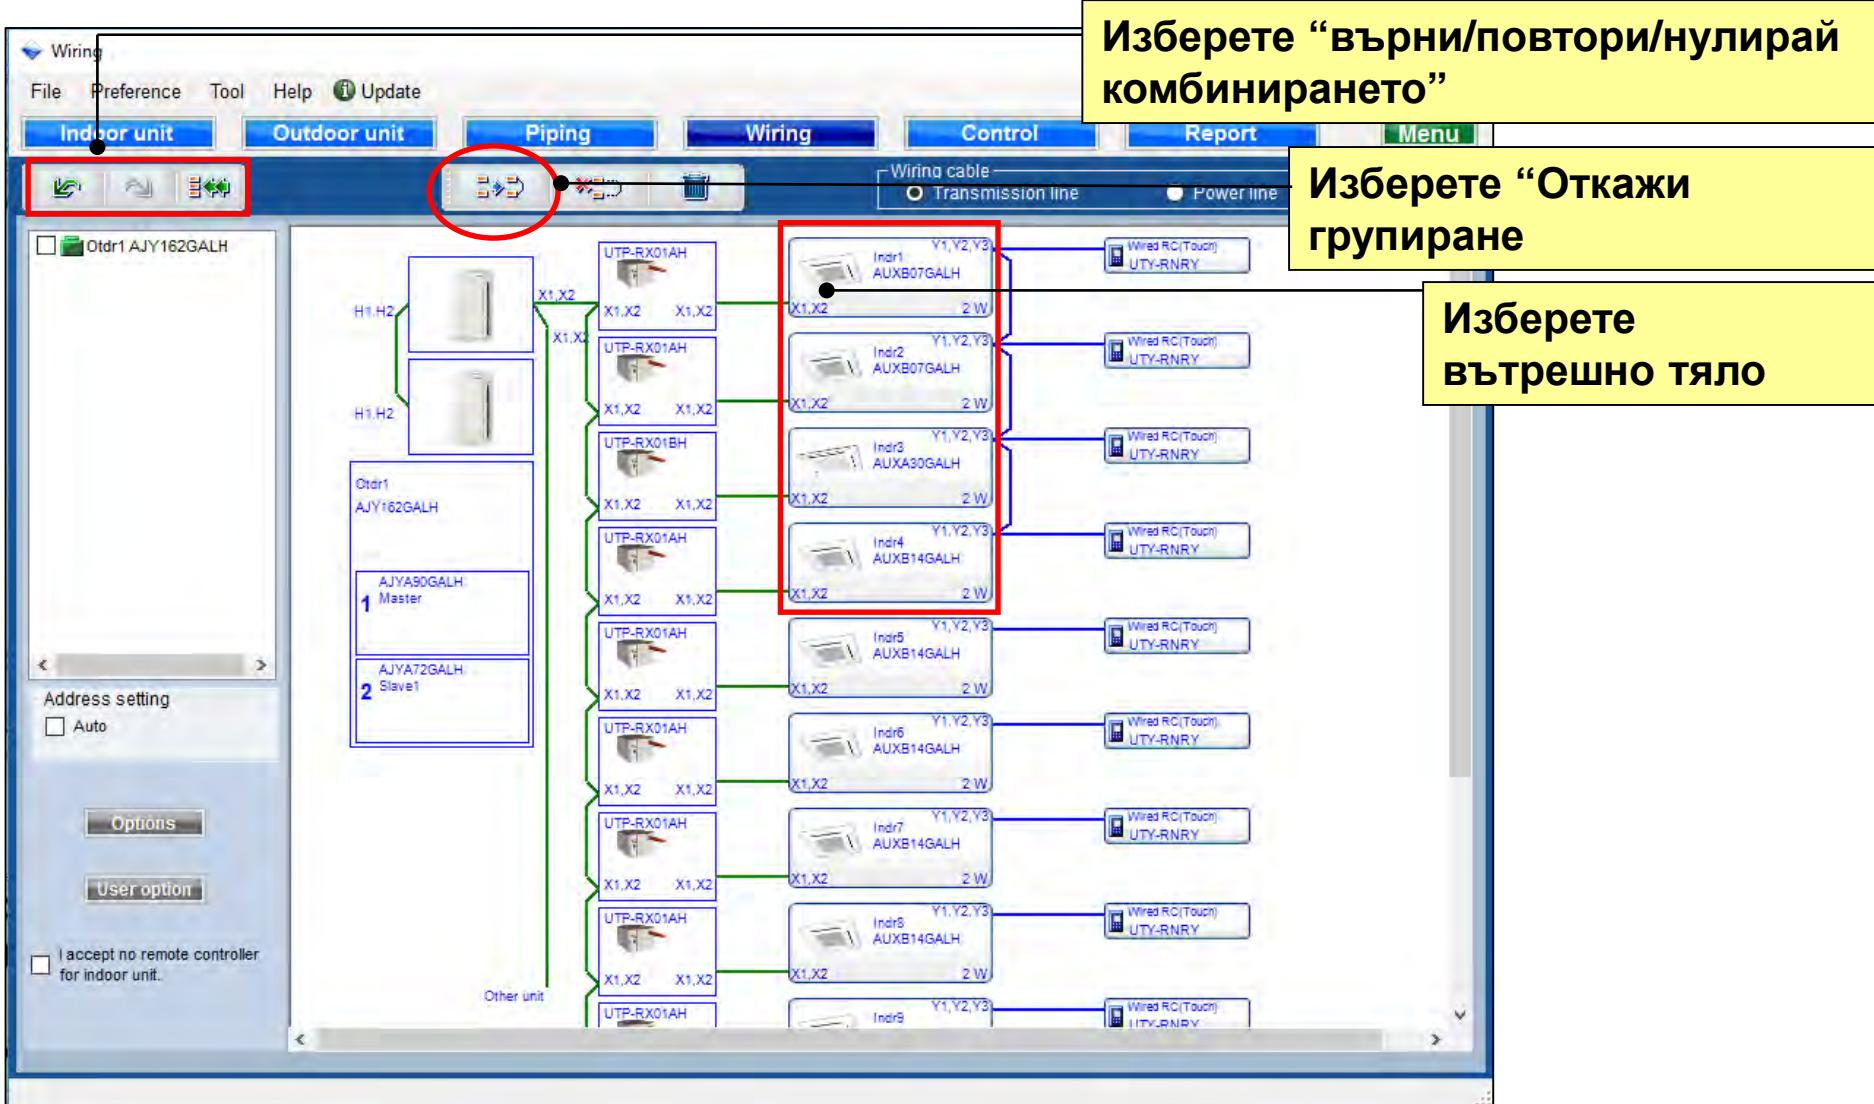

Изчисление

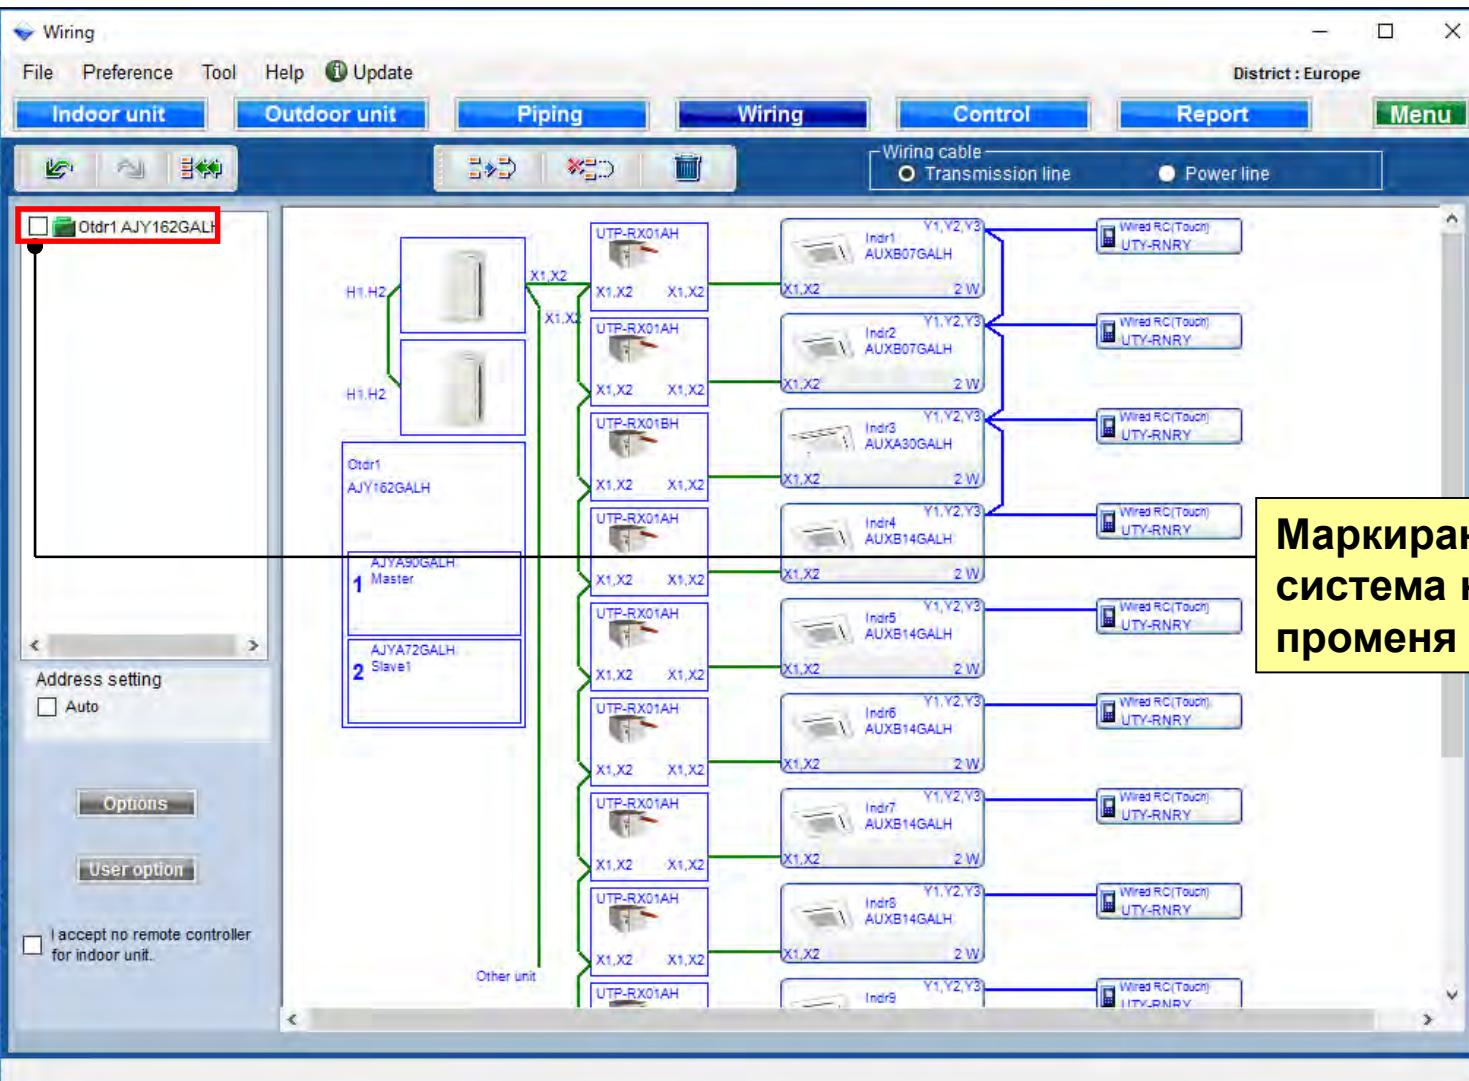


Изтриване

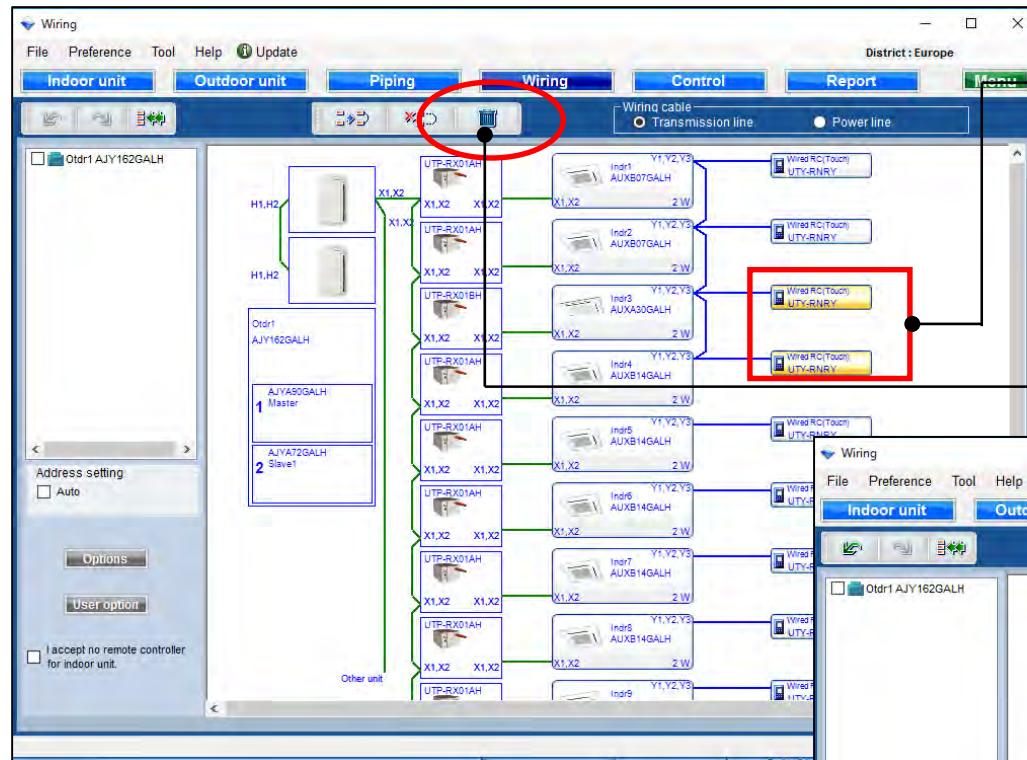


Изберете контролер


Изберете “Изтрий контролер”

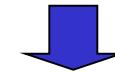


Изтрива автоматично
контролера, като променя
линията.

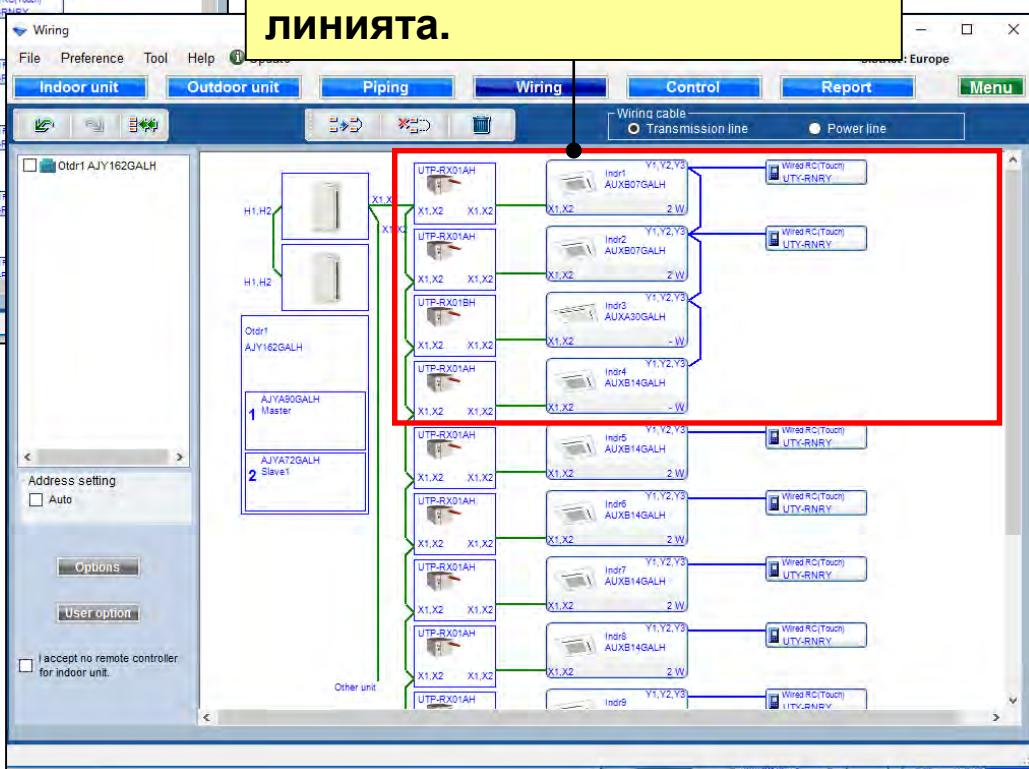

Адресиране

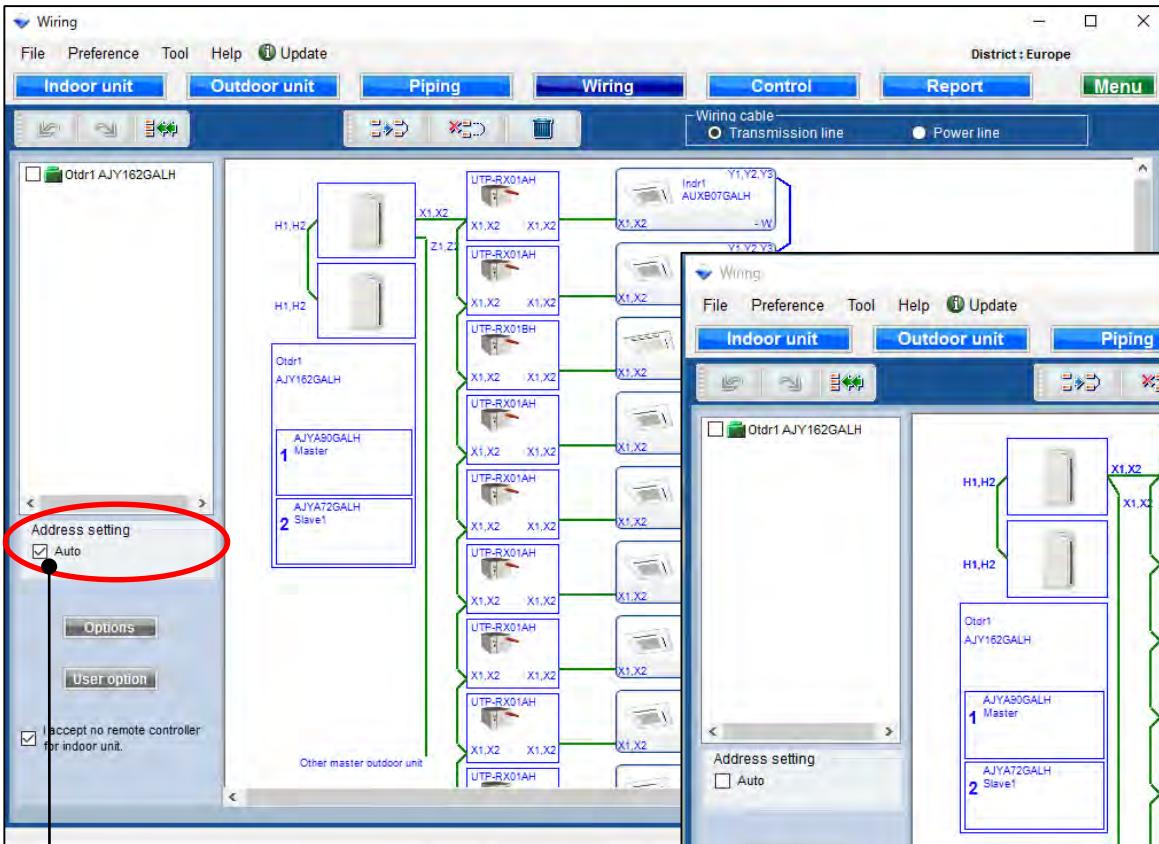

Проверете дали се използва
“Авто-адресиране”

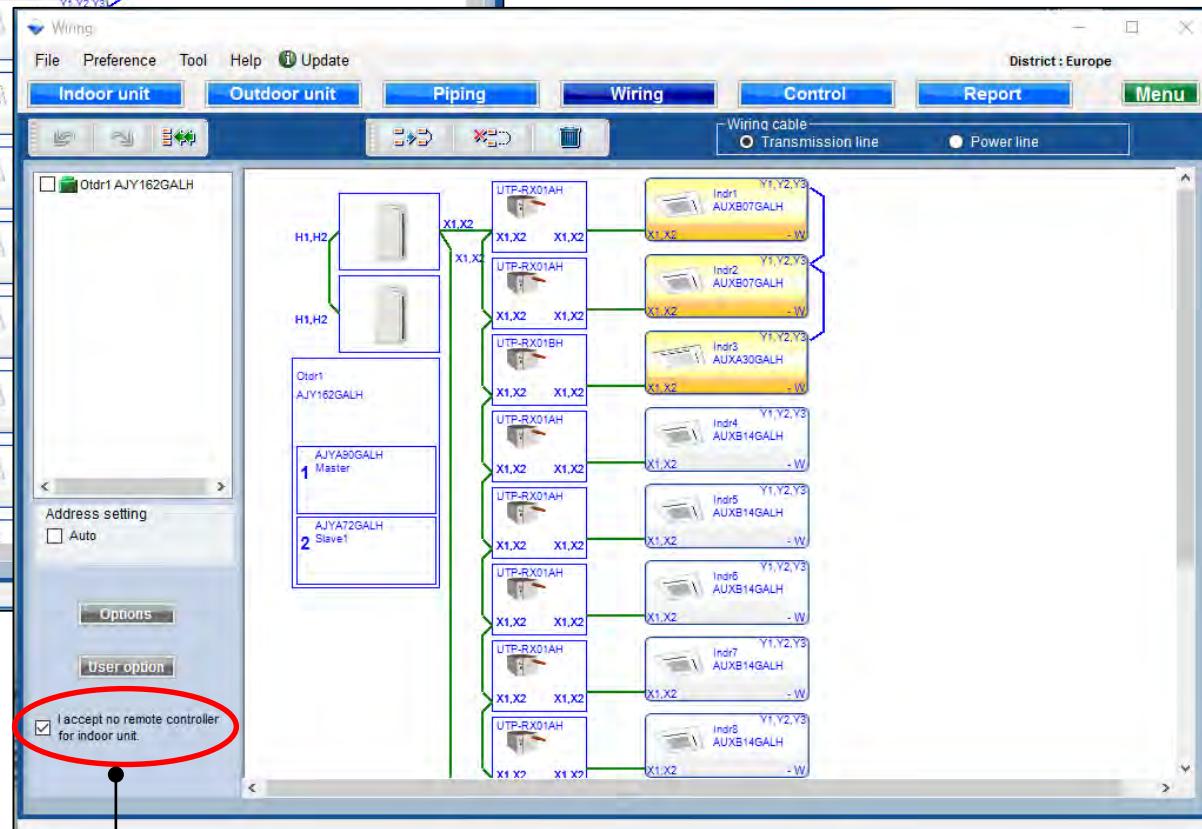


Проверете дали контролерът е ненужен.

Окабеляване

Design Simulator


Опции

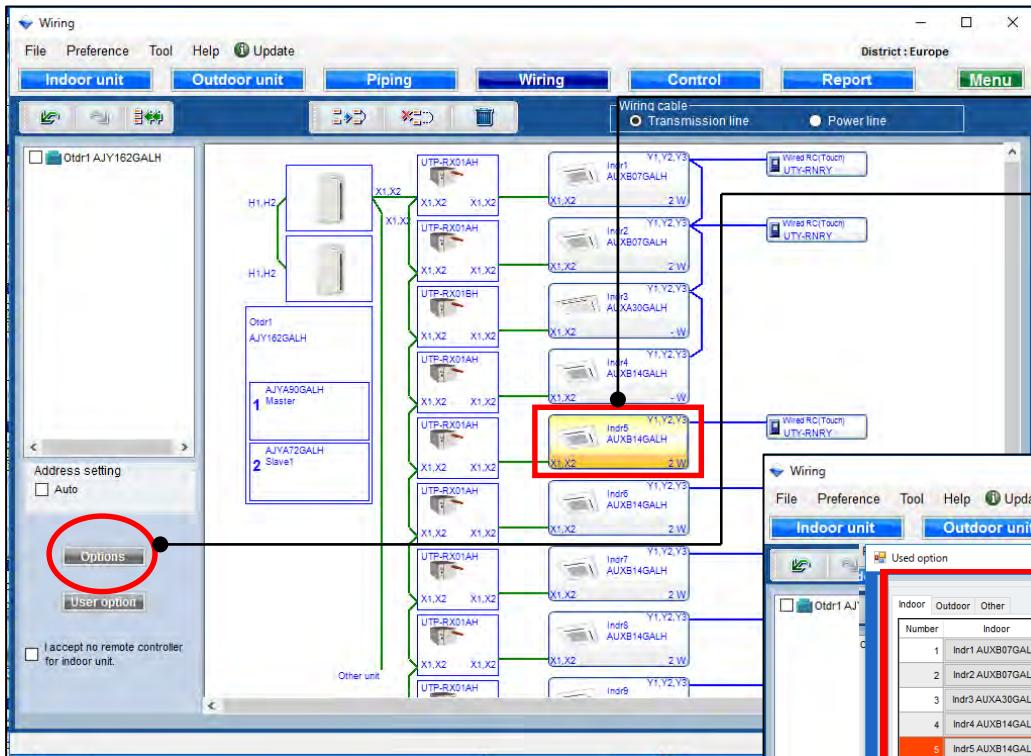


Изберете вътрешно тяло

Изберете „Опции“

Отваря екран с опциите

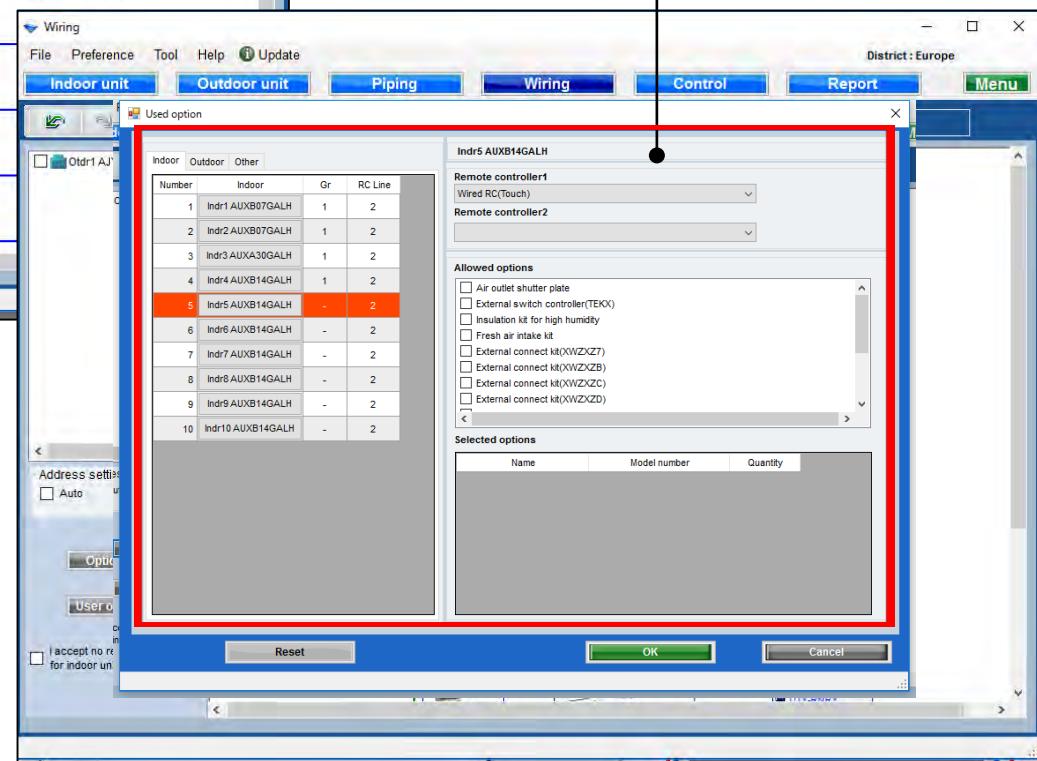

Използвани опции

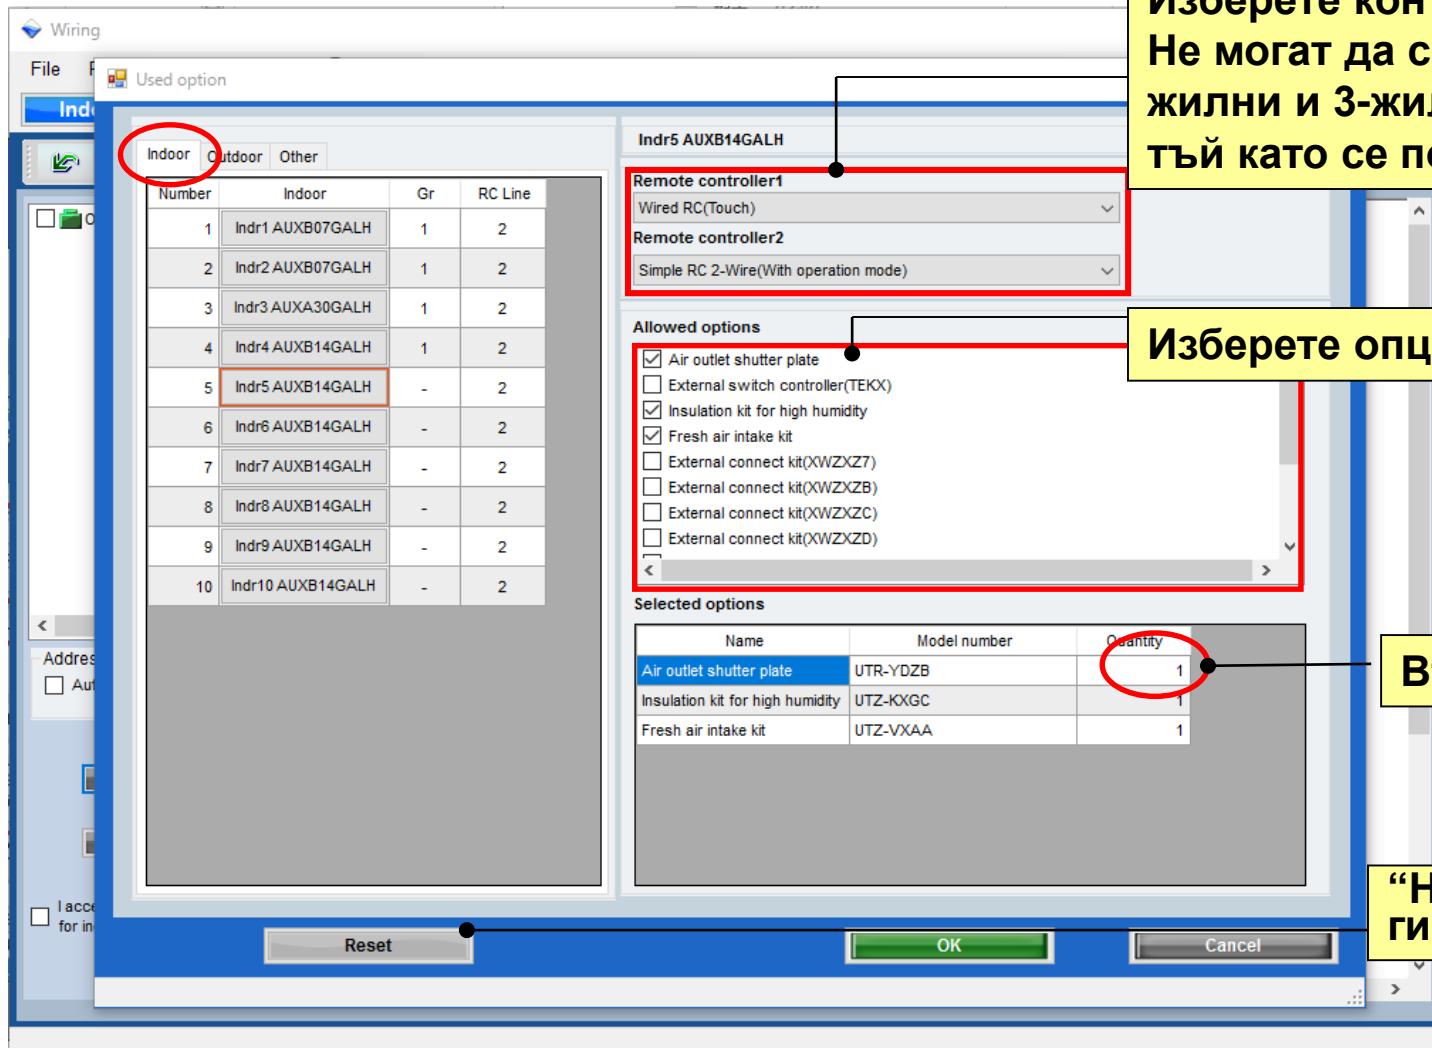

Изберете контролер
Не могат да се смесват 2-
жилни и 3-жилни модели,
тъй като се появява грешка


Изберете опционални части

Въведете брой

**“Нулиране” връща
ги по подразбиране**


Избраните опции се отразяват в Отчета.

Използвани опции

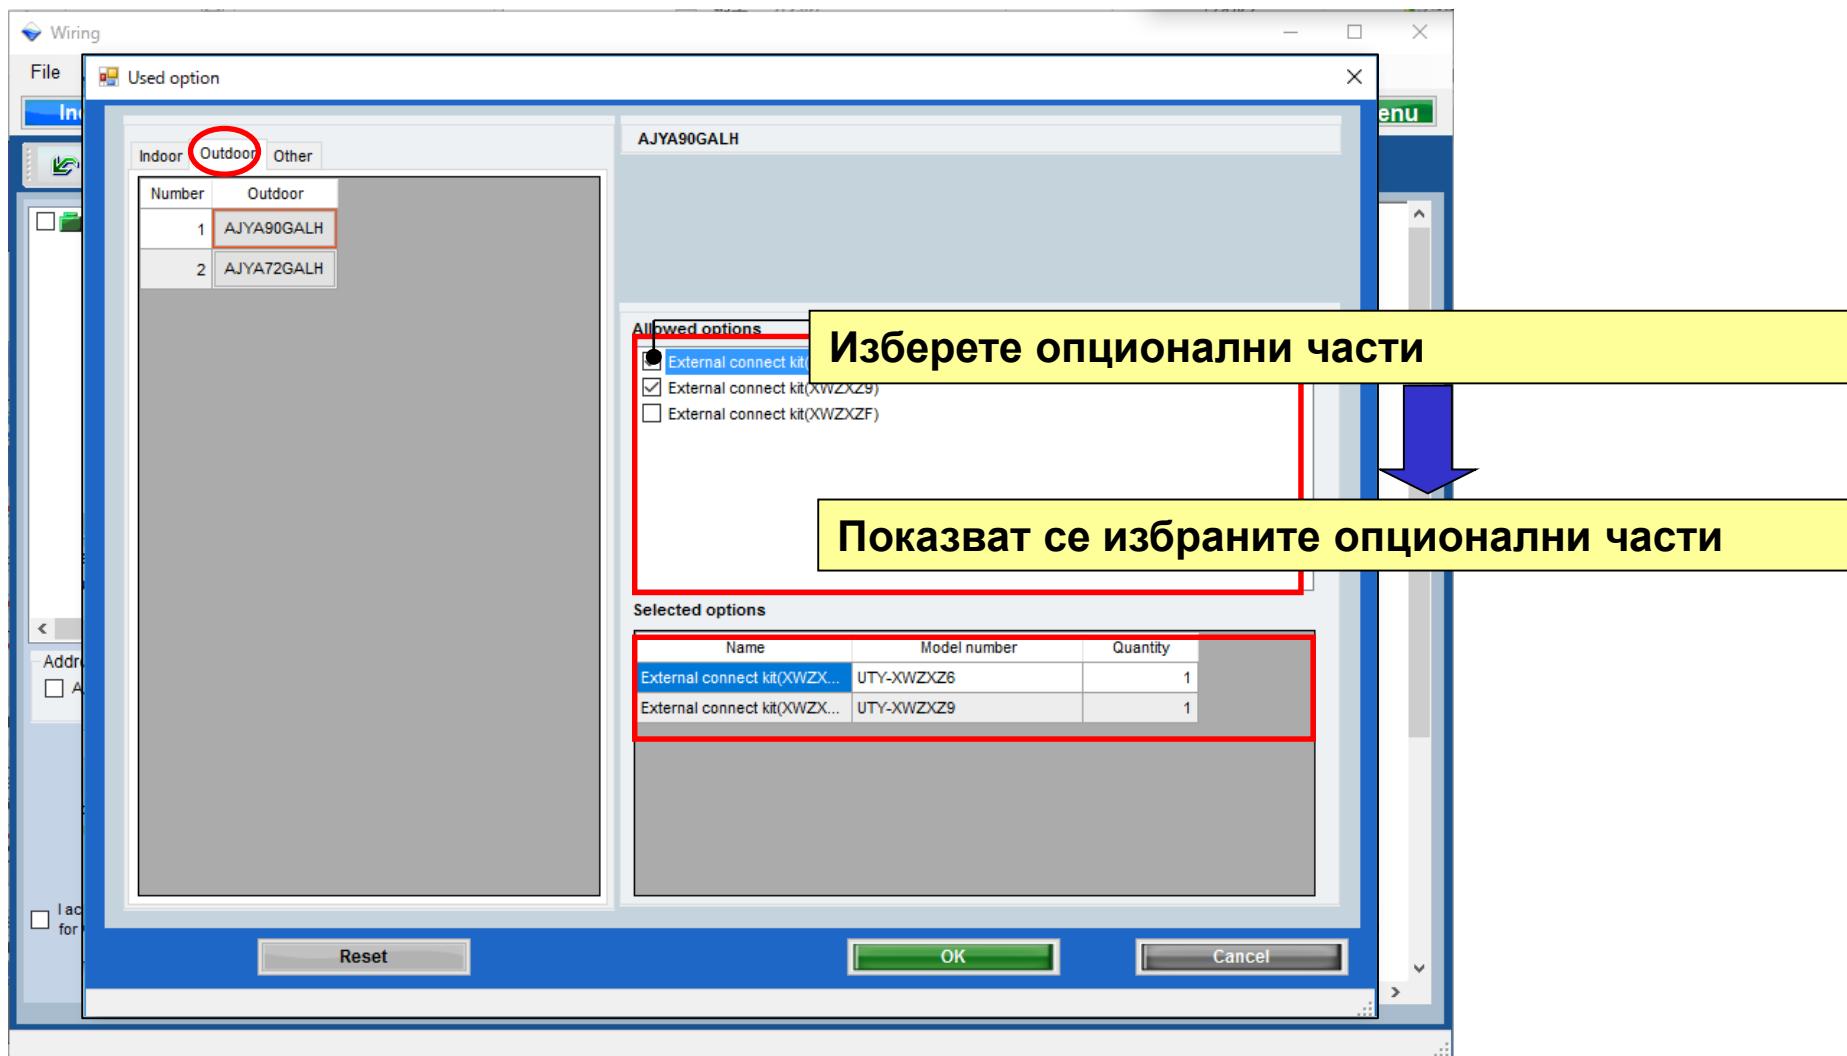

Избраните опции се отразяват в Отчета.

Използвани опции

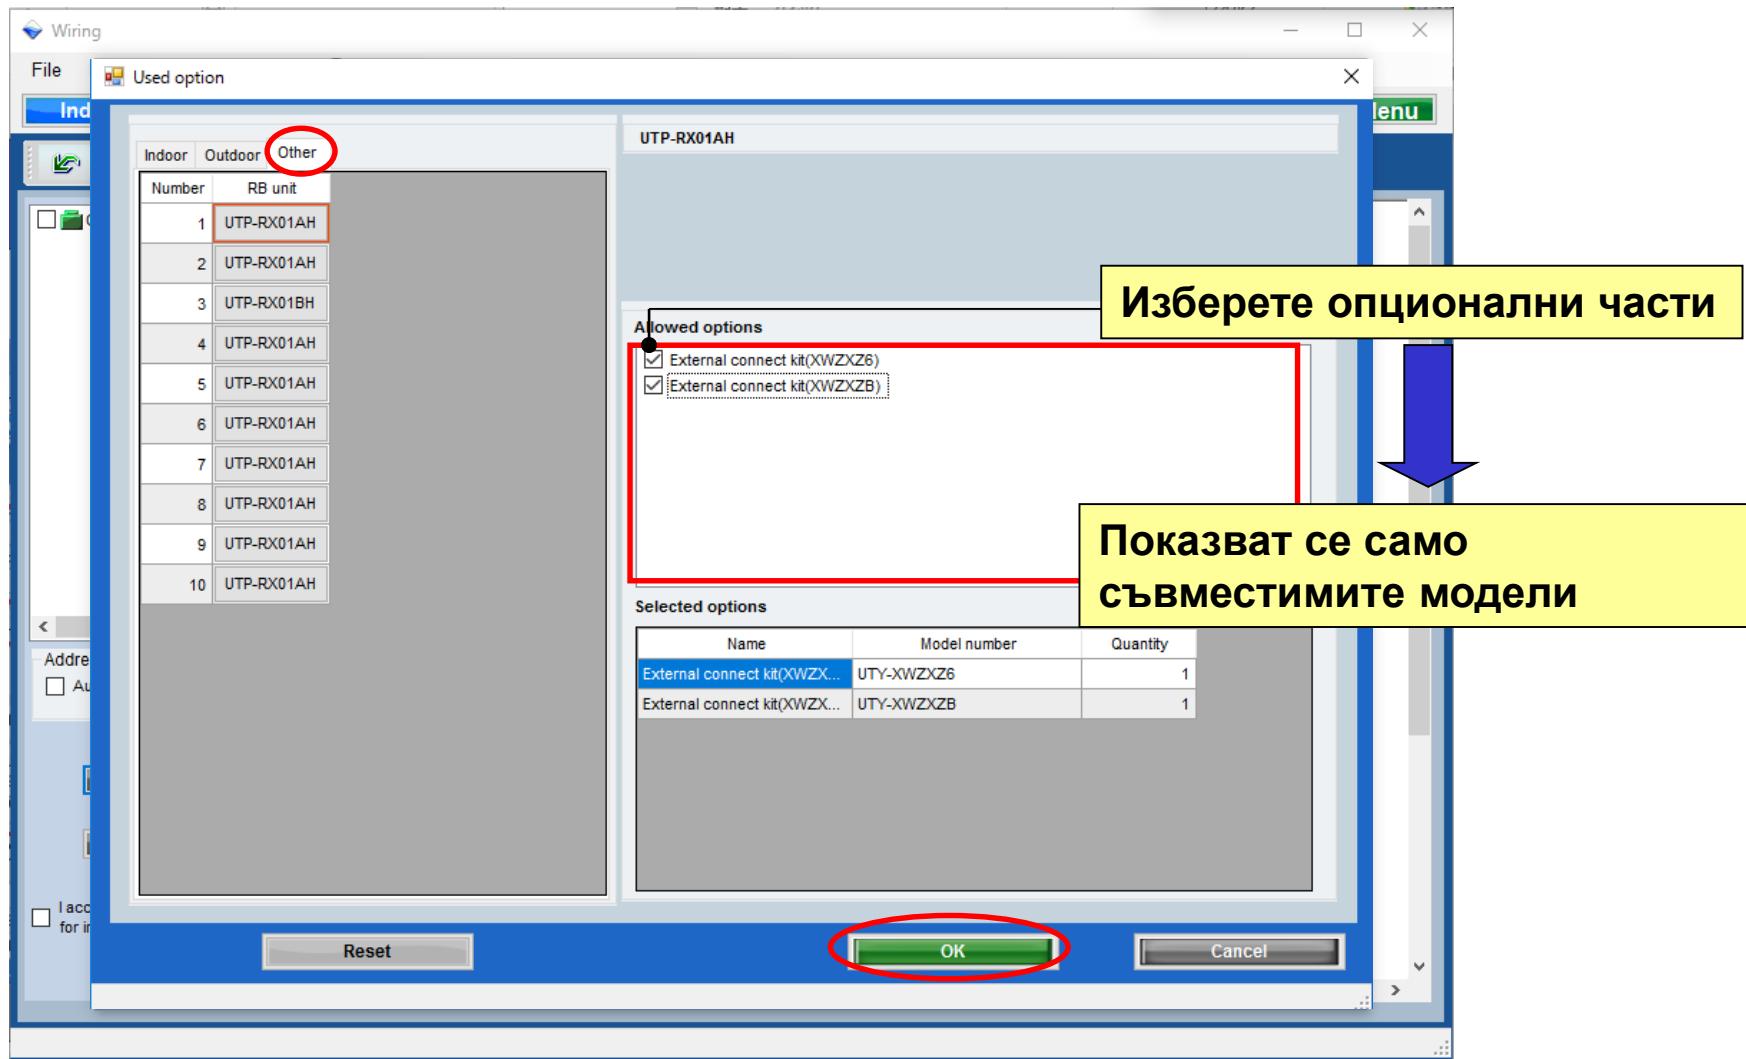

Избраните опции се отразяват в Отчета.

Потребителски опции

Изберете “Потребителски опции”

“Потребителски опции”
(хладилен агент)

Wiring

File Preference Tool Help Update

Indoor unit Outdoor unit Piping Wiring Control Report Menu

District : Europe

Wiring cable Transmission line Power line

Address setting Auto

Options

User option

I accept no remote controller for indoor unit.

Indr1 AJY162GALH
H1,H2
Indr1 AJY162GALH
AJYA90GALH Master
AJYA72GALH Slave1

UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01BH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
UTP-RX01AH
X1,X2 X1,X2
Indr1 AJY162GALH
Y1,Y2,Y3
Indr2 AUXB07GALH
Y1,Y2,Y3
Indr3 AUXA30GALH
Indr4 AUXB14GALH
Indr5 AUXB14GALH
Indr6 AUXB14GALH
Indr7 AUXB14GALH
Indr8 AUXB14GALH

User options(Refrigerant)

Inside classification A1
Small classification A11

User option A112 A113

Each


Device model name	Quantity
AUXA30GALH	1
AUXB07GALH	2
AUXB14GALH	7

Selected user options

User Option item	Quantity
A112	1
A113	1
111	1

OK Cancel

Потребителски опции(хл.агент)

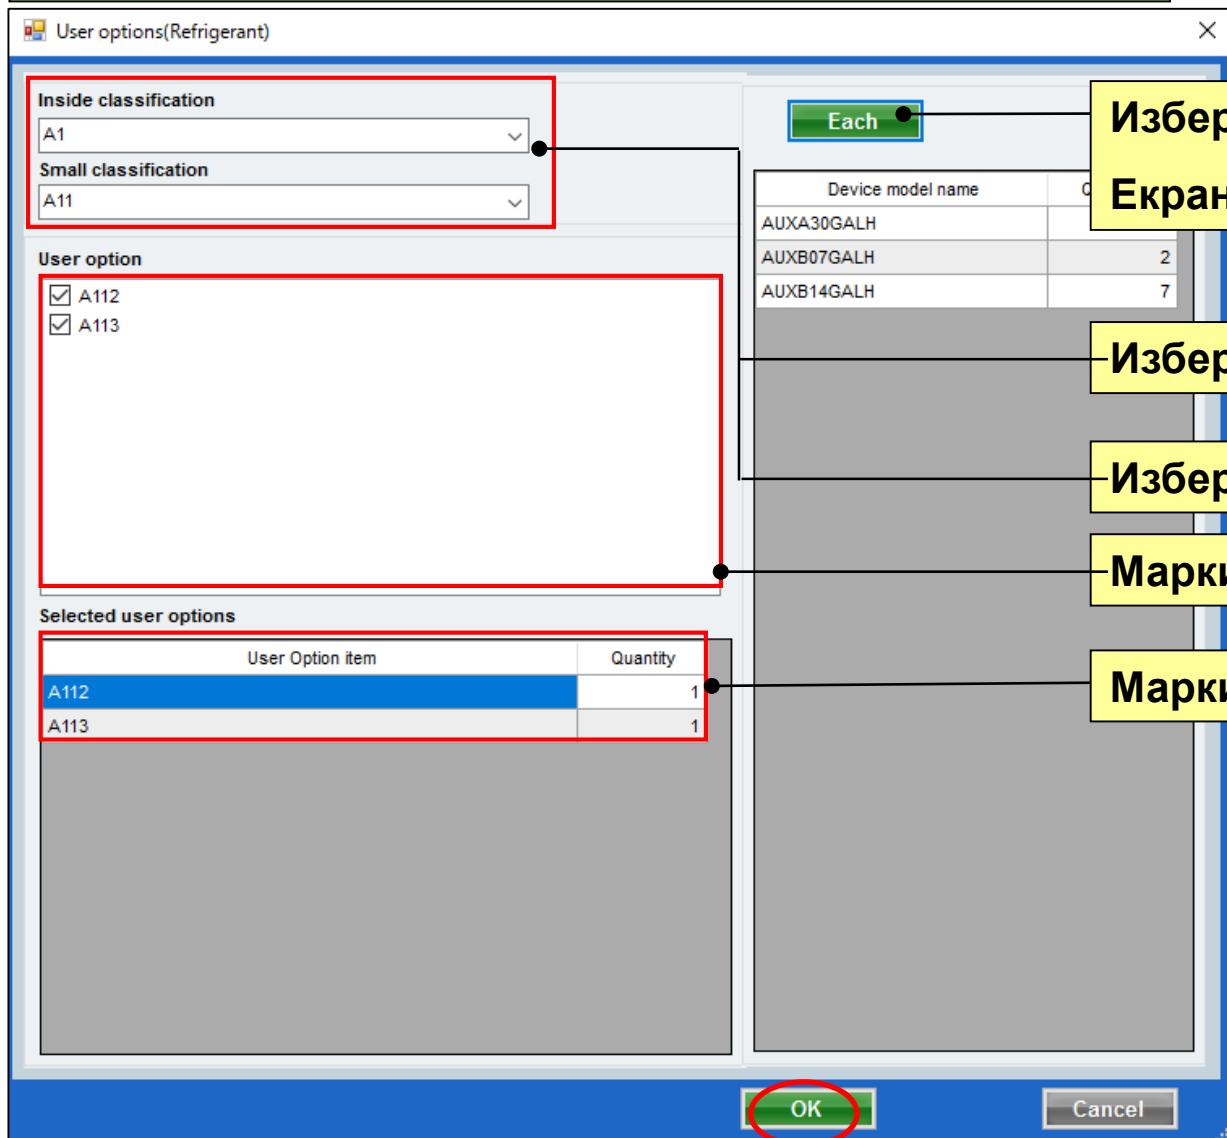

Изберете “Единичен или общ”

Еcranът се променя

Изберете “Категория”

Изберете “Под-категория”

Маркирайте “Потр.опции”


Маркирани “Потр.опции”

Избраните опции се отразяват в Отчета.

接線設定

選機軟體

傳輸線

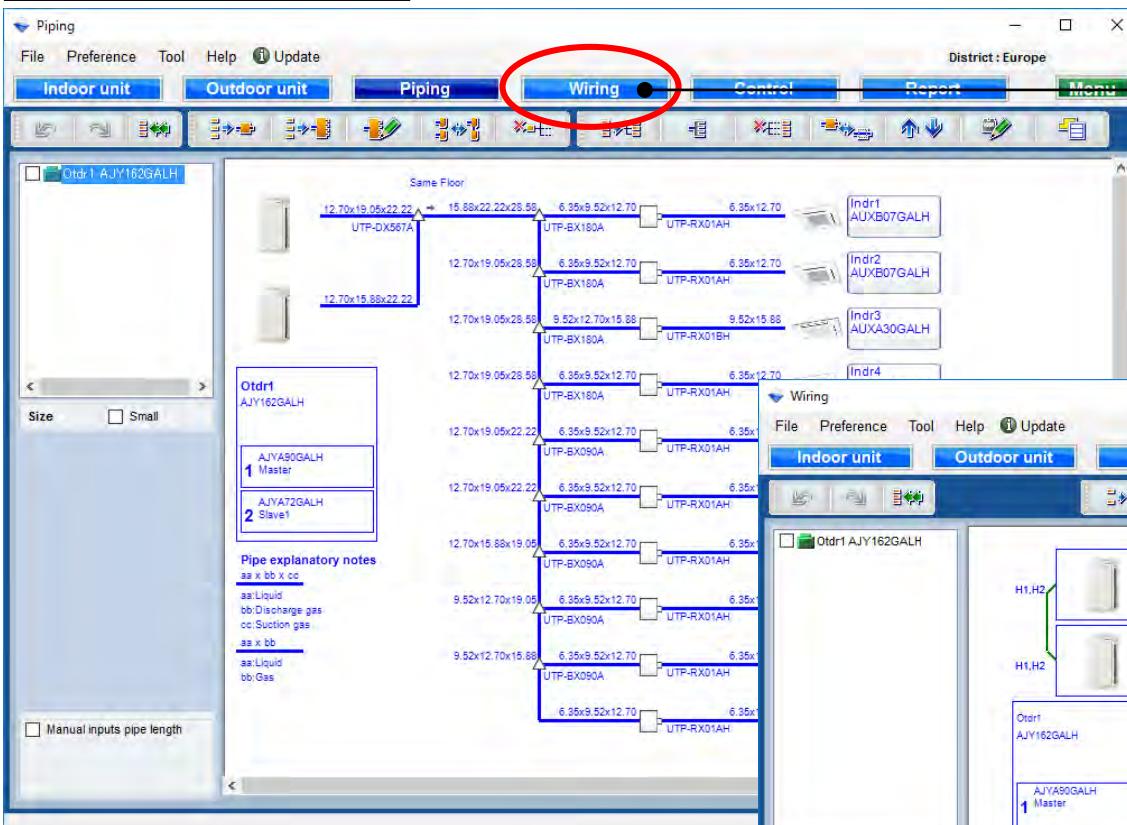


選擇“接線”

選擇“傳輸線”

: Transmission line


: Remote controller line

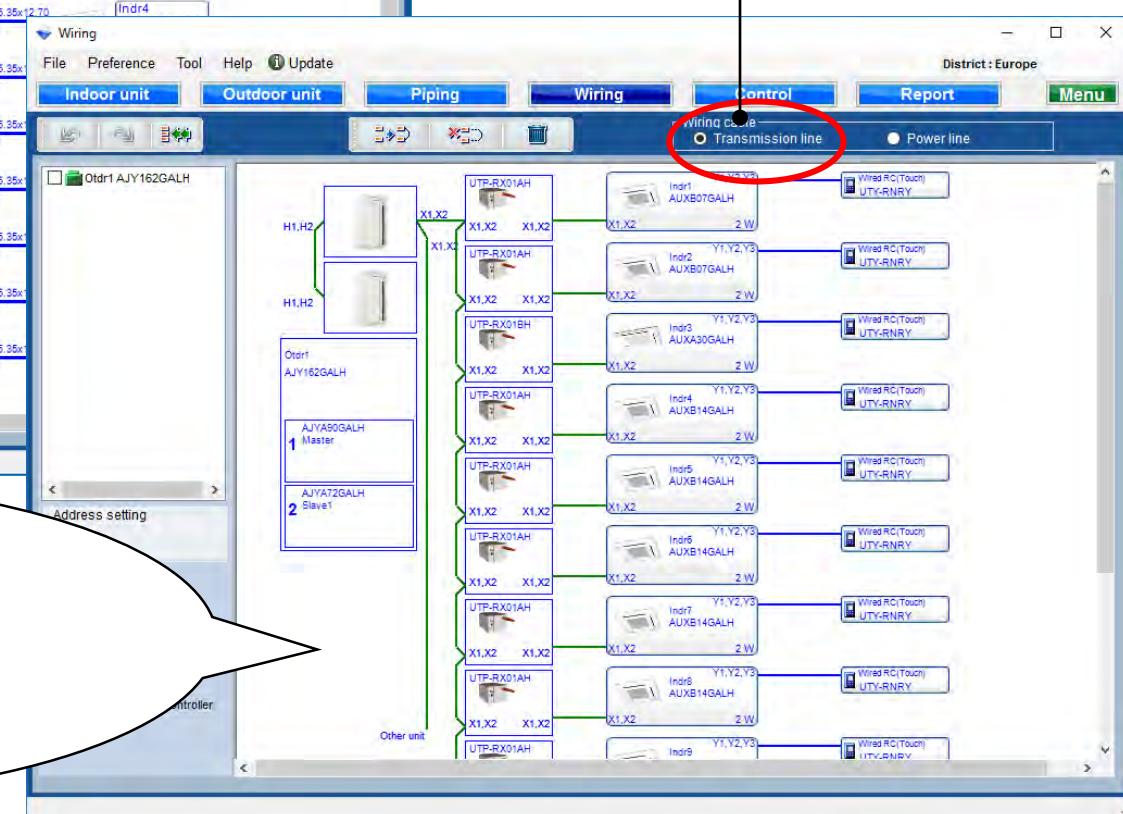

接線設定


選機軟體

電源線

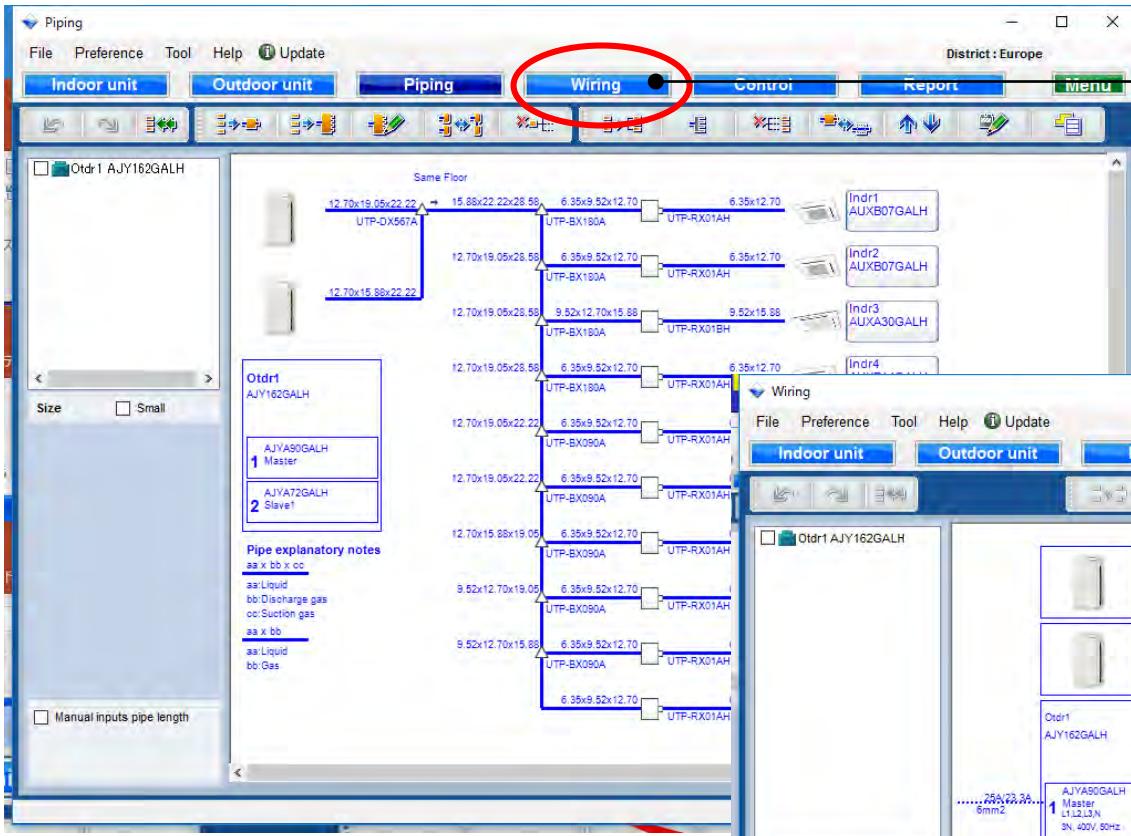

選擇“接線”

選擇“電源線”

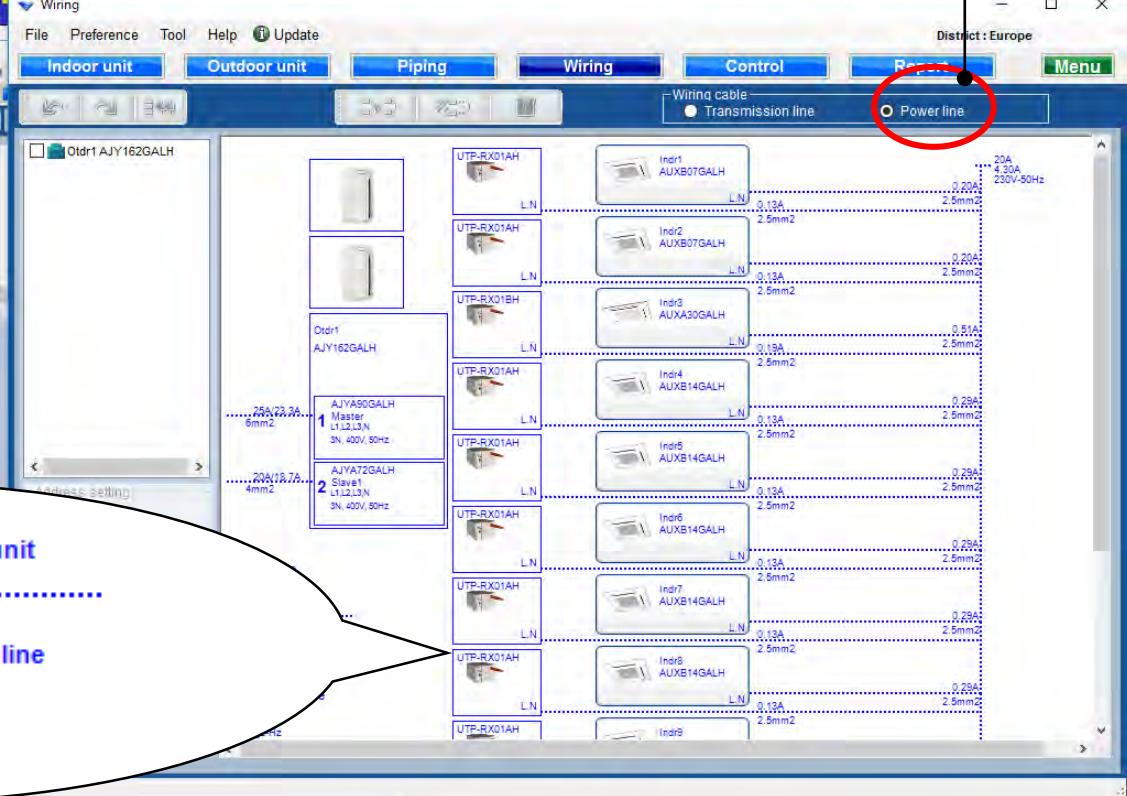

... : Power line

Indoor, RB unit

MCA

Diameter

Total power line

Breaker

MCA

Voltage-Hz

Outdoor


Breaker/MCA

Diameter

接線設定

選機軟體

分組(1/2)

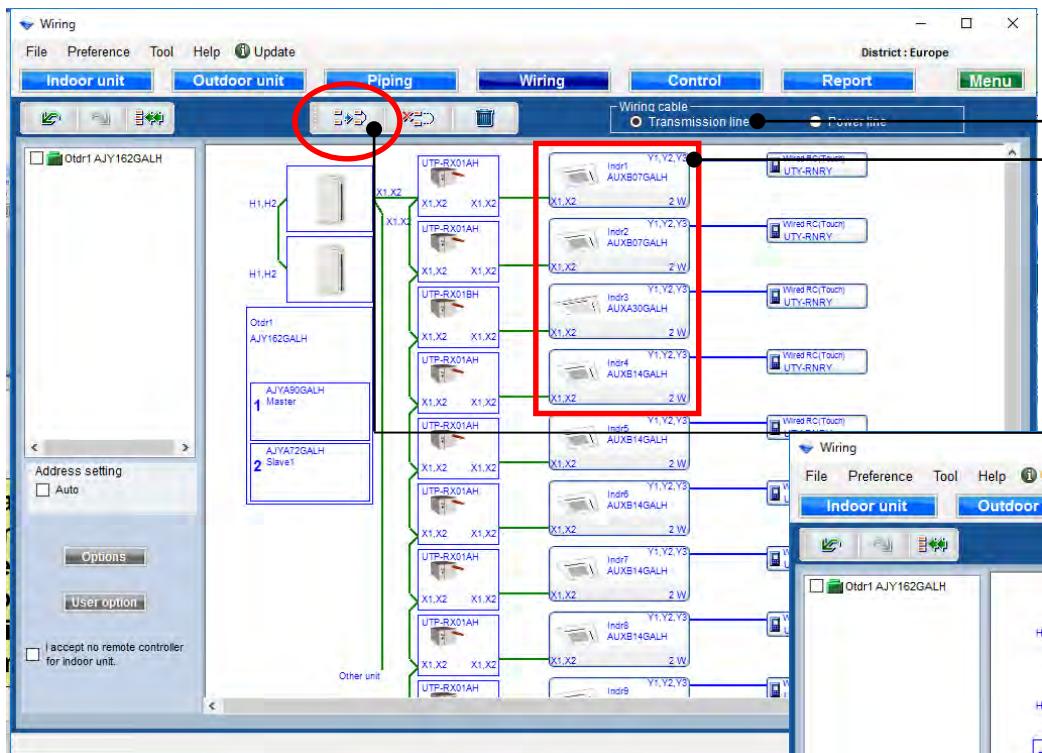


“總電源線/ 每條電源線” “好的” 可以被編輯

選擇室內機

選擇“組遙控器”

自動創建遙控器組線。

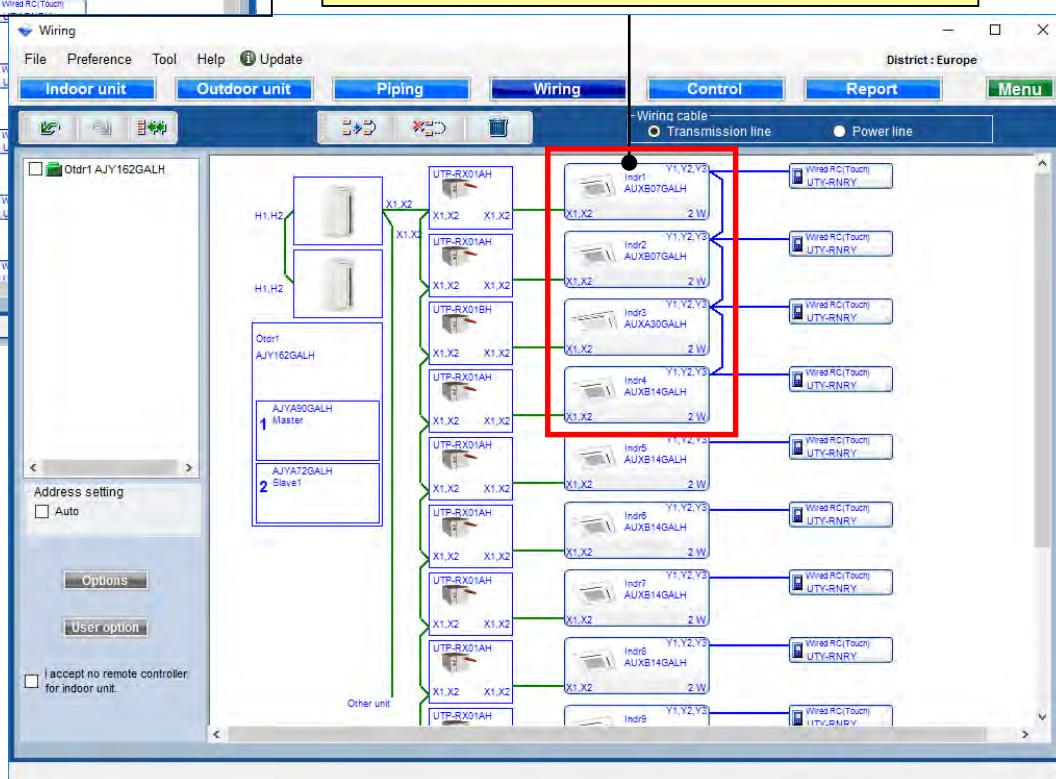

接線設定


選機軟體

分組(2/2)

選擇“撤消/做/重新組合”

選擇“發布分組”


選擇“室內機”

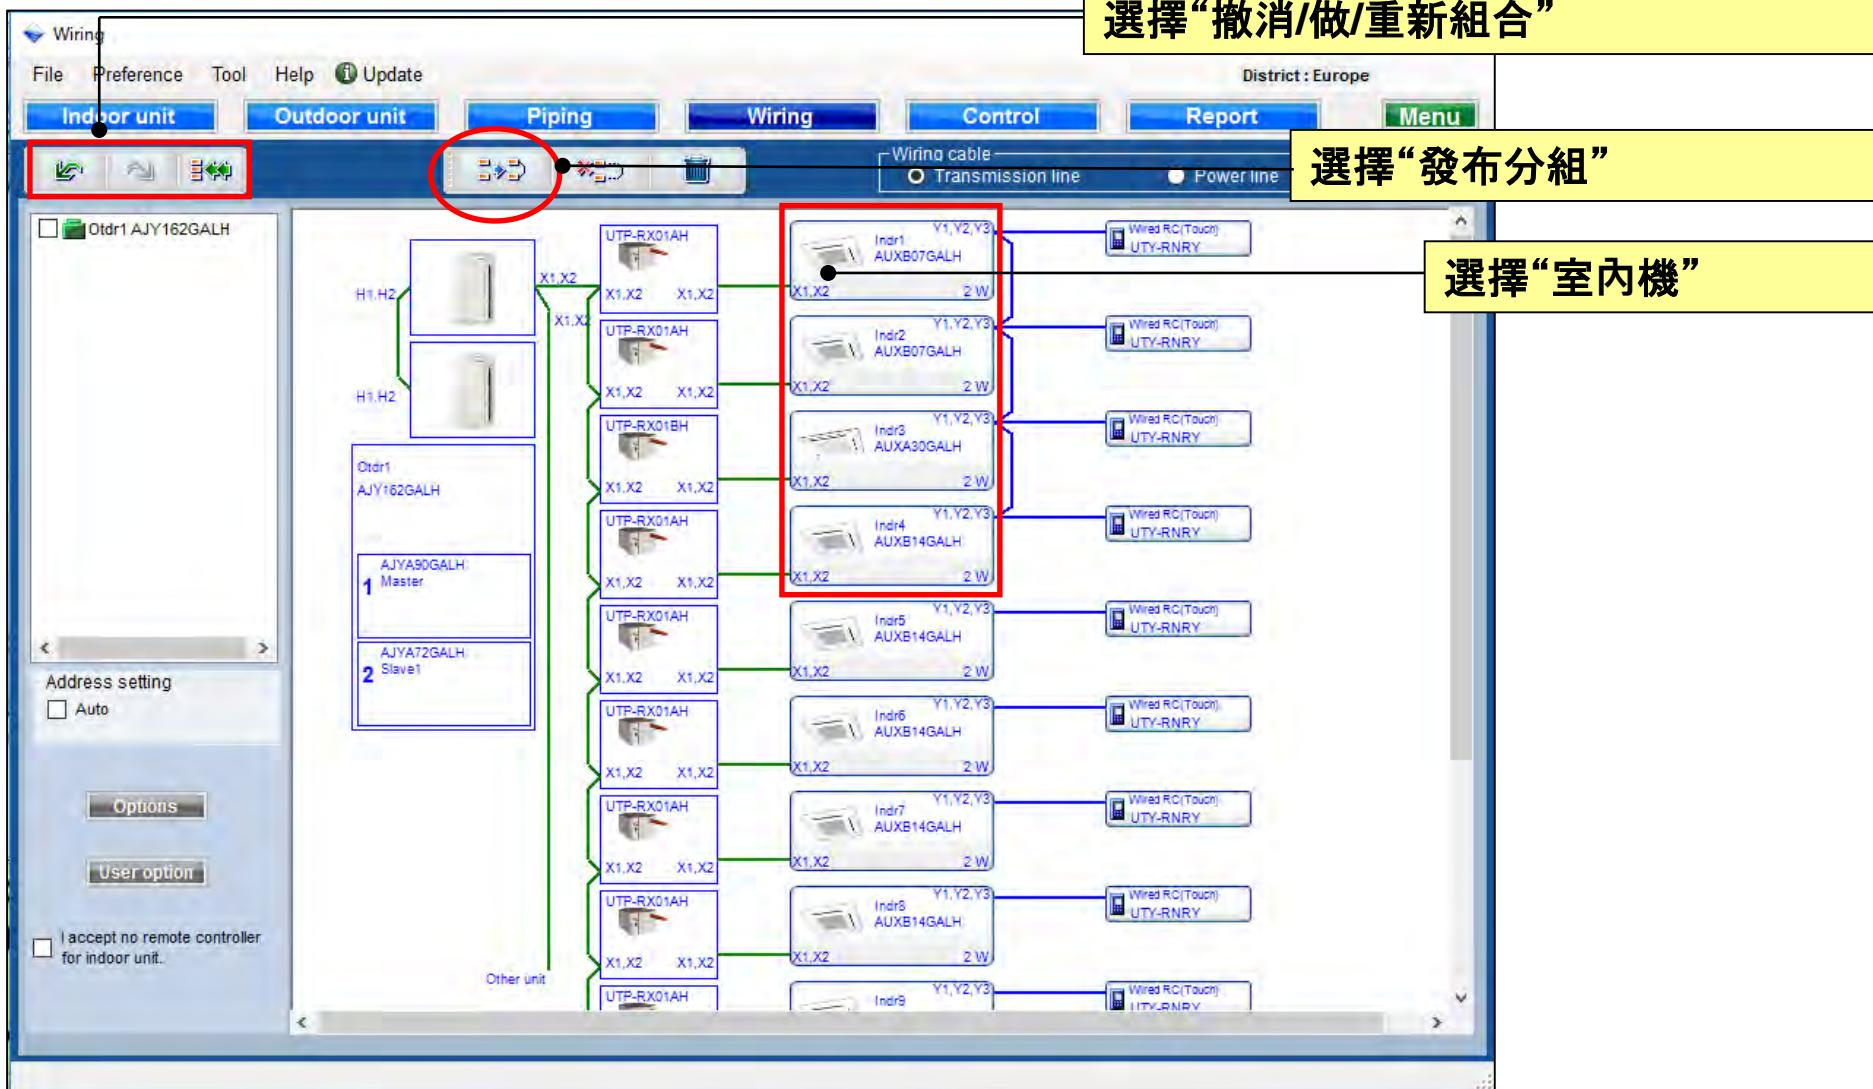

接線設定

選機軟體


檢查盒子

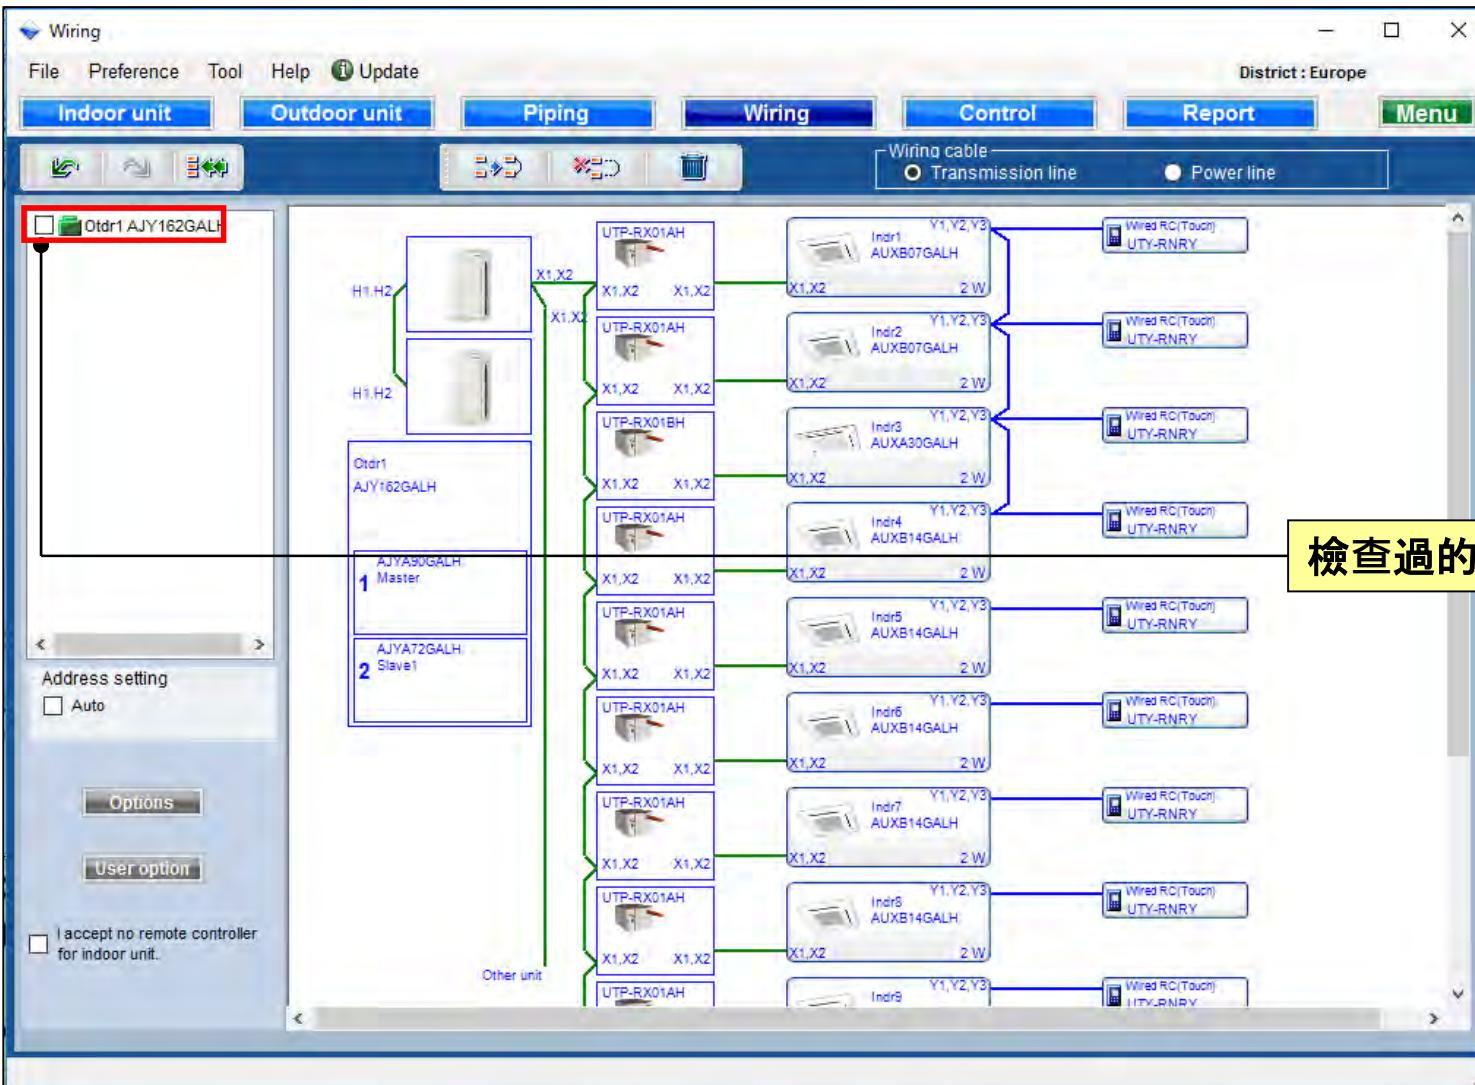

接線設定

選機軟體


刪除

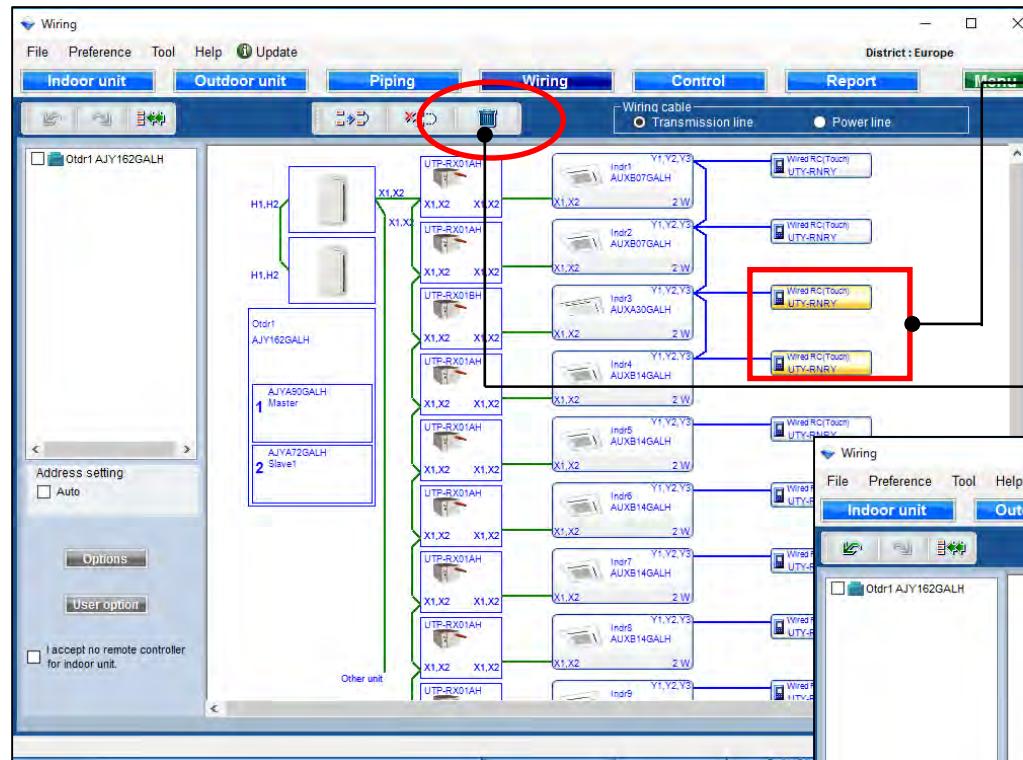

選擇遙控器

選擇“刪除遙控器”


自動刪除遙控器，改變藍線。

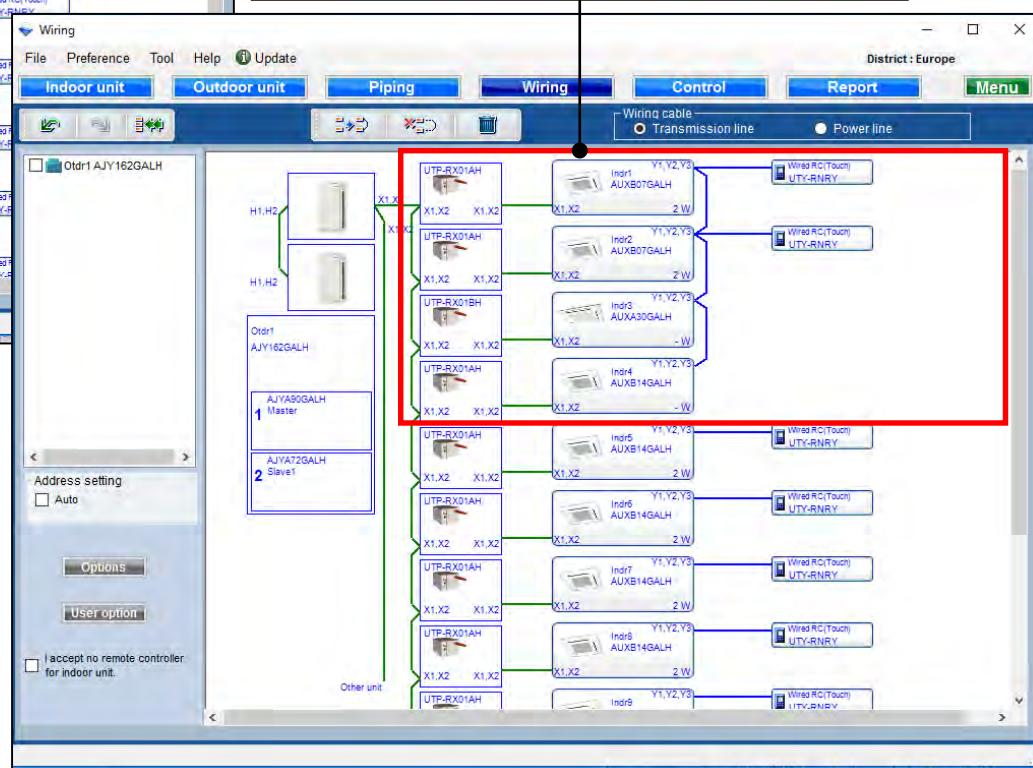


接線設定

選機軟體

地址設置

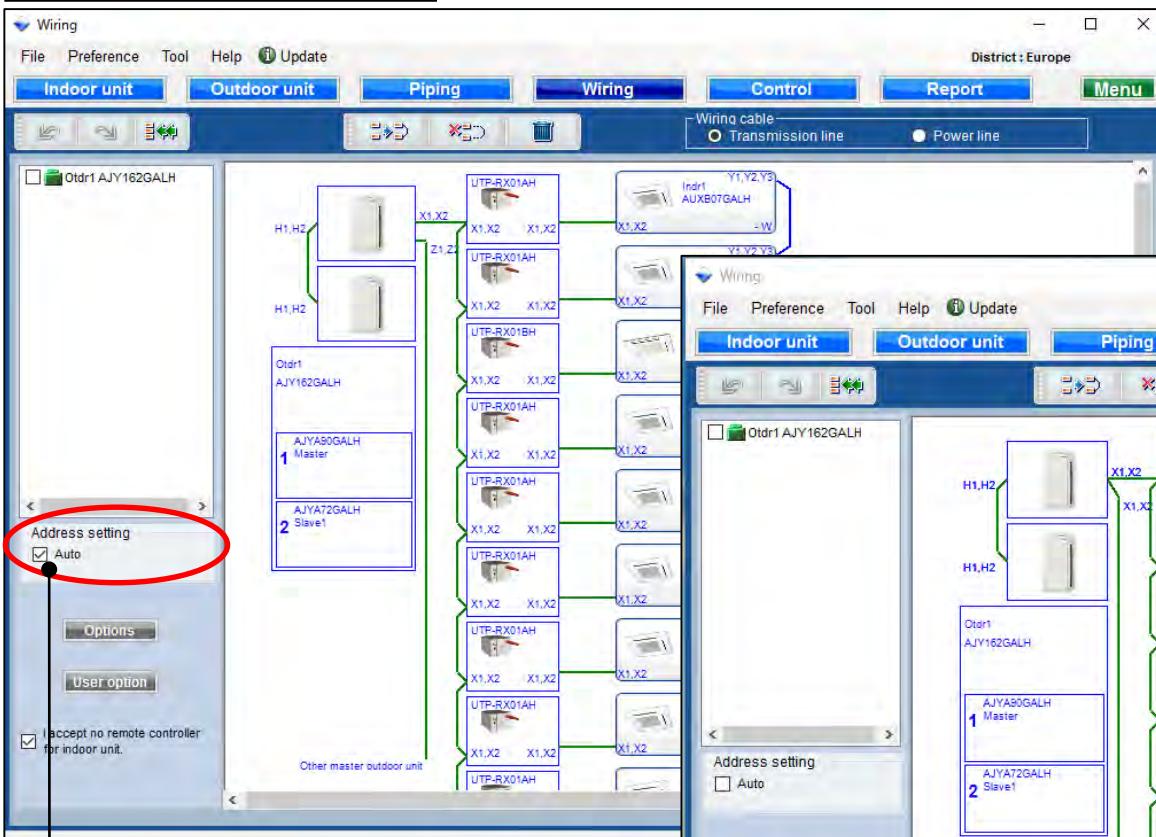

檢查是否使用“自動地址”

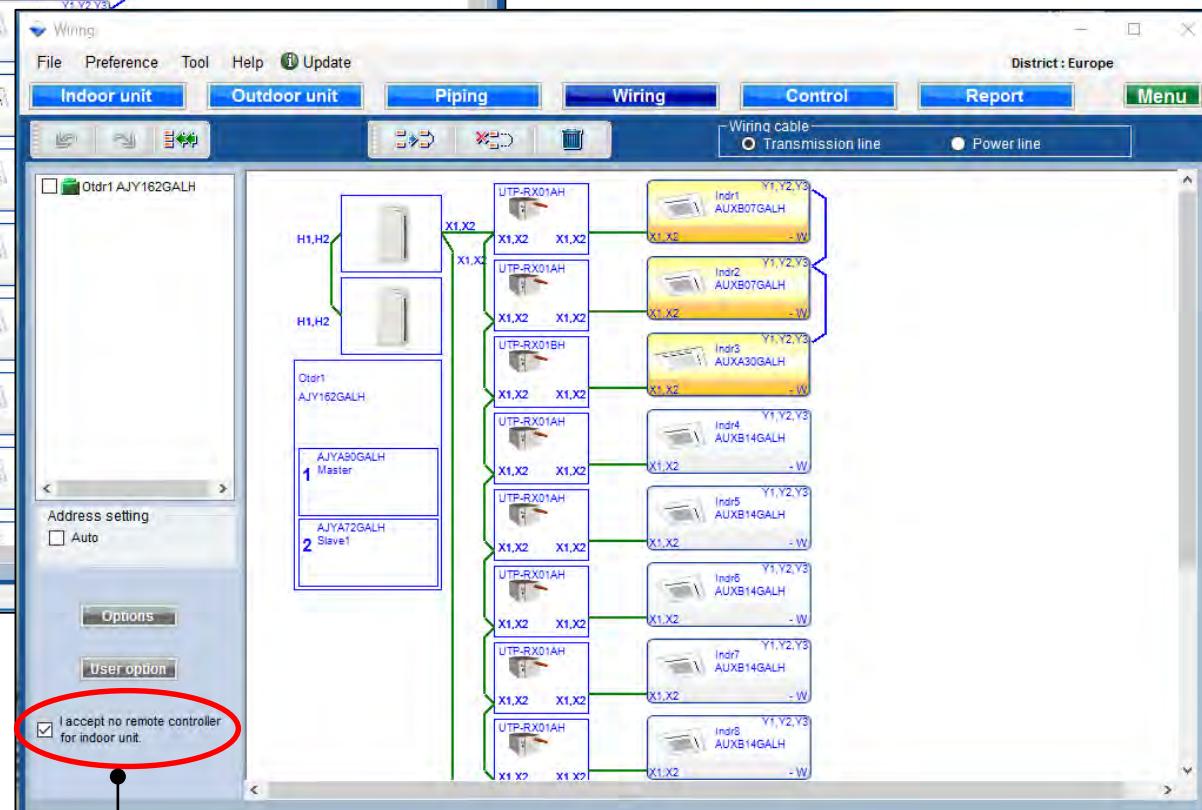


檢查“遙控器”要不要

接線設定

選機軟體


設定

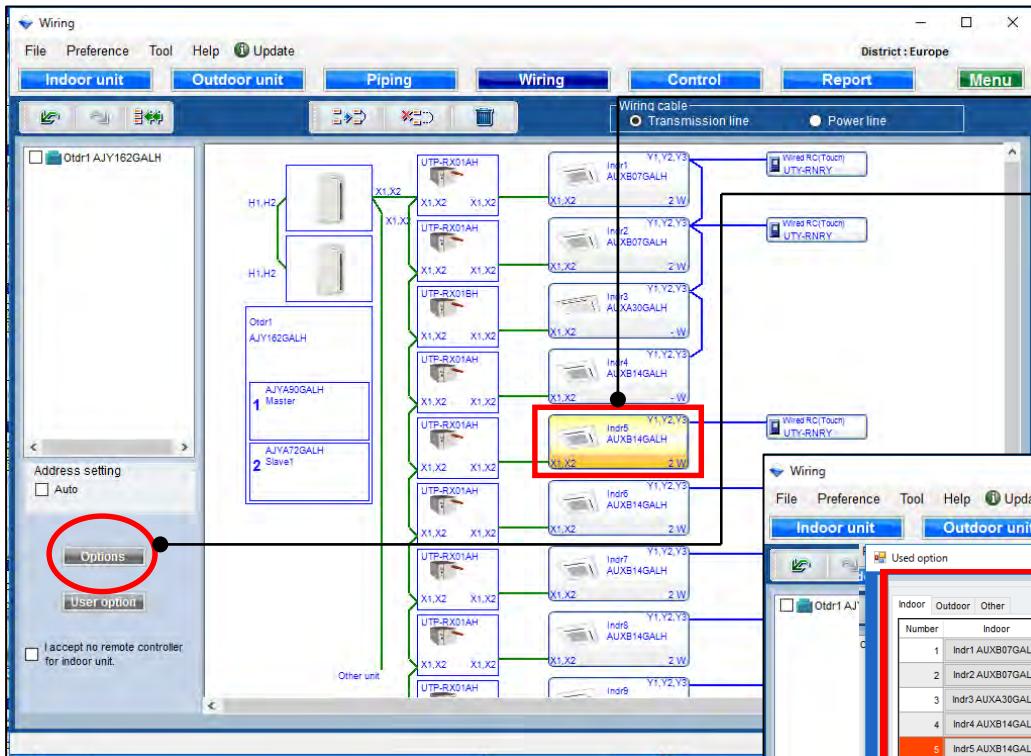

選擇室內機

選擇“選項”


打開使用的選項視窗

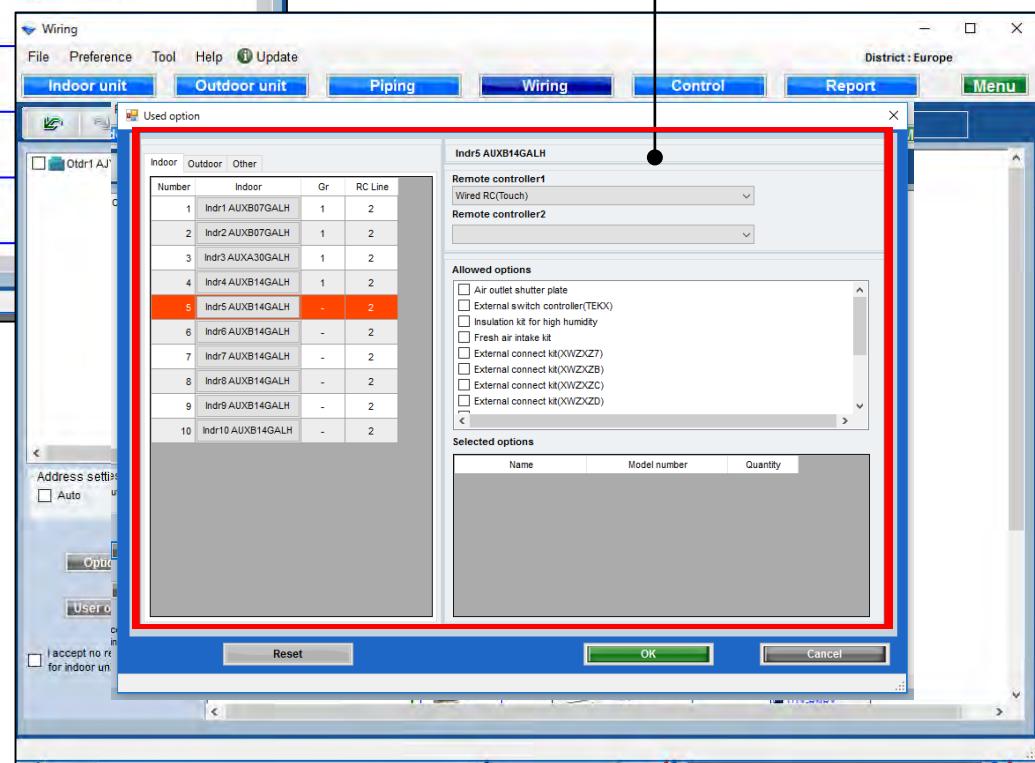


接線設定

選機軟體

使用選項

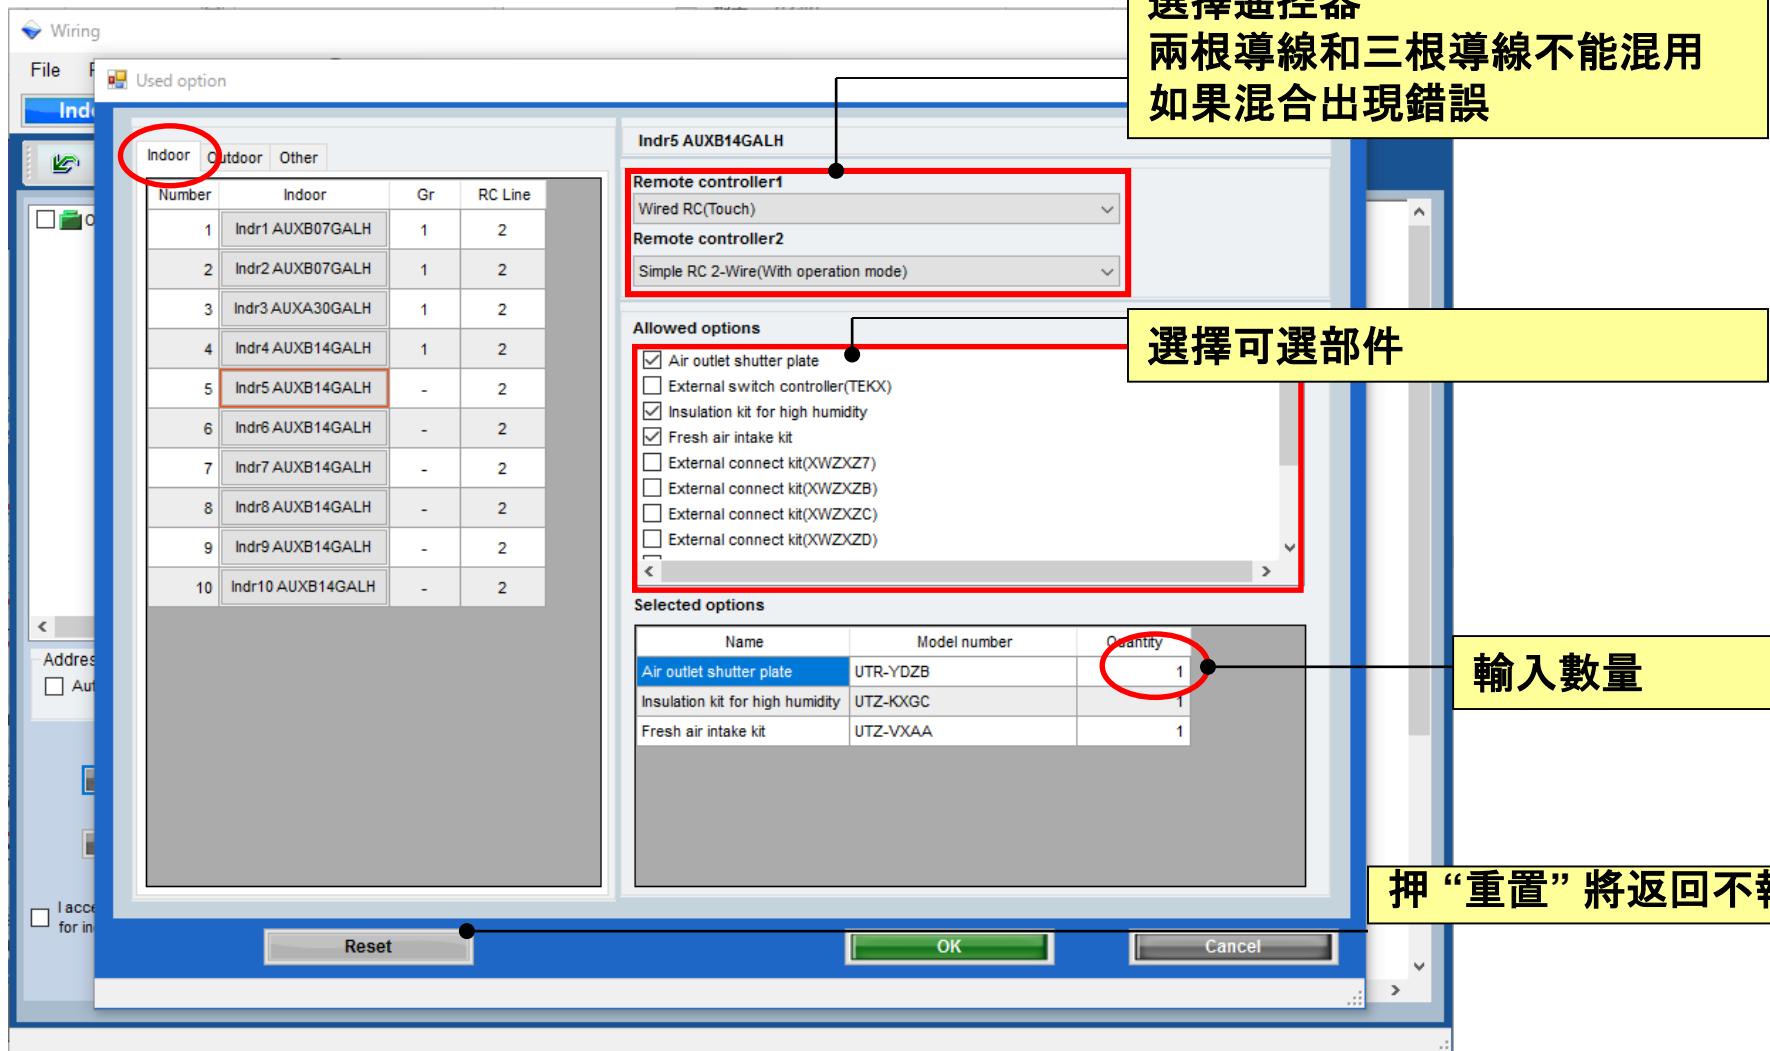


使用選項

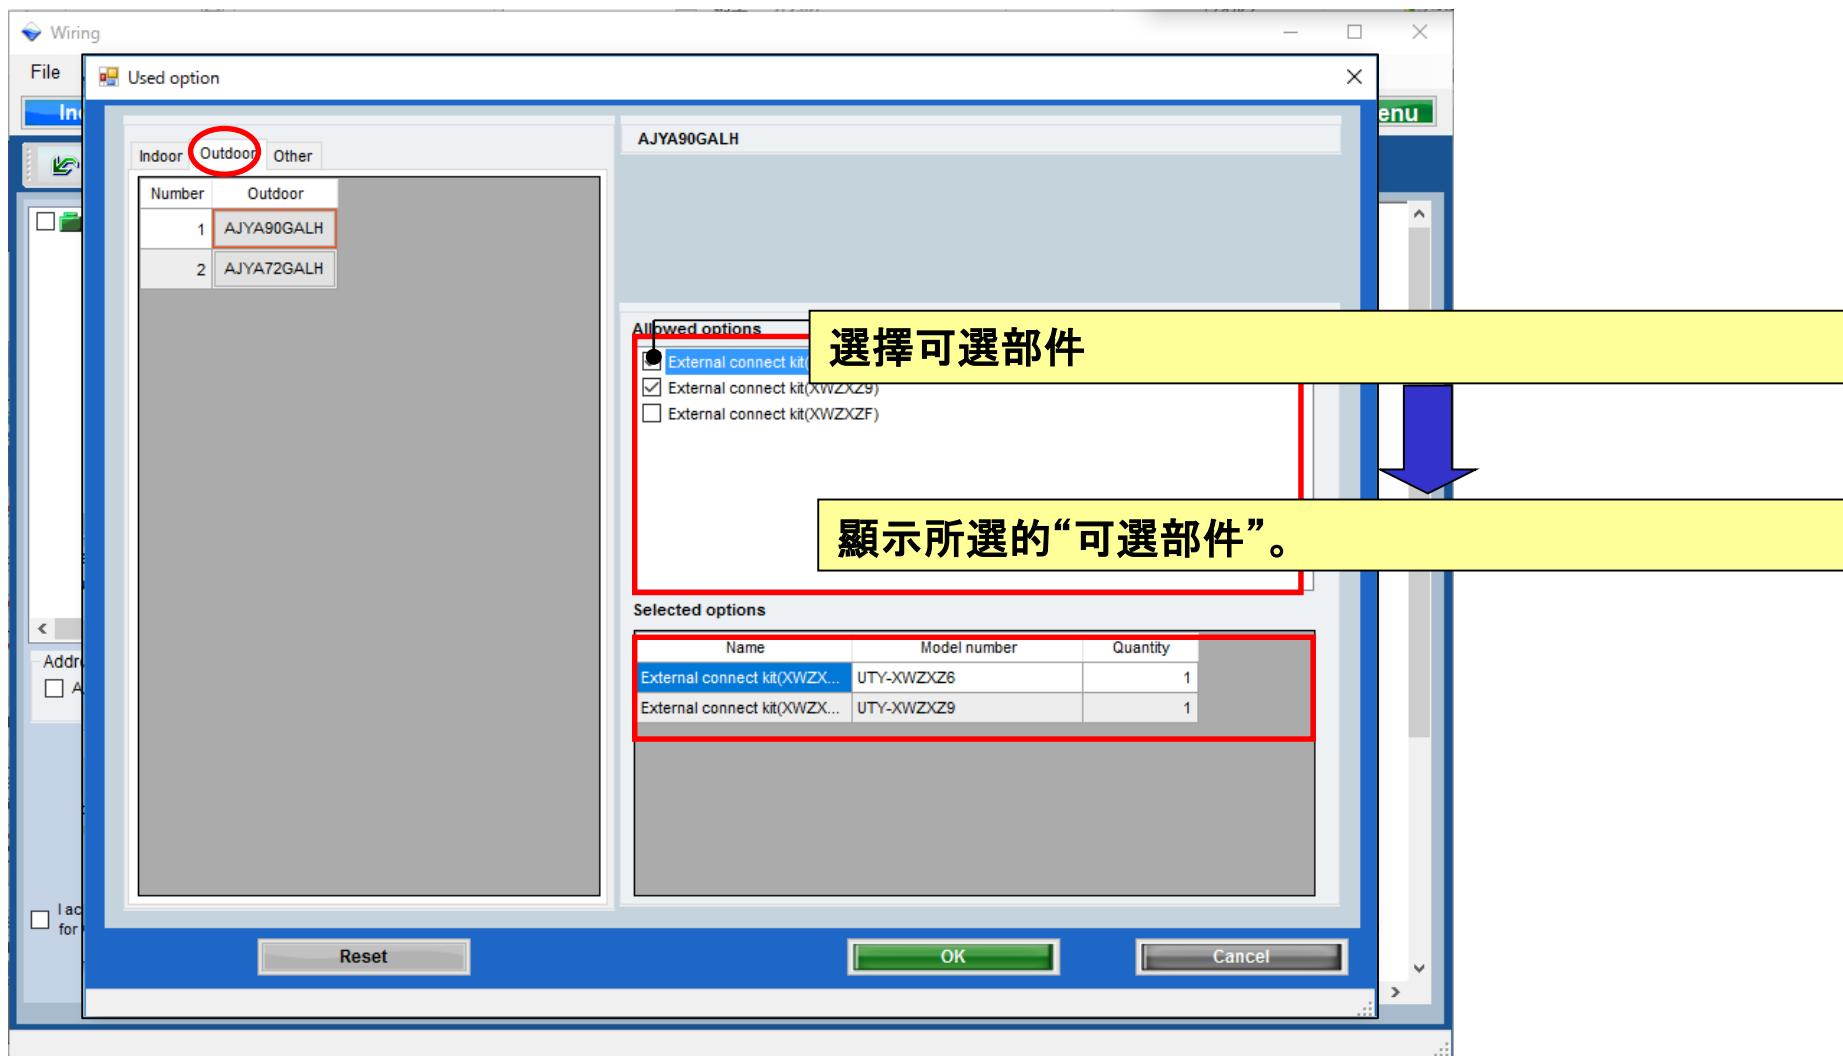

所選選項顯示在“報告”


使用選項

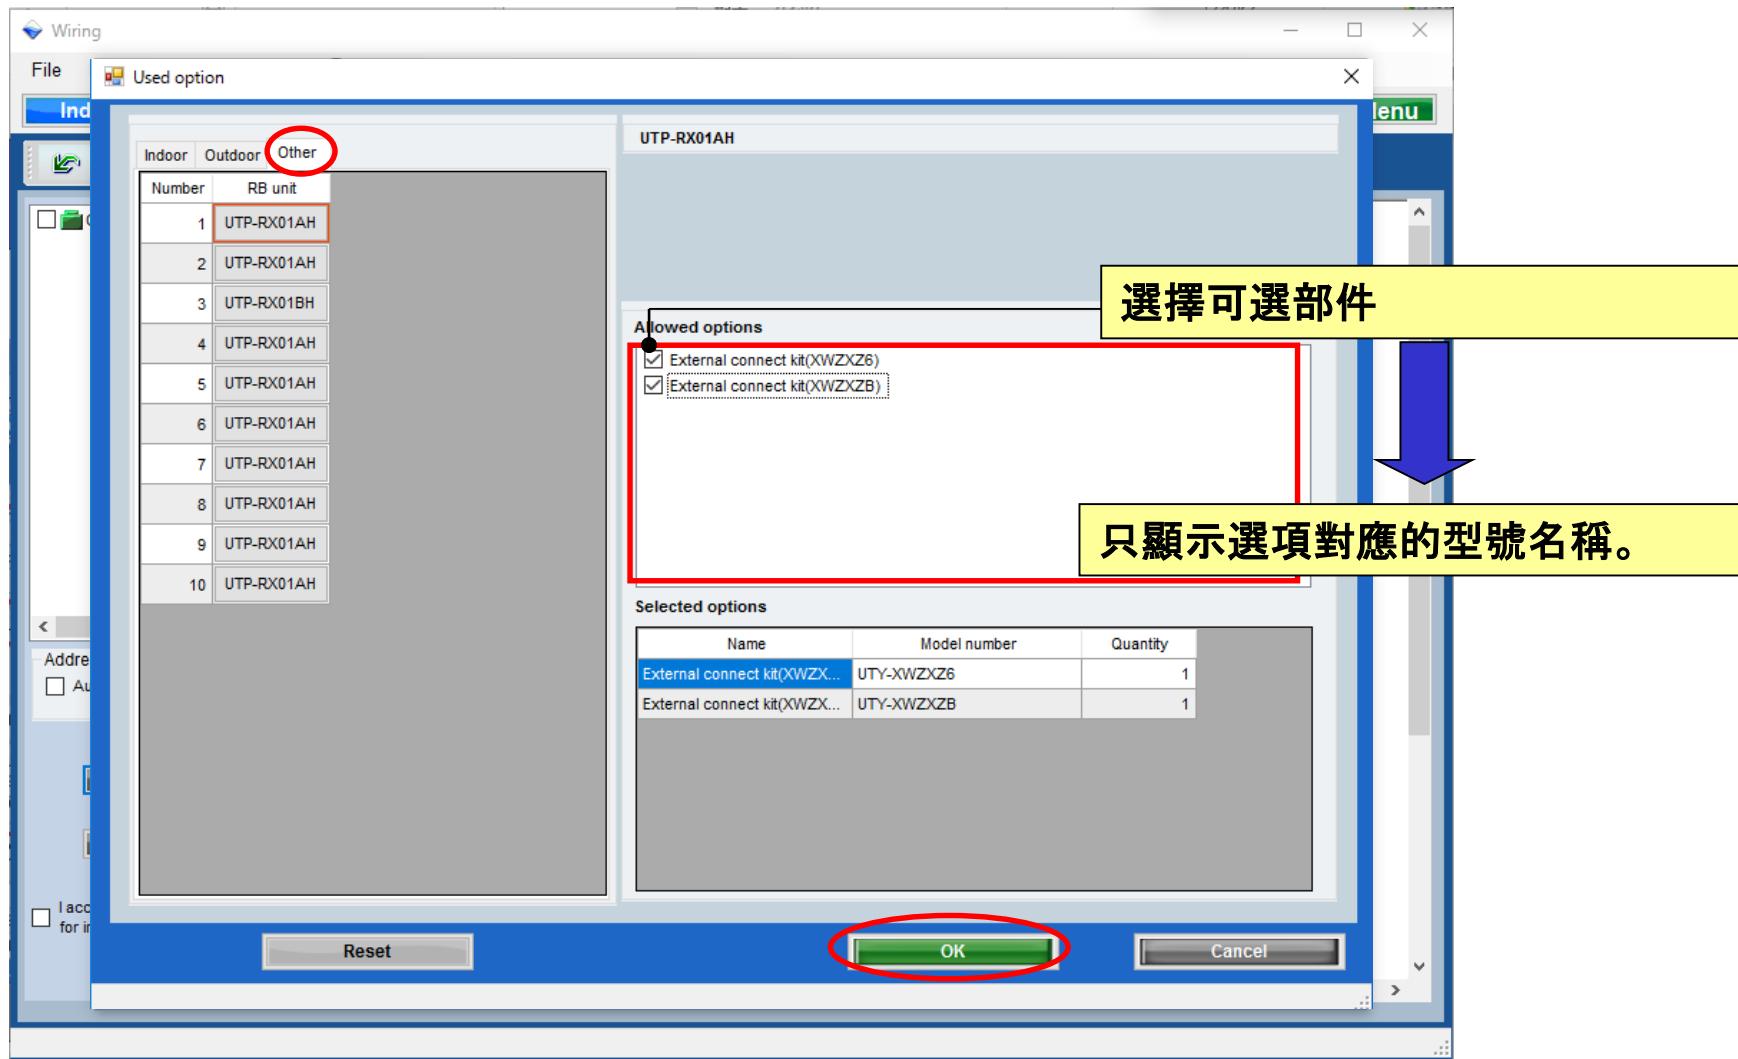


接線設定

選機軟體

用戶選項

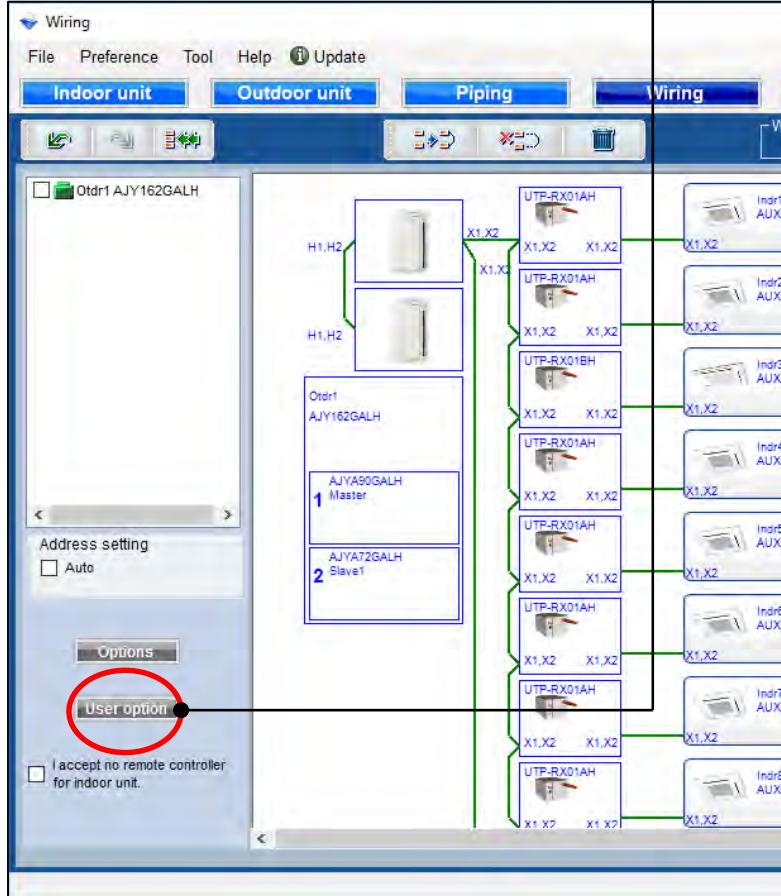


選擇“用戶選項”

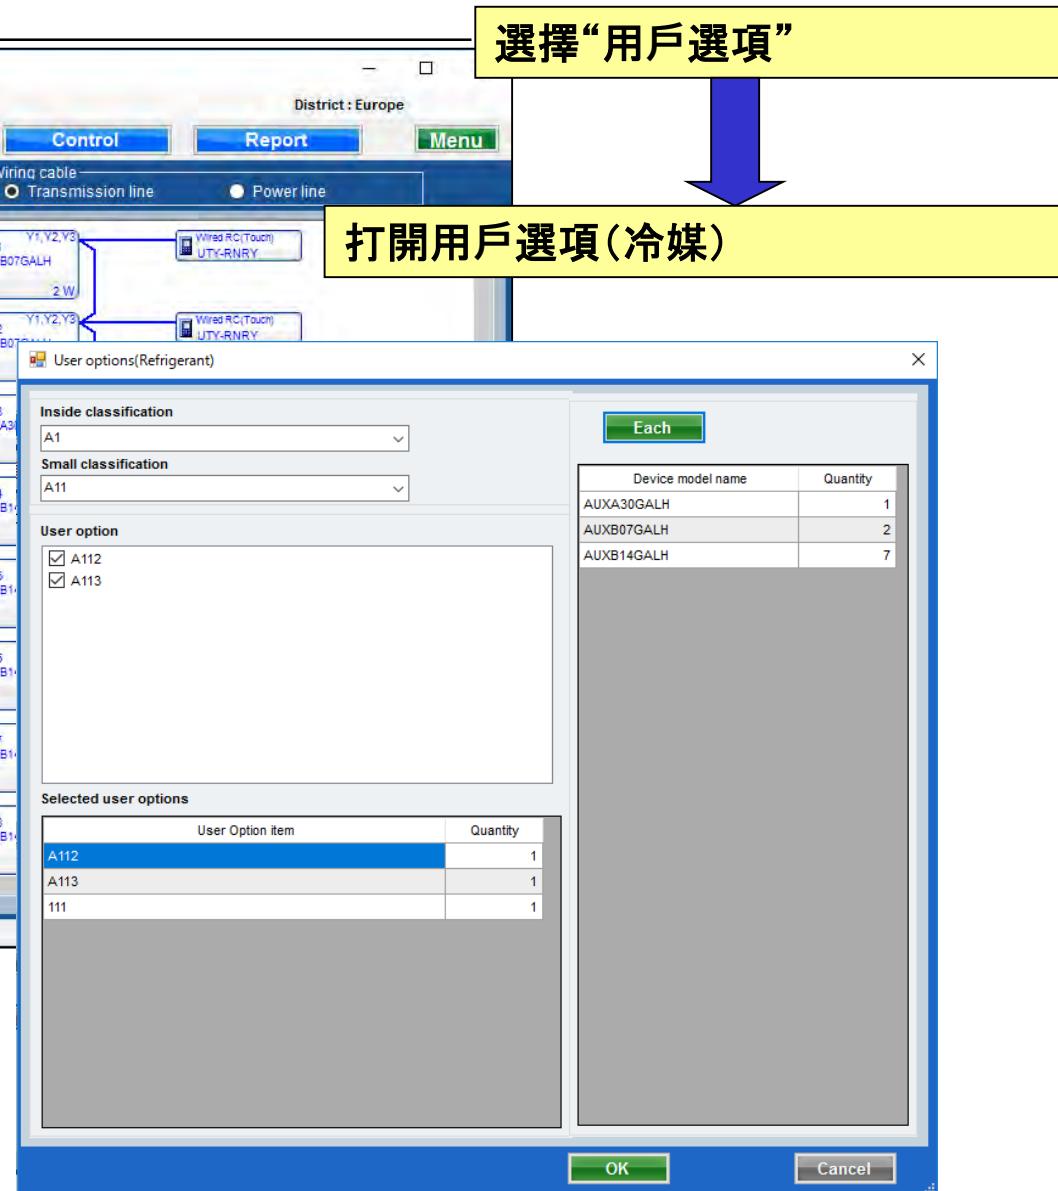

接線設定

選機軟體


用戶選項(冷媒)

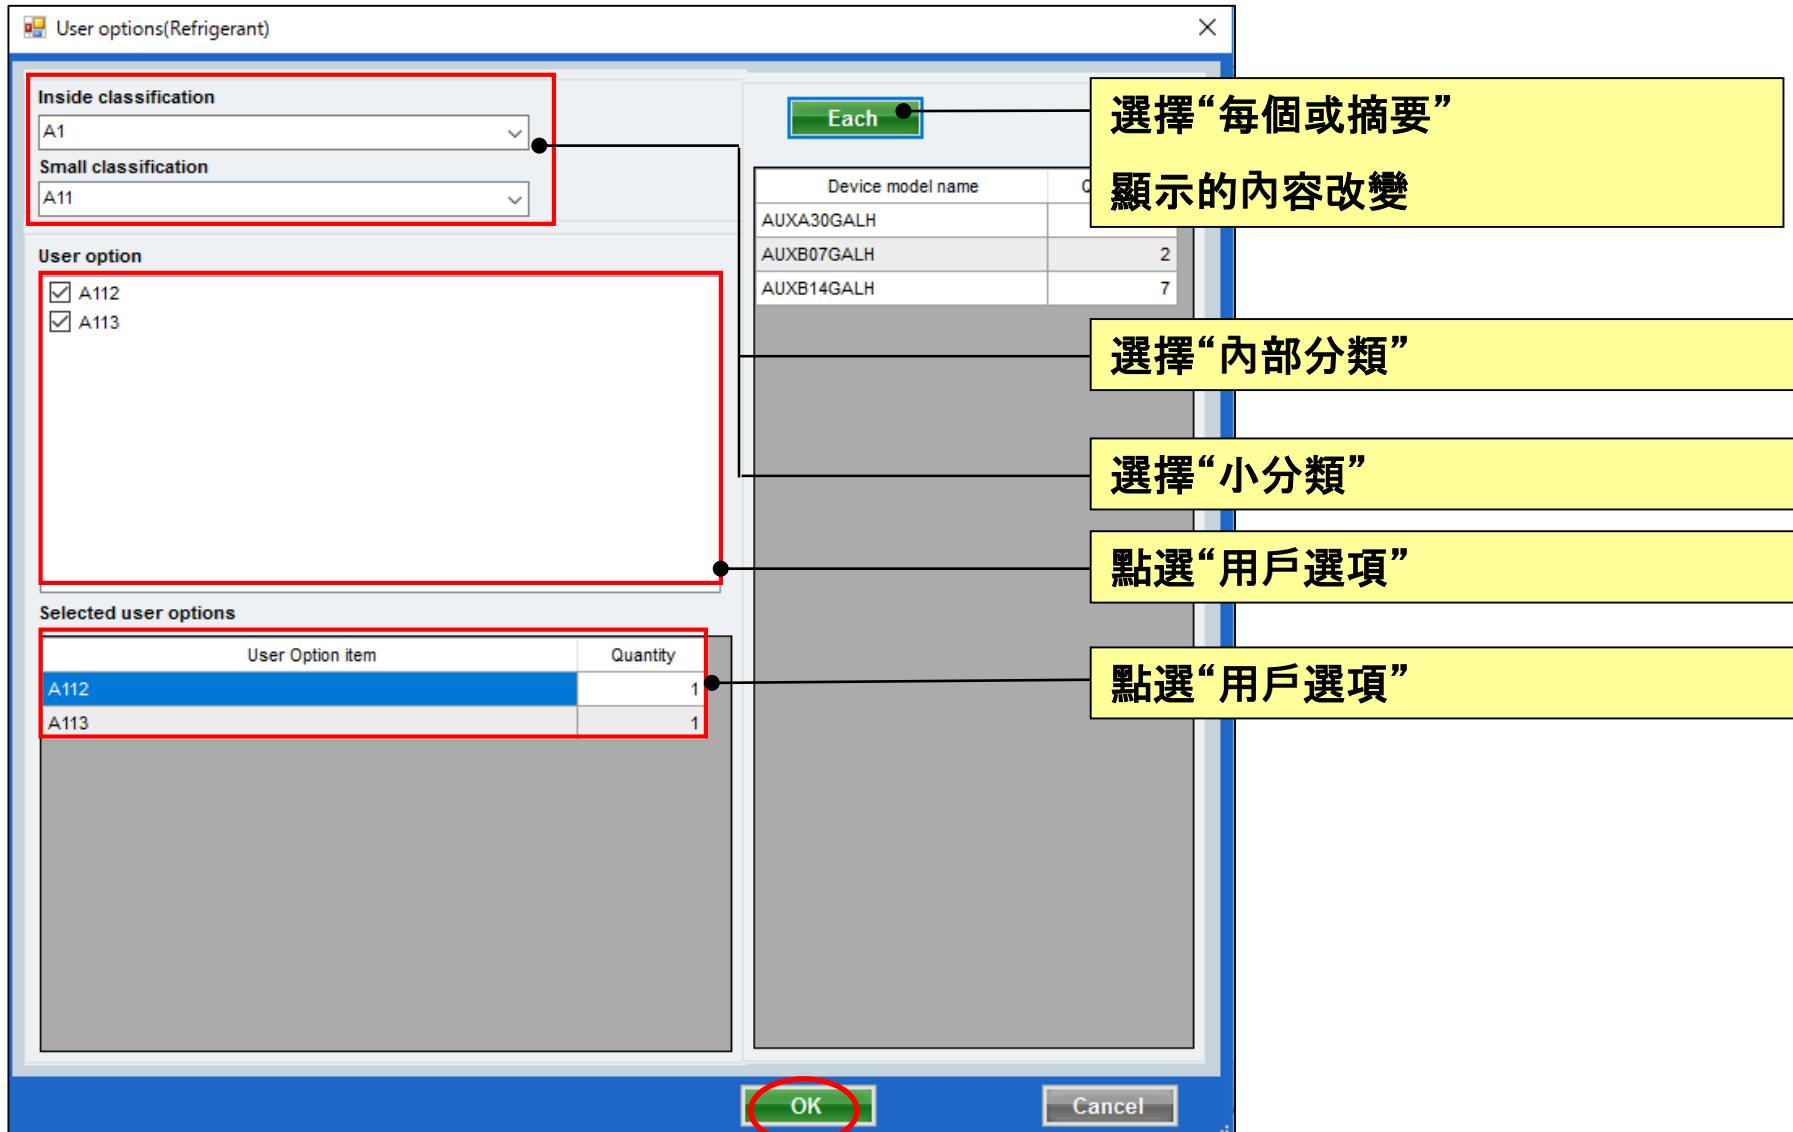

所選選項顯示在“報告”

Wiring settings


Design Simulator

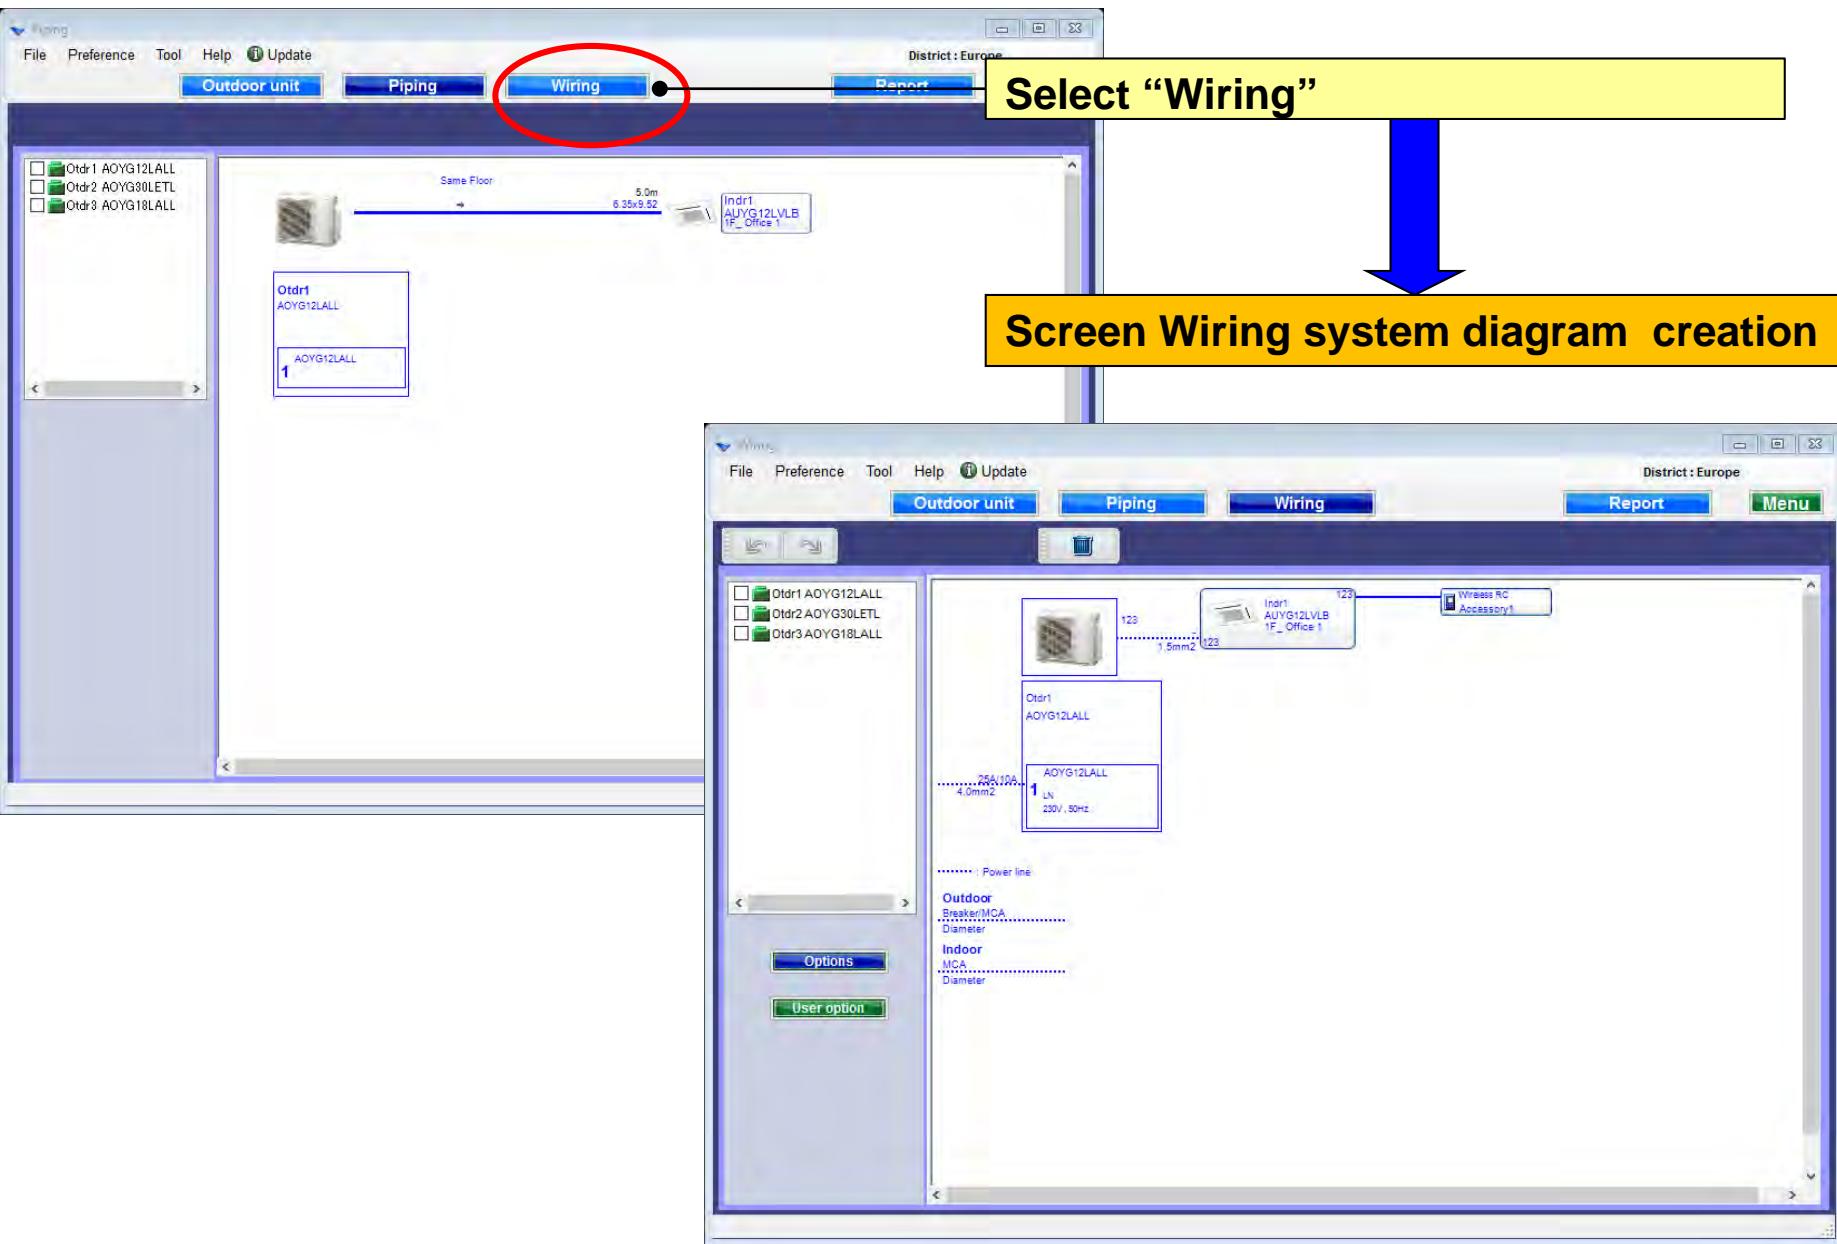

Wiring settings

Design Simulator


Refrigerant system determination

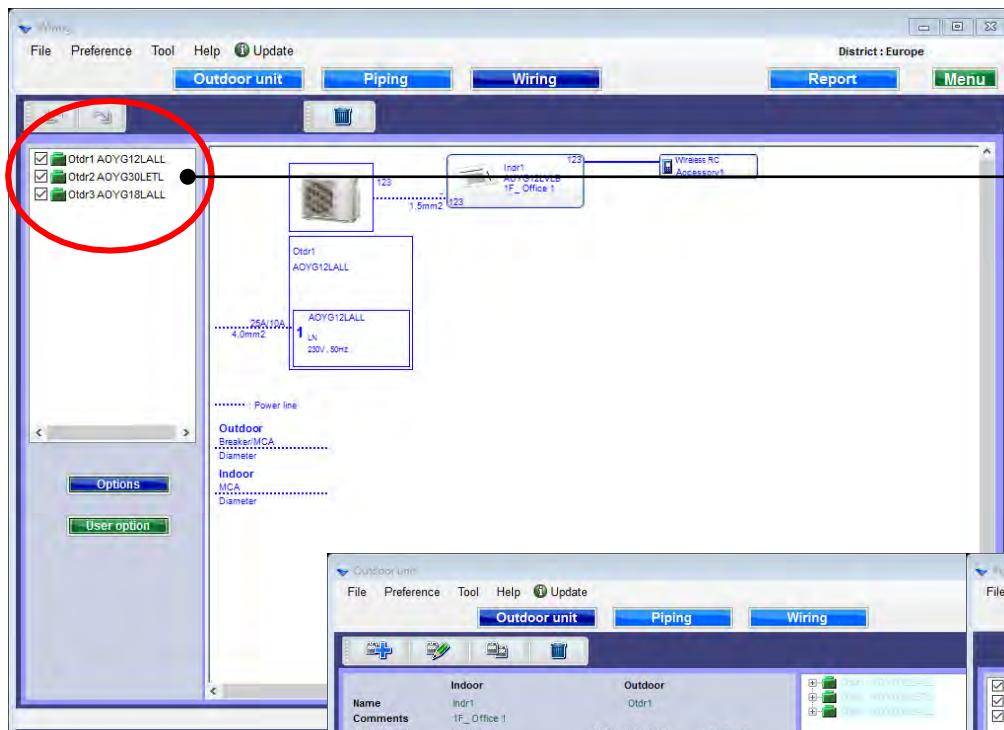

Check the refrigerant system

Outdoor unit		Piping		Wiring	
File	Preference	Tool	Help	Update	District : Europe
Otdr1 AOYG12LALL	Otdr2 AOY G30LLETL	Otdr3 AOYG18LALL			
Indr1 AOYG12LALL					
AOYG12LALL	1	AOYG12LALL	1	AOYG12LALL	1
25A/10A	4.0mm²	25A/10A	4.0mm²	25A/10A	4.0mm²
Indoor		Indoor		Indoor	
Breaker/MCA		MCA		MCA	
Diameter		Diameter		Diameter	
Options					
User option					


Checked refrigerant system
cannot be edited at each screen

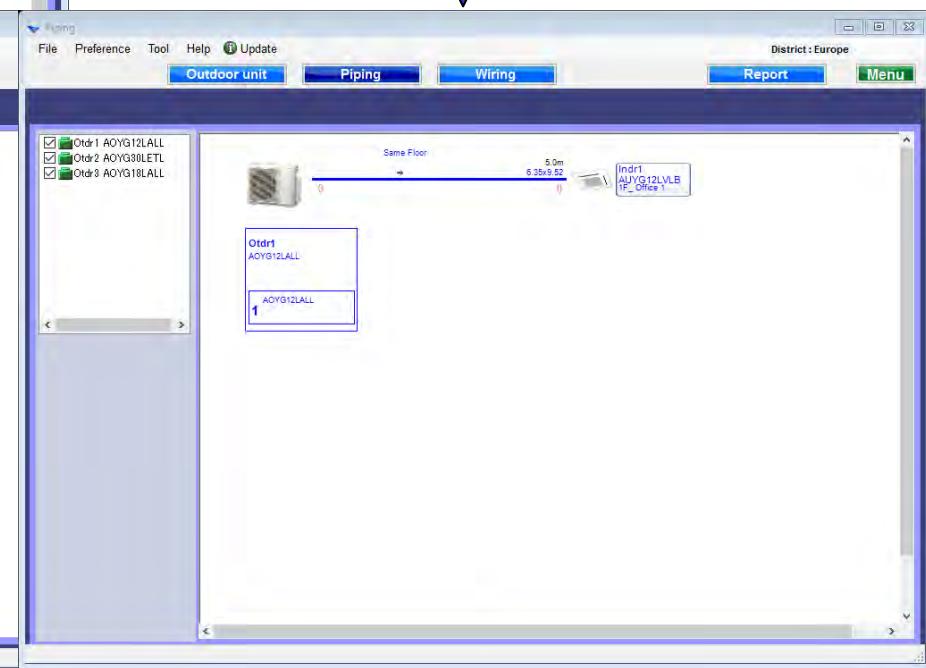

Wiring settings

Design Simulator

Options

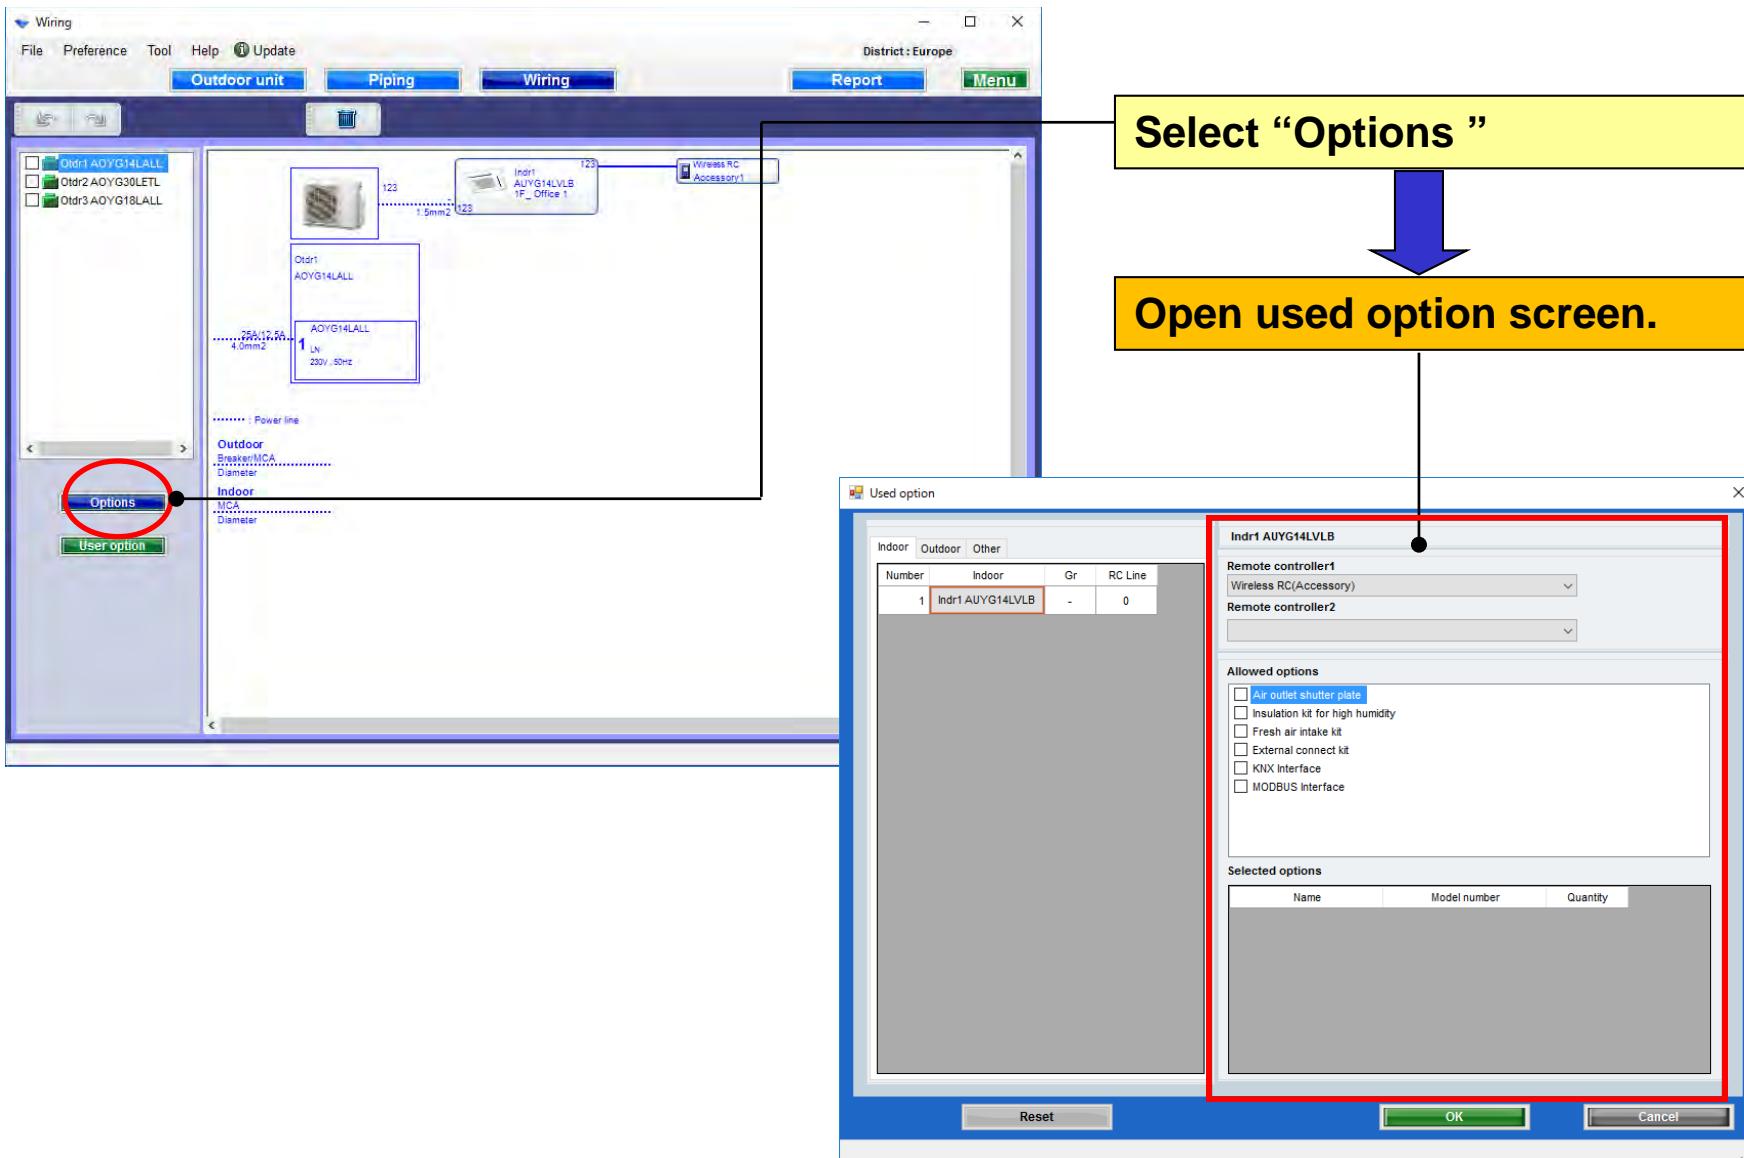

Wiring settings

Design Simulator

Used option(1/2)

Used option

Indoor Outdoor Other

Number	Indoor	Gr	RC Line
1	Indr1 AUYG14LVLB	-	0

Indr1 AUYG14LVLB

Remote controller1
Wireless RC(Accessory)

Remote controller2

Allowed options

- Air outlet shutter plate
- Insulation kit for high humidity
- Fresh air intake kit
- External connect kit
- KNX Interface
- MODBUS Interface

Selected options

Name	Model number	Quantity
Air outlet shutter plate	UTR-YDZB	1
Insulation kit for high humidity	UTZ-KXGC	1
Fresh air intake kit	UTZ-VXAA	1

Reset OK Cancel

Select remote controller

Select Optional parts


Only the model name of option to correspond is displayed.

The selected options are displayed in "Report".

Wiring settings

Design Simulator

Used option(2/2)

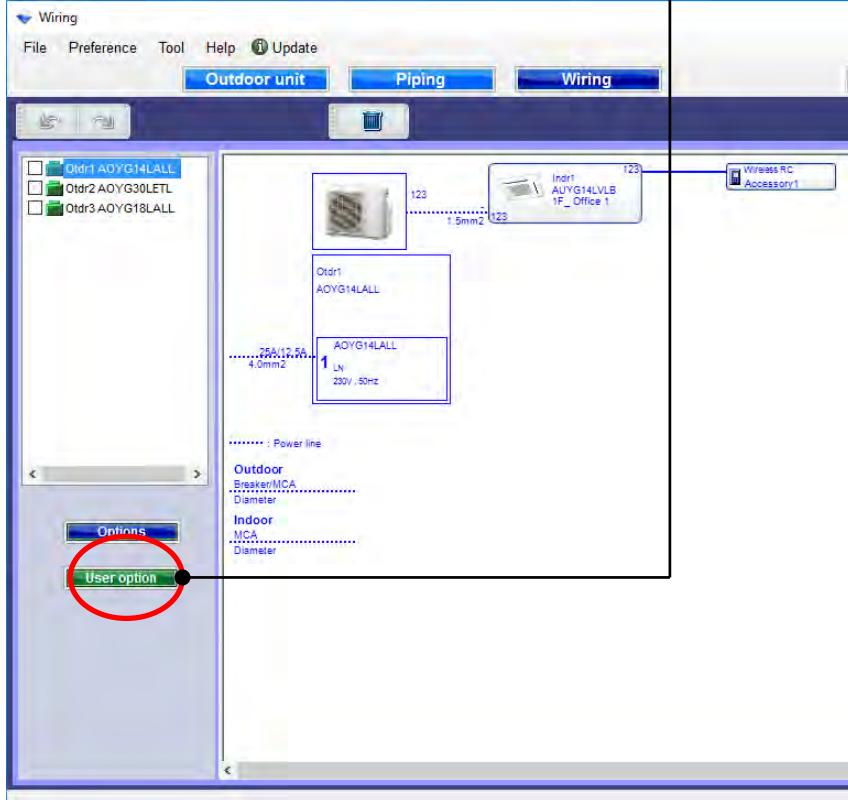

Select “User Options”

The screenshot shows the 'User options(Refrigerant)' dialog box. At the top, it says 'District: Europe' with 'Report' and 'Menu' buttons. The main area has two dropdown menus: 'Inside classification' set to 'A1' and 'Small classification' set to 'A11'. Below these is a 'User option' section with checkboxes for A111, A112, and A113, where A111 and A112 are checked. To the right, there's a 'Each' button and a table for device quantities. The table shows one item of type 'AUYG14LVLB' with a quantity of 1. At the bottom are 'OK' and 'Cancel' buttons.

Device model name	Quantity
AUYG14LVLB	1


User Option item	Quantity
A111	1
A112	1

Open User options (Refrigerant)

Wiring settings

Design Simulator

User option(Refrigerant)

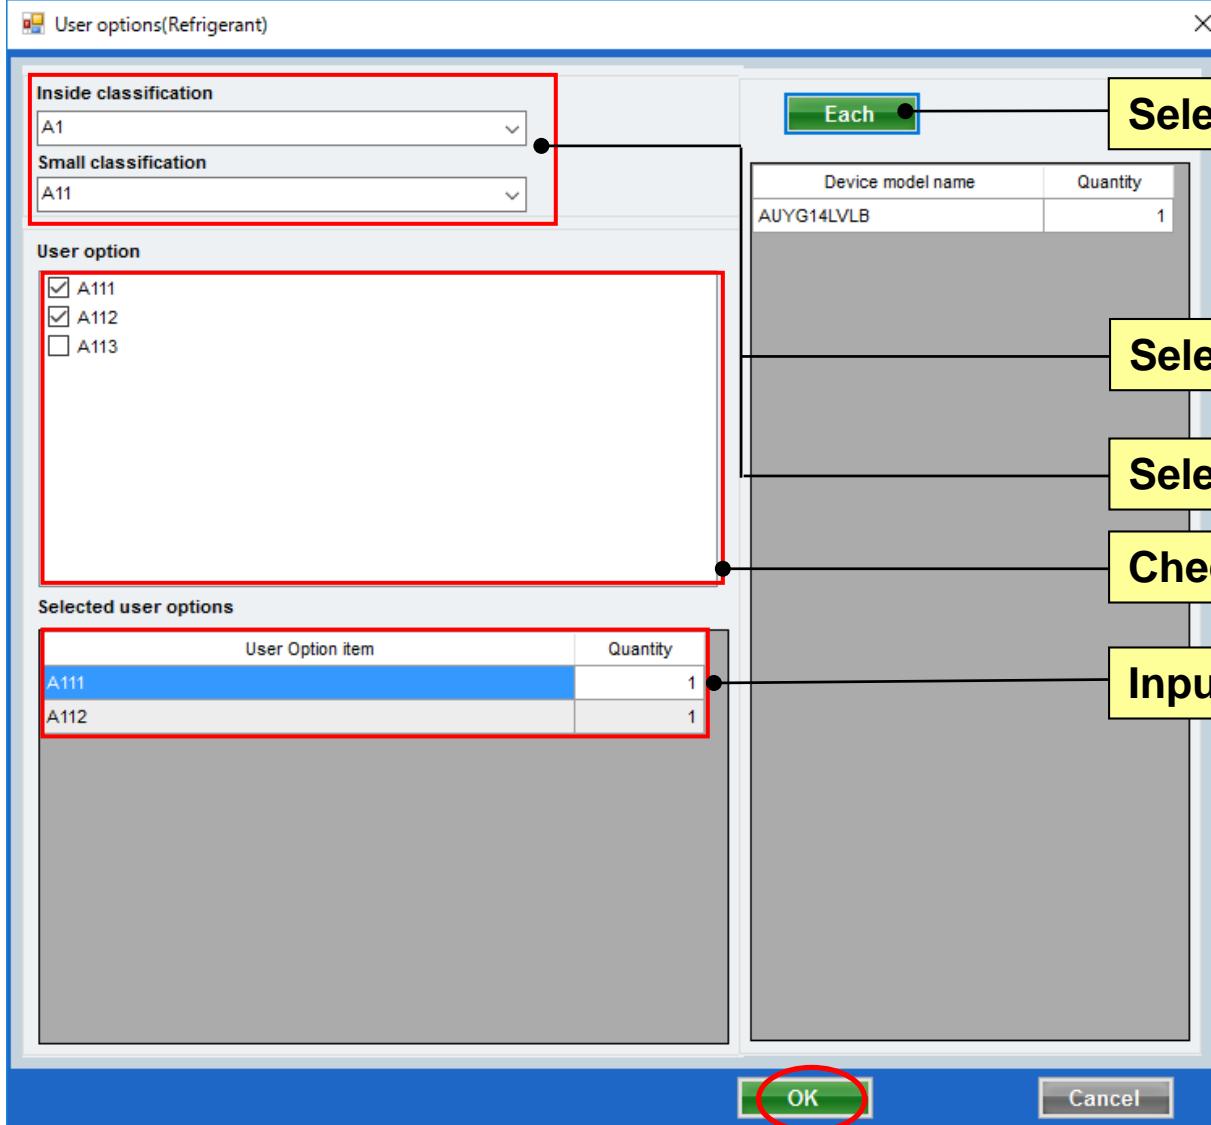

Select “Each or Summary”

Each

Inside classification

A1

Small classification

A11

User option

A111

A112

A113

Selected user options

A111

A112

User Option item

Quantity

1

1

Select “Inside classification”

Select “Small classification”

Check “User option”

Input “Quantity”


OK

Cancel

The selected options are displayed in “Report”.

Konfiguracja okablowania


Design Simulator

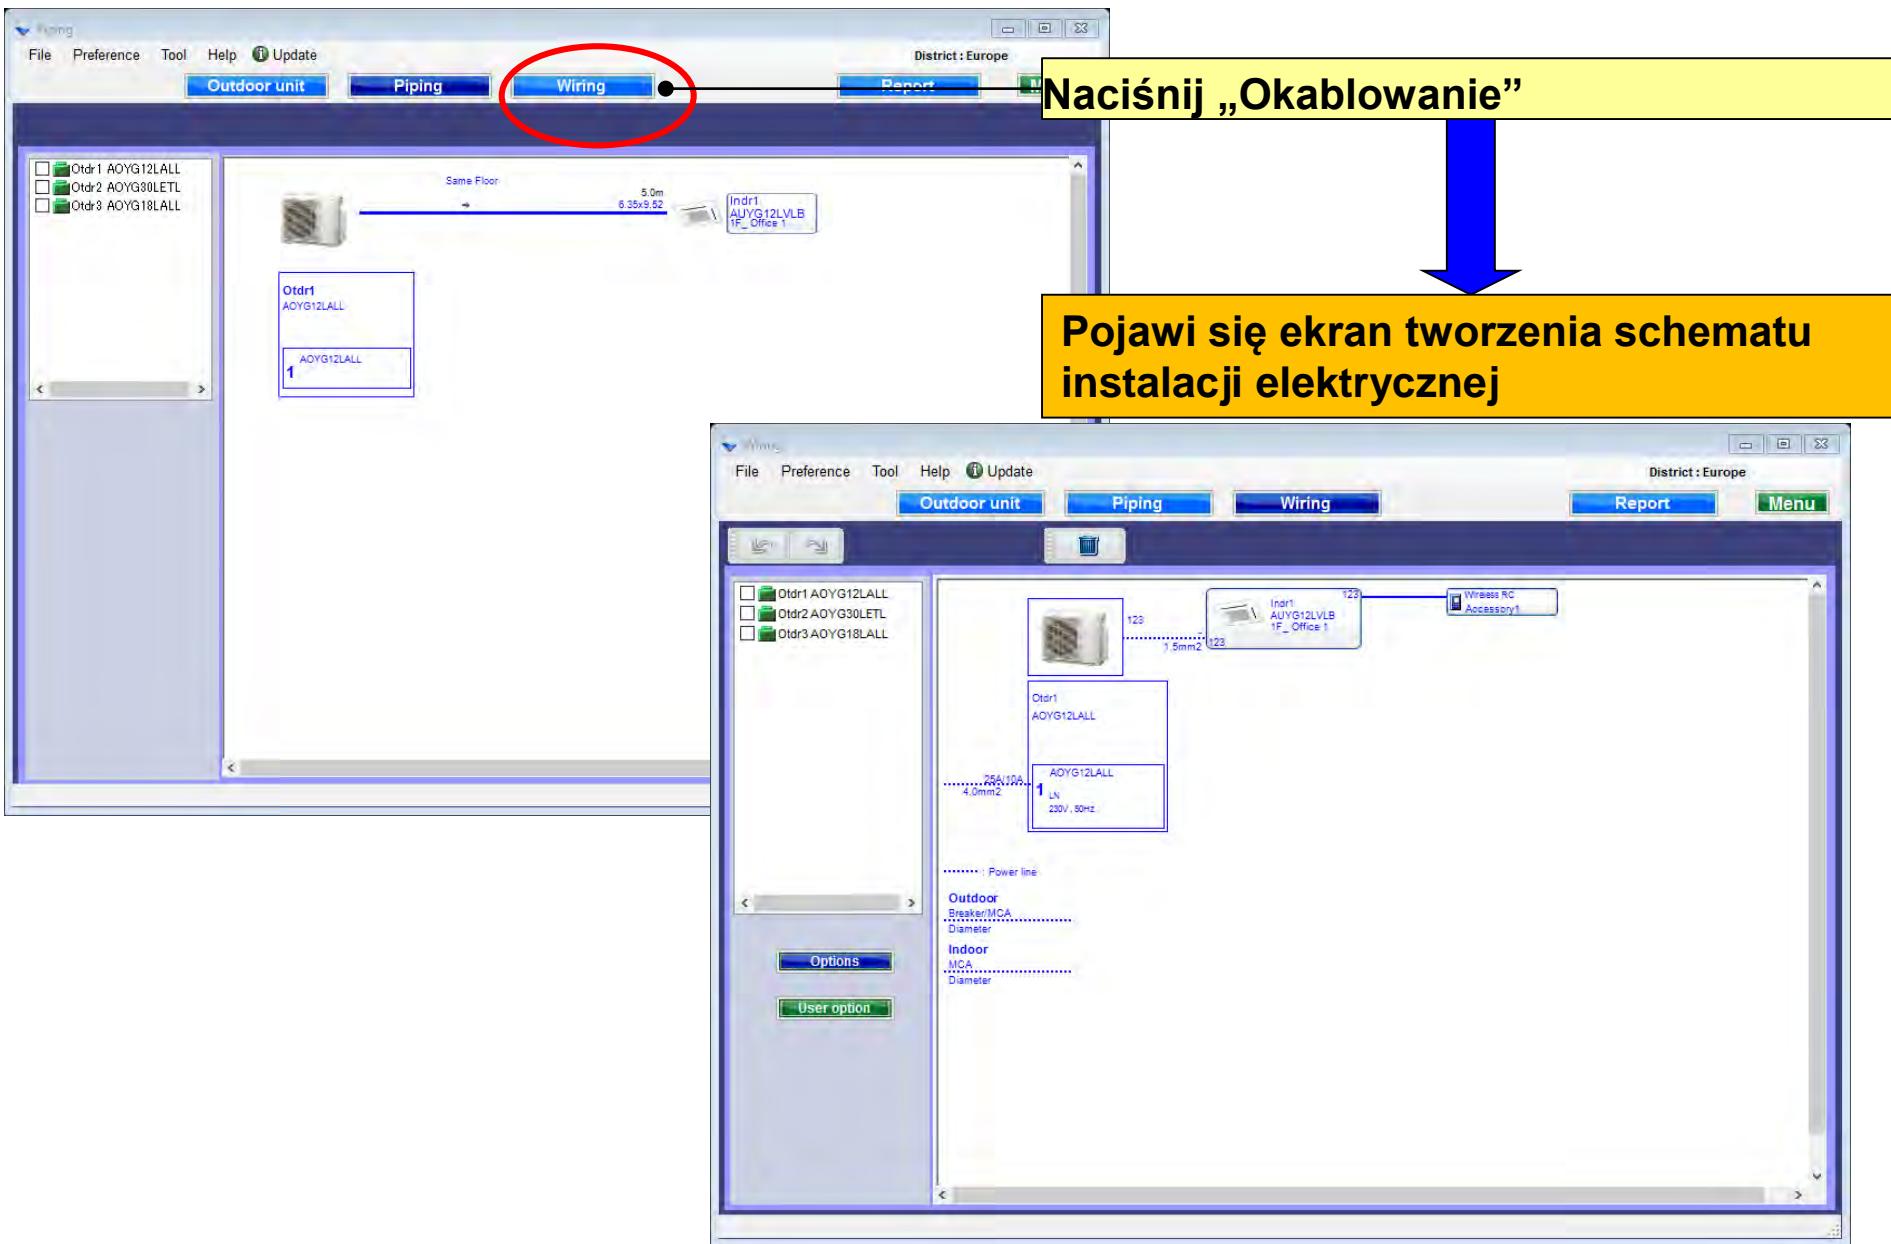

Konfiguracja okablowania



Design Simulator

Wybór układu chłodniczego

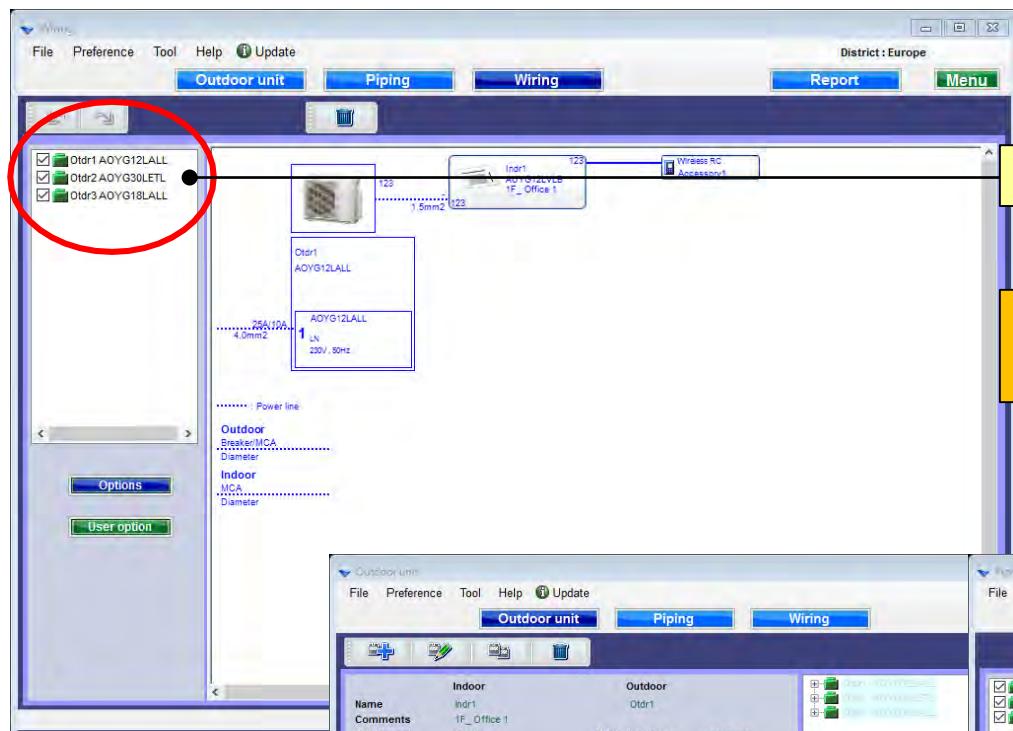

Zaznacz układ chłodniczy


Zaznaczony układ chłodniczy nie może być edytowany na każdym ekranie

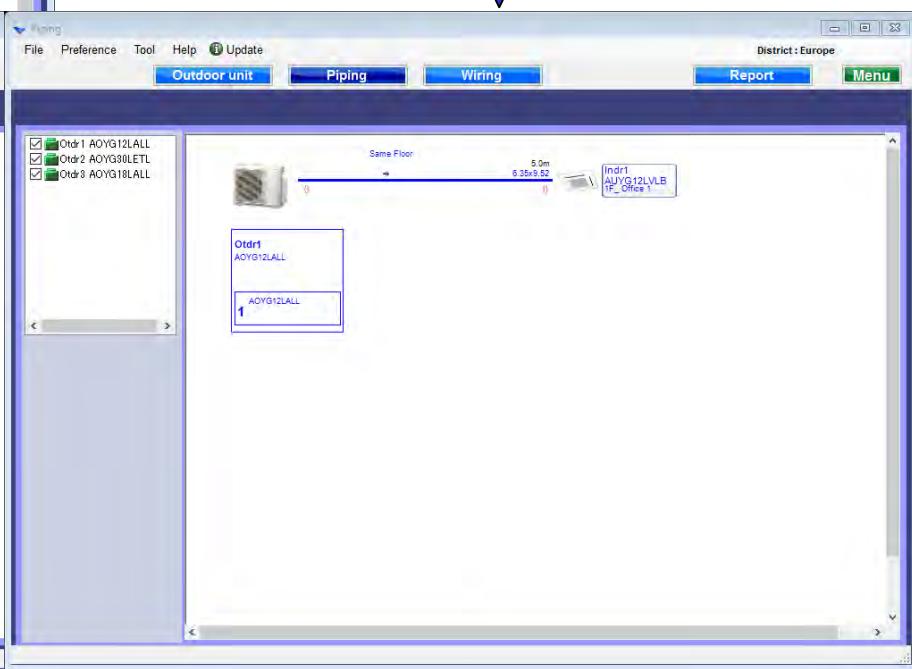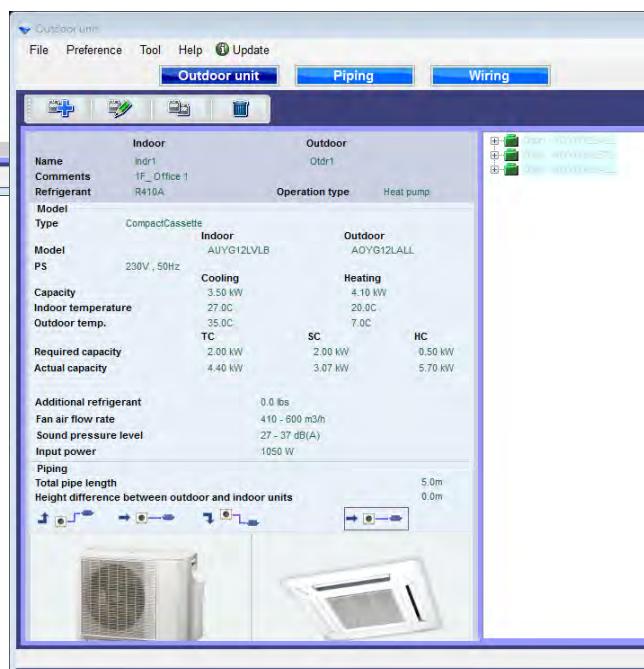


Konfiguracja okablowania

Design Simulator

Opcje

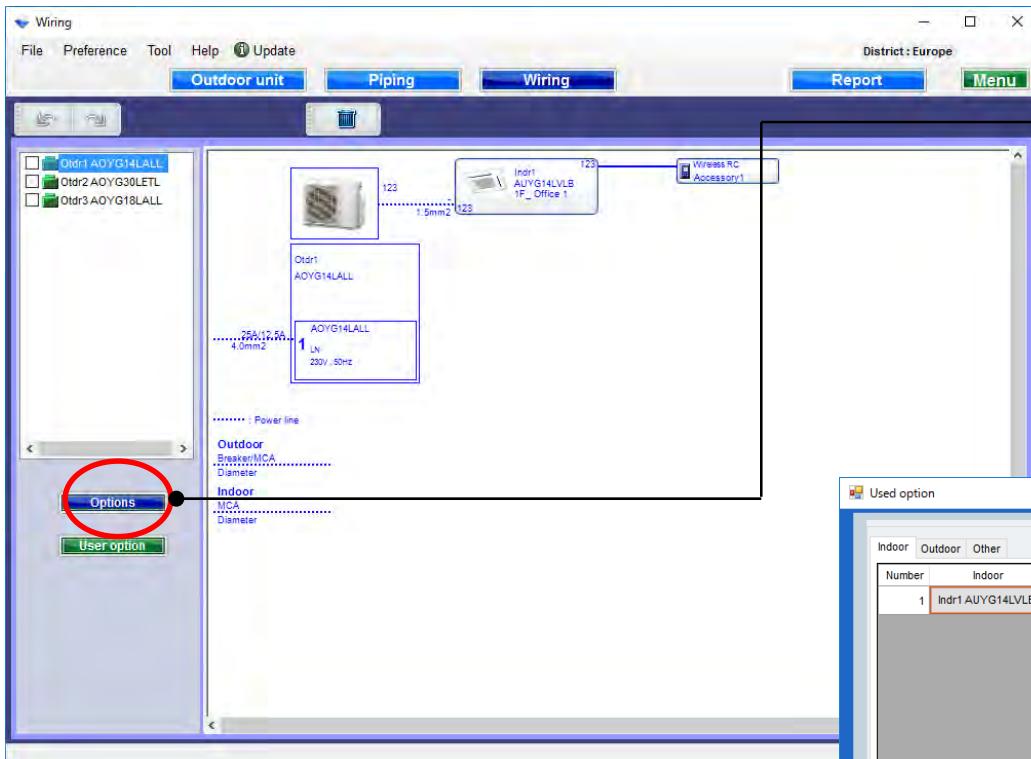

Naciśnij „Opcje”

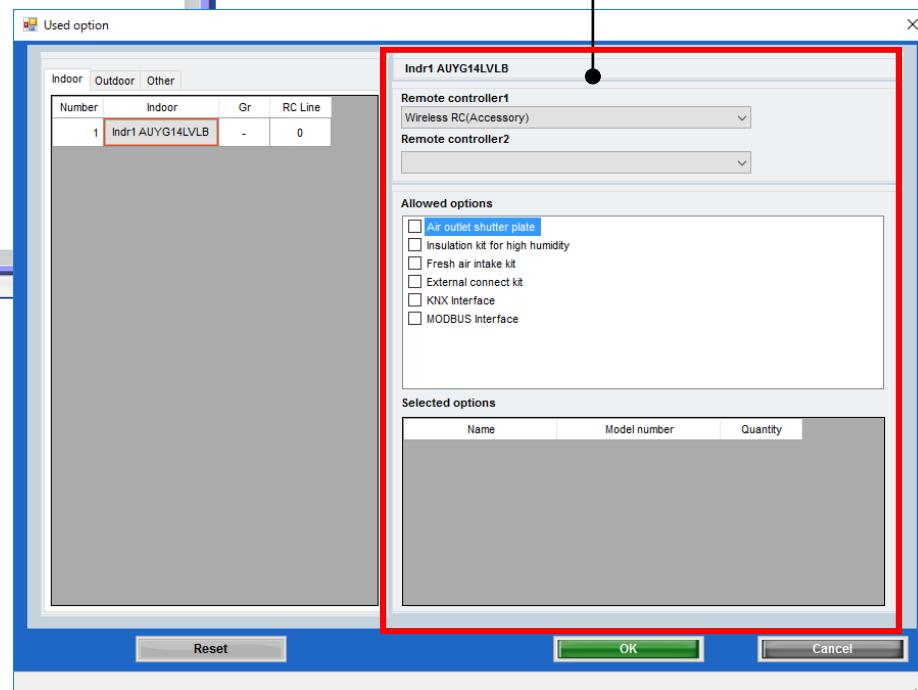


Pojawi się ekran
zastosowanych akcesoriów
opcjonalnych

Konfiguracja okablowania

Design Simulator

Zastosowane opcje (1/2)

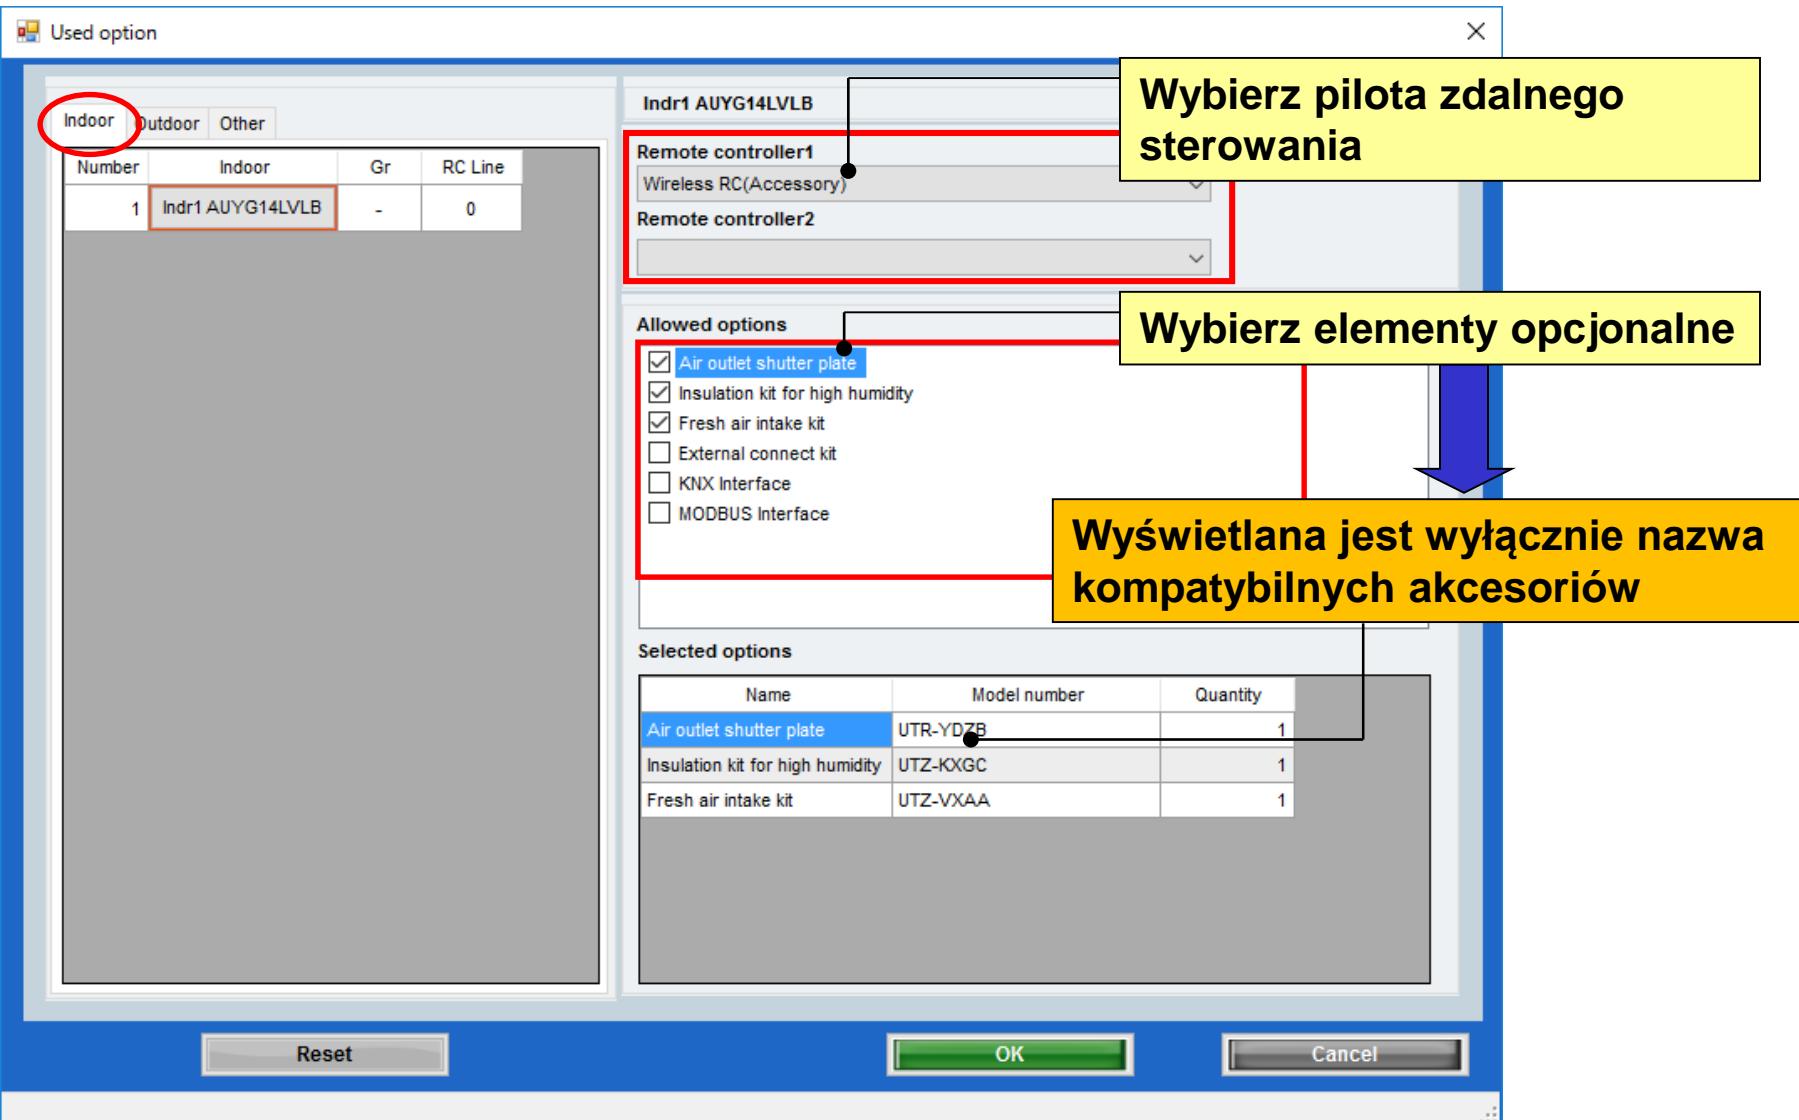


Wybrane opcje zostaną uwzględnione w „Raporcie”


Konfiguracja okablowania

Design Simulator

Zastosowane opcje (2/2)

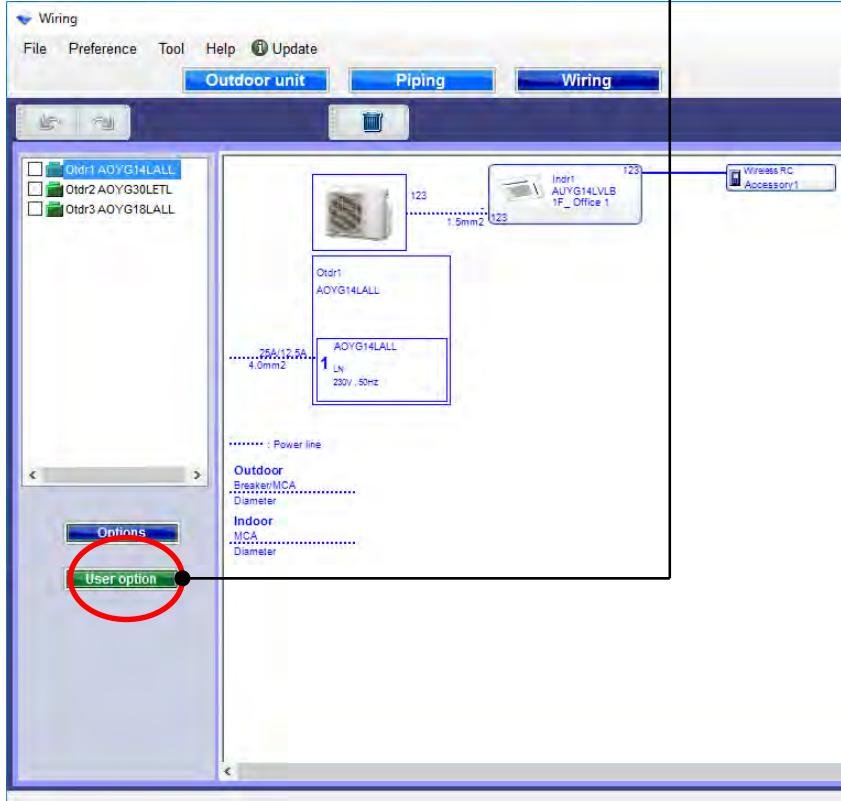


Naciśnij „opcje” (użytkownika)

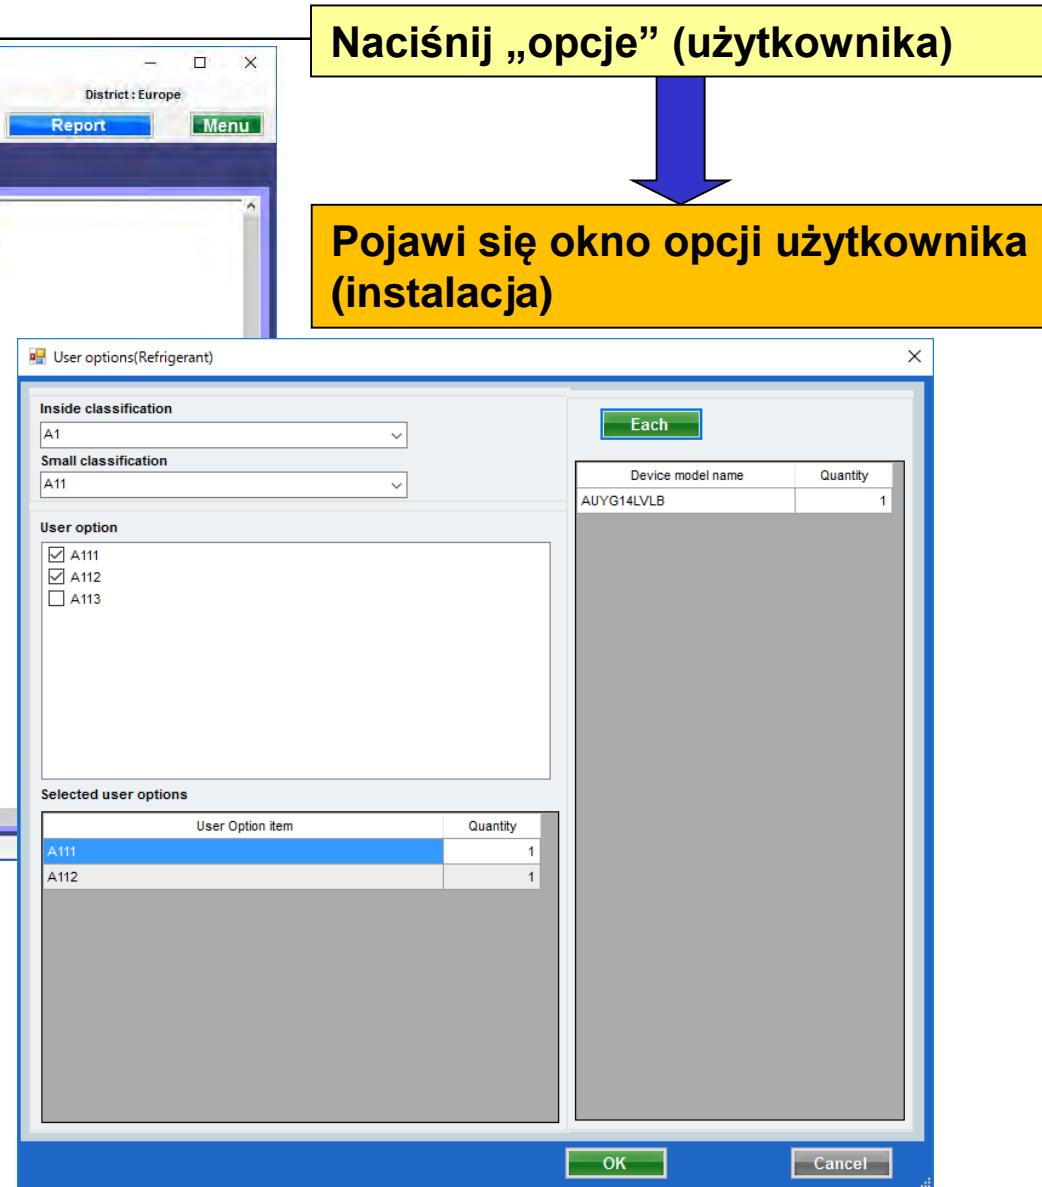

Konfiguracja okablowania

Design Simulator


Opcje użytkownika (instalacja)

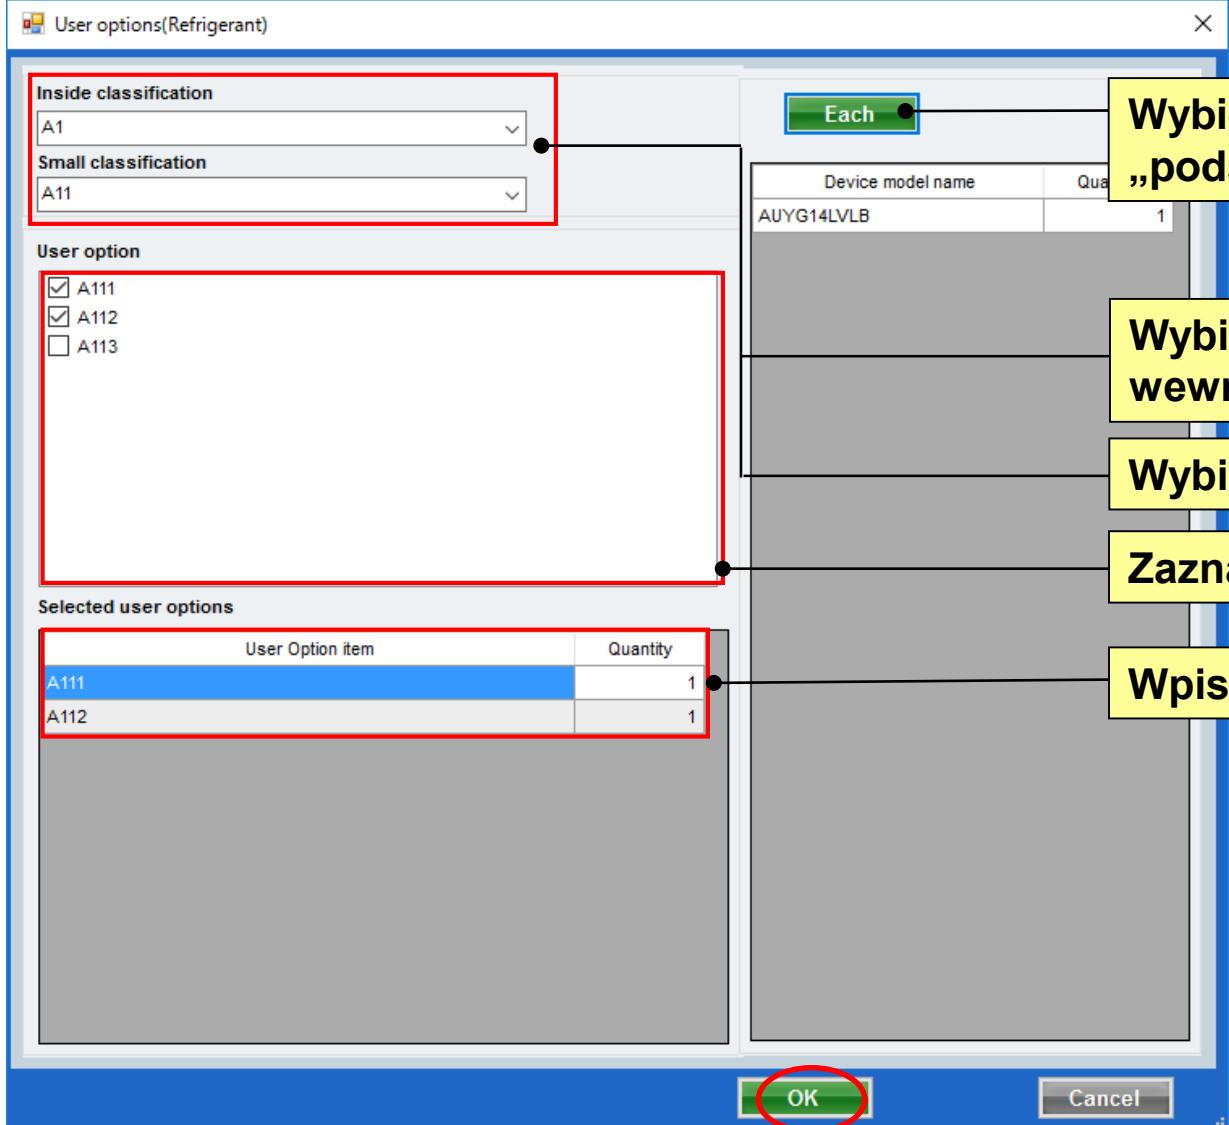

Wybrane opcje zostaną uwzględnione w „Raporcie”

Kablolama ayarları


Tasarım Simülatörü

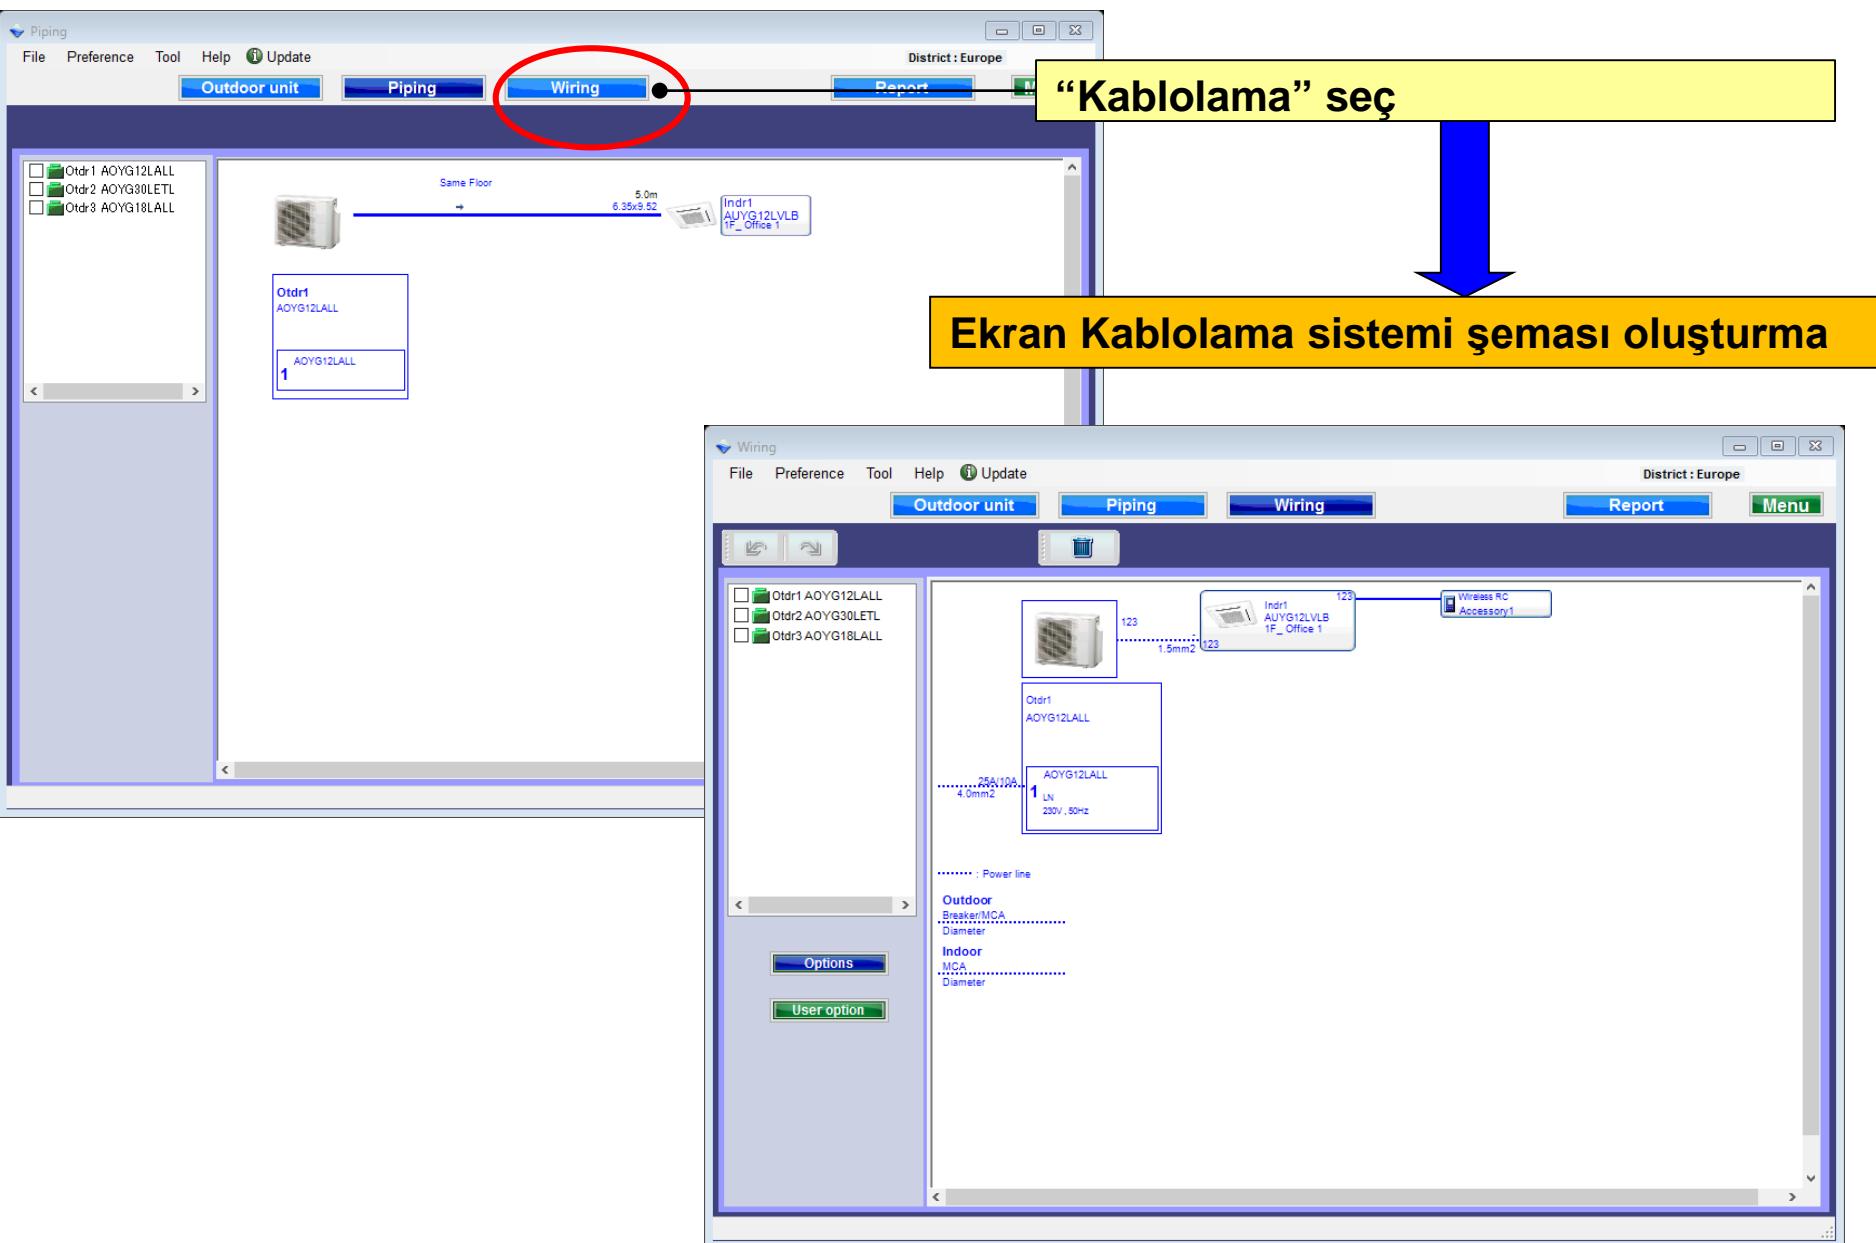

Kablolama ayarları



Tasarım Simülatörü

Soğutma maddesi sistemi tayini

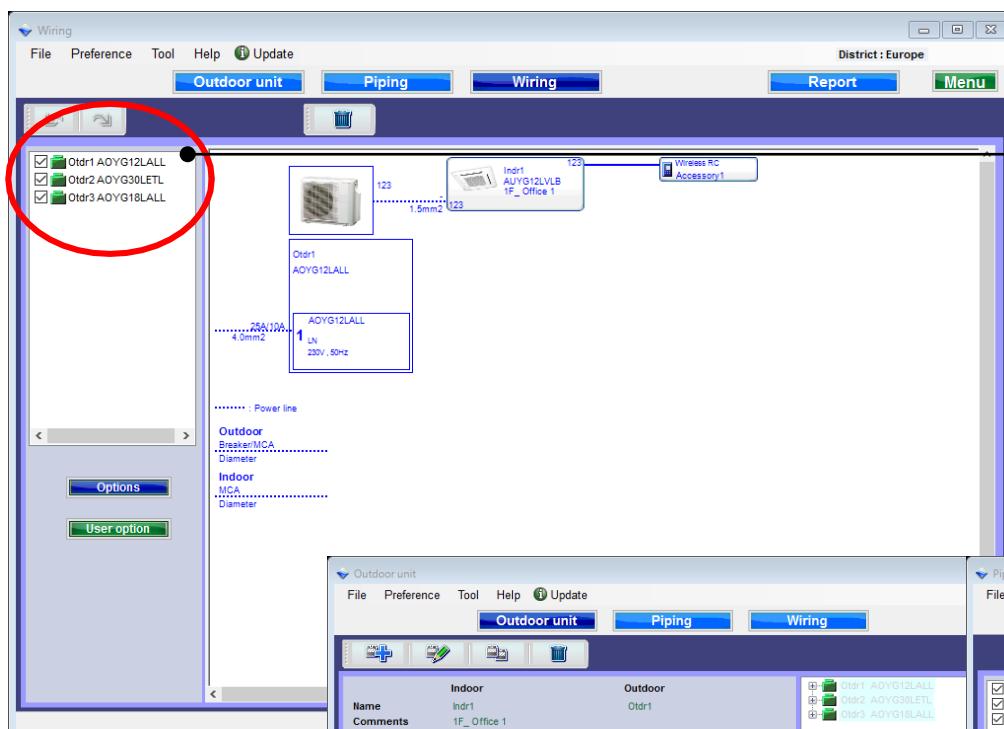


Soğutucu akışkan sistemini kontrol edin


Kontrol edilen soğutucu akışkan sistemi her bir ekranda düzenlenemez

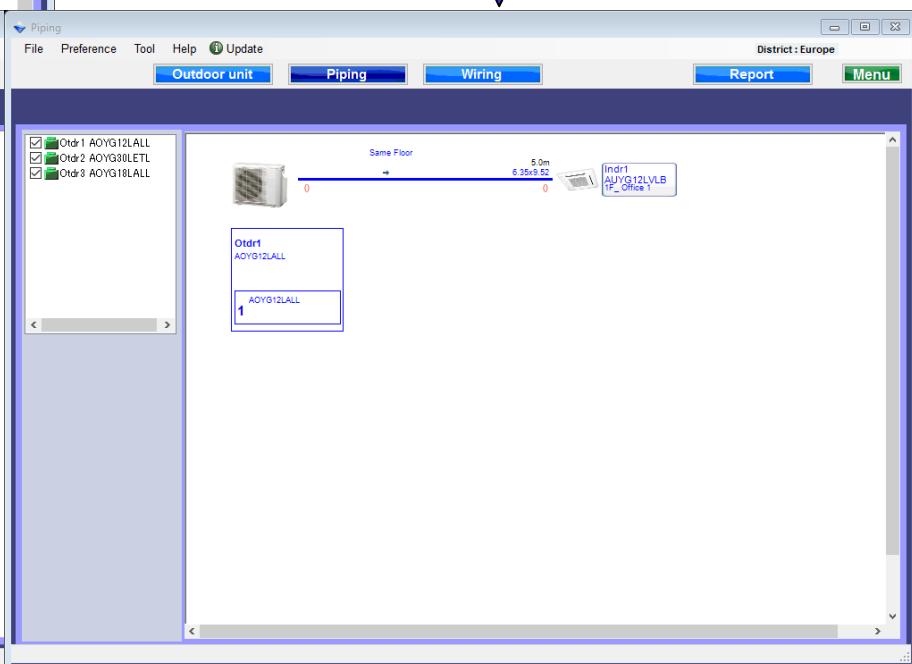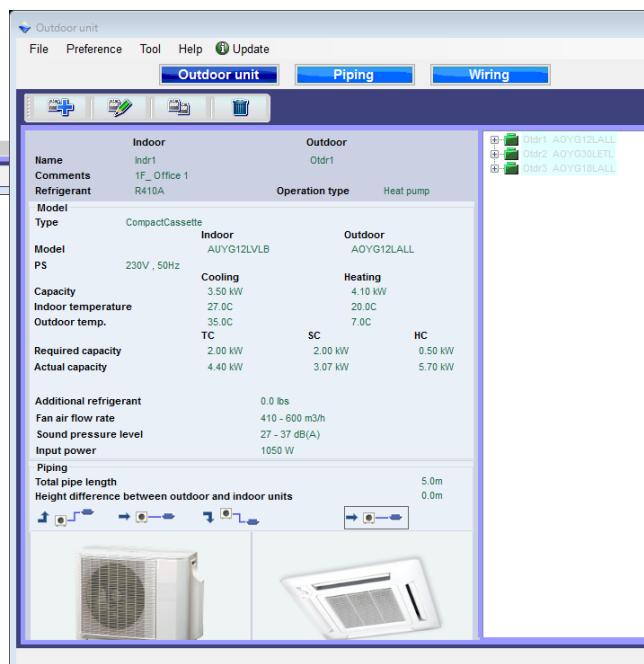

Seçenekler

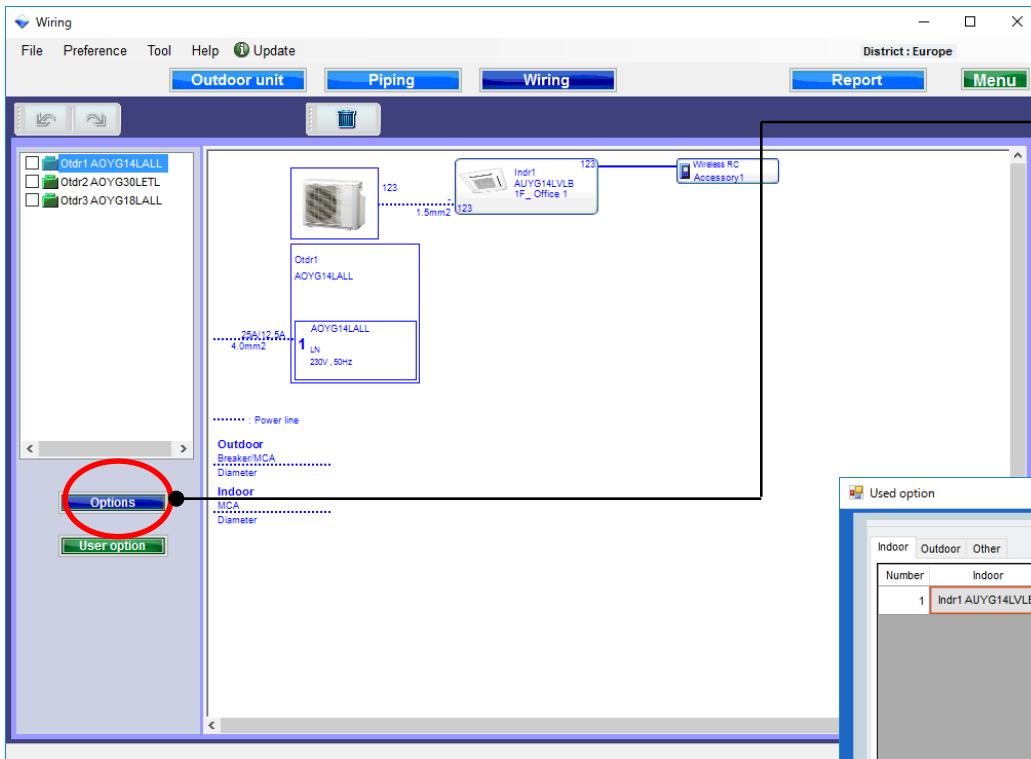


“Seçenekler” i seçin

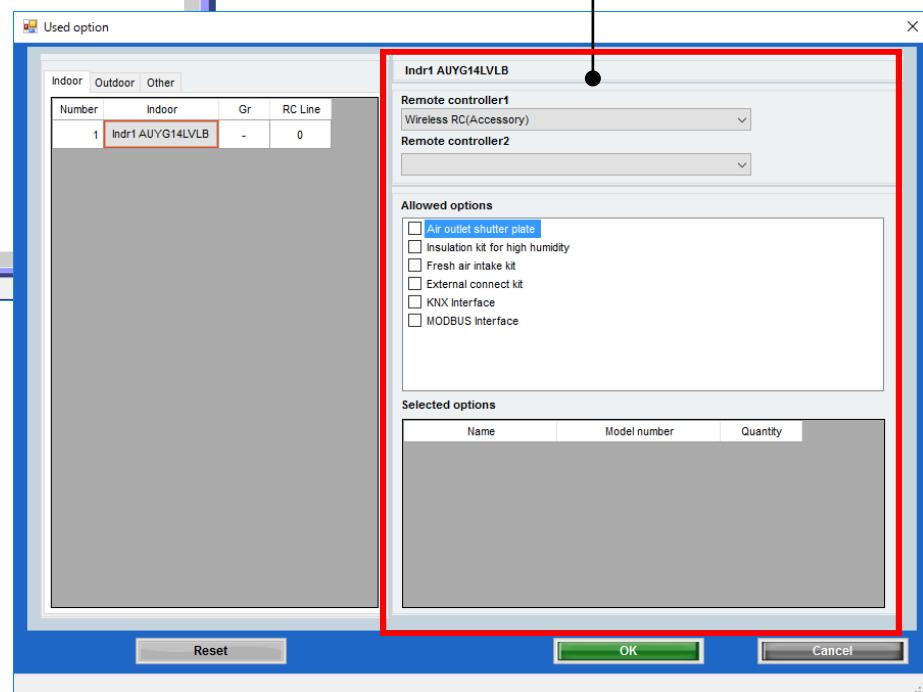


Kullanılan seçenek ekranını açın

İkinci seçenek (1/2)

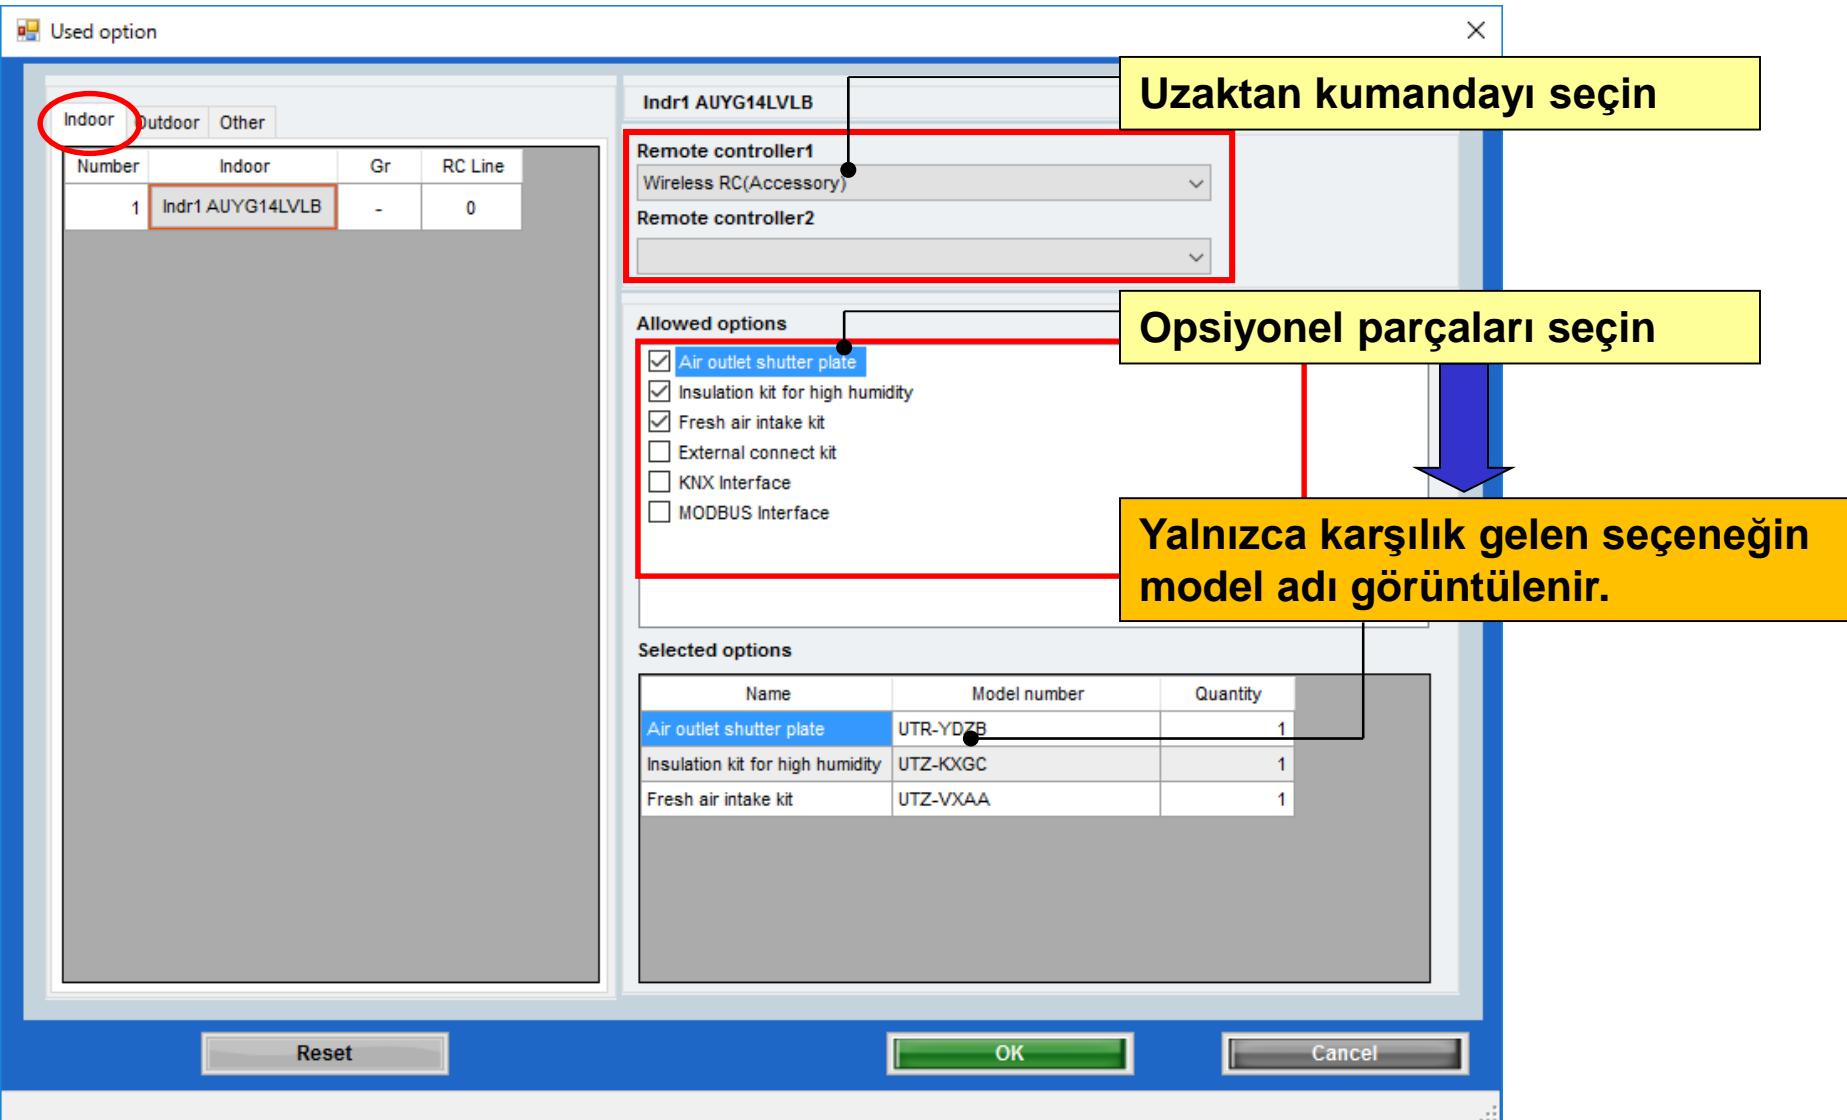


Seçilen seçenekler "Rapor" da görüntülenir.

İkinci seçenek (2/2)

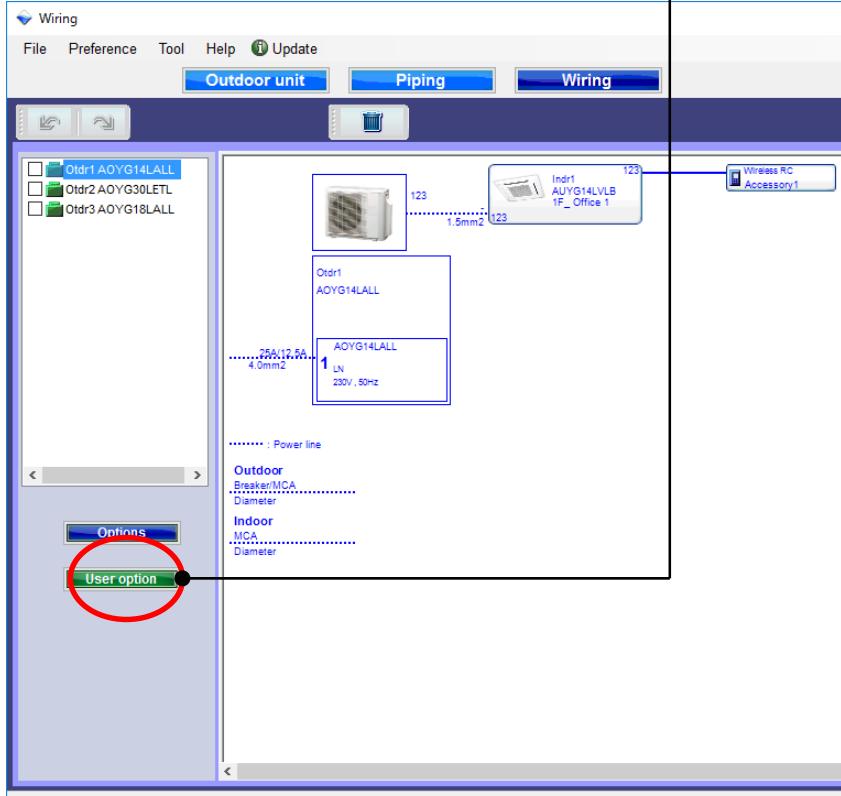


Kullanıcı Seçenekler” seç

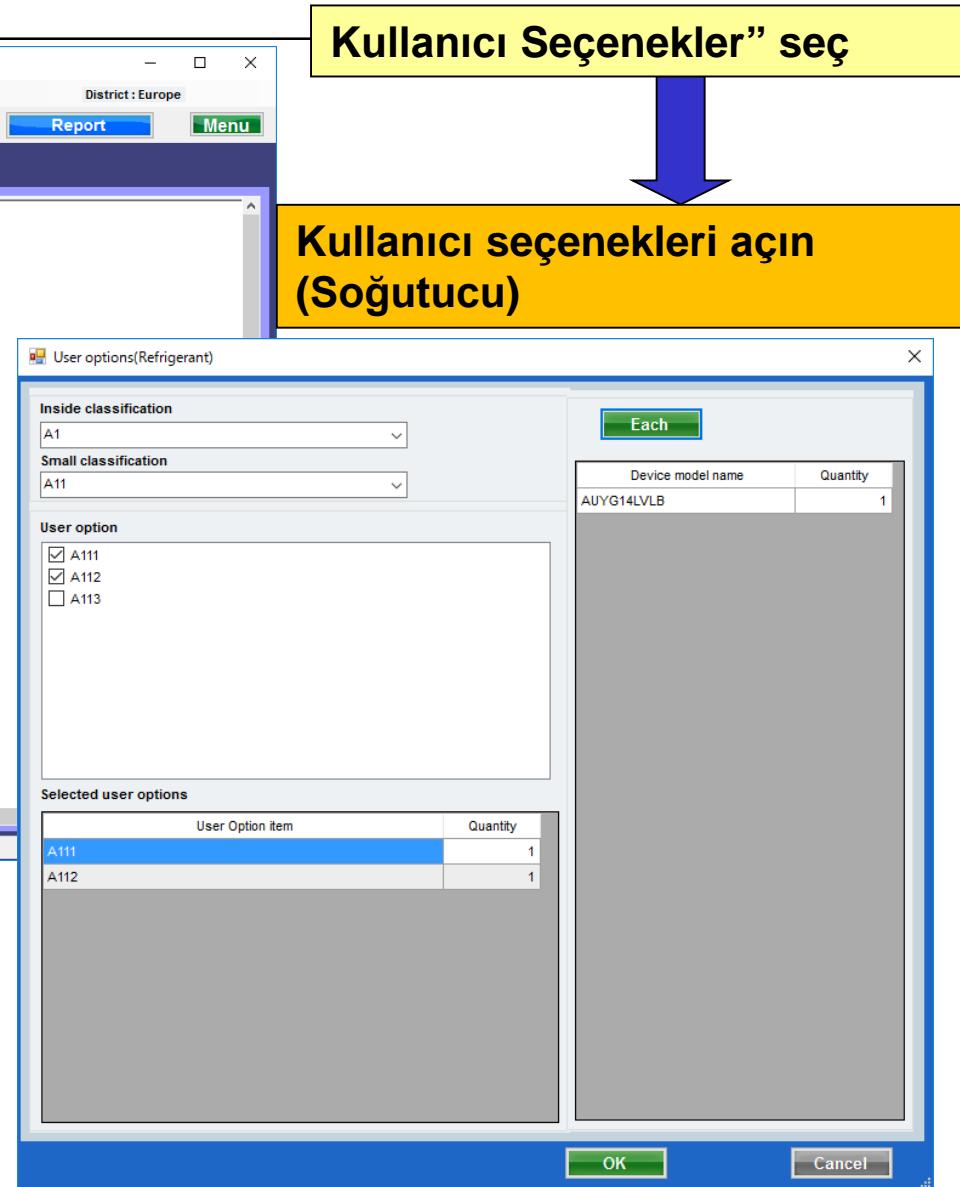

Kullanıcı seçenekleri açın
(Soğutucu)


Kullanıcı seçenek (Soğutucu)

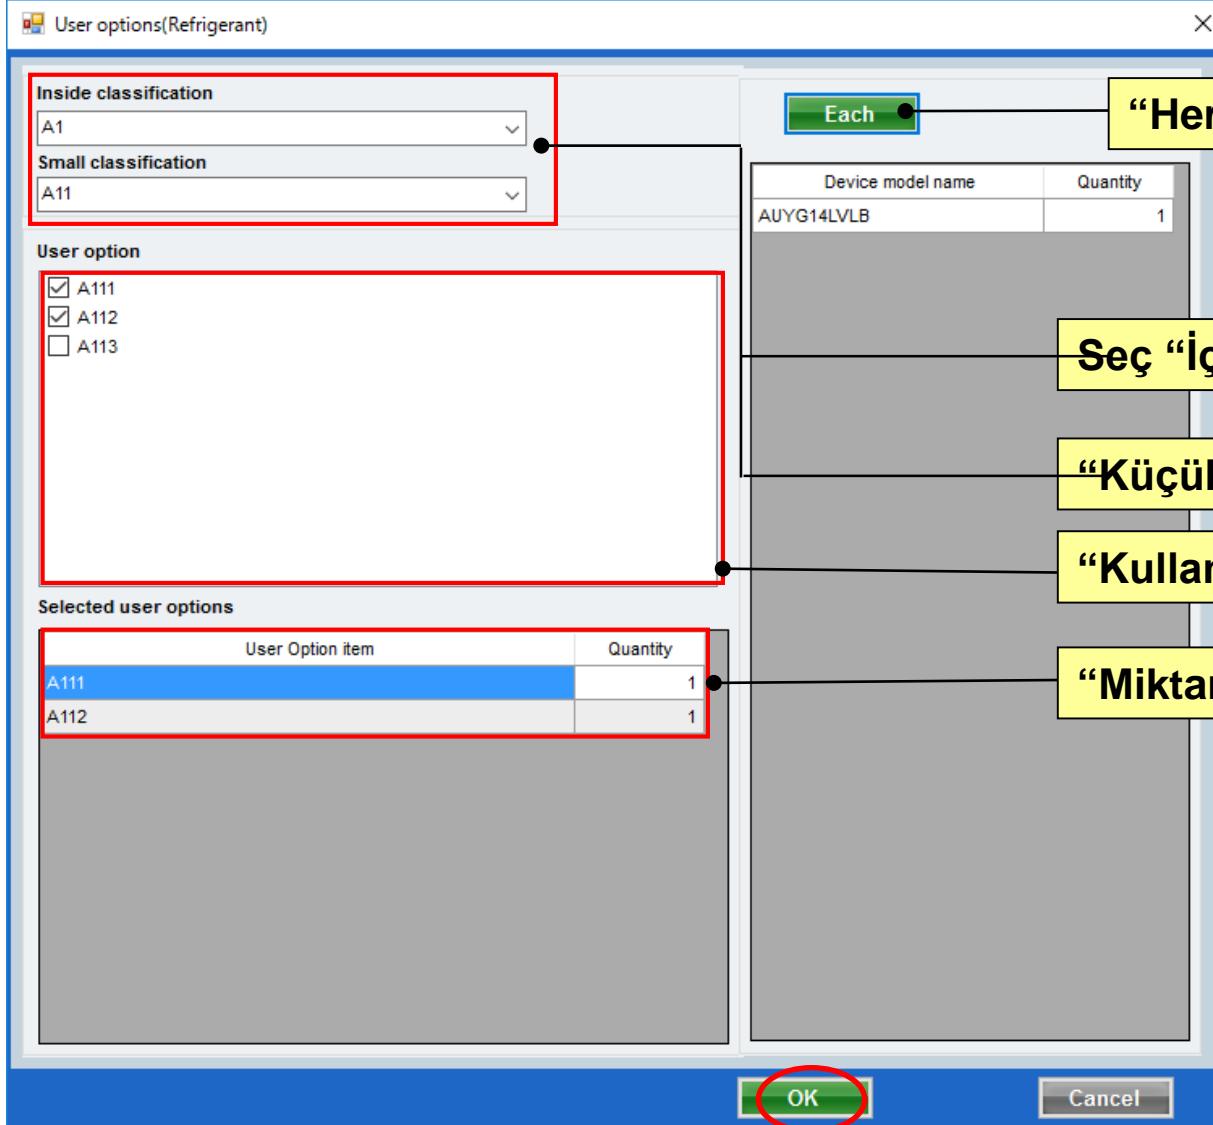

Seçilen seçenekler "Rapor" da görüntülenir.

Podešavanje kabliranja


Design Simulator

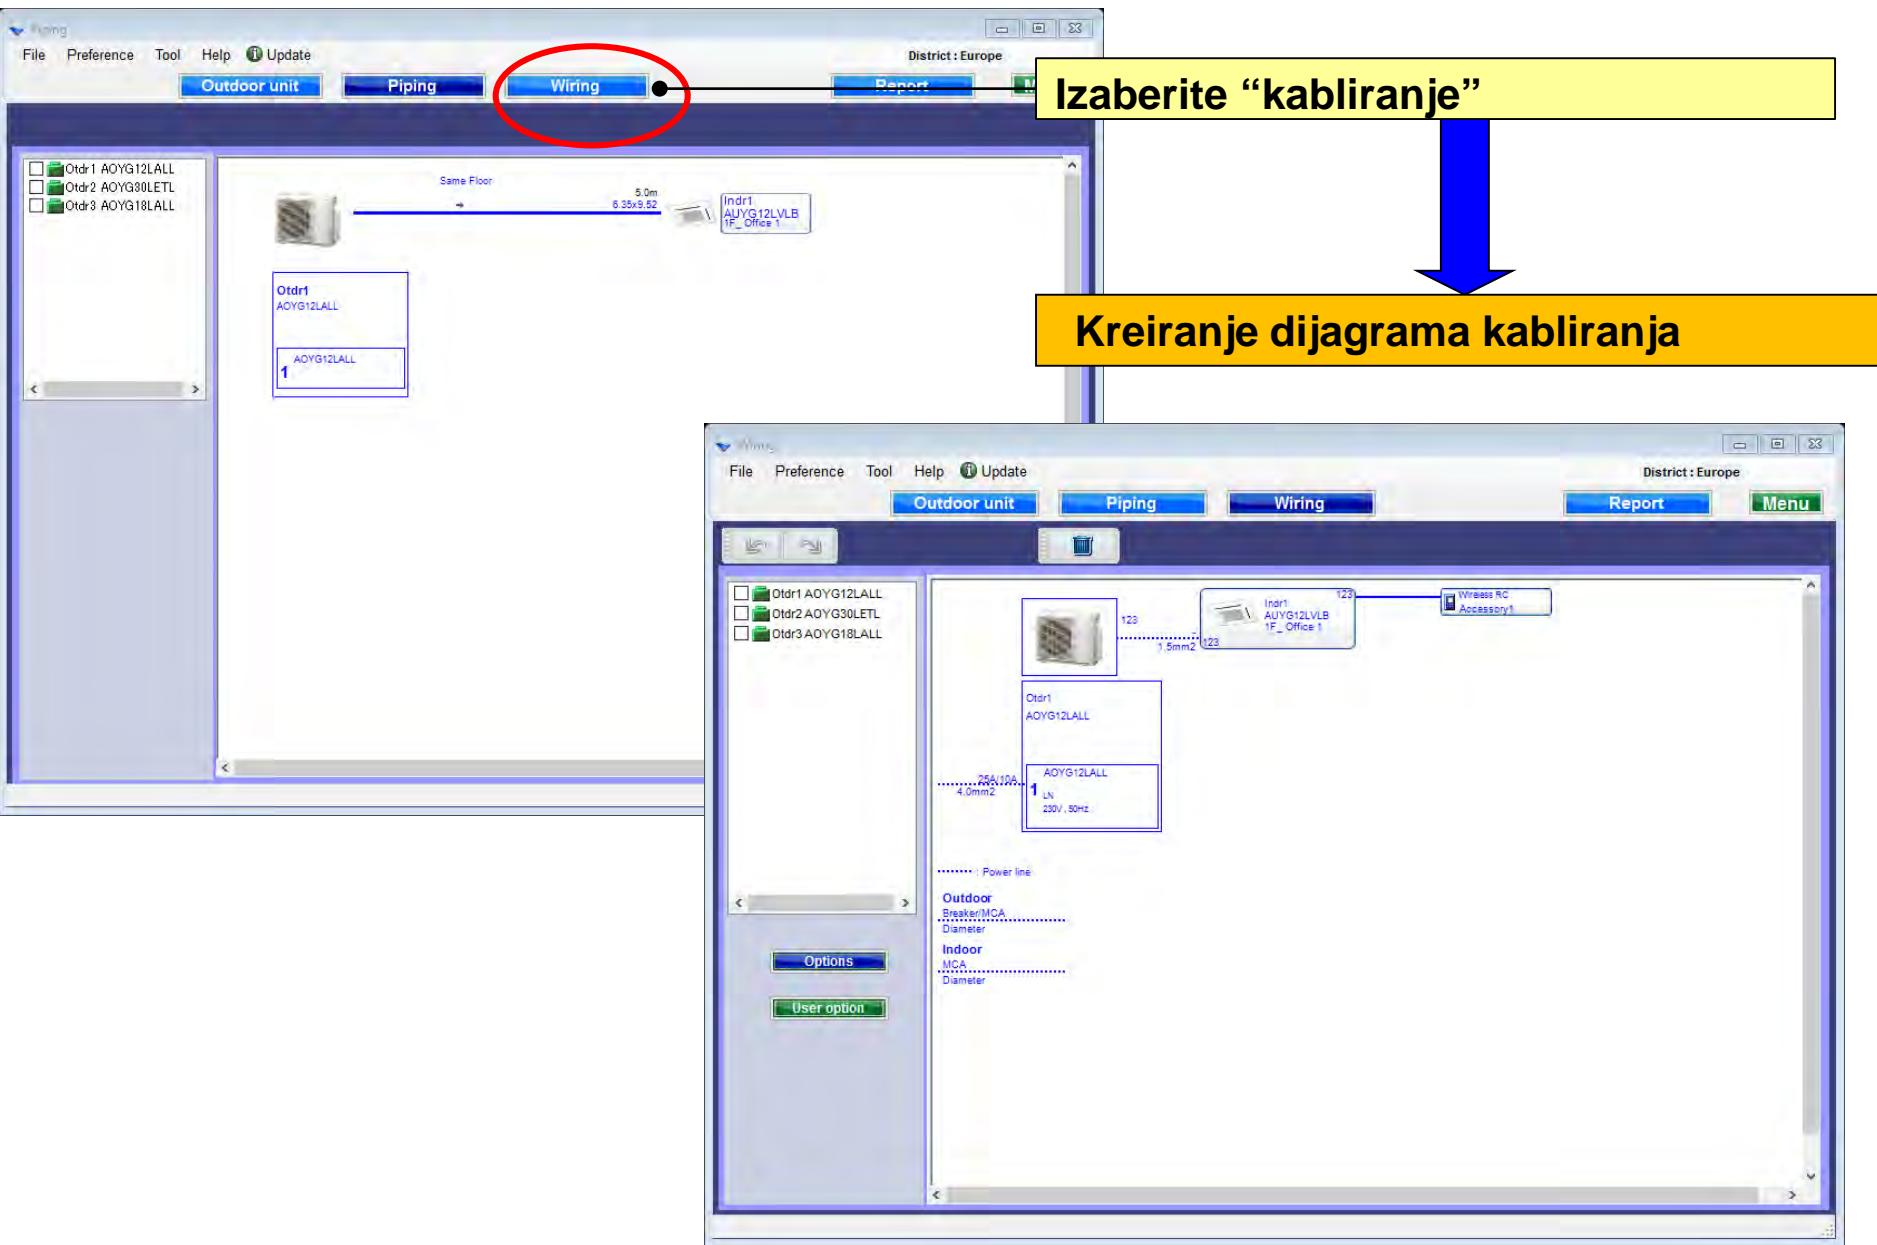



Podešavanje kabliranja

Design Simulator

Određivanje sistema rashladnog fluida

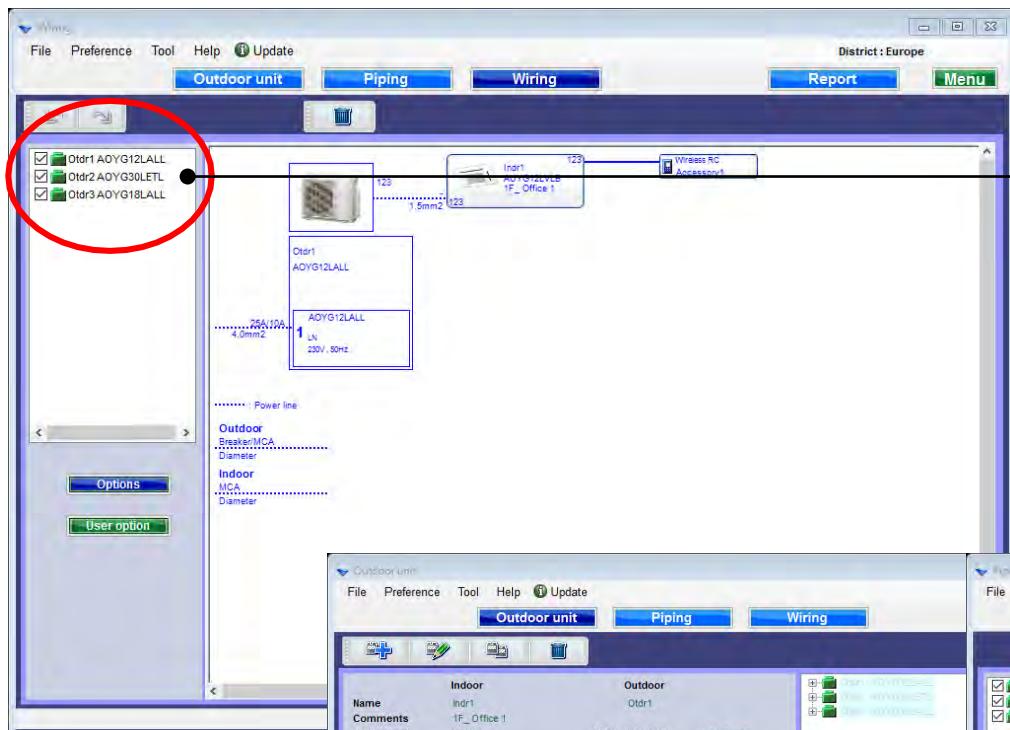


Izaberite sistem rashladnog fluida

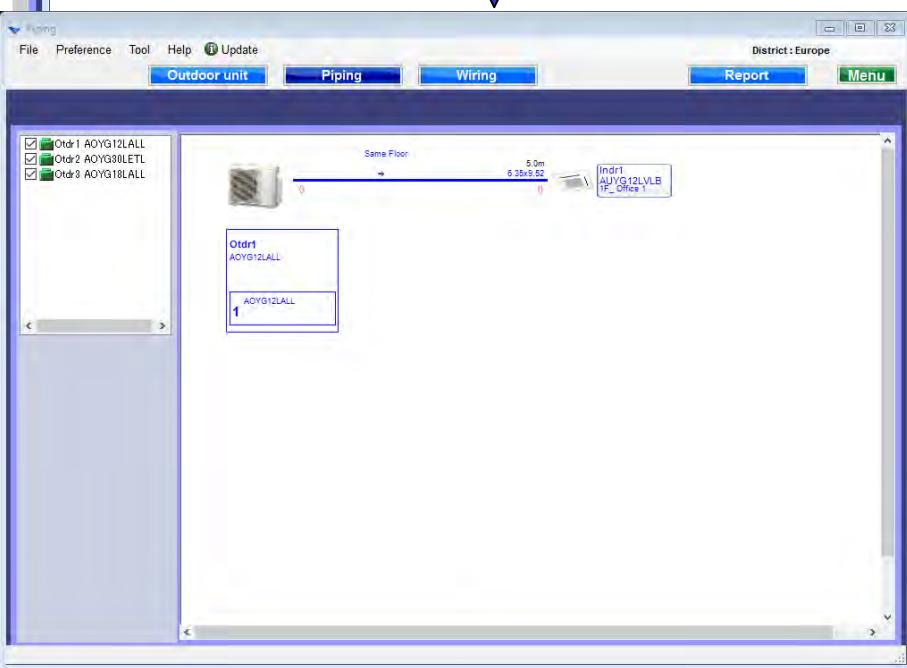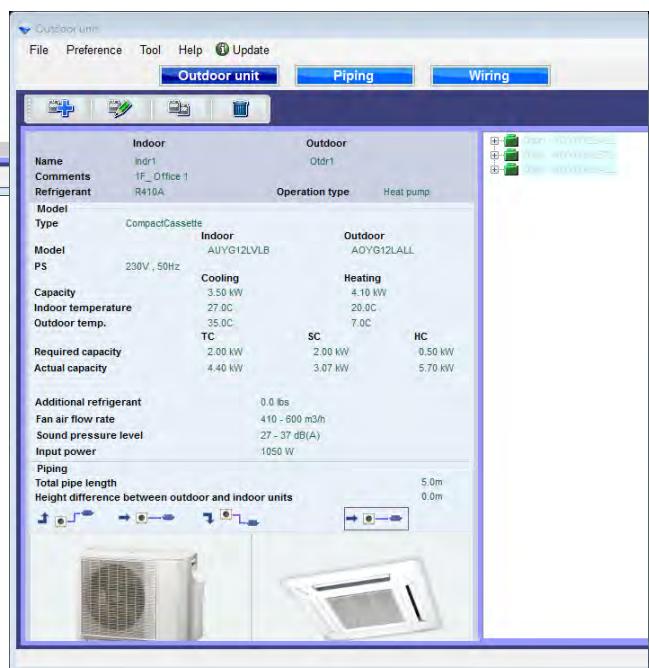


Izabrani sistem rashladnog fluida
ne može se uređivati na svakom
ekranu

Opcije

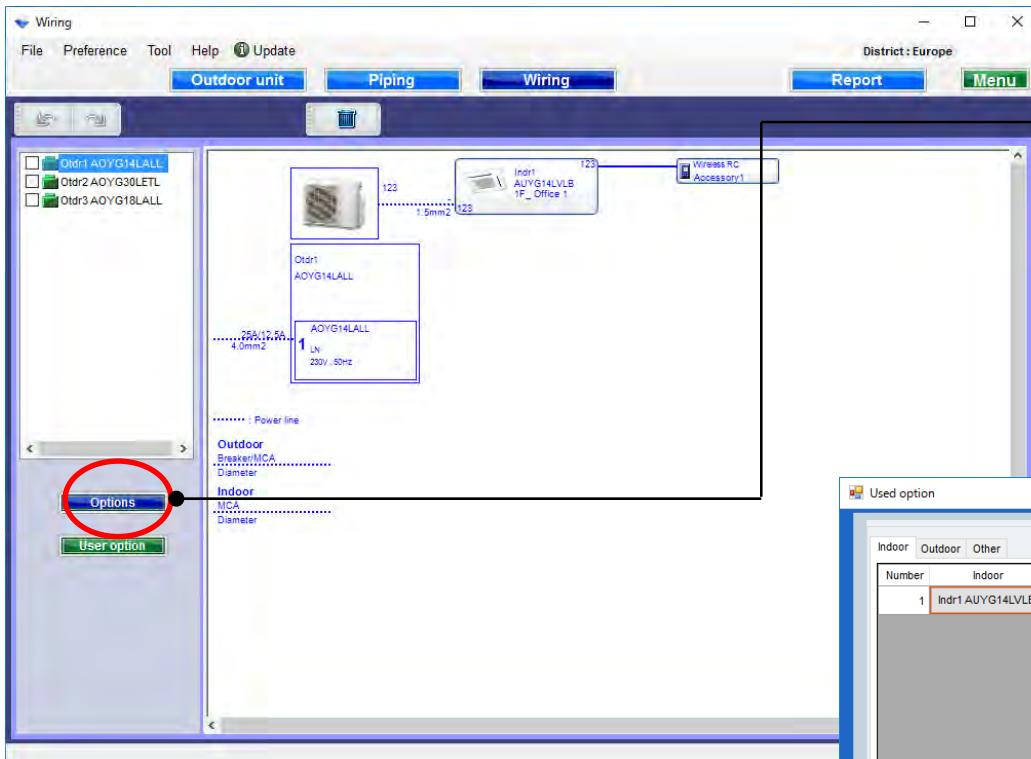


Izaberite "Opcije"

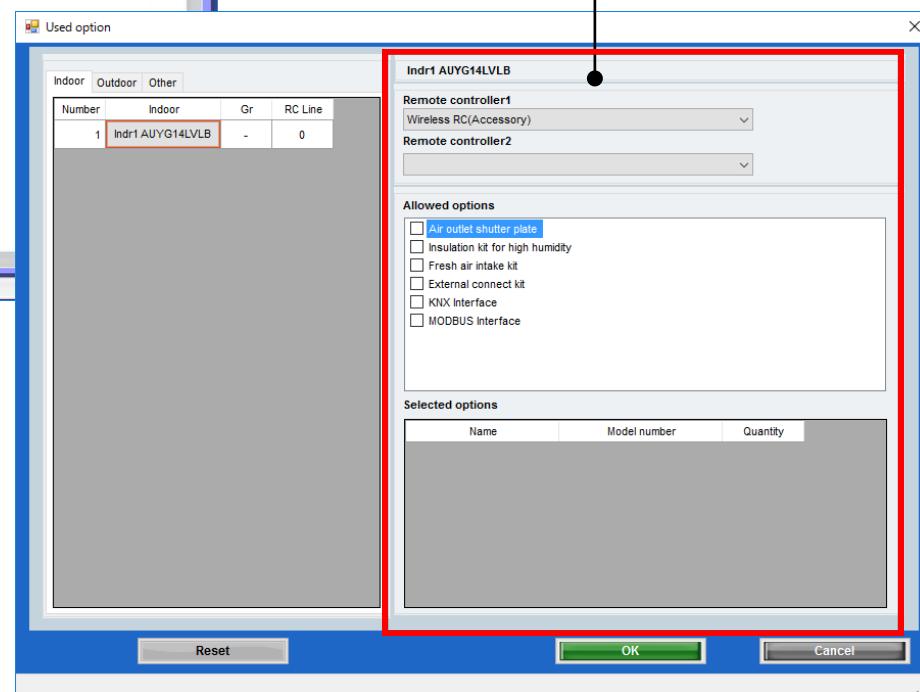


Otvorite ekran sa opcijama.

Korišćene opcije(1/2)

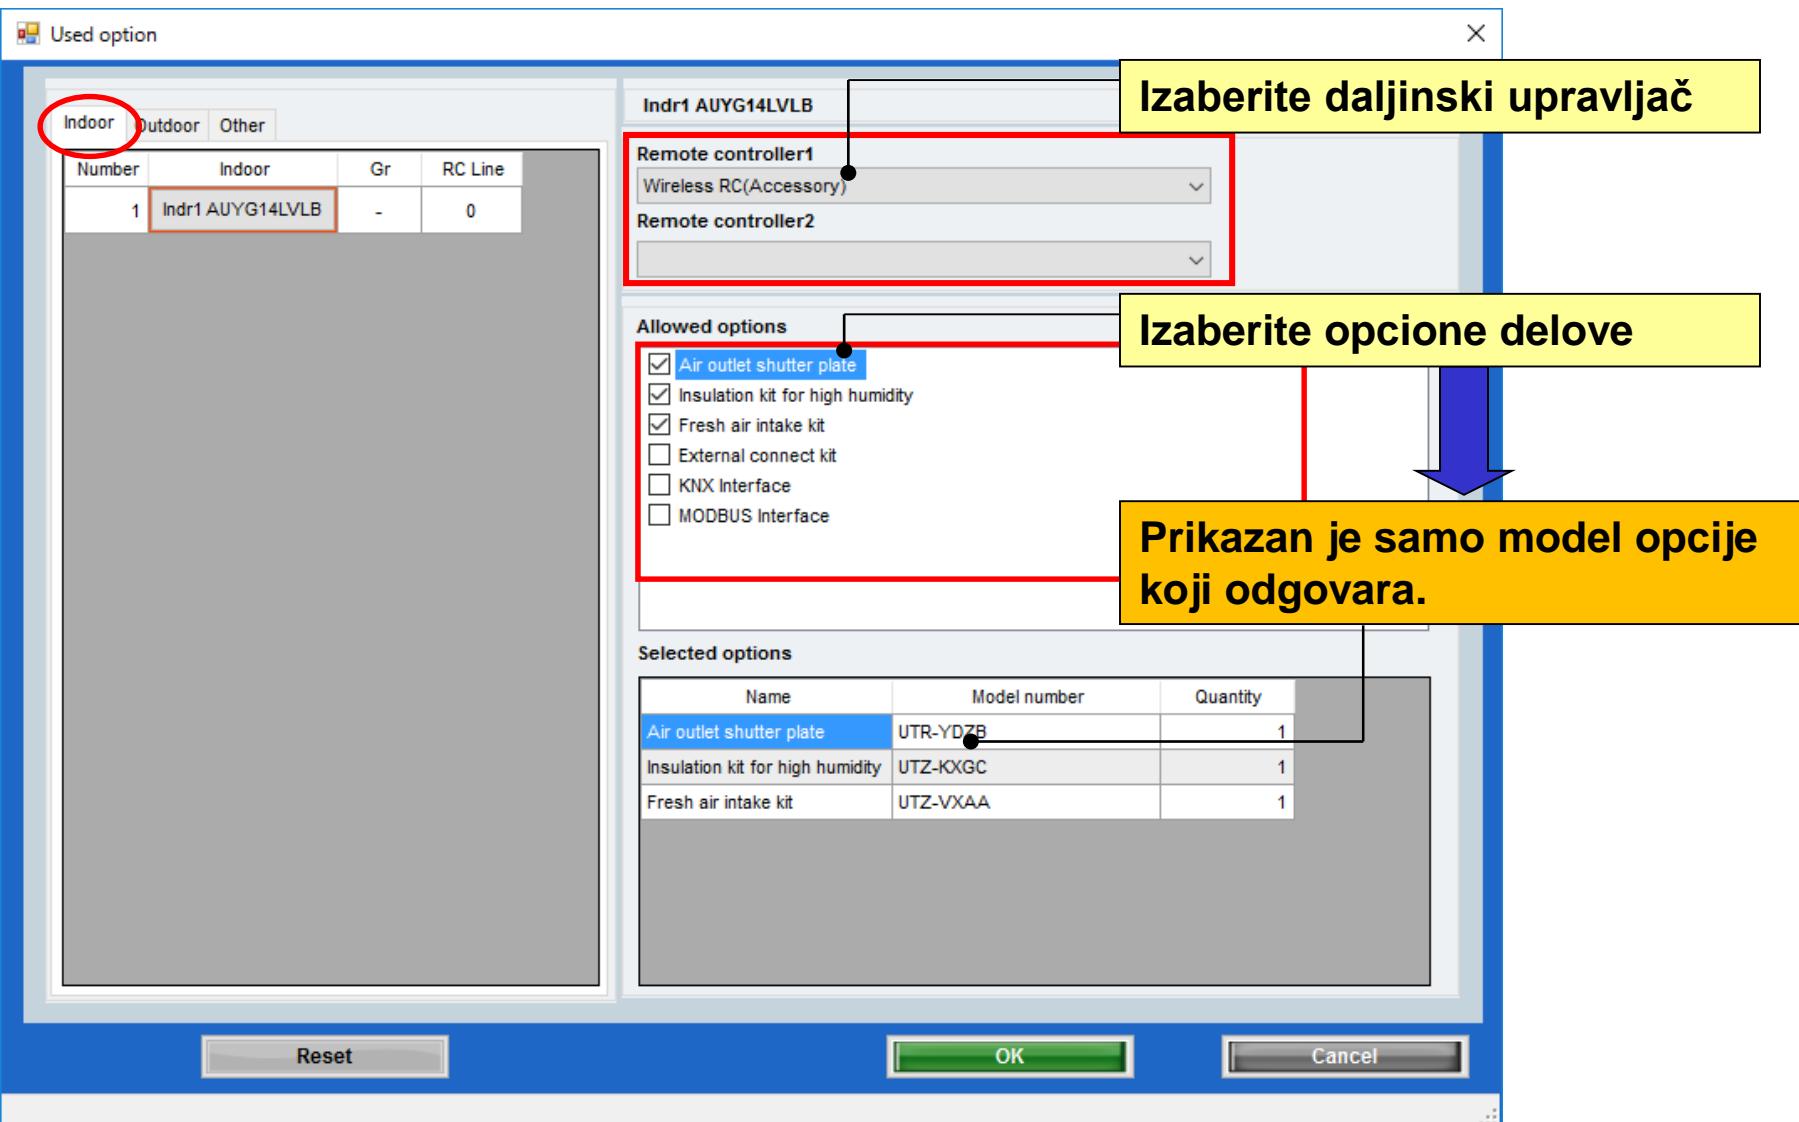


Izabrane opcije su prikazane u "Izveštaju".

Korišćene opcije (2/2)

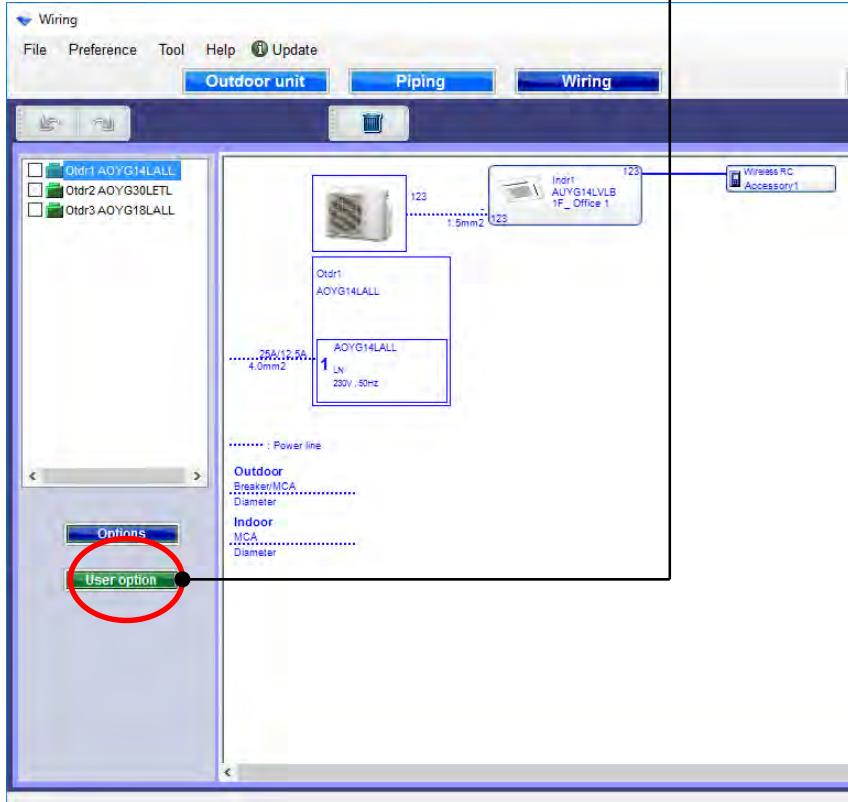


Izaberite "Korisničke opcije"

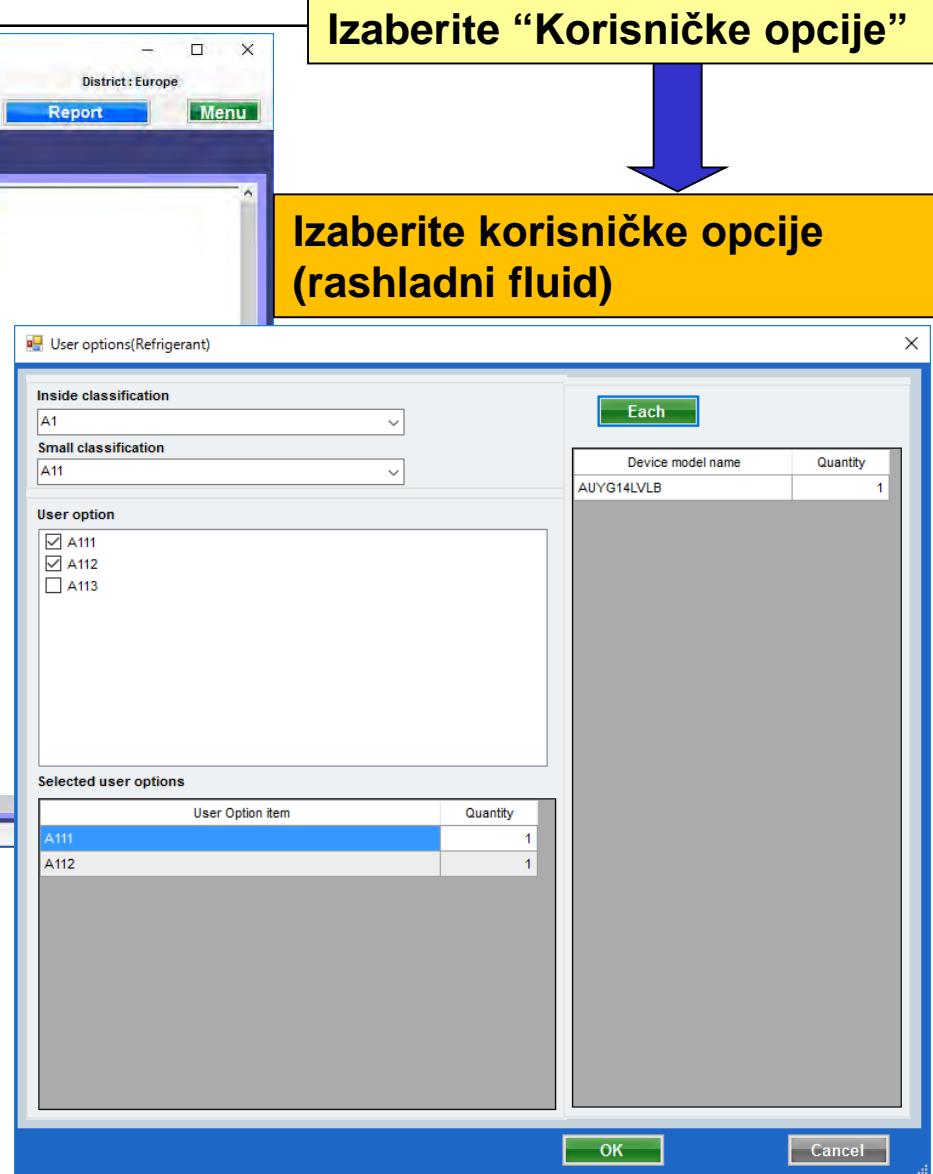

Izaberite korisničke opcije
(rashladni fluid)


Korisnička opcija (rashladni fluid)

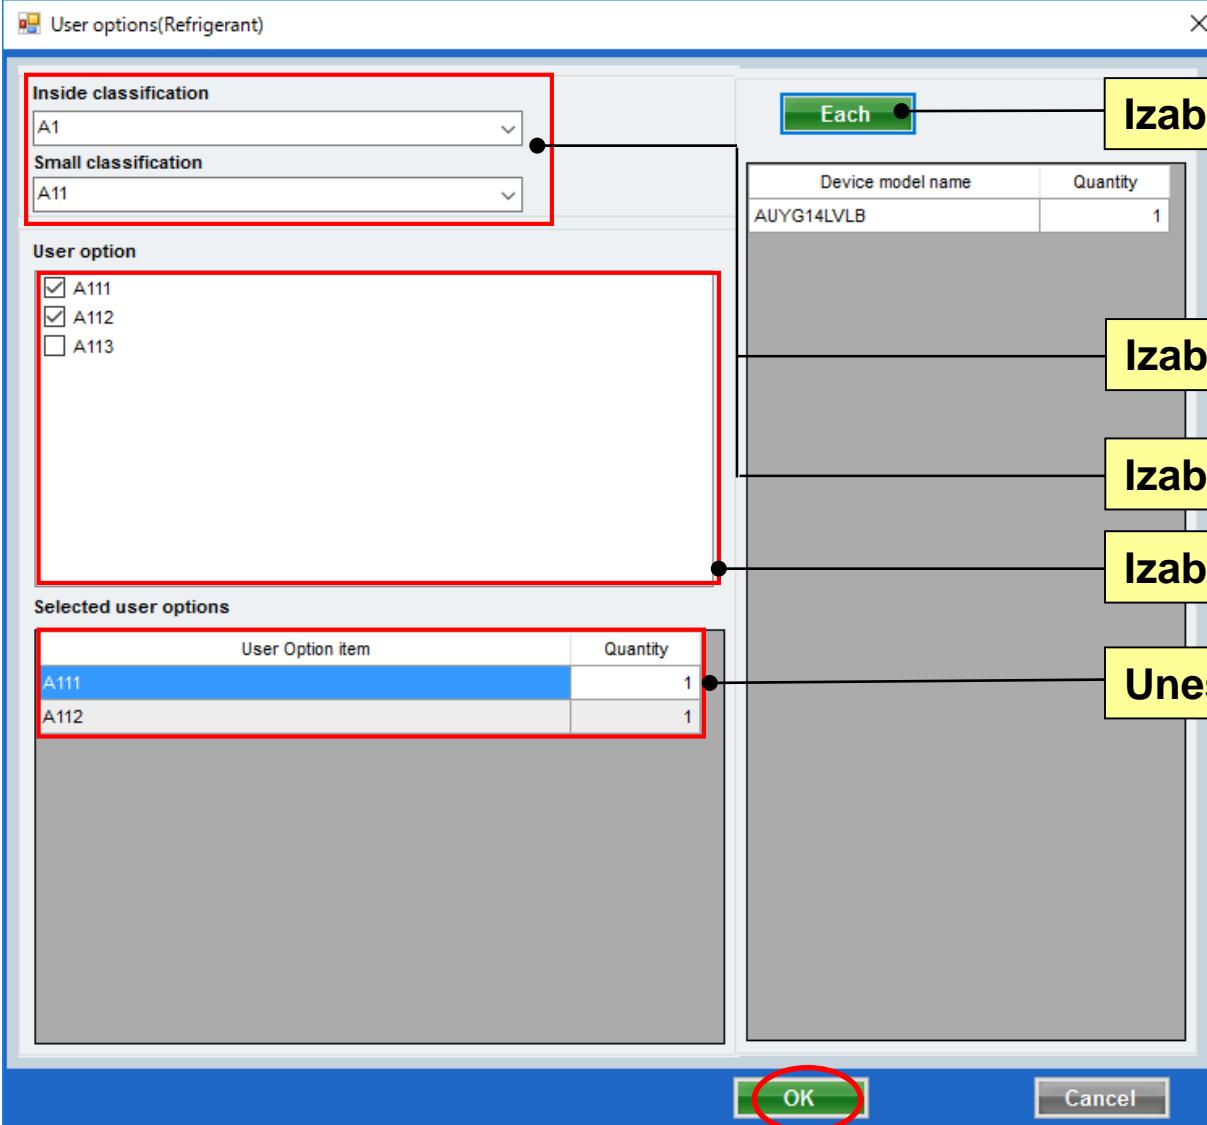

Izabrane opcije su prikazane u "Izveštaju".

Окабеляване


Design Simulator

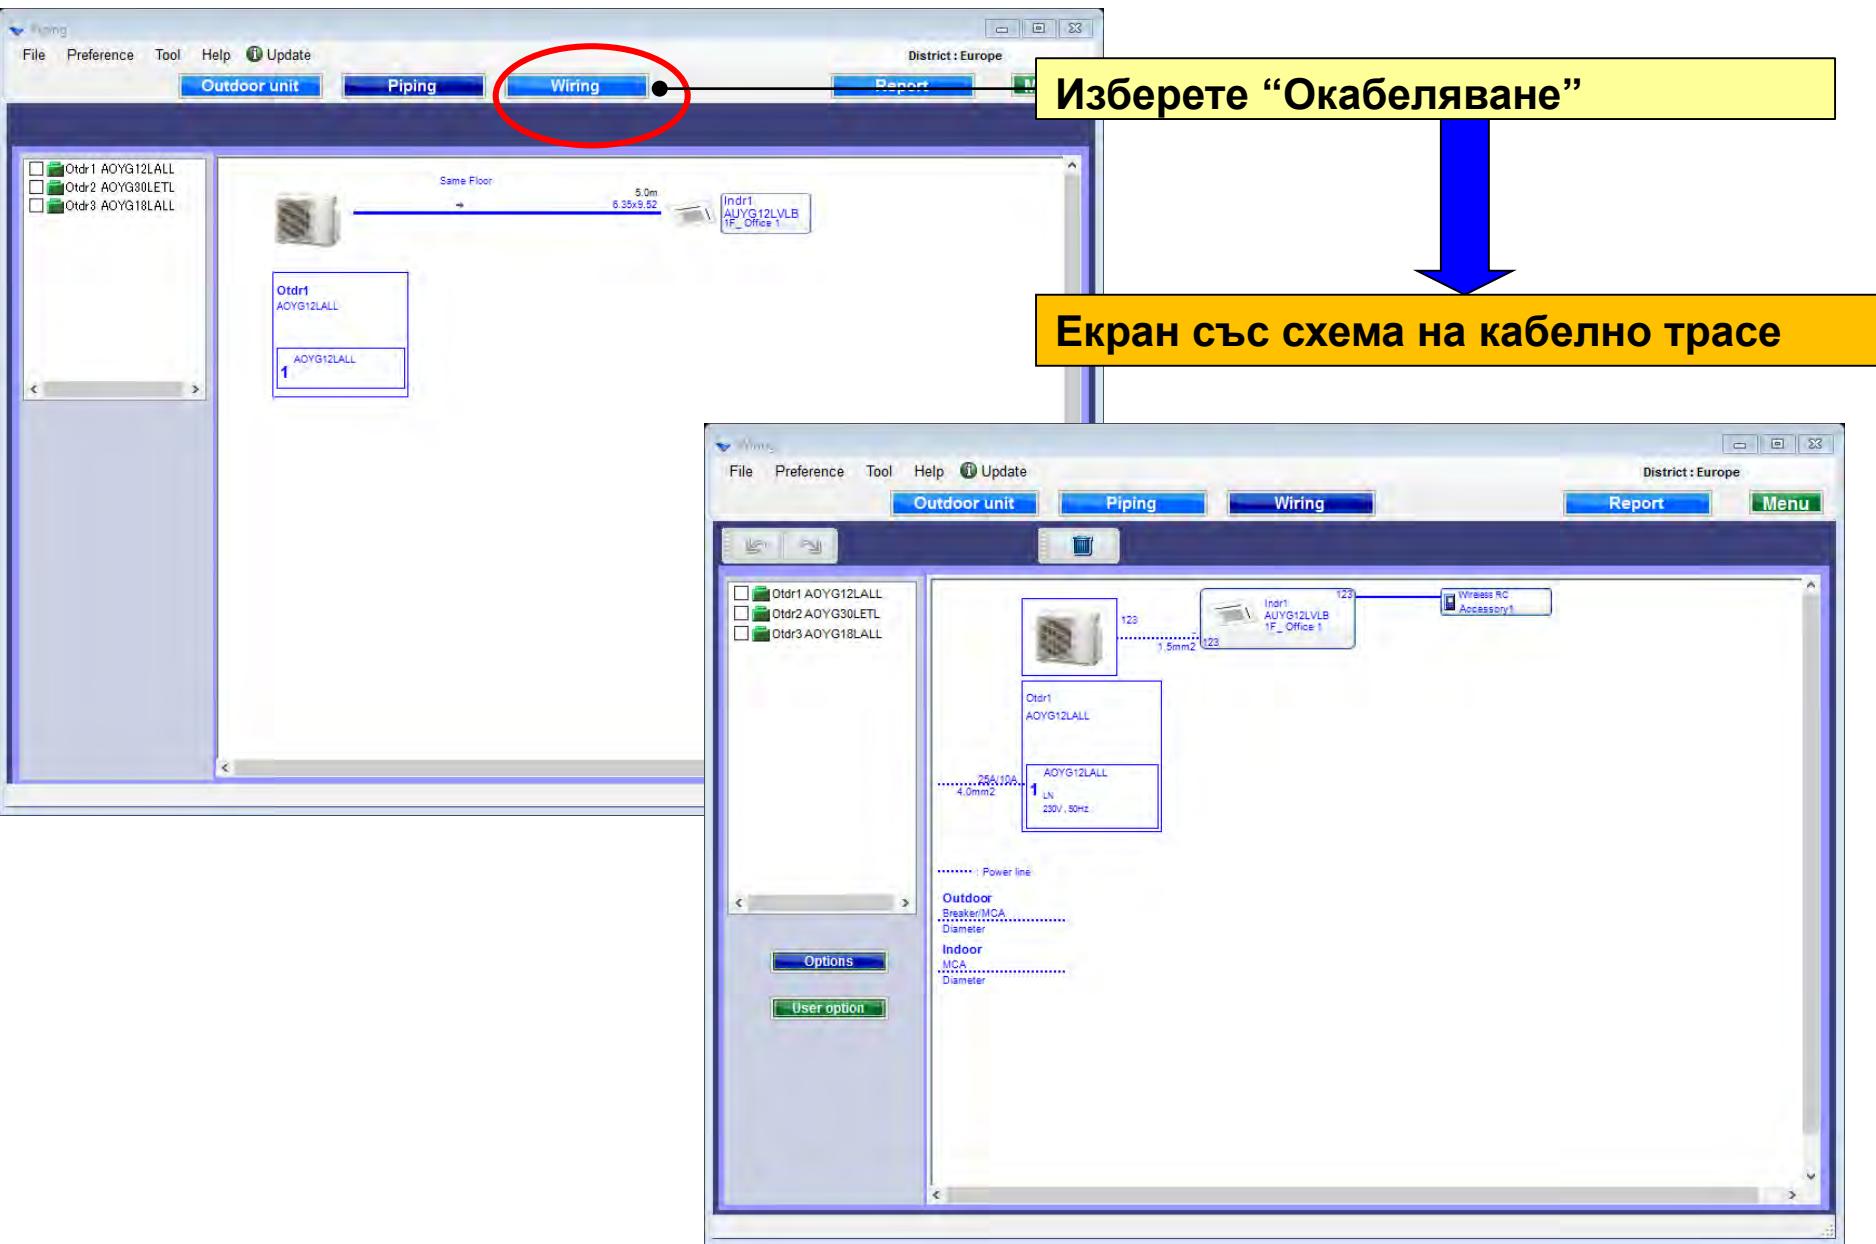

Окабеляване


Design Simulator

Изчисляване на хлад.система

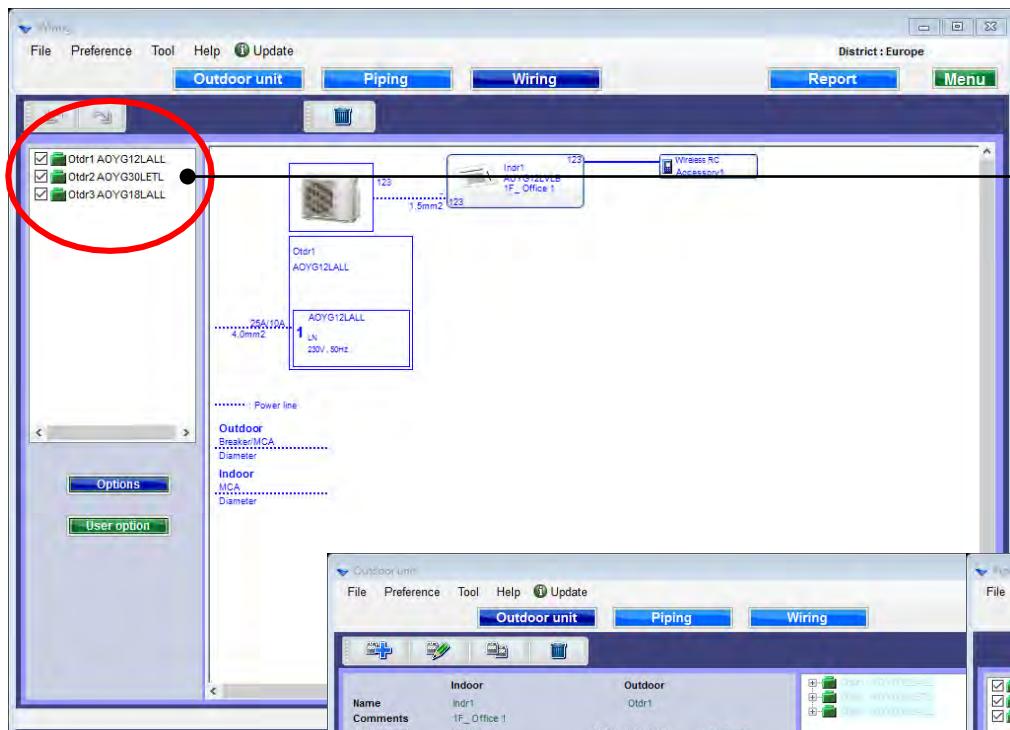


Маркирайте хладилната система


Маркирана хладилна система не може да се променя на всеки экран

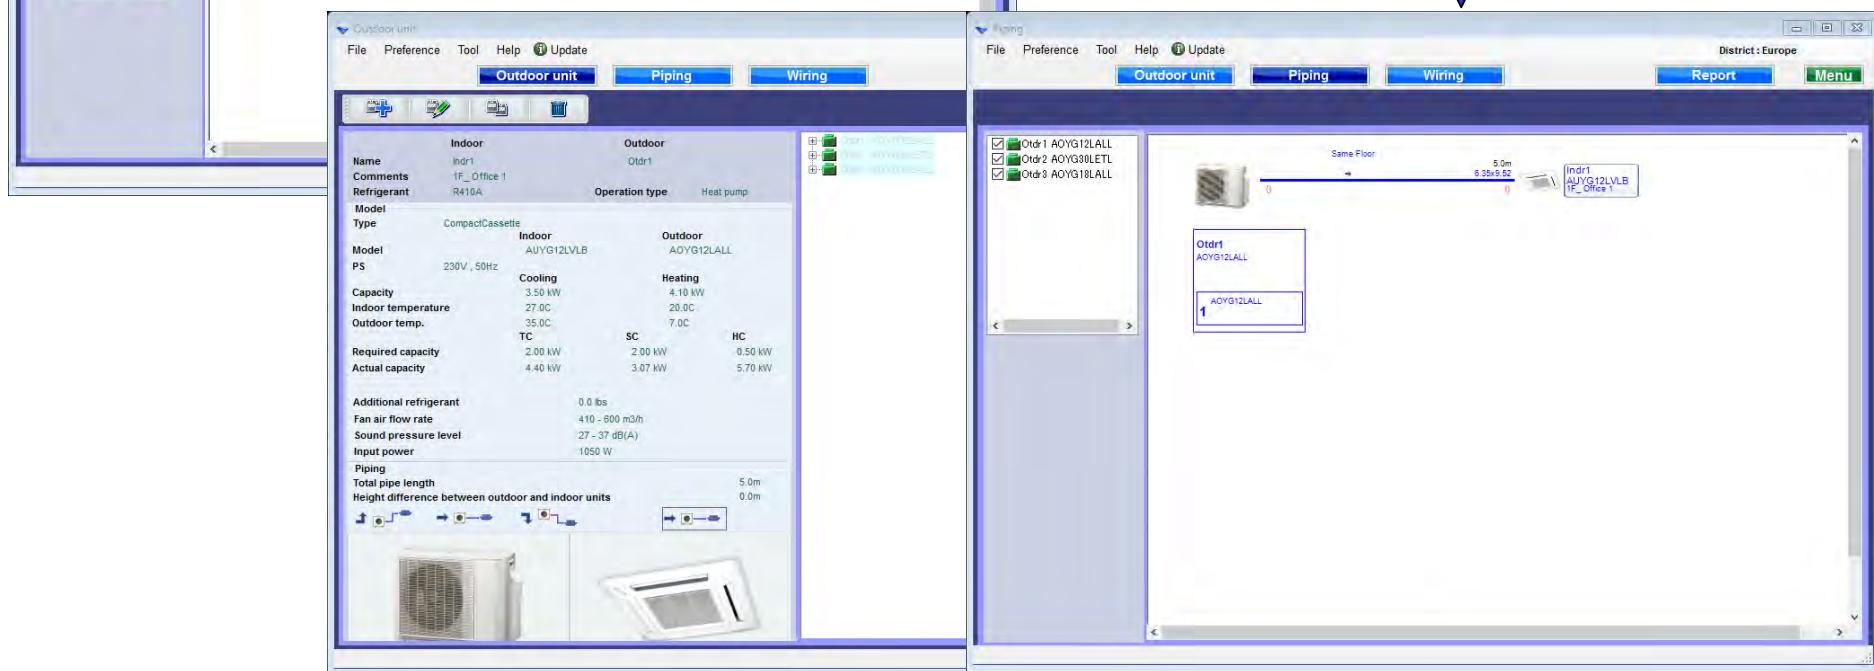

Опции

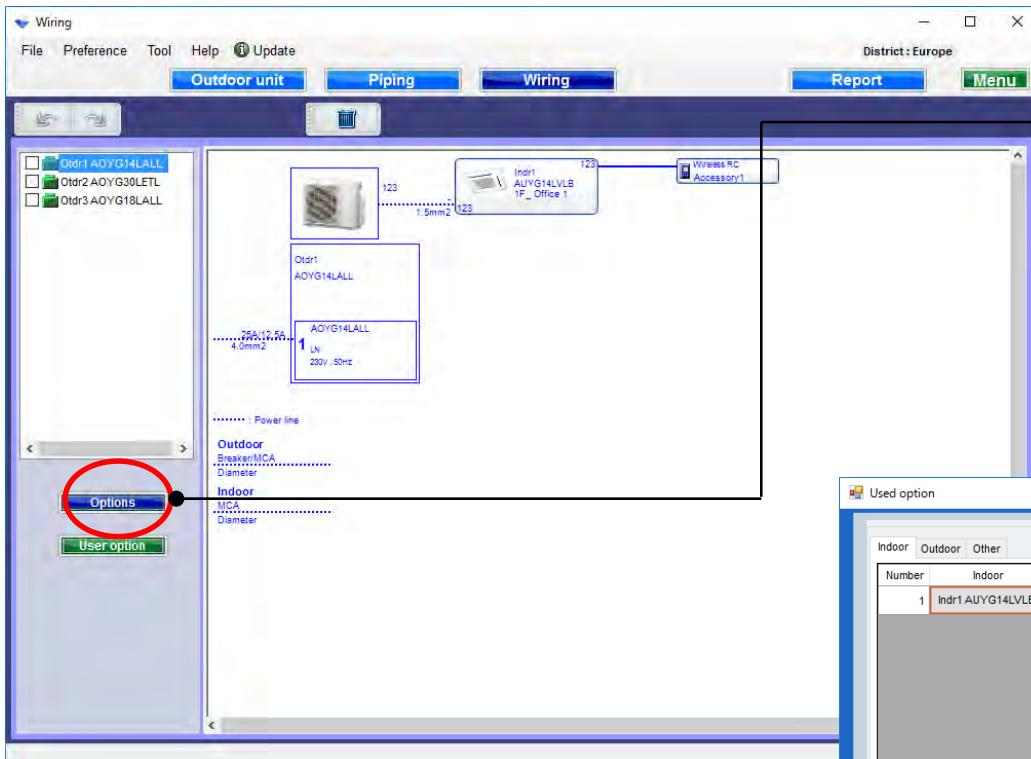


Изберете “Опции”

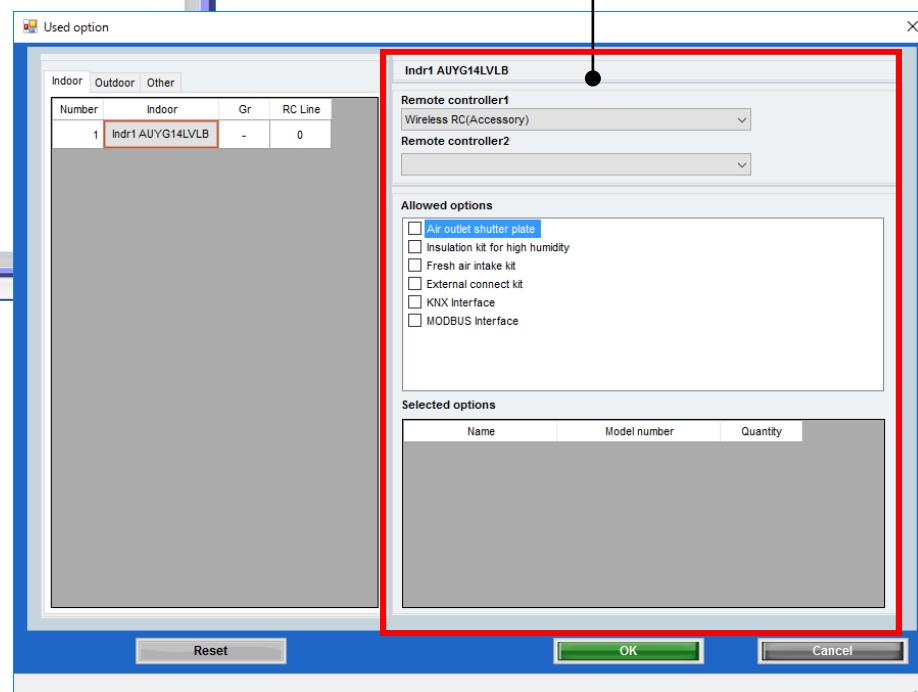

Екран с използваните Опции

Използвани опции (1/2)

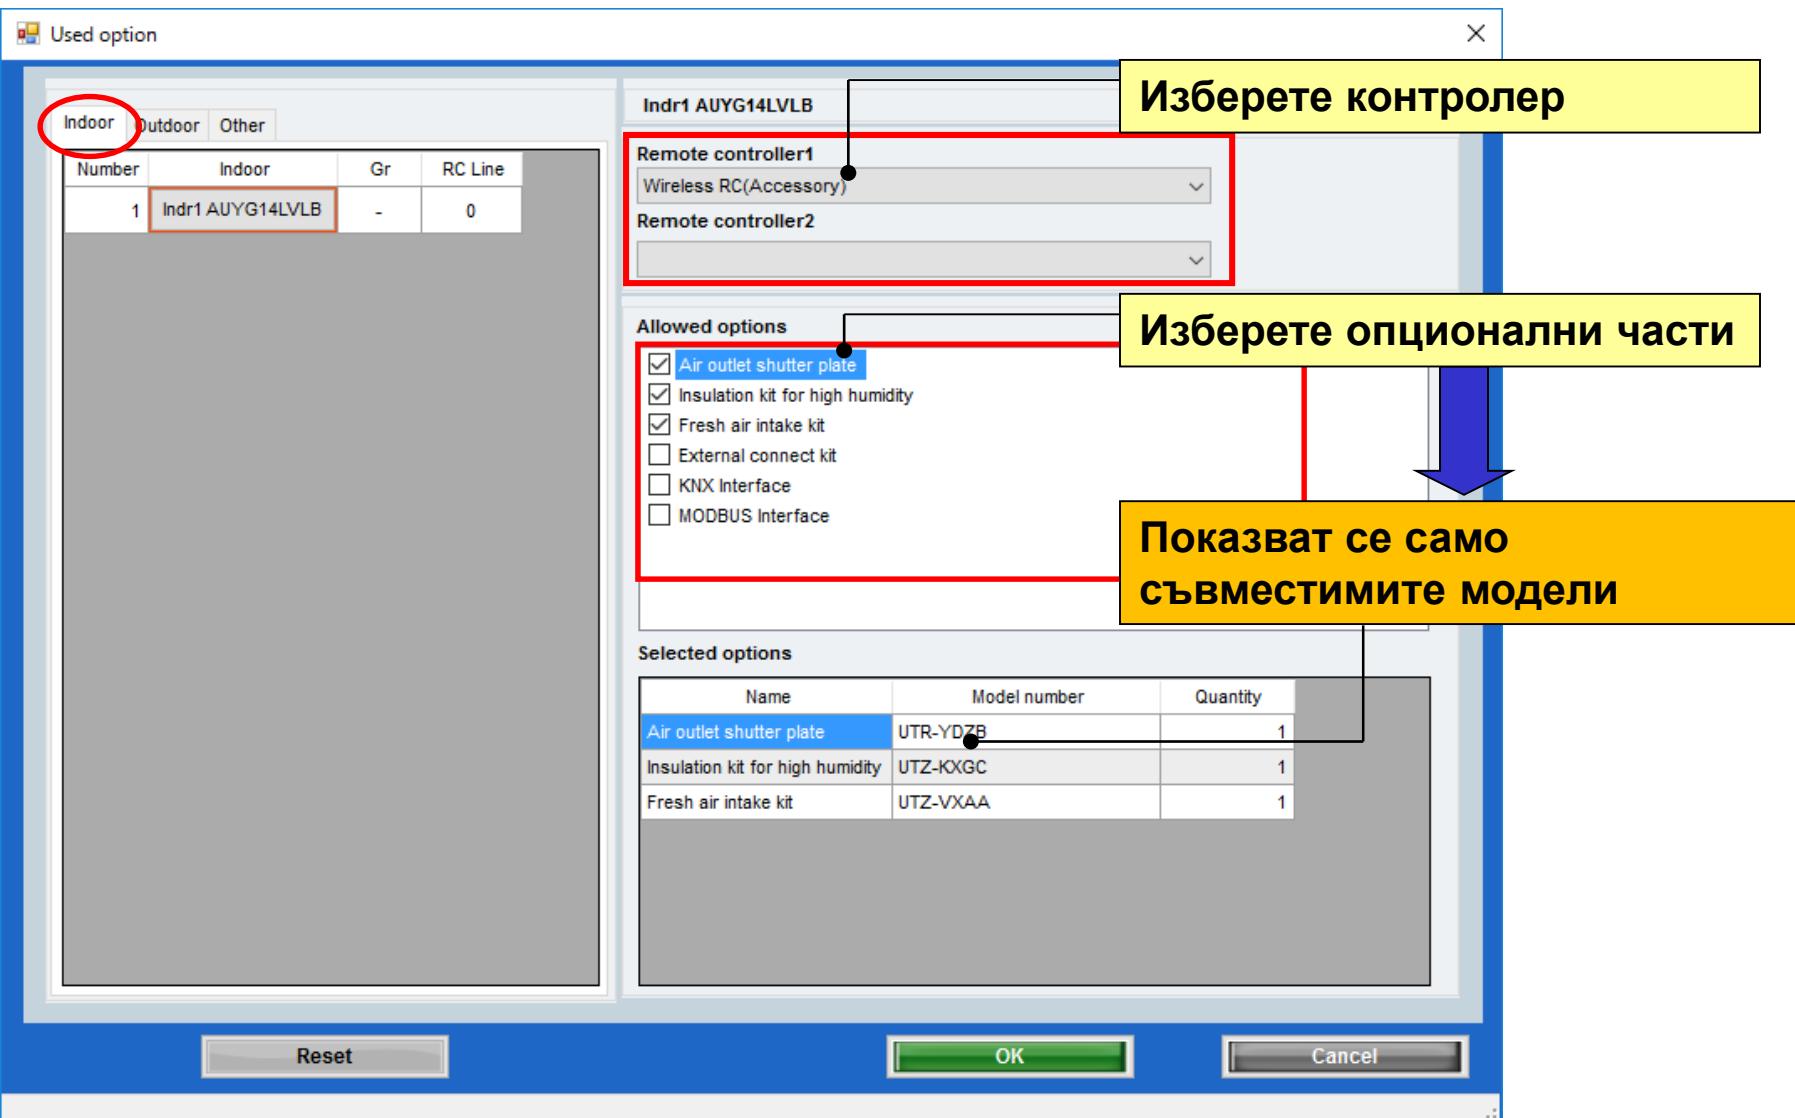


Избраните опции се извеждат в Отчета.


Окабеляване

Design Simulator


Използвани опции (2/2)

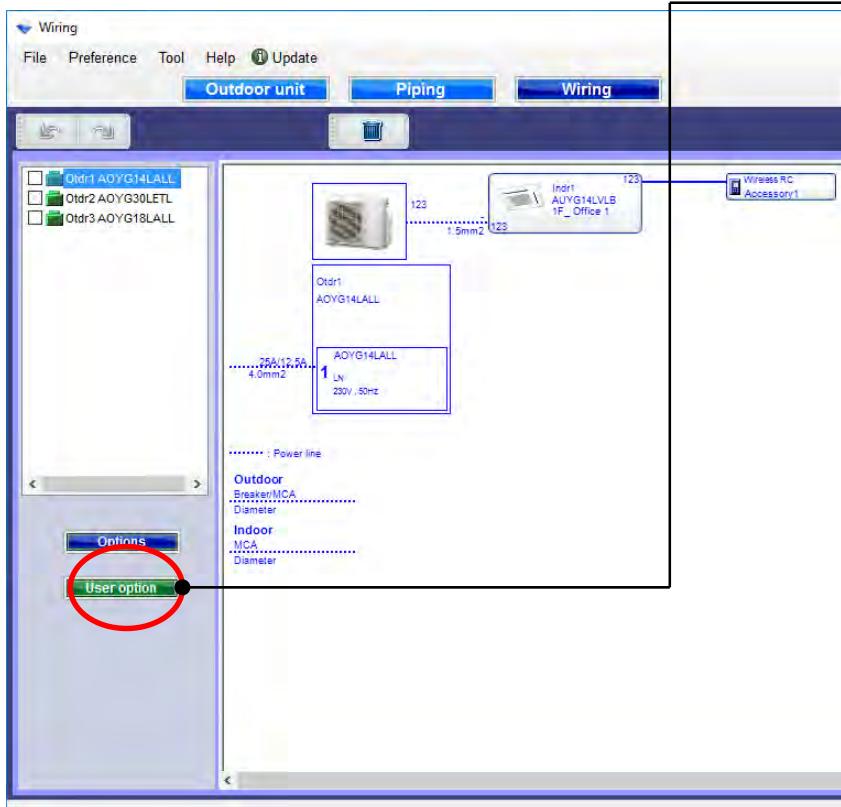

Изберете “Потребителски опции”

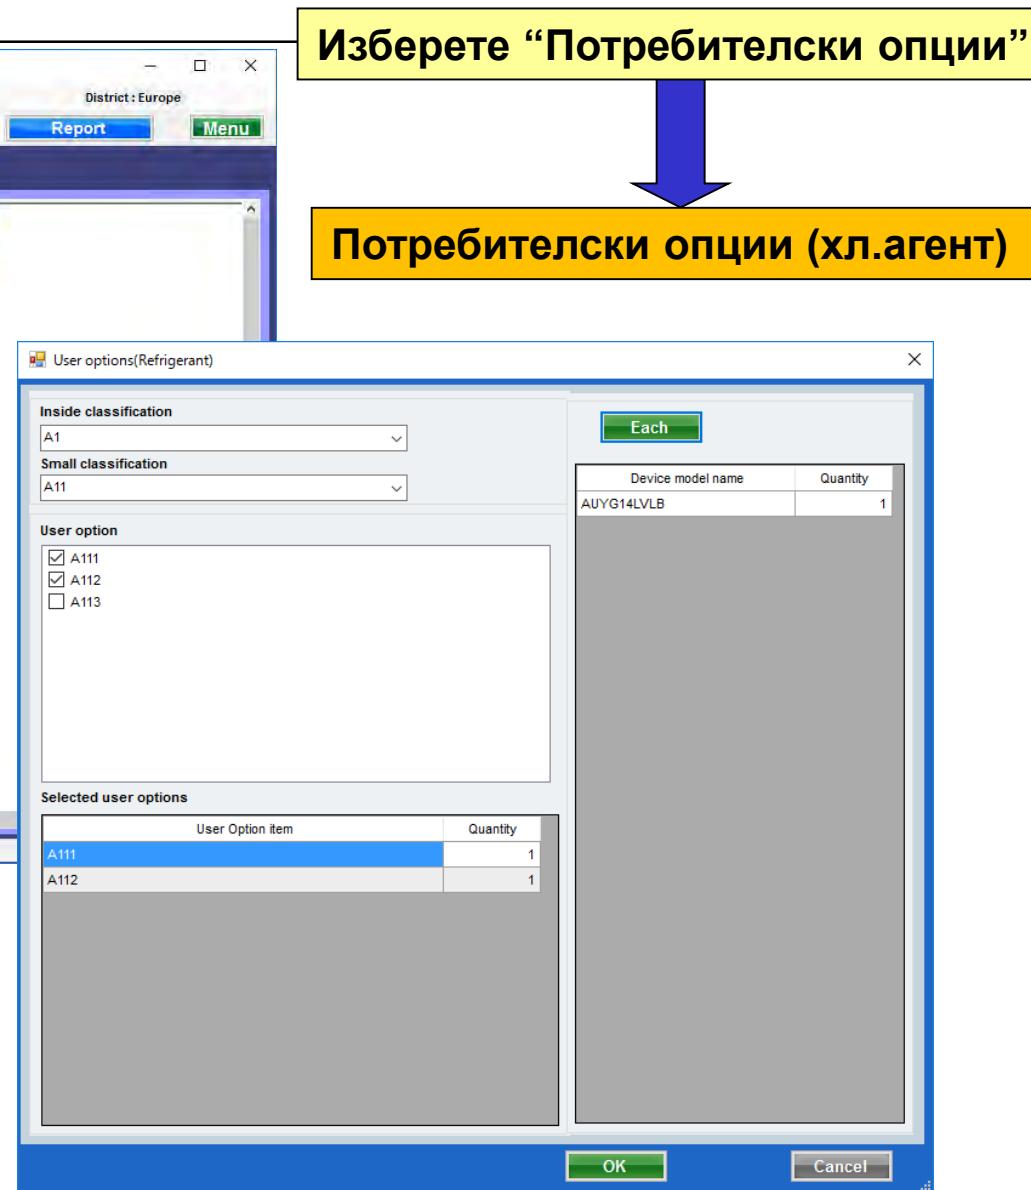

Потребителски опции (хл.агент)

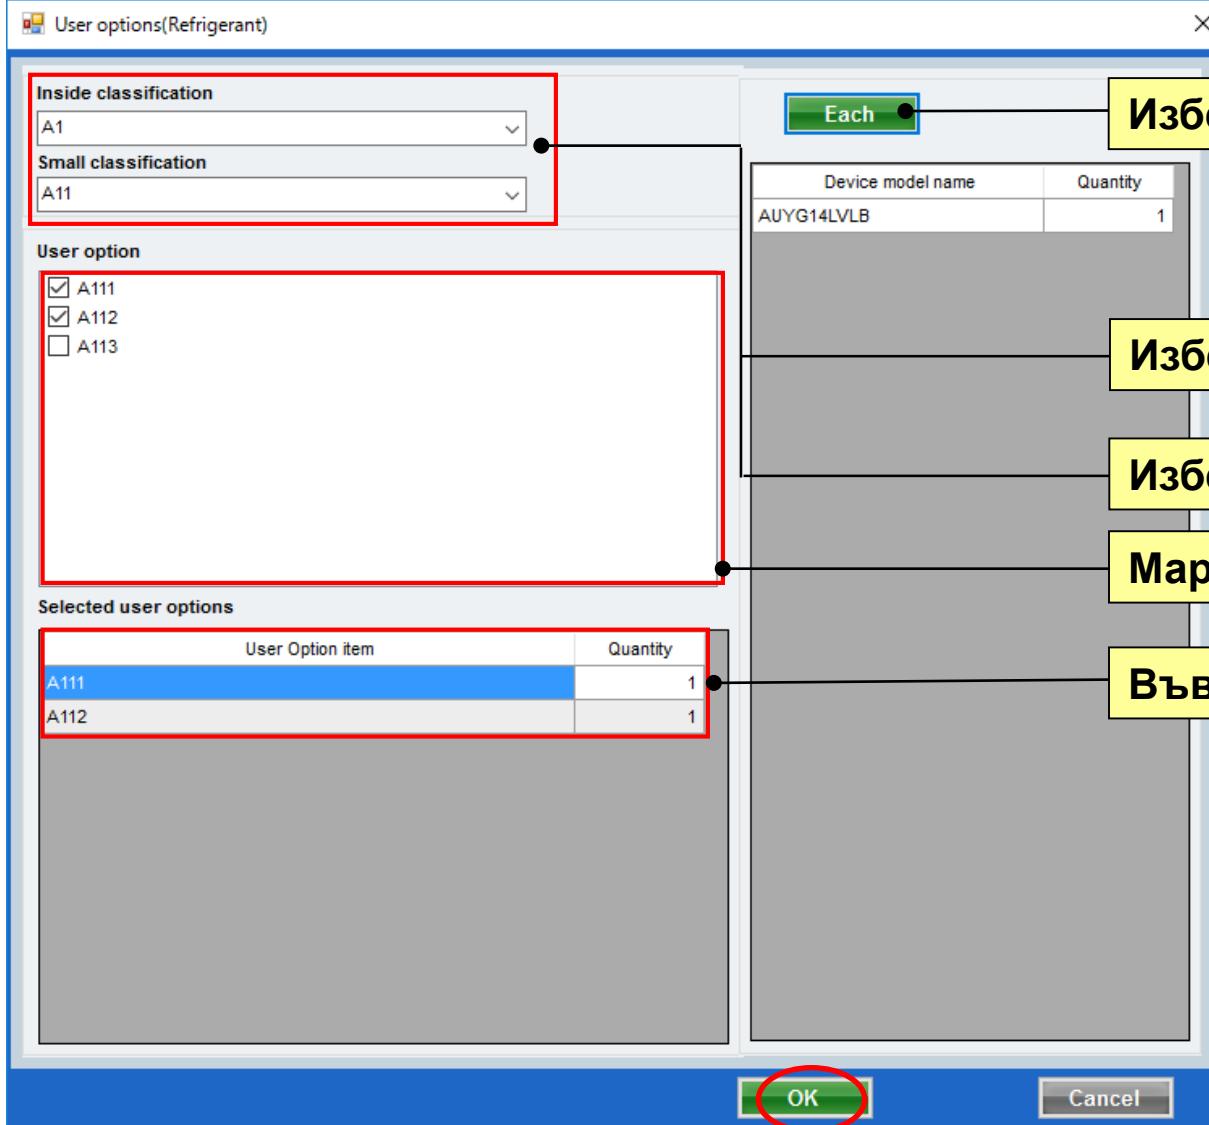

Изберете “единично или общо”

Изберете категория

Изберете под-категория


Маркирайте потреб.опции

Въведете Количество

Избраните опции се извеждат в Отчета.

接線設定


選機軟體

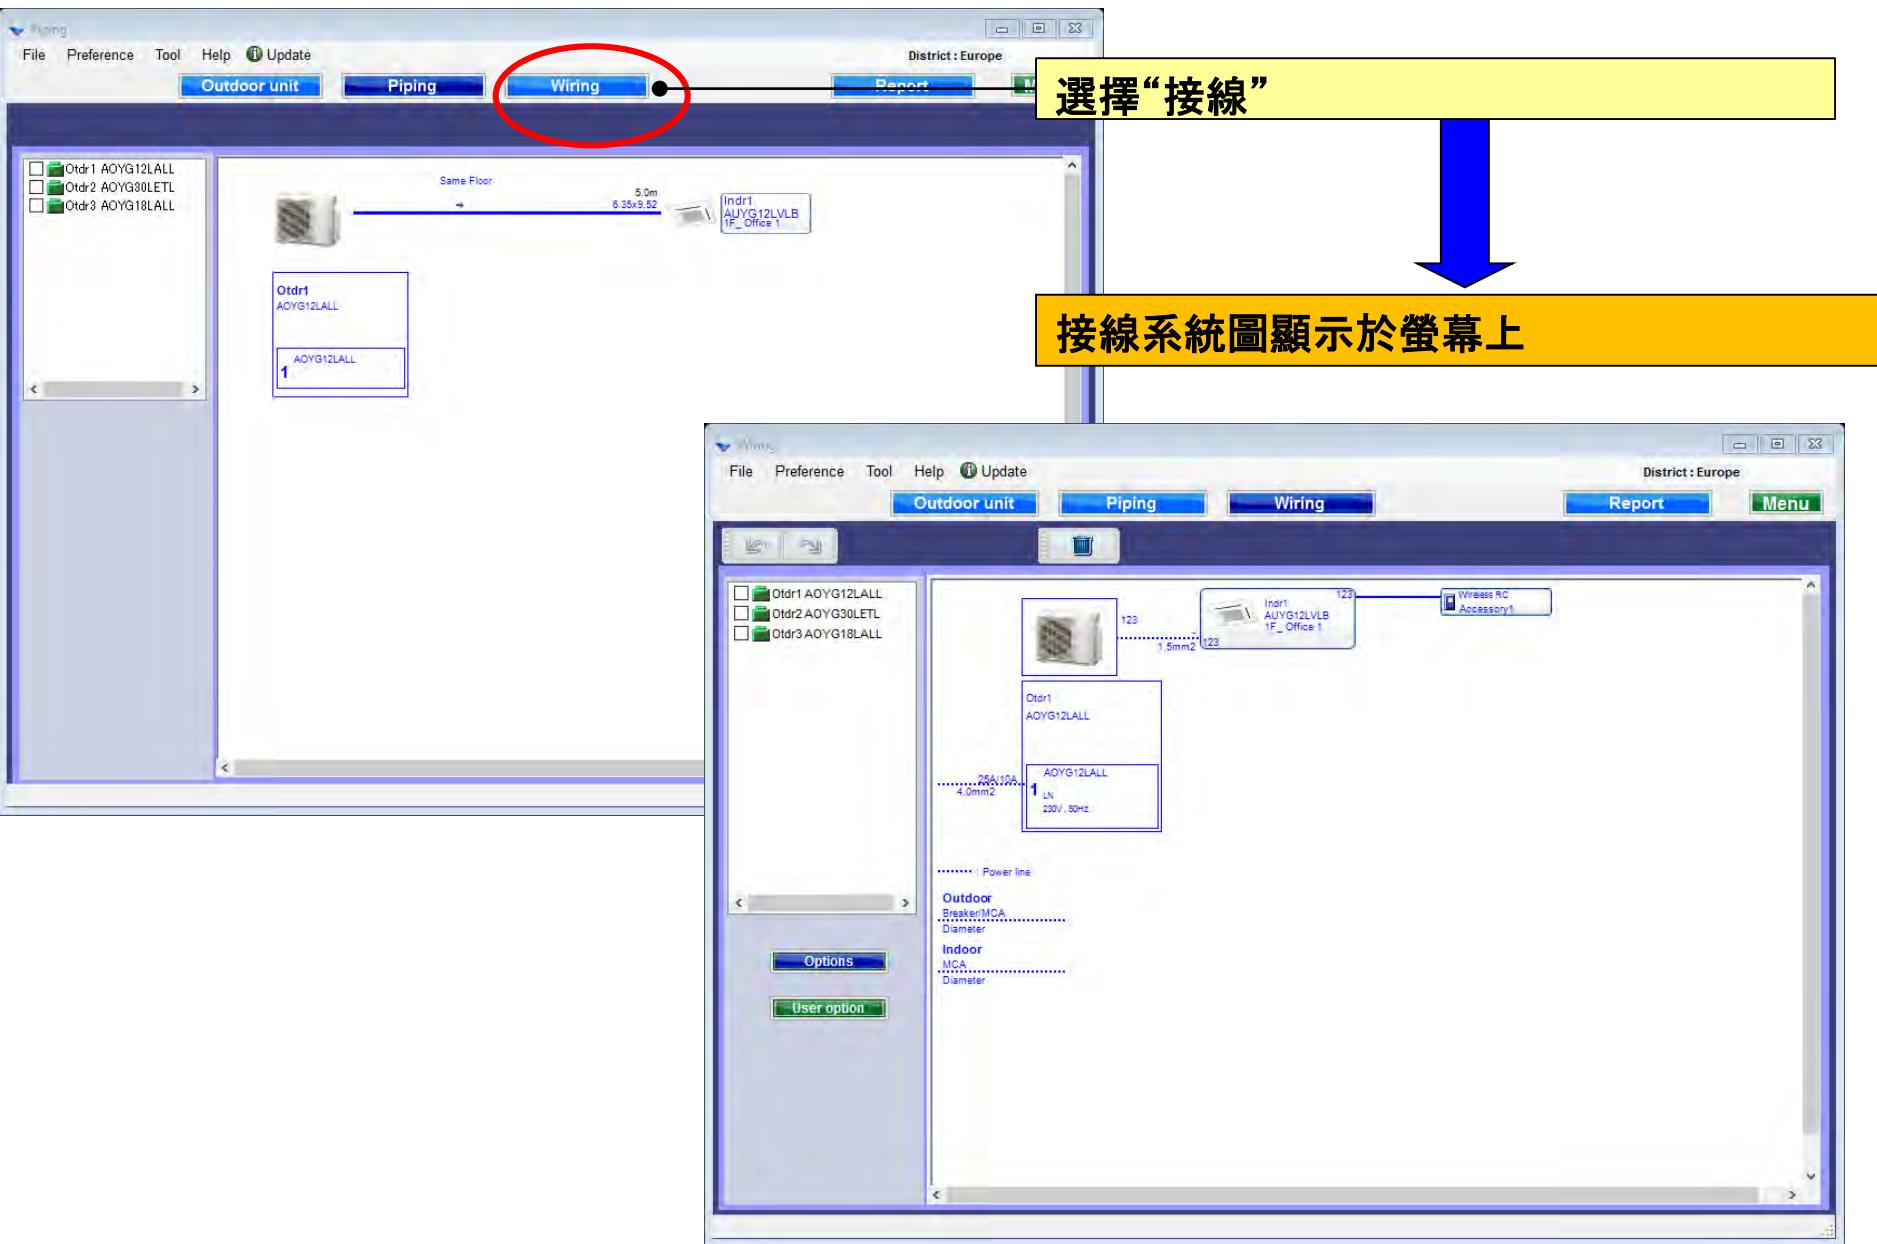

接線設定


選機軟體

冷媒系統測定

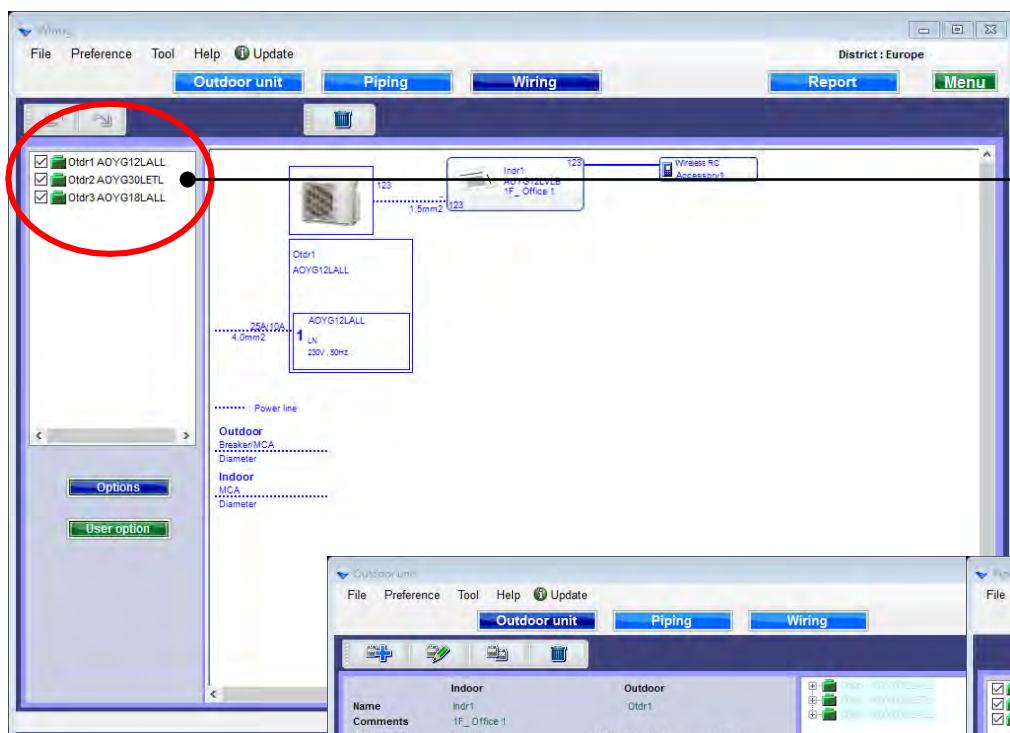

點選冷媒系統


點選冷媒系統
不能在每個視窗上編輯

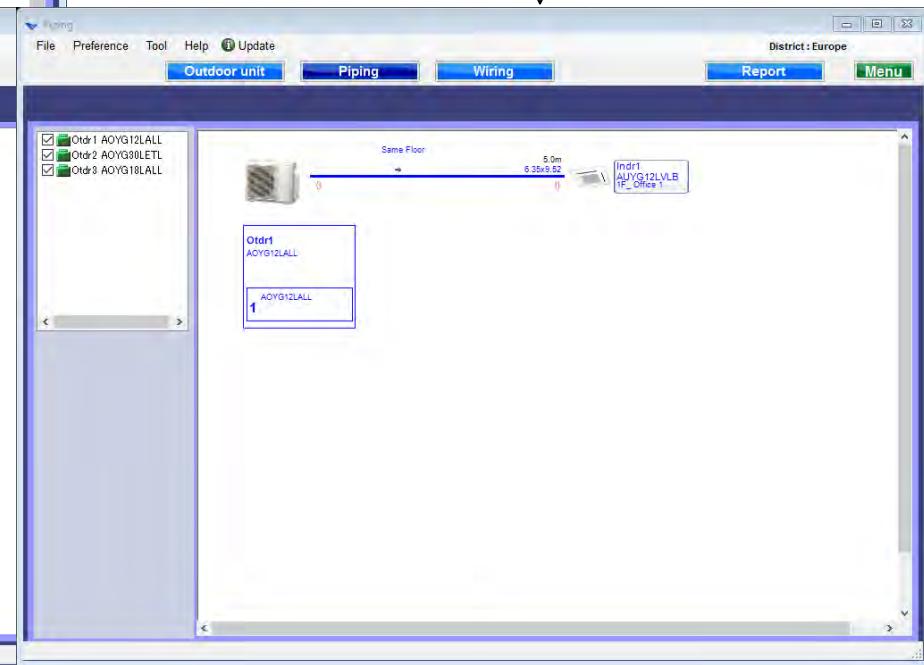


接線設定

選機軟體

選項

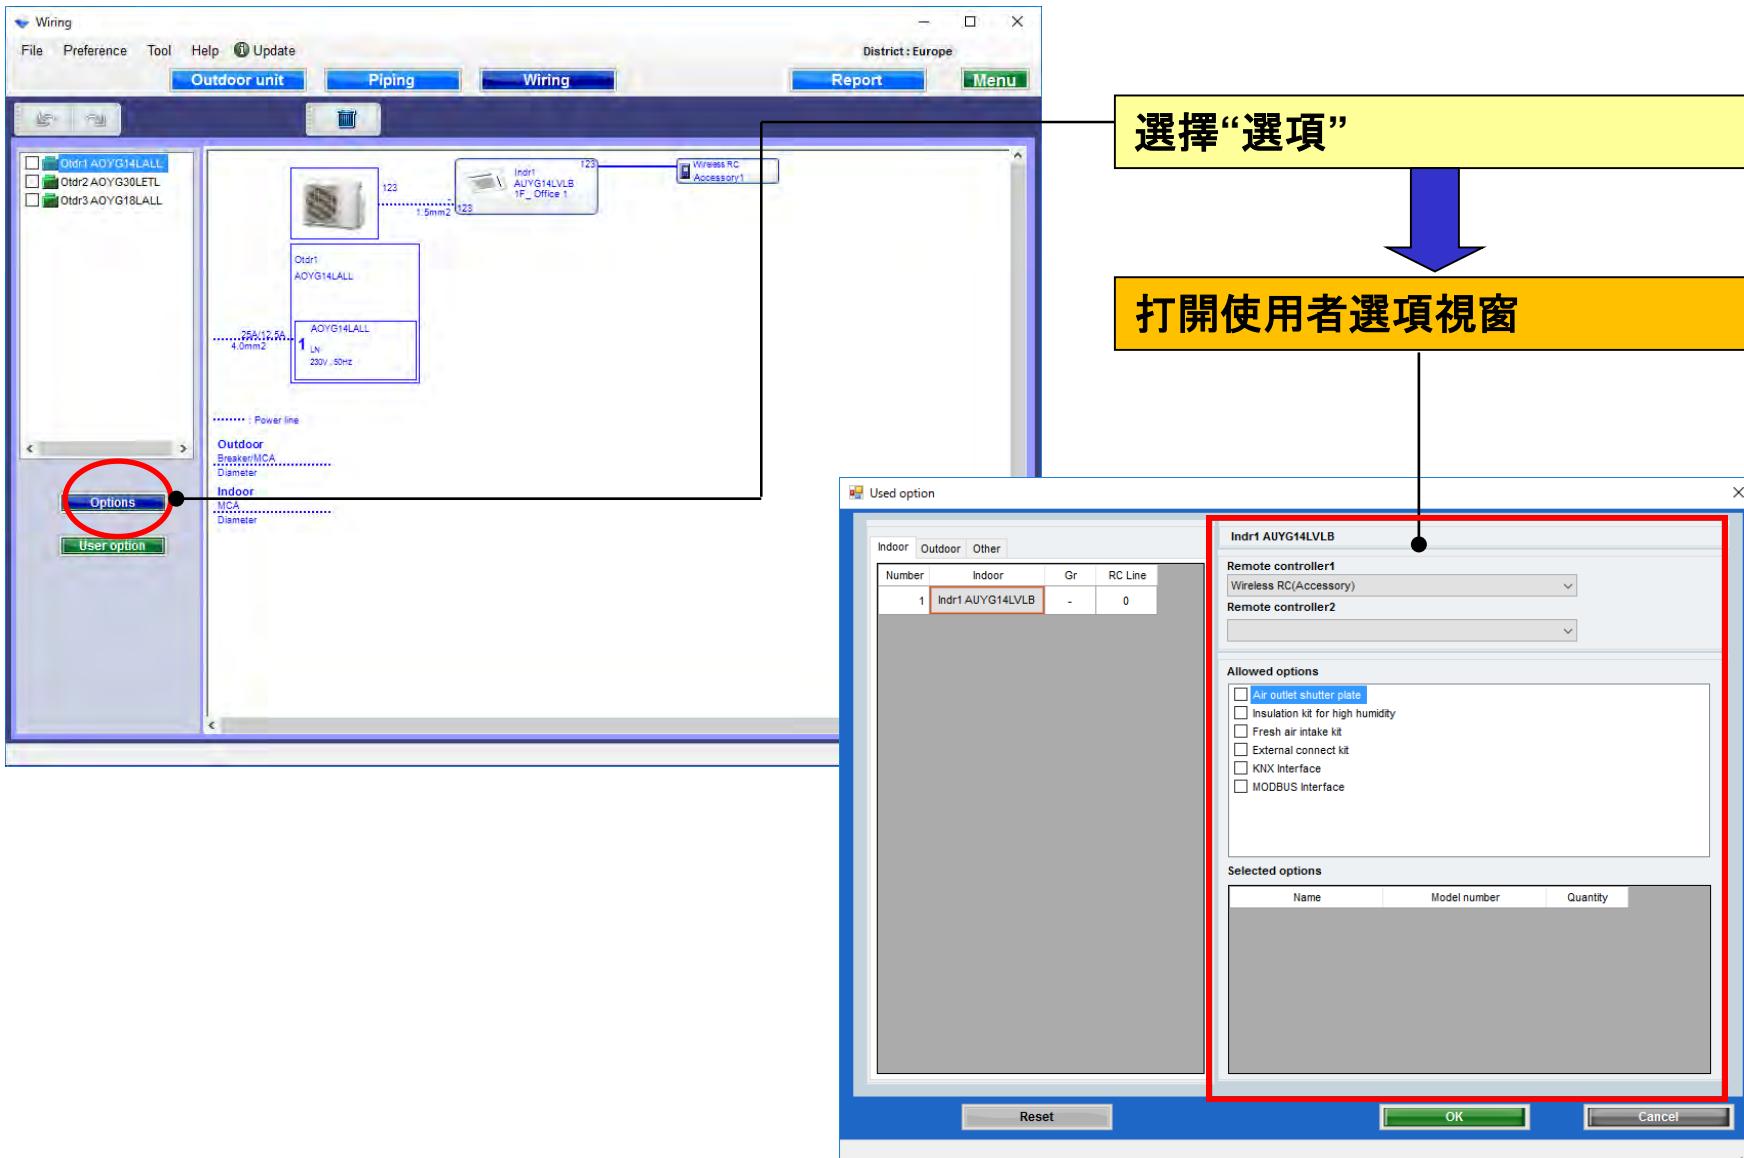

使用者設定(1/2)

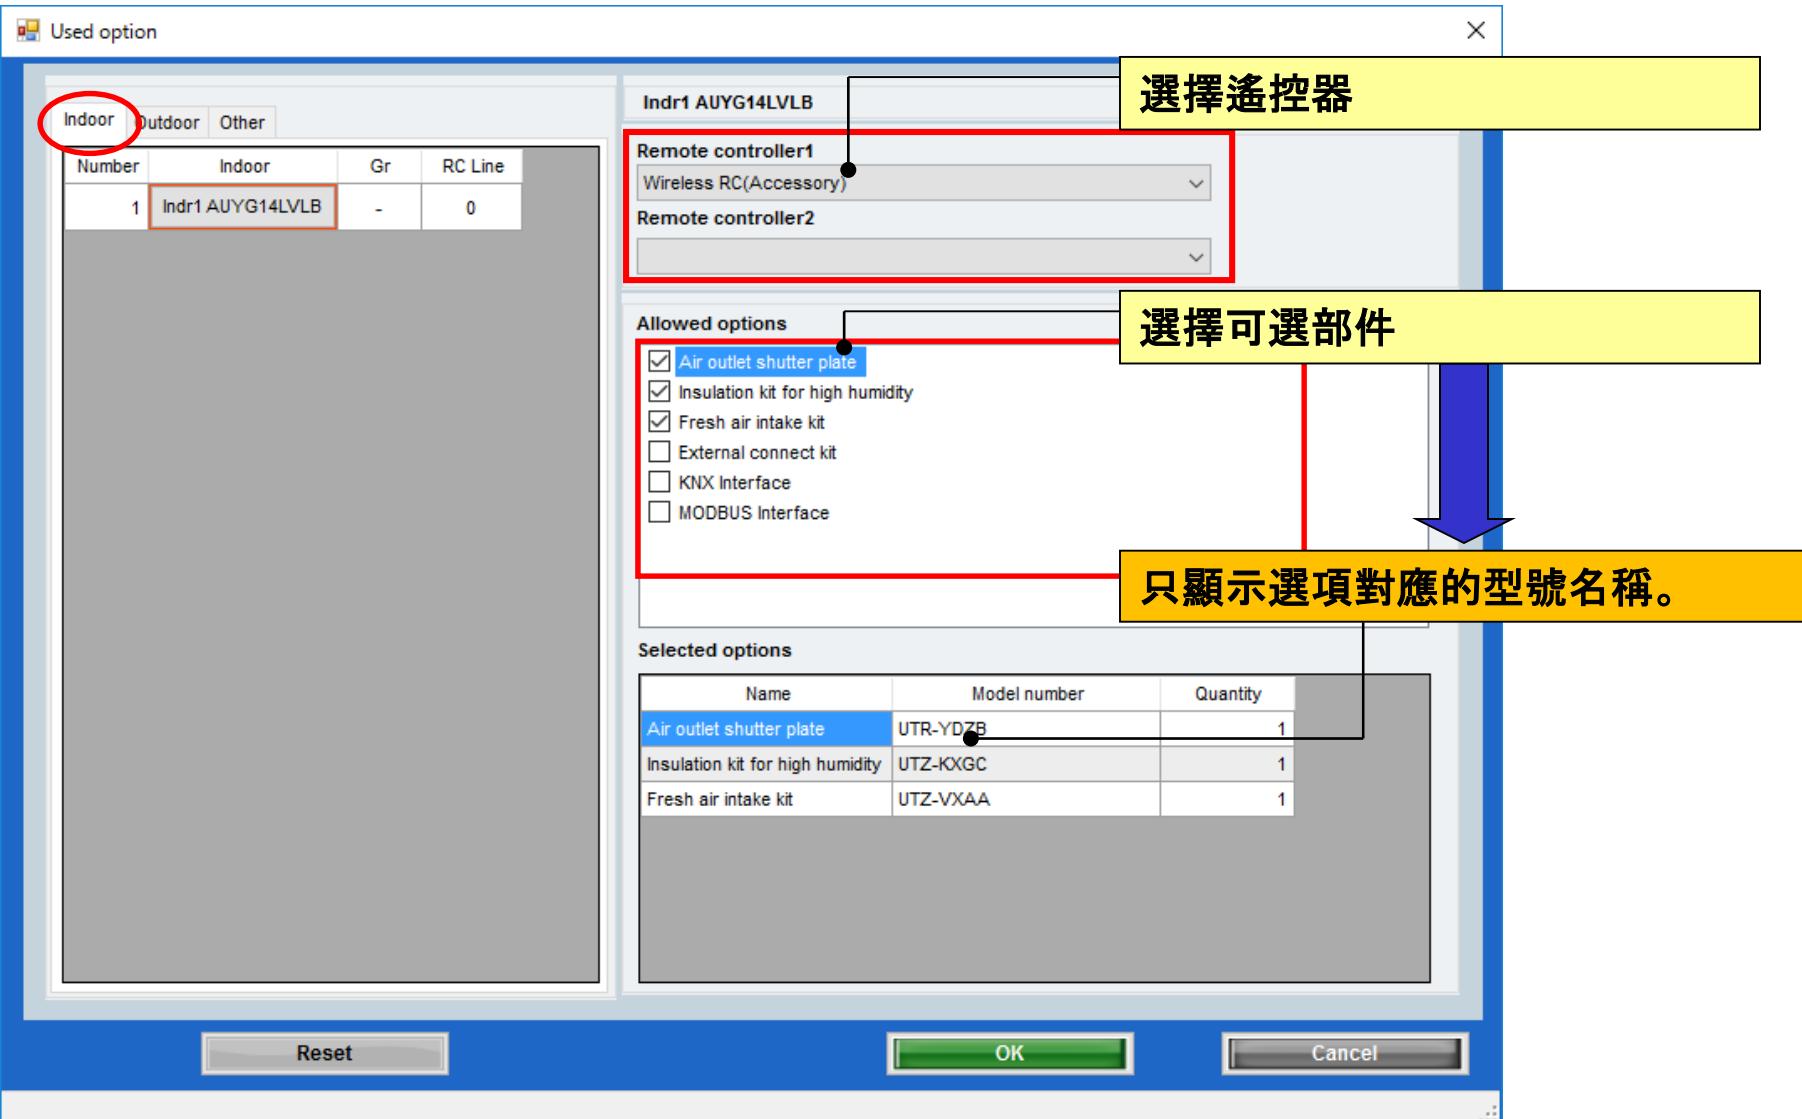


所選選項顯示在“報告”中。

接線設定

選機軟體

使用者設定(2/2)

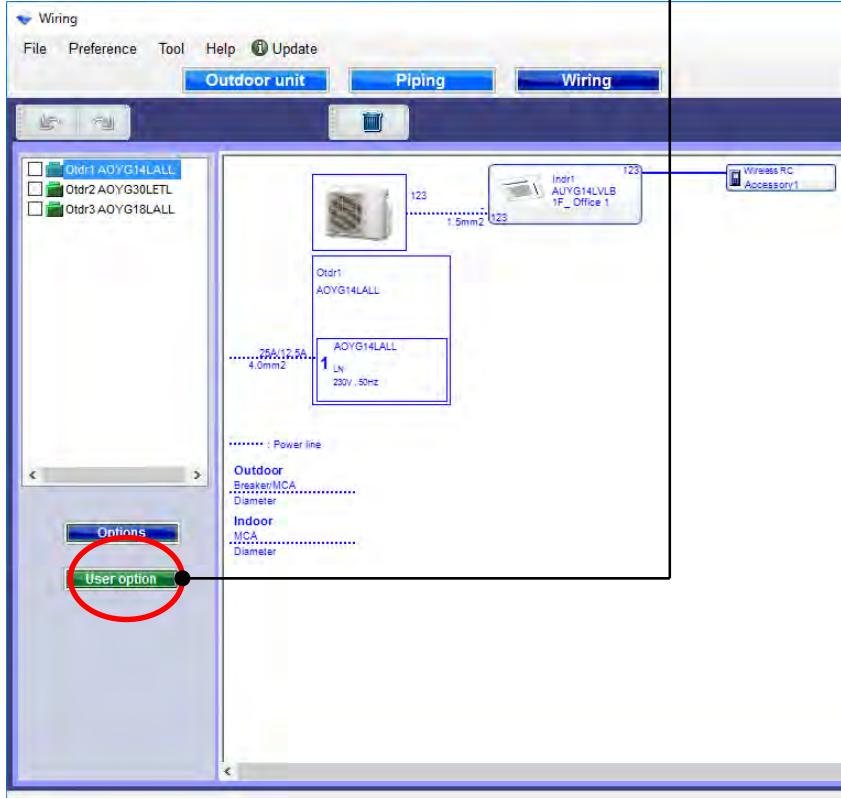

選擇“使用者設定”

打開使用者設定(冷媒)

User options(Refrigerant)

Inside classification: A1
Small classification: A11

User option:

- A111
- A112
- A113

Selected user options:

User Option item	Quantity
A111	1
A112	1

OK Cancel

使用者設定(冷媒)

User options(Refrigerant)

Inside classification

A1

Small classification

A11

User option

- A111
- A112
- A113

Selected user options

User Option item	Quantity
A111	1
A112	1

Each

選擇“每個或摘要”

Device model name	Quantity
AUYG14LVLB	1

選擇“內部分類”

選擇“小分類”

點選“用戶選項”

輸入“數量”

OK

所選選項顯示在“報告”中。